

NVIDIA cuDNN

API Reference | NVIDIA Docs

Table of Contents

Chapter 1. Introduction	1
Chapter 2. Added, Deprecated, And Removed API Functions	2
2.1. API Changes For cuDNN 8.5.0	2
2.2. API Changes For cuDNN 8.4.0	2
2.3. API Changes For cuDNN 8.3.0	3
2.4. API Changes For cuDNN 8.2.0	
2.5. API Changes For cuDNN 8.1.0	
2.6. API Changes For cuDNN 8.0.3	
2.7. API Changes For cuDNN 8.0.2	
2.8. API Changes For cuDNN 8.0.0 Preview	5
Chapter 3. cudnn_ops_infer.so Library	9
3.1. Data Type References	9
3.1.1. Pointer To Opaque Struct Types	9
3.1.2. Enumeration Types	
3.2. API Functions	26
Chapter 4. cudnn_ops_train.so Library	112
4.1. API Functions	112
Chapter 5. cudnn_cnn_infer.so Library	160
5.1. Data Type References	
5.1.1. Pointer To Opaque Struct Types	160
5.1.2. Struct Types	160
5.1.3. Enumeration Types	162
5.2. API Functions	165
Chapter 6. cudnn_cnn_train.so Library	220
6.1. Data Type References	220
6.1.1. Pointer To Opaque Struct Types	220
6.1.2. Struct Types	220
6.1.3. Enumeration Types	
6.2. API Functions	253
Chapter 7. cudnn_adv_infer.so Library	278
7.1. Data Type References	278
7.1.1. Pointer To Opaque Struct Types	278
7.1.2. Enumeration Types	279
7.2 API Functions	286

Chapter 8. cudnn_adv_train.so Library	365
8.1. Data Type References	365
8.1.1. Enumeration Types	365
8.2. API Functions	366
Chapter 9. cuDNN Backend API	
9.1. Data Type References	432
9.1.1. Enumeration Types	
9.1.2. Data Types Found In cudnn_backend.h	446
9.2. API Functions	446
9.3. Backend Descriptor Types	452
9.4. Use Cases	493
9.4.1. Setting Up An Operation Graph For A Grouped Convolution	493
9.4.2. Setting Up An Engine Configuration	495
9.4.3. Setting Up And Executing A Plan	495

List of Figures

Figure 1.	Locations of x, y, hx, cx, hy, and cy signals in the multi-layer RNN model	. 329
Figure 2.	Data flow when the RNN model is bi-directional	. 330
Figure 3.	Locations of x, y, hx, cx, hy, cy, dx, dy, dhx, dcx, dhy, and dcy signals a multi-	
layer R	NN model	. 402

List of Tables

Table 1.	API functions and data types that were added in cuDNN 8.5.0	2
Table 2.	API functions and data types that were added in cuDNN 8.4.0	3
Table 3.	API functions and data types that were added in cuDNN 8.3.0	3
Table 4.	API functions and data types that were added in cuDNN 8.2.0	3
Table 5.	API functions and data types that were added in cuDNN 8.1.0	4
Table 6.	API functions and data types that were added in cuDNN 8.0.3	4
Table 7.	API functions and data types that were added in cuDNN 8.0.2	5
Table 8.	API functions and data types that were added in cuDNN 8.0.0 Preview	5
Table 9.	API functions and data types that were deprecated in cuDNN 8.0.0 Preview	7
Table 10.	API functions and data types that were removed in cuDNN 8.0.0 Preview	8
Table 11.	Supported configurations	31
Table 12.	Supported Datatypes	73
Table 13.	Supported configurations	116
Table 14.	Supported configurations	121
Table 15.	Supported configurations	124
Table 16.	Supported configurations	128
Table 17.	Supported configurations	151
Table 18.	For 2D convolutions: wDesc: _NHWC	168
Table 19.	For 2D convolutions: wDesc: _NCHW	168
Table 20.	For 3D convolutions: wDesc: _NCHW	173
Table 21.	For 3D convolutions: wDesc: _NHWC	174
Table 22.	Supported combinations of data types (X = CUDNN_DATA)	178
Table 23.	Supported configurations	181
Table 24	For 2D convolutions: wDesc: NCHW	184

Table 25.	For 2D convolutions: wDesc: _NCHWC	187
Table 26.	For 2D convolutions: wDesc: _NHWC	188
Table 27.	For 3D convolutions: wDesc: _NCHW	188
Table 28.	For 3D convolutions: wDesc: _NHWC	190
Table 29.	CUDNN_FUSED_SCALE_BIAS_ACTIVATION_CONV_BNSTATS	224
Table 30.	Conditions for Fully Fused Fast Path (Forward)	227
Table 31.	CUDNN_FUSED_SCALE_BIAS_ACTIVATION_WGRAD	228
Table 32.	Conditions for Fully Fused Fast Path (Backward)	231
Table 33.	CUDNN_FUSED_BN_FINALIZE_STATISTICS_TRAINING	233
Table 34.	CUDNN_FUSED_BN_FINALIZE_STATISTICS_INFERENCE	237
Table 35.	CUDNN_FUSED_CONVOLUTION_SCALE_BIAS_ADD_RELU	239
Table 36.	Legend For Tables in This Section	243
Table 37.	CUDNN_FUSED_SCALE_BIAS_ACTIVATION_CONV_BNSTATS	244
Table 38.	CUDNN_FUSED_SCALE_BIAS_ACTIVATION_WGRAD	245
Table 39.	CUDNN_FUSED_BN_FINALIZE_STATISTICS_TRAINING	247
Table 40.	CUDNN_FUSED_BN_FINALIZE_STATISTICS_INFERENCE	250
Table 41.	CUDNN_FUSED_SCALE_BIAS_ADD_RELU	251
Table 42.	For 2D convolutions: dwDesc: _NHWC	258
Table 43.	For 2D convolutions: dwDesc: _NCHW	258
Table 44.	For 3D convolutions: dwDesc: _NCHW	262
Table 45.	For 3D convolutions: dwDesc: _NHWC	263
Table 46.	Supported combinations	350
Table 47.	The Attribute Types of cudnnBackendAttributeType_t	436
Table 48.		441
Table 49.	matmul operation dimension requirements	470

Chapter 1. Introduction

NVIDIA® CUDA® Deep Neural Network (cuDNN) library offers a context-based API that allows for easy multithreading and (optional) interoperability with CUDA streams. This API Reference lists the datatyes and functions per library. Specifically, this reference consists of a cuDNN datatype reference section that describes the types of enums and a cuDNN API reference section that describes all routines in the cuDNN library API.

The cuDNN library as well as this API document has been split into the following libraries:

- cudnn_ops_infer This entity contains the routines related to cuDNN context creation and destruction, tensor descriptor management, tensor utility routines, and the inference portion of common ML algorithms such as batch normalization, softmax, dropout, etc.
- cudnn_ops_train This entity contains common training routines and algorithms, such as batch normalization, softmax, dropout, etc. The cudnn_ops_train library depends on cudnn ops infer.
- cudnn_cnn_infer This entity contains all routines related to convolutional neural networks needed at inference time. The cudnn_cnn_infer library depends on cudnn ops infer.
- cudnn_cnn_train This entity contains all routines related to convolutional neural networks needed during training time. The cudnn_cnn_train library depends on cudnn_ops_infer, cudnn_ops_train, and cudnn_cnn_infer.
- cudnn_adv_infer This entity contains all other features and algorithms. This includes RNNs, CTC loss, and multi-head attention. The cudnn_adv_infer library depends on cudnn_ops_infer.
- cudnn_adv_train This entity contains all the training counterparts of cudnn_adv_infer. The cudnn_adv_train library depends on cudnn_ops_infer, cudnn_ops_train, and cudnn_adv_infer.
- cudnnBackend* Introduced in cuDNN version 8.x, this entity contains a list of valid cuDNN backend descriptor types, a list of valid attributes, a subset of valid attribute values, and a full description of each backend descriptor type and their attributes.
- cudnn This is an optional shim layer between the application layer and the cuDNN code. This layer opportunistically opens the correct library for the API at runtime.

Chapter 2. Added, Deprecated, And Removed API Functions

2.1. API Changes For cuDNN 8.5.0

The following tables show which API functions were added, deprecated, and removed for the cuDNN 8.5.0.

Table 1. API functions and data types that were added in cuDNN 8.5.0

Backend descriptor types
<u>cudnnBackendNormFwdPhase_t</u>
<u>cudnnBackendNormMode_t</u>
CUDNN_BACKEND_OPERATION_CONCAT_DESCRIPTOR
CUDNN_BACKEND_OPERATION_NORM_BACKWARD_DESCRIPTOR
CUDNN_BACKEND_OPERATION_NORM_FORWARD_DESCRIPTOR
CUDNN_BACKEND_OPERATION_SIGNAL_DESCRIPTOR
<u>cudnnFraction_t</u>
cudnnSignalMode_t

2.2. API Changes For cuDNN 8.4.0

The following tables show which API functions were added, deprecated, and removed for the cuDNN 8.4.0.

Table 2. API functions and data types that were added in cuDNN 8.4.0

Backend descriptor types cudnnBackendBehaviorNote t

CUDNN_BACKEND_OPERATION_REDUCTION_DESCRIPTOR

CUDNN_BACKEND_POINTWISE_DESCRIPTOR

CUDNN_BACKEND_REDUCTION_DESCRIPTOR

<u>cudnnBackendTensorReordering_t</u>

cudnnBnFinalizeStatsMode_t

cudnnPaddingMode_t

cudnnResampleMode_t

2.3. API Changes For cuDNN 8.3.0

The following tables show which API functions were added, deprecated, and removed for the cuDNN 8.3.0.

Table 3. API functions and data types that were added in cuDNN 8.3.0

Backend descriptor types

CUDNN BACKEND OPERATION RESAMPLE BWD DESCRIPTOR

CUDNN_BACKEND_OPERATION_RESAMPLE_FWD_DESCRIPTOR

CUDNN_BACKEND_RESAMPLE_DESCRIPTOR

2.4. API Changes For cuDNN 8.2.0

The following tables show which API functions were added, deprecated, and removed for the cuDNN 8.2.0.

Table 4. API functions and data types that were added in cuDNN 8.2.0

New functions

cudnnGetActivationDescriptorSwishBeta()

cudnnSetActivationDescriptorSwishBeta()

2.5. API Changes For cuDNN 8.1.0

The following tables show which API functions were added, deprecated, and removed for the cuDNN 8.1.0.

Table 5. API functions and data types that were added in cuDNN 8.1.0

Backend descriptor types

CUDNN_BACKEND_MATMUL_DESCRIPTOR

CUDNN_BACKEND_OPERATION_MATMUL_DESCRIPTOR

2.6. API Changes For cuDNN 8.0.3

The following tables show which API functions were added, deprecated, and removed for the cuDNN 8.0.3.

Table 6. API functions and data types that were added in cuDNN 8.0.3

Backend descriptor types
CUDNN_BACKEND_CONVOLUTION_DESCRIPTOR
CUDNN_BACKEND_ENGINE_DESCRIPTOR
CUDNN_BACKEND_ENGINECFG_DESCRIPTOR
CUDNN_BACKEND_ENGINEHEUR_DESCRIPTOR
CUDNN_BACKEND_EXECUTION_PLAN_DESCRIPTOR
CUDNN_BACKEND_INTERMEDIATE_INFO_DESCRIPTOR
CUDNN_BACKEND_KNOB_CHOICE_DESCRIPTOR
CUDNN_BACKEND_KNOB_INFO_DESCRIPTOR
CUDNN_BACKEND_LAYOUT_INFO_DESCRIPTOR
CUDNN_BACKEND_OPERATION_CONVOLUTION_BACKWARD_DATA_DESCRIPTOR
CUDNN_BACKEND_OPERATION_CONVOLUTION_BACKWARD_FILTER_DESCRIPTOR
CUDNN_BACKEND_OPERATION_CONVOLUTION_FORWARD_DESCRIPTOR
CUDNN_BACKEND_OPERATION_GEN_STATS_DESCRIPTOR
CUDNN_BACKEND_OPERATION_POINTWISE_DESCRIPTOR
CUDNN_BACKEND_OPERATIONGRAPH_DESCRIPTOR
CUDNN_BACKEND_TENSOR_DESCRIPTOR
CUDNN_BACKEND_VARIANT_PACK_DESCRIPTOR

2.7. API Changes For cuDNN 8.0.2

The following tables show which API functions were added, deprecated, and removed for the cuDNN 8.0.2.

Table 7. API functions and data types that were added in cuDNN 8.0.2

New functions and data types cudnnRNNBackwardData_v8() cudnnRNNBackwardWeights_v8()

2.8. API Changes For cuDNN 8.0.0 Preview

The following tables show which API functions were added, deprecated, and removed for the cuDNN 8.0.0 Preview Release.

Table 8. API functions and data types that were added in cuDNN 8.0.0 Preview

New functions and data types
cudnnAdvInferVersionCheck()
cudnnAdvTrainVersionCheck()
<u>cudnnBackendAttributeName_t</u>
<u>cudnnBackendAttributeType_t</u>
cudnnBackendCreateDescriptor()
<u>cudnnBackendDescriptor_t</u>
<u>cudnnBackendDescriptorType_t</u>
cudnnBackendDestroyDescriptor()
<pre>cudnnBackendExecute()</pre>
cudnnBackendFinalize()
cudnnBackendGetAttribute()
<u>cudnnBackendHeurMode_t</u>
cudnnBackendInitialize()
cudnnBackendKnobType_t
<u>cudnnBackendLayoutType_t</u>

New functions and data types
<u>cudnnBackendNumericalNote_t</u>
cudnnBackendSetAttribute()
cudnnBuildRNNDynamic()
cudnnCTCLoss_v8()
cudnnDeriveNormTensorDescriptor()
<u>cudnnForwardMode_t</u>
cudnnGenStatsMode_t
cudnnGetCTCLossDescriptor_v8()
cudnnGetCTCLossDescriptorEx()
cudnnGetCTCLossWorkspaceSize_v8
cudnnGetFilterSizeInBytes()
cudnnGetFoldedConvBackwardDataDescriptors()
cudnnGetNormalizationBackwardWorkspaceSize()
cudnnGetNormalizationForwardTrainingWorkspaceSize()
cudnnGetNormalizationTrainingReserveSpaceSize()
cudnnGetRNNDescriptor_v8()
cudnnGetRNNMatrixMathType()
cudnnGetRNNTempSpaceSizes()
<pre>cudnnGetRNNWeightParams()</pre>
<pre>cudnnGetRNNWeightSpaceSize()</pre>
<u>cudnnLRNDescriptor_t</u>
<u>cudnnNormAlgo_t</u>
cudnnNormalizationBackward()
cudnnNormalizationForwardInference()
<pre>cudnnNormalizationForwardTraining()</pre>
<u>cudnnNormMode_t</u>
<u>cudnnNormOps_t</u>
cudnnOpsInferVersionCheck()
<pre>cudnnOpsTrainVersionCheck()</pre>
<u>cudnnPointwiseMode_t</u>
cudnnRNNForward()
cudnnRNNGetClip_v8()
cudnnRNNSetClip_v8()
cudnnSetCTCLossDescriptor_v8()
cudnnSetRNNDescriptor_v8()
<u>cudnnSeverity_t</u>

For our deprecation policy, refer to the $\underline{\text{Backward Compatibility And Deprecation Policy}}$ section in the $\underline{\text{cuDNN Developer Guide}}.$

Table 9. API functions and data types that were deprecated in cuDNN 8.0.0 Preview

Deprecated functions and data types	Replaced with
<pre>cudnnCopyAlgorithmDescriptor()</pre>	
<pre>cudnnCreateAlgorithmDescriptor()</pre>	
<pre>cudnnCreatePersistentRNNPlan()</pre>	cudnnBuildRNNDynamic()
<pre>cudnnDestroyAlgorithmDescriptor()</pre>	
<pre>cudnnDestroyPersistentRNNPlan()</pre>	
cudnnFindRNNBackwardDataAlgorithmEx()	
<pre>cudnnFindRNNBackwardWeightsAlgorithmEx()</pre>	
<pre>cudnnFindRNNForwardInferenceAlgorithmEx()</pre>	
cudnnFindRNNForwardTrainingAlgorithmEx()	
cudnnGetAlgorithmDescriptor()	
cudnnGetAlgorithmPerformance()	
cudnnGetAlgorithmSpaceSize()	
cudnnGetRNNBackwardDataAlgorithmMaxCount()
cudnnGetRNNBackwardWeightsAlgorithmMaxCou	nt()
<pre>cudnnGetRNNDescriptor_v6()</pre>	cudnnGetRNNDescriptor_v8()
<pre>cudnnGetRNNMatrixMathType()</pre>	
<pre>cudnnGetRNNBiasMode()</pre>	
<pre>cudnnGetRNNPaddingMode()</pre>	
<pre>cudnnGetRNNProjectionLayers()</pre>	
cudnnGetRNNForwardInferenceAlgorithmMaxCo	unt()
cudnnGetRNNForwardTrainingAlgorithmMaxCount()	
<pre>cudnnGetRNNLinLayerBiasParams()</pre>	cudnnGetRNNWeightParams()
► cudnnGetRNNLinLayerMatrixParams()	
cudnnGetRNNParamsSize()	cudnnGetRNNWeightSpaceSize()
<pre>cudnnGetRNNWorkspaceSize()</pre>	cudnnGetRNNTempSpaceSizes()
► cudnnGetRNNTrainingReserveSize()	
cudnnPersistentRNNPlan_t	
cudnnRestoreAlgorithm()	
► cudnnRNNBackwardData()	cudnnRNNBackwardData_v8()

Deprecated functions and data types	Replaced with
<pre>cudnnRNNBackwardDataEx()</pre>	
cudnnRNNBackwardWeights()cudnnRNNBackwardWeightsEx()	cudnnRNNBackwardWeights_v8()
cudnnRNNForwardInference()cudnnRNNForwardInferenceEx()cudnnRNNForwardTraining()cudnnRNNForwardTrainingEx()	cudnnRNNForward()
<pre>cudnnRNNGetClip()</pre>	cudnnRNNGetClip_v8()
cudnnRNNSetClip()	cudnnRNNSetClip_v8()
cudnnSaveAlgorithm()	
cudnnSetAlgorithmDescriptor()	
cudnnSetAlgorithmPerformance()	
cudnnSetPersistentRNNPlan()	
cudnnSetRNNAlgorithmDescriptor()	
<pre>cudnnSetRNNBiasMode() cudnnSetRNNDescriptor_v6() cudnnSetRNNMatrixMathType() cudnnSetRNNPaddingMode() cudnnSetRNNProjectionLayers()</pre>	cudnnSetRNNDescriptor_v8()

Table 10. API functions and data types that were removed in cuDNN 8.0.0 Preview

Removed functions and data types
cudnnConvolutionBwdDataPreference_t
cudnnConvolutionBwdFilterPreference_t
cudnnConvolutionFwdPreference_t
cudnnGetConvolutionBackwardDataAlgorithm()
cudnnGetConvolutionBackwardFilterAlgorithm()
cudnnGetConvolutionForwardAlgorithm()
cudnnGetRNNDescriptor()
cudnnSetRNNDescriptor()

Chapter 3. cudnn_ops_infer.so Library

3.1. Data Type References

3.1.1. Pointer To Opaque Struct Types

3.1.1.1. cudnnActivationDescriptor_t

cudnnActivationDescriptor_t is a pointer to an opaque structure holding the description of an activation operation. <u>cudnnCreateActivationDescriptor()</u> is used to create one instance, and <u>cudnnSetActivationDescriptor()</u> must be used to initialize this instance.

3.1.1.2. cudnnCTCLossDescriptor t

cudnnCTCLossDescriptor_t is a pointer to an opaque structure holding the description of a CTC loss operation. <u>cudnnCreateCTCLossDescriptor()</u> is used to create one instance, <u>cudnnSetCTCLossDescriptor()</u> is used to initialize this instance, and <u>cudnnDestroyCTCLossDescriptor()</u> is used to destroy this instance.

3.1.1.3. cudnnDropoutDescriptor_t

cudnnDropoutDescriptor_t is a pointer to an opaque structure holding the description of a dropout operation. cudnnCreateDropoutDescriptor() is used to initialize this instance, cudnnDestroyDropoutDescriptor() is used to destroy this instance, cudnnGetDropoutDescriptor() is used to query fields of a previously initialized instance, cudnnRestoreDropoutDescriptor() is used to restore an instance to a previously saved off state.

3.1.1.4. cudnnFilterDescriptor_t

cudnnFilterDescriptor_t is a pointer to an opaque structure holding the description of a filter dataset. <u>cudnnCreateFilterDescriptor()</u> is used to create one instance, and <u>cudnnSetFilter4dDescriptor()</u> or <u>cudnnSetFilterNdDescriptor()</u> must be used to initialize this instance.

3.1.1.5. cudnnHandle_t

cudnnHandle_t is a pointer to an opaque structure holding the cuDNN library context. The cuDNN library context must be created using cudnnCreate() and the returned handle must be passed to all subsequent library function calls. The context should be destroyed at the end using cudnnDestroy(). The context is associated with only one GPU device, the current device at the time of the call to cudnnCreate(). However, multiple contexts can be created on the same GPU device.

3.1.1.6. cudnnLRNDescriptor_t

<code>cudnnlrnDescriptor_t</code> is a pointer to an opaque structure holding the parameters of a local response normalization. <code>cudnnCreateLRNDescriptor()</code> is used to create one instance, and the routine <code>cudnnSetLRNDescriptor()</code> must be used to initialize this instance.

3.1.1.7. cudnnOpTensorDescriptor_t

cudnnOpTensorDescriptor_t is a pointer to an opaque structure holding the description of a Tensor Core operation, used as a parameter to <u>cudnnOpTensor()</u>. <u>cudnnCreateOpTensorDescriptor()</u> is used to create one instance, and <u>cudnnSetOpTensorDescriptor()</u> must be used to initialize this instance.

3.1.1.8. cudnnPoolingDescriptor_t

cudnnPoolingDescriptor_t is a pointer to an opaque structure holding the description of a pooling operation. <u>cudnnCreatePoolingDescriptor()</u> is used to create one instance, and <u>cudnnSetPoolingNdDescriptor()</u> or <u>cudnnSetPooling2dDescriptor()</u> must be used to initialize this instance.

3.1.1.9. cudnnReduceTensorDescriptor_t

cudnnReduceTensorDescriptor_t is a pointer to an opaque structure holding the description of a tensor reduction operation, used as a parameter to cudnnReduceTensor(). cudnnCreateReduceTensorDescriptor() is used to create one instance, and cudnnSetReduceTensorDescriptor() must be used to initialize this instance.

3.1.1.10. cudnnSpatialTransformerDescriptor_t

cudnnSpatialTransformerDescriptor_t is a pointer to an opaque structure holding the description of a spatial transformation operation. cudnnCreateSpatialTransformerDescriptor() is used to create one instance,

cudnnSetSpatialTransformerNdDescriptor() is used to initialize this instance, and cudnnDestroySpatialTransformerDescriptor() is used to destroy this instance.

3.1.1.11. cudnnTensorDescriptor t

cudnnTensorDescriptor t is a pointer to an opaque structure holding the description of a generic n-D dataset. cudnnCreateTensorDescriptor() is used to create one instance, and one of the routines cudnnSetTensor4dDescriptor(), cudnnSetTensor4dDescriptor(), or cudnnSetTensor4dDescriptorEx() must be used to initialize this instance.

3.1.1.12. cudnnTensorTransformDescriptor t

cudnnTensorTransformDescriptor t is an opaque structure containing the description of the tensor transform. Use the cudnnCreateTensorTransformDescriptor() function to create an instance of this descriptor, and cudnnDestroyTensorTransformDescriptor() function to destroy a previously created instance.

3.1.2. Enumeration Types

3.1.2.1. cudnnActivationMode_t

cudnnActivationMode t is an enumerated type used to select the neuron activation function used in <u>cudnnActivationForward()</u>, <u>cudnnActivationBackward()</u>, and cudnnConvolutionBiasActivationForward().

Values

CUDNN ACTIVATION SIGMOID

Selects the sigmoid function.

CUDNN ACTIVATION RELU

Selects the rectified linear function.

CUDNN ACTIVATION TANH

Selects the hyperbolic tangent function.

CUDNN ACTIVATION CLIPPED RELU

Selects the clipped rectified linear function.

CUDNN ACTIVATION ELU

Selects the exponential linear function.

CUDNN ACTIVATION IDENTITY

Selects the identity function, intended for bypassing the activation step in cudnnConvolutionBiasActivationForward(). (The cudnnConvolutionBiasActivationForward() function must use

CUDNN CONVOLUTION FWD ALGO IMPLICIT PRECOMP GEMM.) Does not work with cudnnActivationForward() or cudnnActivationBackward().

CUDNN ACTIVATION SWISH

Selects the swish function.

3.1.2.2. cudnnAlgorithm t

This function has been deprecated in cuDNN 8.0.

3.1.2.3. cudnnBatchNormMode_t

cudnnBatchNormMode t is an enumerated type used to specify the mode of operation in <u>cudnnBatchNormalizationForwardInference()</u>, cudnnBatchNormalizationForwardTraining(), cudnnBatchNormalizationBackward() and cudnnDeriveBNTensorDescriptor() routines.

Values

CUDNN BATCHNORM PER ACTIVATION

Normalization is performed per-activation. This mode is intended to be used after the non-convolutional network layers. In this mode, the tensor dimensions of bnBias and bnScale and the parameters used in the cudnnBatchNormalization* functions are 1xCxHxW.

CUDNN BATCHNORM SPATIAL

Normalization is performed over N+spatial dimensions. This mode is intended for use after convolutional layers (where spatial invariance is desired). In this mode the bnBias and bnScale tensor dimensions are 1xCx1x1.

CUDNN BATCHNORM SPATIAL PERSISTENT

This mode is similar to CUDNN BATCHNORM SPATIAL but it can be faster for some tasks.

An optimized path may be selected for CUDNN DATA FLOAT and CUDNN DATA HALF types, compute capability 6.0 or higher for the following two batch normalization API calls: cudnnBatchNormalizationForwardTraining(), and cudnnBatchNormalizationBackward(). In the case of cudnnBatchNormalizationBackward(), the savedMean and savedInvVariance arguments should not be NULL.

The rest of this section applies to NCHW mode only:

This mode may use a scaled atomic integer reduction that is deterministic but imposes more restrictions on the input data range. When a numerical overflow occurs, the algorithm may produce NaN-s or Inf-s (infinity) in output buffers.

When Inf-s/NaN-s are present in the input data, the output in this mode is the same as from a pure floating-point implementation.

For finite but very large input values, the algorithm may encounter overflows more frequently due to a lower dynamic range and emit Inf-s/NaN-s while CUDNN BATCHNORM SPATIAL will produce finite results. The user can invoke <u>cudnnQueryRuntimeError()</u> to check if a numerical overflow occurred in this mode.

3.1.2.4. cudnnBatchNormOps_t

cudnnBatchNormOps t is an enumerated type used to specify the mode of operation in cudnnGetBatchNormalizationForwardTrainingExWorkspaceSize(), cudnnBatchNormalizationForwardTrainingEx(), cudnnGetBatchNormalizationBackwardExWorkspaceSize(). cudnnBatchNormalizationBackwardEx(), and <u>cudnnGetBatchNormalizationTrainingExReserveSpaceSize()</u> functions.

Values

CUDNN BATCHNORM OPS BN

Only batch normalization is performed, per-activation.

CUDNN BATCHNORM OPS BN ACTIVATION

First, the batch normalization is performed, and then the activation is performed.

CUDNN BATCHNORM OPS BN ADD ACTIVATION

Performs the batch normalization, then element-wise addition, followed by the activation operation.

3.1.2.5. cudnnCTCLossAlgo_t

cudnnCTCLossAlgo t is an enumerated type that exposes the different algorithms available to execute the CTC loss operation.

Values

CUDNN CTC LOSS ALGO DETERMINISTIC

Results are guaranteed to be reproducible.

```
CUDNN CTC LOSS ALGO NON DETERMINISTIC
```

Results are not guaranteed to be reproducible.

3.1.2.6. cudnnDataType_t

cudnnDataType t is an enumerated type indicating the data type to which a tensor descriptor or filter descriptor refers.

Values

CUDNN DATA FLOAT

The data is a 32-bit single-precision floating-point (float).

CUDNN DATA DOUBLE

The data is a 64-bit double-precision floating-point (double).

CUDNN_DATA_HALF

The data is a 16-bit floating-point.

CUDNN DATA INT8

The data is an 8-bit signed integer.

CUDNN DATA INT32

The data is a 32-bit signed integer.

CUDNN DATA INT8x4

The data is 32-bit elements each composed of 4 8-bit signed integers. This data type is only supported with the tensor format CUDNN TENSOR NCHW VECT C.

CUDNN DATA UINT8

The data is an 8-bit unsigned integer.

CUDNN DATA UINT8x4

The data is 32-bit elements each composed of 4 8-bit unsigned integers. This data type is only supported with the tensor format CUDNN TENSOR NCHW VECT C.

CUDNN DATA INT8x32

The data is 32-element vectors, each element being an 8-bit signed integer. This data type is only supported with the tensor format CUDNN TENSOR NCHW VECT C. Moreover, this data type can only be used with algo 1, meaning, CUDNN CONVOLUTION FWD ALGO IMPLICIT PRECOMP GEMM. For more information, refer to cudnnConvolutionFwdAlgo_t.

CUDNN DATA BFLOAT16

The data is a 16-bit quantity, with 7 mantissa bits, 8 exponent bits, and 1 sign bit.

CUDNN DATA INT64

The data is a 64-bit signed integer.

CUDNN DATA BOOLEAN

The data is a boolean (bool).

Note that for type <code>CUDNN_TYPE_BOOLEAN</code>, elements are expected to be "packed": that is, one byte contains 8 elements of type CUDNN TYPE BOOLEAN. Further, within each byte, elements are indexed from the least significant bit to the most significant bit. For example, a 1 dimensional tensor of 8 elements containing 01001111 has value 1 for elements 0 through 3, 0 for elements 4 and 5, 1 for element 6 and 0 for element 7. Tensors with more than 8 elements simply use more bytes, where the order is also from least significant to most significant byte. Note, CUDA is little-endian, meaning that the least significant byte has the lower memory address address. For example, in the case of 16 elements, 01001111 111111100 has value 1 for elements 0 through 3, 0 for elements 4 and 5, 1 for element 6 and 0 for element 7, value 0 for elements 8 and 9, 1 for elements 10 through 15.

3.1.2.7. cudnnDeterminism_t

cudnnDeterminism t is an enumerated type used to indicate if the computed results are deterministic (reproducible). For more information, refer to Reproducibility (determinism) in the cuDNN Developer Guide.

Values

CUDNN NON DETERMINISTIC

Results are not guaranteed to be reproducible.

CUDNN DETERMINISTIC

Results are guaranteed to be reproducible.

3.1.2.8. cudnnDivNormMode t

cudnnDivNormMode t is an enumerated type used to specify the mode of operation in cudnnDivisiveNormalizationForward() and cudnnDivisiveNormalizationBackward().

Values

CUDNN DIVNORM PRECOMPUTED MEANS

The means tensor data pointer is expected to contain means or other kernel convolution values precomputed by the user. The means pointer can also be NULL, in that case, it's considered to be filled with zeroes. This is equivalent to spatial LRN.



Note: In the backward pass, the means are treated as independent inputs and the gradient over means is computed independently. In this mode, to yield a net gradient over the entire LCN computational graph, the destDiffMeans result should be backpropagated through the user's means layer (which can be implemented using average pooling) and added to the destDiffData tensor produced by cudnnDivisiveNormalizationBackward().

3.1.2.9. cudnnErrQueryMode_t

cudnnErrQueryMode t is an enumerated type passed to cudnnQueryRuntimeError() to select the remote kernel error query mode.

Values

CUDNN ERRQUERY RAWCODE

Read the error storage location regardless of the kernel completion status.

CUDNN_ERRQUERY_NONBLOCKING

Report if all tasks in the user stream of the cuDNN handle were completed. If that is the case, report the remote kernel error code.

CUDNN ERRQUERY BLOCKING

Wait for all tasks to complete in the user stream before reporting the remote kernel error code.

3.1.2.10. cudnnFoldingDirection_t

cudnnFoldingDirection t is an enumerated type used to select the folding direction. For more information, refer to cudnnTensorTransformDescriptor_t.

Data Member

```
CUDNN TRANSFORM FOLD = 0U
  Selects folding.
CUDNN TRANSFORM UNFOLD = 1U
  Selects unfolding.
```

3.1.2.11. cudnnIndicesType t

cudnnIndicesType t is an enumerated type used to indicate the data type for the indices to be computed by the cudnnReduceTensor() routine. This enumerated type is used as a field for the cudnnReduceTensorDescriptor_t descriptor.

Values

```
CUDNN 32BIT INDICES
  Compute unsigned int indices.
CUDNN 64BIT INDICES
  Compute unsigned long indices.
CUDNN 16BIT INDICES
  Compute unsigned short indices.
CUDNN_8BIT_INDICES
  Compute unsigned char indices.
```

3.1.2.12. cudnnLRNMode t

cudnnLRNMode t is an enumerated type used to specify the mode of operation in cudnnLRNCrossChannelForward() and cudnnLRNCrossChannelBackward().

Values

CUDNN LRN CROSS CHANNEL DIM1

LRN computation is performed across the tensor's dimension dimA[1].

3.1.2.13. cudnnMathType t

cudnnMathType t is an enumerated type used to indicate if the use of Tensor Core operations is permitted in a given library routine.

Values

CUDNN_DEFAULT_MATH

Tensor Core operations are not used on pre-NVIDIA A100 GPU devices. On A100 GPU architecture devices, Tensor Core TF32 operation is permitted.

CUDNN TENSOR OP MATH

The use of Tensor Core operations is permitted but will not actively perform datatype down conversion on tensors in order to utilize Tensor Cores.

CUDNN TENSOR OP MATH ALLOW CONVERSION

The use of Tensor Core operations is permitted and will actively perform datatype down conversion on tensors in order to utilize Tensor Cores.

CUDNN_FMA_MATH

Restricted to only kernels that use FMA instructions.

On pre-NVIDIA A100 GPU devices, CUDNN DEFAULT MATH and CUDNN FMA MATH have the same behavior: Tensor Core kernels will not be selected. With NVIDIA Ampere Architecture and CUDA toolkit 11, CUDNN DEFAULT MATH permits TF32 Tensor Core operation and CUDNN FMA MATH does not. The TF32 behavior for CUDNN DEFAULT MATH and the other Tensor Core math types can be explicitly disabled by the environment variable NVIDIA TF32 OVERRIDE=0.

3.1.2.14. cudnnNanPropagation t

cudnnNanPropagation t is an enumerated type used to indicate if a given routine should propagate Nan numbers. This enumerated type is used as a field for the cudnnActivationDescriptor t descriptor and cudnnPoolingDescriptor t descriptor.

Values

CUDNN NOT PROPAGATE NAN

Nan numbers are not propagated.

CUDNN PROPAGATE NAN

Nan numbers are propagated.

3.1.2.15. cudnnNormAlgo t

cudnnNormAlgo t is an enumerated type used to specify the algorithm to execute the normalization operation.

Values

CUDNN NORM ALGO STANDARD

Standard normalization is performed.

CUDNN NORM ALGO PERSIST

This mode is similar to CUDNN NORM ALGO STANDARD, however it only supports CUDNN NORM PER CHANNEL and can be faster for some tasks.

An optimized path may be selected for CUDNN DATA FLOAT and CUDNN DATA HALF types, compute capability 6.0 or higher for the following two normalization API calls: cudnnNormalizationForwardTraining() and cudnnNormalizationBackward(). In the case of cudnnNormalizationBackward(), the savedMean and savedInvVariance arguments should not be NULL.

The rest of this section applies to NCHW mode only: This mode may use a scaled atomic integer reduction that is deterministic but imposes more restrictions on the input data range. When a numerical overflow occurs, the algorithm may produce NaNs or Inf-s (infinity) in output buffers.

When Inf-s/NaN-s are present in the input data, the output in this mode is the same as from a pure floating-point implementation.

For finite but very large input values, the algorithm may encounter overflows more frequently due to a lower dynamic range and emit Inf-s/NaN-s while CUDNN NORM ALGO STANDARD will produce finite results. The user can invoke <u>cudnnQueryRuntimeError()</u> to check if a numerical overflow occurred in this mode.

3.1.2.16. cudnnNormMode t

cudnnNormMode t is an enumerated type used to specify the mode of operation in cudnnNormalizationForwardInference(), cudnnNormalizationForwardTraining(), cudnnBatchNormalizationBackward(), cudnnGetNormalizationForwardTrainingWorkspaceSize(),

cudnnGetNormalizationBackwardWorkspaceSize(), and cudnnGetNormalizationTrainingReserveSpaceSize() routines.

Values

CUDNN NORM PER ACTIVATION

Normalization is performed per-activation. This mode is intended to be used after the non-convolutional network layers. In this mode, the tensor dimensions of normBias and normScale and the parameters used in the cudnnNormalization* functions are 1xCxHxW.

CUDNN NORM PER CHANNEL

Normalization is performed per-channel over N+spatial dimensions. This mode is intended for use after convolutional layers (where spatial invariance is desired). In this mode, the normBias and normScale tensor dimensions are 1xCx1x1.

3.1.2.17. cudnnNormOps t

cudnnNormOps t is an enumerated type used to specify the mode of operation in <u>cudnnGetNormalizationForwardTrainingWorkspaceSize()</u>, cudnnNormalizationForwardTraining(), cudnnGetNormalizationBackwardWorkspaceSize(), cudnnNormalizationBackward(), and cudnnGetNormalizationTrainingReserveSpaceSize() functions.

Values

CUDNN NORM OPS NORM

Only normalization is performed.

CUDNN NORM OPS NORM ACTIVATION

First, the normalization is performed, then the activation is performed.

CUDNN NORM OPS NORM ADD ACTIVATION

Performs the normalization, then element-wise addition, followed by the activation operation.

3.1.2.18. cudnnOpTensorOp t

cudnnOpTensorOp t is an enumerated type used to indicate the Tensor Core operation to be used by the cudnnOpTensor() routine. This enumerated type is used as a field for the cudnnOpTensorDescriptor_t descriptor.

Values

CUDNN OP TENSOR ADD

The operation to be performed is addition.

CUDNN OP TENSOR MUL

The operation to be performed is multiplication.

CUDNN OP TENSOR MIN

The operation to be performed is a minimum comparison.

CUDNN OP TENSOR MAX

The operation to be performed is a maximum comparison.

```
CUDNN OP TENSOR SQRT
```

The operation to be performed is square root, performed on only the A tensor.

```
CUDNN OP TENSOR NOT
```

The operation to be performed is negation, performed on only the A tensor.

3.1.2.19. cudnnPoolingMode t

cudnnPoolingMode t is an enumerated type passed to cudnnPoolingMode t is an enumerated type passed to cudnnSetPooling2dDescriptor() to select the pooling method to be used by cudnnPoolingForward() and cudnnPoolingBackward().

Values

CUDNN POOLING MAX

The maximum value inside the pooling window is used.

```
CUDNN POOLING AVERAGE COUNT INCLUDE PADDING
```

Values inside the pooling window are averaged. The number of elements used to calculate the average includes spatial locations falling in the padding region.

```
CUDNN POOLING AVERAGE COUNT EXCLUDE PADDING
```

Values inside the pooling window are averaged. The number of elements used to calculate the average excludes spatial locations falling in the padding region.

CUDNN POOLING MAX DETERMINISTIC

The maximum value inside the pooling window is used. The algorithm used is deterministic.

3.1.2.20. cudnnReduceTensorIndices t

cudnnReduceTensorIndices t is an enumerated type used to indicate whether indices are to be computed by the <u>cudnnReduceTensor()</u> routine. This enumerated type is used as a field for the cudnnReduceTensorDescriptor_t descriptor.

Values

CUDNN_REDUCE_TENSOR_NO_INDICES

Do not compute indices.

CUDNN_REDUCE_TENSOR_FLATTENED_INDICES

Compute indices. The resulting indices are relative, and flattened.

3.1.2.21. cudnnReduceTensorOp t

cudnnReduceTensorOp_t is an enumerated type used to indicate the Tensor Core operation to be used by the <u>cudnnReduceTensor()</u> routine. This enumerated type is used as a field for the cudnnReduceTensorDescriptor t descriptor.

Values

```
CUDNN REDUCE TENSOR ADD
```

The operation to be performed is addition.

CUDNN REDUCE TENSOR MUL

The operation to be performed is multiplication.

CUDNN_REDUCE_TENSOR_MIN

The operation to be performed is a minimum comparison.

CUDNN REDUCE TENSOR MAX

The operation to be performed is a maximum comparison.

CUDNN REDUCE TENSOR AMAX

The operation to be performed is a maximum comparison of absolute values.

CUDNN REDUCE TENSOR AVG

The operation to be performed is averaging.

CUDNN REDUCE TENSOR NORM1

The operation to be performed is addition of absolute values.

CUDNN REDUCE TENSOR NORM2

The operation to be performed is a square root of the sum of squares.

CUDNN_REDUCE_TENSOR_MUL_NO_ZEROS

The operation to be performed is multiplication, not including elements of value zero.

3.1.2.22. cudnnRNNAlgo t

cudnnRNNAlgo t is an enumerated type used to specify the algorithm used in the cudnnRNNForwardInference(), cudnnRNNForwardTraining(), cudnnRNNBackwardData() and cudnnRNNBackwardWeights() routines.

Values

CUDNN RNN ALGO STANDARD

Each RNN layer is executed as a sequence of operations. This algorithm is expected to have robust performance across a wide range of network parameters.

CUDNN RNN ALGO PERSIST STATIC

The recurrent parts of the network are executed using a *persistent kernel* approach. This method is expected to be fast when the first dimension of the input tensor is small (meaning, a small minibatch).

CUDNN RNN ALGO PERSIST STATIC is only supported on devices with compute capability >= 6.0.

CUDNN RNN ALGO PERSIST DYNAMIC

The recurrent parts of the network are executed using a *persistent kernel* approach. This method is expected to be fast when the first dimension of the input tensor is small (meaning, a small minibatch). When using CUDNN RNN ALGO PERSIST DYNAMIC persistent kernels are prepared at runtime and are able to optimize using the specific parameters of the network and active GPU. As such, when using CUDNN RNN ALGO PERSIST DYNAMIC a one-time plan preparation stage must be executed. These plans can then be reused in repeated calls with the same model parameters.

The limits on the maximum number of hidden units supported when using CUDNN RNN ALGO PERSIST DYNAMIC are significantly higher than the limits when using CUDNN RNN ALGO PERSIST STATIC, however throughput is likely to significantly reduce when exceeding the maximums supported by CUDNN RNN ALGO PERSIST STATIC. In this regime, this method will still outperform CUDNN RNN ALGO STANDARD for some

CUDNN RNN ALGO PERSIST DYNAMIC is only supported on devices with compute capability >= 6.0 on Linux machines.

3.1.2.23. cudnnSamplerType t

cudnnSamplerType t is an enumerated type passed to cudnnSetSpatialTransformerNdDescriptor() to select the sampler type to be used by cudnnSpatialTfSamplerForward() and cudnnSpatialTfSamplerBackward().

Values

CUDNN SAMPLER BILINEAR

Selects the bilinear sampler.

3.1.2.24. cudnnSeverity t

cudnnSeverity t is an enumerated type passed to the customized callback function for logging that users may set. This enumerate describes the severity level of the item, so the customized logging call back may react differently.

Values

CUDNN SEV FATAL

This value indicates a fatal error emitted by cuDNN.

CUDNN SEV ERROR

This value indicates a normal error emitted by cuDNN.

CUDNN SEV WARNING

This value indicates a warning emitted by cuDNN.

CUDNN SEV INFO

This value indicates a piece of information (for example, API log) emitted by cuDNN.

3.1.2.25. cudnnSoftmaxAlgorithm t

cudnnSoftmaxAlgorithm t is used to select an implementation of the softmax function used in cudnnSoftmaxForward() and cudnnSoftmaxBackward().

Values

CUDNN SOFTMAX FAST

This implementation applies the straightforward softmax operation.

CUDNN SOFTMAX ACCURATE

This implementation scales each point of the softmax input domain by its maximum value to avoid potential floating point overflows in the softmax evaluation.

CUDNN SOFTMAX LOG

This entry performs the log softmax operation, avoiding overflows by scaling each point in the input domain as in CUDNN SOFTMAX ACCURATE.

3.1.2.26. cudnnSoftmaxMode t

cudnnSoftmaxMode t is used to select over which data the cudnnSoftmaxForward() and cudnnSoftmaxBackward() are computing their results.

Values

CUDNN SOFTMAX MODE INSTANCE

The softmax operation is computed per image (N) across the dimensions C, H, W.

CUDNN_SOFTMAX_MODE_CHANNEL

The softmax operation is computed per spatial location (H, W) per image (N) across dimension c.

3.1.2.27. cudnnStatus t

cudnnStatus t is an enumerated type used for function status returns. All cuDNN library functions return their status, which can be one of the following values:

Values

CUDNN STATUS SUCCESS

The operation was completed successfully.

CUDNN STATUS NOT INITIALIZED

The cuDNN library was not initialized properly. This error is usually returned when a call to cudnnCreate() fails or when cudnnCreate() has not been called prior to calling another cuDNN routine. In the former case, it is usually due to an error in the CUDA Runtime API called by <u>cudnnCreate()</u> or by an error in the hardware setup.

CUDNN STATUS ALLOC FAILED

Resource allocation failed inside the cuDNN library. This is usually caused by an internal cudaMalloc() failure.

To correct, prior to the function call, deallocate previously allocated memory as much as possible.

CUDNN STATUS BAD PARAM

An incorrect value or parameter was passed to the function.

To correct, ensure that all the parameters being passed have valid values.

CUDNN STATUS ARCH MISMATCH

The function requires a feature absent from the current GPU device. Note that cuDNN only supports devices with compute capabilities greater than or equal to 3.0.

To correct, compile and run the application on a device with appropriate compute capability.

CUDNN STATUS MAPPING ERROR

An access to GPU memory space failed, which is usually caused by a failure to bind a texture.

To correct, prior to the function call, unbind any previously bound textures.

Otherwise, this may indicate an internal error/bug in the library.

CUDNN STATUS EXECUTION FAILED

The GPU program failed to execute. This is usually caused by a failure to launch some cuDNN kernel on the GPU, which can occur for multiple reasons.

To correct, check that the hardware, an appropriate version of the driver, and the cuDNN library are correctly installed.

Otherwise, this may indicate an internal error/bug in the library.

CUDNN STATUS INTERNAL ERROR

An internal cuDNN operation failed.

CUDNN STATUS NOT SUPPORTED

The functionality requested is not presently supported by cuDNN.

CUDNN STATUS LICENSE ERROR

The functionality requested requires some license and an error was detected when trying to check the current licensing. This error can happen if the license is not present or is expired or if the environment variable NVIDIA LICENSE FILE is not set properly.

CUDNN STATUS RUNTIME PREREQUISITE MISSING

A runtime library required by cuDNN cannot be found in the predefined search paths. These libraries are libcuda.so (nvcuda.dll) and libnvrtc.so (nvrtc64 <Major Release Version><Minor Release Version> 0.dll and nvrtc-builtins64 <Major Release Version><Minor Release Version>.dll).

CUDNN STATUS RUNTIME IN PROGRESS

Some tasks in the user stream are not completed.

CUDNN STATUS RUNTIME FP OVERFLOW

Numerical overflow occurred during the GPU kernel execution.

3.1.2.28. cudnnTensorFormat t

cudnnTensorFormat t is an enumerated type used by <u>cudnnSetTensor4dDescriptor()</u> to create a tensor with a pre-defined layout. For a detailed explanation of how these tensors are arranged in memory, refer to <u>Data Layout Formats</u> in the *cuDNN Developer* Guide.

Values

CUDNN TENSOR NCHW

This tensor format specifies that the data is laid out in the following order: batch size, feature maps, rows, columns. The strides are implicitly defined in such a way that the data are contiguous in memory with no padding between images, feature maps, rows, and columns; the columns are the inner dimension and the images are the outermost dimension.

CUDNN TENSOR NHWC

This tensor format specifies that the data is laid out in the following order: batch size, rows, columns, feature maps. The strides are implicitly defined in such a way that the data are contiguous in memory with no padding between images, rows, columns, and feature maps; the feature maps are the inner dimension and the images are the outermost dimension.

CUDNN TENSOR NCHW VECT C

This tensor format specifies that the data is laid out in the following order: batch size, feature maps, rows, columns. However, each element of the tensor is a vector of multiple feature maps. The length of the vector is carried by the data type of the tensor. The strides are implicitly defined in such a way that the data are contiguous in memory with no padding between images, feature maps, rows, and columns; the columns are the inner dimension and the images are the outermost dimension. This format is only supported with tensor data types CUDNN DATA INT8x4, CUDNN DATA INT8x32, and CUDNN DATA UINT8x4.

The CUDNN TENSOR NCHW VECT C can also be interpreted in the following way: The NCHW INT8x32 format is really N x (C/32) x H x W x 32 (32 Cs for every W), just as the NCHW INT8x4 format is N x (C/4) x H x W x 4 (4 Cs for every W). Hence, the VECT C name - each W is a vector (4 or 32) of Cs.

3.2. API Functions

3.2.1. cudnnActivationForward()

```
cudnnStatus t cudnnActivationForward(
   cudnnHandle_t handle,
   cudnnActivationDescriptor t
                                  activationDesc,
                                 *alpha,
   const void
   const cudnnTensorDescriptor_t xDesc,
                                  *x,
   const void
   const void
                                  *beta,
   const cudnnTensorDescriptor t
                                  yDesc,
                                  *y)
```

This routine applies a specified neuron activation function element-wise over each input value.



Note:

- In-place operation is allowed for this routine; meaning, xData and yData pointers may be equal. However, this requires xDesc and yDesc descriptors to be identical (particularly, the strides of the input and output must match for an in-place operation to be allowed).
- All tensor formats are supported for 4 and 5 dimensions, however, the best performance is obtained when the strides of xDesc and yDesc are equal and HW-



packed. For more than 5 dimensions the tensors must have their spatial dimensions packed.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle t.

activationDesc

Input. Activation descriptor. For more information, refer to cudnnActivationDescriptor_t.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*result + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc

Input. Handle to the previously initialized input tensor descriptor. For more information, refer to cudnnTensorDescriptor_t.

x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc.

yDesc

Input. Handle to the previously initialized output tensor descriptor.

У

Output. Data pointer to GPU memory associated with the output tensor descriptor yDesc.

Returns

CUDNN_STATUS_SUCCESS

The function launched successfully.

```
CUDNN STATUS NOT SUPPORTED
```

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The parameter mode has an invalid enumerant value.
- The dimensions n, c, h, w of the input tensor and output tensor differ.
- ▶ The datatype of the input tensor and output tensor differs.

▶ The strides nStride, cStride, hStride, wStride of the input tensor and output tensor differ and in-place operation is used (meaning, x and y pointers are equal).

CUDNN_STATUS_EXECUTION_FAILED

The function failed to launch on the GPU.

cudnnAddTensor()

```
cudnnStatus t cudnnAddTensor(
   cudnnHandle t
                                      handle,
   const void
                                     *alpha,
   const cudnnTensorDescriptor t
                                      aDesc,
                                     *A,
   const void
   const void
                                     *beta,
   const cudnnTensorDescriptor t
                                     cDesc,
```

This function adds the scaled values of a bias tensor to another tensor. Each dimension of the bias tensor A must match the corresponding dimension of the destination tensor c or must be equal to 1. In the latter case, the same value from the bias tensor for those dimensions will be used to blend into the c tensor.



Note: Only 4D and 5D tensors are supported. Beyond these dimensions, this routine is not supported.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle t.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the source value with the prior value in the destination tensor as follows:

```
dstValue = alpha[0]*srcValue + beta[0]*priorDstValue
```

For more information, refer to Scaling Parameters in the cuDNN Developer Guide.

aDesc

Input. Handle to a previously initialized tensor descriptor. For more information, refer to cudnnTensorDescriptor_t.

Α

Input. Pointer to data of the tensor described by the aDesc descriptor.

cDesc

Input. Handle to a previously initialized tensor descriptor.

С

Input/Output. Pointer to data of the tensor described by the cDesc descriptor.

Returns

CUDNN STATUS SUCCESS

The function executed successfully.

CUDNN_STATUS_NOT_SUPPORTED

The function does not support the provided configuration.

```
CUDNN_STATUS_BAD_PARAM
```

The dimensions of the bias tensor refer to an amount of data that is incompatible with the output tensor dimensions or the dataType of the two tensor descriptors are different.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

cudnnBatchNormalizationForwardInference()

```
cudnnStatus t cudnnBatchNormalizationForwardInference(
    cudnnHandle t
                                     handle,
    cudnnBatchNormMode t
                                     mode,
                                    *alpha,
    const void
    const void
                                    *beta,
    const cudnnTensorDescriptor t
                                     xDesc.
                                    *x,
    const void
    const cudnnTensorDescriptor t
                                    yDesc,
                                    *y,
    void
    const cudnnTensorDescriptor t
                                    bnScaleBiasMeanVarDesc,
                                    *bnScale,
    const void
    const void
                                    *bnBias,
    const void
                                    *estimatedMean,
    const void
                                    *estimatedVariance,
```

This function performs the forward batch normalization layer computation for the inference phase. This layer is based on the paper Batch Normalization: Accelerating Deep Network Training by Reducing Internal Covariate Shift, S. loffe, C. Szegedy, 2015.



Note:

- Only 4D and 5D tensors are supported.
- ▶ The input transformation performed by this function is defined as:

```
y = beta*y + alpha *[bnBias + (bnScale * (x-estimatedMean)/sqrt(epsilon +
estimatedVariance) ]
```

- ▶ The epsilon value has to be the same during training, backpropagation and inference.
- For the training phase, refer to cudnnBatchNormalizationForwardTraining().
- Higher performance can be obtained when HW-packed tensors are used for all of x and dx.

For more information, refer to cudnnDeriveBNTensorDescriptor() for the secondary tensor descriptor generation for the parameters used in this function.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Input. Mode of operation (spatial or per-activation). For more information, refer to cudnnBatchNormMode_t.

alpha, beta

Inputs. Pointers to scaling factors (in host memory) used to blend the layer output value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc, yDesc

Input. Handles to the previously initialized tensor descriptors.

*x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc, for the layer's x input data.

*y

Input/Output. Data pointer to GPU memory associated with the tensor descriptor yDesc, for the youtput of the batch normalization layer.

bnScaleBiasMeanVarDesc, bnScale, bnBias

Inputs. Tensor descriptors and pointers in device memory for the batch normalization scale and bias parameters (in the original paper bias is referred to as beta and scale as gamma).

estimatedMean, estimatedVariance

Inputs. Mean and variance tensors (these have the same descriptor as the bias and scale). The resultRunningMean and resultRunningVariance, accumulated during the training phase from the cudnnBatchNormalizationForwardTraining() call, should be passed as inputs here.

epsilon

Input. Epsilon value used in the batch normalization formula. Its value should be equal to or greater than the value defined for CUDNN BN MIN EPSILON in cudnn.h.

Supported configurations

This function supports the following combinations of data types for various descriptors.

Table 11. Supported configurations

Data Type Configurations	xDesc	bnScaleBiasMea	alpha, beta	yDesc
INT8_CONFIG	CUDNN_DATA_INT8	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_INT8
PSEUDO_HALF_CONF	ICUDNN_DATA_HALF	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_HALF
FLOAT_CONFIG	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT
DOUBLE_CONFIG	CUDNN_DATA_DOUBI	ECUDNN_DATA_DOUBL	ECUDNN_DATA_DOUBL	ECUDNN_DATA_DOUBL
BFLOAT16_CONFIG	CUDNN_DATA_BFLOA	TC16DNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_BFLOA

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- One of the pointers alpha, beta, x, y, bnScale, bnBias, estimatedMean, estimatedInvVariance is NULL.
- The number of xDesc or yDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported.)
- bnScaleBiasMeanVarDesc dimensions are not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for spatial, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for peractivation mode.
- ▶ epsilon value is less than CUDNN BN MIN EPSILON.
- ▶ Dimensions or data types mismatch for xDesc, yDesc.

3.2.4. cudnnCopyAlgorithmDescriptor()

This function has been deprecated in cuDNN 8.0.

3.2.5. cudnnCreate()

```
cudnnStatus t cudnnCreate(cudnnHandle t *handle)
```

This function initializes the cuDNN library and creates a handle to an opaque structure holding the cuDNN library context. It allocates hardware resources on the host and device and must be called prior to making any other cuDNN library calls.

The cuDNN library handle is tied to the current CUDA device (context). To use the library on multiple devices, one cuDNN handle needs to be created for each device.

For a given device, multiple cuDNN handles with different configurations (for example, different current CUDA streams) may be created. Because cudnnCreate() allocates some internal resources, the release of those resources by calling cudnnDestroy() will implicitly call <u>cudaDeviceSynchronize</u>; therefore, the recommended best practice is to call cudnnCreate/cudnnDestroy outside of performance-critical code paths.

For multithreaded applications that use the same device from different threads, the recommended programming model is to create one (or a few, as is convenient) cuDNN handle(s) per thread and use that cuDNN handle for the entire life of the thread.

Parameters

handle

Output. Pointer to pointer where to store the address to the allocated cuDNN handle. For more information, refer to cudnnHandle t.

Returns

```
CUDNN STATUS BAD PARAM
```

Invalid (NULL) input pointer supplied.

```
CUDNN STATUS NOT INITIALIZED
```

No compatible GPU found, CUDA driver not installed or disabled, CUDA runtime API initialization failed.

```
CUDNN STATUS ARCH MISMATCH
```

NVIDIA GPU architecture is too old.

```
CUDNN STATUS ALLOC FAILED
```

Host memory allocation failed.

```
CUDNN STATUS INTERNAL ERROR
```

CUDA resource allocation failed.

```
CUDNN STATUS LICENSE ERROR
```

cuDNN license validation failed (only when the feature is enabled).

```
CUDNN STATUS SUCCESS
```

cuDNN handle was created successfully.

3.2.6. cudnnCreateActivationDescriptor()

```
cudnnStatus t cudnnCreateActivationDescriptor(
       cudnnActivationDescriptor t *activationDesc)
```

This function creates an activation descriptor object by allocating the memory needed to hold its opaque structure. For more information, refer to <u>cudnnActivationDescriptor</u> t.

CUDNN STATUS SUCCESS

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

3.2.7. cudnnCreateAlgorithmDescriptor()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnCreateAlgorithmDescriptor(
    cudnnAlgorithmDescriptor_t *algoDesc)
```

This function creates an algorithm descriptor object by allocating the memory needed to hold its opaque structure.

Returns

CUDNN STATUS SUCCESS

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

3.2.8. cudnnCreateAlgorithmPerformance()

```
cudnnStatus t cudnnCreateAlgorithmPerformance(
    cudnnAlgorithmPerformance t *algoPerf,
                                numberToCreate)
```

This function creates multiple algorithm performance objects by allocating the memory needed to hold their opaque structures.

Returns

CUDNN STATUS SUCCESS

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

3.2.9. cudnnCreateDropoutDescriptor()

```
cudnnStatus t cudnnCreateDropoutDescriptor(
   cudnnDropoutDescriptor t
                                *dropoutDesc)
```

This function creates a generic dropout descriptor object by allocating the memory needed to hold its opaque structure. For more information, refer to cudnnDropoutDescriptor_t.

CUDNN STATUS SUCCESS

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

3.2.10. cudnnCreateFilterDescriptor()

```
cudnnStatus_t cudnnCreateFilterDescriptor(
   cudnnFilterDescriptor t *filterDesc)
```

This function creates a filter descriptor object by allocating the memory needed to hold its opaque structure. For more information, refer to cudnnFilterDescriptor_t.

Returns

CUDNN STATUS SUCCESS

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

3.2.11. cudnnCreateLRNDescriptor()

```
cudnnStatus_t cudnnCreateLRNDescriptor(
           cudnnLRNDescriptor t *poolingDesc)
```

This function allocates the memory needed to hold the data needed for LRN and DivisiveNormalization layers operation and returns a descriptor used with subsequent layer forward and backward calls.

Returns

CUDNN STATUS SUCCESS

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

3.2.12. cudnnCreateOpTensorDescriptor()

```
cudnnStatus t cudnnCreateOpTensorDescriptor(
    cudnnOpTensorDescriptor t* opTensorDesc)
```

This function creates a tensor pointwise math descriptor. For more information, refer to <u>cudnnOpTensorDescriptor_t</u>.

opTensorDesc

Output. Pointer to the structure holding the description of the tensor pointwise math such as add, multiply, and more.

Returns

```
CUDNN STATUS SUCCESS
```

The function returned successfully.

```
CUDNN STATUS BAD PARAM
```

Tensor pointwise math descriptor passed to the function is invalid.

```
CUDNN_STATUS_ALLOC_FAILED
```

Memory allocation for this tensor pointwise math descriptor failed.

3.2.13. cudnnCreatePoolingDescriptor()

```
cudnnStatus_t cudnnCreatePoolingDescriptor(
```

This function creates a pooling descriptor object by allocating the memory needed to hold its opaque structure.

Returns

CUDNN STATUS SUCCESS

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

3.2.14. cudnnCreateReduceTensorDescriptor()

```
cudnnStatus t cudnnCreateReduceTensorDescriptor(
cudnnReduceTensorDescriptor_t* reduceTensorDesc)
```

This function creates a reduced tensor descriptor object by allocating the memory needed to hold its opaque structure.

Returns

CUDNN STATUS SUCCESS

The object was created successfully.

```
CUDNN STATUS BAD PARAM
```

reduceTensorDesc is a NULL pointer.

CUDNN STATUS ALLOC FAILED

The resources could not be allocated.

3.2.15. cudnnCreateSpatialTransformerDescriptor()

```
cudnnStatus t cudnnCreateSpatialTransformerDescriptor(
    cudnnSpatialTransformerDescriptor t *stDesc)
```

This function creates a generic spatial transformer descriptor object by allocating the memory needed to hold its opaque structure.

Returns

CUDNN STATUS SUCCESS

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

3.2.16. cudnnCreateTensorDescriptor()

```
cudnnStatus t cudnnCreateTensorDescriptor(
   cudnnTensorDescriptor t *tensorDesc)
```

This function creates a generic tensor descriptor object by allocating the memory needed to hold its opaque structure. The data is initialized to all zeros.

Parameters

tensorDesc

Input. Pointer to pointer where the address to the allocated tensor descriptor object should be stored.

Returns

```
CUDNN_STATUS_BAD_PARAM
```

Invalid input argument.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

```
CUDNN STATUS SUCCESS
```

The object was created successfully.

3.2.17. cudnnCreateTensorTransformDescriptor()

```
cudnnStatus t cudnnCreateTensorTransformDescriptor(
cudnnTensorTransformDescriptor t *transformDesc);
```

This function creates a tensor transform descriptor object by allocating the memory needed to hold its opaque structure. The tensor data is initialized to be all zero. Use the cudnnSetTensorTransformDescriptor() function to initialize the descriptor created by this function.

Parameters

transformDesc

Output. A pointer to an uninitialized tensor transform descriptor.

Returns

```
CUDNN STATUS SUCCESS
```

The descriptor object was created successfully.

```
CUDNN STATUS BAD PARAM
```

The transformDesc is NULL.

CUDNN STATUS ALLOC FAILED

The memory allocation failed.

3.2.18. cudnnDeriveBNTensorDescriptor()

```
cudnnStatus t cudnnDeriveBNTensorDescriptor(
   cudnnTensorDescriptor t derivedBnDesc,
   const cudnnTensorDescriptor t xDesc,
   cudnnBatchNormMode t
                              mode)
```

This function derives a secondary tensor descriptor for the batch normalization scale, invVariance, bnBias, and bnScale subtensors from the layer's x data descriptor.

Use the tensor descriptor produced by this function as the bnScaleBiasMeanVarDesc parameter for the cudnnBatchNormalizationForwardInference() and cudnnBatchNormalizationForwardTraining() functions, and as the bnScaleBiasDiffDesc parameter in the cudnnBatchNormalizationBackward() function.

The resulting dimensions will be:

- 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for BATCHNORM MODE SPATIAL
- 1xCxHxW for 4D and 1xCxDxHxW for 5D for BATCHNORM MODE PER ACTIVATION mode

For HALF input data type the resulting tensor descriptor will have a FLOAT type. For other data types, it will have the same type as the input data.



Note:

- Only 4D and 5D tensors are supported.
- The derivedBnDesc should be first created using <u>cudnnCreateTensorDescriptor()</u>.
- xDesc is the descriptor for the layer's x data and has to be set up with proper dimensions prior to calling this function.

derivedBnDesc

Output. Handle to a previously created tensor descriptor.

xDesc

Input. Handle to a previously created and initialized layer's x data descriptor.

mode

Input. Batch normalization layer mode of operation.

Returns

```
CUDNN STATUS SUCCESS
```

The computation was performed successfully.

```
CUDNN STATUS BAD PARAM
```

Invalid Batch Normalization mode.

3.2.19. cudnnDeriveNormTensorDescriptor()

```
cudnnStatus t CUDNNWINAPI
cudnnDeriveNormTensorDescriptor(cudnnTensorDescriptor t derivedNormScaleBiasDesc,
                                cudnnTensorDescriptor t derivedNormMeanVarDesc,
                                const cudnnTensorDescriptor t xDesc,
                             cudnnNormMode t mode,
                                int groupCnt)
```

This function derives tensor descriptors for the normalization mean, invariance, normBias, and normScale subtensors from the layer's x data descriptor and norm mode. normalization, mean, and invariance share the same descriptor while bias and scale share the same descriptor.

Use the tensor descriptor produced by this function as the normScaleBiasDesc or normMeanVarDesc parameter for the <u>cudnnNormalizationForwardInference()</u> and cudnnNormalizationForwardTraining() functions, and as the dNormScaleBiasDesc and normMeanVarDesc parameters in the cudnnNormalizationBackward() function.

The resulting dimensions will be:

- 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for CUDNN NORM PER ACTIVATION
- 1xCxHxW for 4D and 1xCxDxHxW for 5D for CUDNN NORM PER CHANNEL mode

For HALF input data type the resulting tensor descriptor will have a FLOAT type. For other data types, it will have the same type as the input data.

- Only 4D and 5D tensors are supported.
- ▶ The derivedNormScaleBiasDesc and derivedNormMeanVarDesc should be created first using cudnnCreateTensorDescriptor().

xDesc is the descriptor for the layer's x data and has to be set up with proper dimensions prior to calling this function.

Parameters

derivedNormScaleBiasDesc

Output. Handle to a previously created tensor descriptor.

derivedNormMeanVarDesc

Output. Handle to a previously created tensor descriptor.

xDesc

Input. Handle to a previously created and initialized layer's x data descriptor.

mode

Input. The normalization layer mode of operation.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN STATUS BAD PARAM

Invalid Batch Normalization mode.

3.2.20. cudnnDestroy()

```
cudnnStatus t cudnnDestroy(cudnnHandle t handle)
```

This function releases the resources used by the cuDNN handle. This function is usually the last call with a particular handle to the cuDNN handle. Because cudnnCreate() allocates some internal resources, the release of those resources by calling cudnnDestroy() will implicitly call <u>cudaDeviceSynchronize</u>; therefore, the recommended best practice is to call cudnnCreate/cudnnDestroy outside of performance-critical code paths.

Parameters

handle

Input. The cuDNN handle to be destroyed.

Returns

CUDNN STATUS SUCCESS

The cuDNN context destruction was successful.

CUDNN STATUS BAD PARAM

Invalid (NULL) pointer supplied.

3.2.21. cudnnDestroyActivationDescriptor()

```
cudnnStatus t cudnnDestroyActivationDescriptor(
        cudnnActivationDescriptor t activationDesc)
```

This function destroys a previously created activation descriptor object.

Returns

CUDNN STATUS SUCCESS

The object was destroyed successfully.

3.2.22. cudnnDestroyAlgorithmDescriptor()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnDestroyAlgorithmDescriptor(
        cudnnActivationDescriptor t algorithmDesc)
```

This function destroys a previously created algorithm descriptor object.

Returns

CUDNN STATUS SUCCESS

The object was destroyed successfully.

3.2.23. cudnnDestroyAlgorithmPerformance()

```
cudnnStatus t cudnnDestroyAlgorithmPerformance(
       cudnnAlgorithmPerformance t
                                    algoPerf)
```

This function destroys a previously created algorithm descriptor object.

Returns

CUDNN STATUS SUCCESS

The object was destroyed successfully.

3.2.24. cudnnDestroyDropoutDescriptor()

```
cudnnStatus t cudnnDestroyDropoutDescriptor(
   cudnnDropoutDescriptor t dropoutDesc)
```

This function destroys a previously created dropout descriptor object.

Returns

CUDNN STATUS SUCCESS

The object was destroyed successfully.

3.2.25. cudnnDestroyFilterDescriptor()

```
cudnnStatus_t cudnnDestroyFilterDescriptor(
   cudnnFilterDescriptor t filterDesc)
```

This function destroys a previously created tensor 4D descriptor object.

Returns

CUDNN STATUS SUCCESS

The object was destroyed successfully.

3.2.26. cudnnDestroyLRNDescriptor()

```
cudnnStatus t cudnnDestroyLRNDescriptor(
    cudnnLRNDescriptor_t 1rnDesc)
```

This function destroys a previously created LRN descriptor object.

Returns

CUDNN_STATUS_SUCCESS

The object was destroyed successfully.

3.2.27. cudnnDestroyOpTensorDescriptor()

```
cudnnStatus t cudnnDestroyOpTensorDescriptor(
```

This function deletes a tensor pointwise math descriptor object.

Parameters

opTensorDesc

Input. Pointer to the structure holding the description of the tensor pointwise math to be deleted.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

3.2.28. cudnnDestroyPoolingDescriptor()

```
cudnnStatus_t cudnnDestroyPoolingDescriptor(
   cudnnPoolingDescriptor t poolingDesc)
```

This function destroys a previously created pooling descriptor object.

CUDNN STATUS SUCCESS

The object was destroyed successfully.

cudnnDestroyReduceTensorDescriptor()

```
cudnnStatus t cudnnDestroyReduceTensorDescriptor(
   cudnnReduceTensorDescriptor t tensorDesc)
```

This function destroys a previously created reduce tensor descriptor object. When the input pointer is NULL, this function performs no destroy operation.

Parameters

tensorDesc

Input. Pointer to the reduce tensor descriptor object to be destroyed.

Returns

CUDNN STATUS SUCCESS

The object was destroyed successfully.

3.2.30. cudnnDestroySpatialTransformerDescriptor()

```
cudnnStatus t cudnnDestroySpatialTransformerDescriptor(
   cudnnSpatialTransformerDescriptor t stDesc)
```

This function destroys a previously created spatial transformer descriptor object.

Returns

CUDNN STATUS SUCCESS

The object was destroyed successfully.

3.2.31. cudnnDestroyTensorDescriptor()

cudnnStatus t cudnnDestroyTensorDescriptor(cudnnTensorDescriptor t tensorDesc)

This function destroys a previously created tensor descriptor object. When the input pointer is NULL, this function performs no destroy operation.

Parameters

tensorDesc

Input. Pointer to the tensor descriptor object to be destroyed.

CUDNN STATUS SUCCESS

The object was destroyed successfully.

3.2.32. cudnnDestroyTensorTransformDescriptor()

```
cudnnStatus t cudnnDestroyTensorTransformDescriptor(
cudnnTensorTransformDescriptor t transformDesc);
```

Destroys a previously created tensor transform descriptor.

Parameters

transformDesc

Input. The tensor transform descriptor to be destroyed.

Returns

CUDNN STATUS SUCCESS

The descriptor was destroyed successfully.

3.2.33. cudnnDivisiveNormalizationForward()

```
cudnnStatus t cudnnDivisiveNormalizationForward(
                                   handle,
   cudnnHandle t
                                   normDesc,
   cudnnLRNDescriptor t
   cudnnDivNormMode t
                                    mode,
                                   *alpha,
   const void
   const cudnnTensorDescriptor t
                                   xDesc,
   const void
                                   *means,
   const void
   void
                                    *temp,
   void
                                    *temp2,
   const void
                                    *beta,
   const cudnnTensorDescriptor t
                                    yDesc,
```

This function performs the forward spatial DivisiveNormalization layer computation. It divides every value in a layer by the standard deviation of its spatial neighbors as described in What is the Best Multi-Stage Architecture for Object Recognition, Jarrett 2009, Local Contrast Normalization Layer section. Note that DivisiveNormalization only implements the x/max(c, sigma x) portion of the computation, where sigma x is the variance over the spatial neighborhood of x. The full LCN (Local Contrastive Normalization) computation can be implemented as a two-step process:

```
x m = x-mean(x);
y = x_m/max(c, sigma(x_m));
```

The x-mean (x) which is often referred to as "subtractive normalization" portion of the computation can be implemented using cuDNN average pooling layer followed by a call to addTensor.



Note: Supported tensor formats are NCHW for 4D and NCDHW for 5D with any nonoverlapping non-negative strides. Only 4D and 5D tensors are supported.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

normDesc

Input. Handle to a previously initialized LRN parameter descriptor. This descriptor is used for both LRN and DivisiveNormalization layers.

divNormMode

Input. DivisiveNormalization layer mode of operation. Currently only CUDNN_DIVNORM_PRECOMPUTED_MEANS is implemented. Normalization is performed using the means input tensor that is expected to be precomputed by the user.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the layer output value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc, yDesc

Input. Tensor descriptor objects for the input and output tensors. Note that xDesc is shared between x, means, temp, and temp2 tensors.

x

Input. Input tensor data pointer in device memory.

means

Input. Input means tensor data pointer in device memory. Note that this tensor can be NULL (in that case its values are assumed to be zero during the computation). This tensor also doesn't have to contain means, these can be any values, a frequently used variation is a result of convolution with a normalized positive kernel (such as Gaussian).

temp, temp2

Workspace. Temporary tensors in device memory. These are used for computing intermediate values during the forward pass. These tensors do not have to be preserved as inputs from forward to the backward pass. Both use xDesc as their descriptor.

У

Output. Pointer in device memory to a tensor for the result of the forward DivisiveNormalization computation.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ▶ One of the tensor pointers x, y, temp, temp2 is NULL.
- Number of input tensor or output tensor dimensions is outside of [4,5] range.
- A mismatch in dimensions between any two of the input or output tensors.
- For in-place computation when pointers x == y, a mismatch in strides between the input data and output data tensors.
- Alpha or beta pointer is NULL.
- LRN descriptor parameters are outside of their valid ranges.
- Any of the tensor strides are negative.

CUDNN STATUS UNSUPPORTED

The function does not support the provided configuration, for example, any of the input and output tensor strides mismatch (for the same dimension) is a nonsupported configuration.

3.2.34. cudnnDropoutForward()

```
cudnnStatus t cudnnDropoutForward(
   cudnnHandle t
                                      handle,
   const cudnnDropoutDescriptor t
                                     dropoutDesc,
   const cudnnTensorDescriptor t
                                      xdesc,
   const void
                                      *x,
   const cudnnTensorDescriptor t
                                       ydesc,
                                      *y,
   void
                                      *reserveSpace,
   void
                                      reserveSpaceSizeInBytes)
   size t
```

This function performs forward dropout operation over x returning results in y. If dropout was used as a parameter to cudnnSetDropoutDescriptor(), the approximate dropout fraction of x values will be replaced by a 0, and the rest will be scaled by 1/(1-dropout). This function should not be running concurrently with another cudnnDropoutForward() function using the same states.

Note:

- Better performance is obtained for fully packed tensors.
- This function should not be called during inference.

handle

Input. Handle to a previously created cuDNN context.

dropoutDesc

Input. Previously created dropout descriptor object.

xDesc

Input. Handle to a previously initialized tensor descriptor.

x

Input. Pointer to data of the tensor described by the xDesc descriptor.

Input. Handle to a previously initialized tensor descriptor.

У

Output. Pointer to data of the tensor described by the yDesc descriptor.

reserveSpace

Output. Pointer to user-allocated GPU memory used by this function. It is expected that the contents of reserveSpace does not change between cudnnDropoutForward() and cudnnDropoutBackward() calls.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided memory for the reserve space.

Returns

CUDNN STATUS SUCCESS

The call was successful.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- The number of elements of input tensor and output tensors differ.
- ▶ The datatype of the input tensor and output tensors differs.
- ▶ The strides of the input tensor and output tensors differ and in-place operation is used (meaning, x and y pointers are equal).
- The provided reserveSpaceSizeInBytes is less than the value returned by cudnnDropoutGetReserveSpaceSize().

cudnnSetDropoutDescriptor() has not been called on dropoutDesc with the non-NULL states argument.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

3.2.35. cudnnDropoutGetReserveSpaceSize()

```
cudnnStatus t cudnnDropoutGetReserveSpaceSize(
   cudnnTensorDescriptor_t
                               xDesc,
   size t
                               *sizeInBytes)
```

This function is used to query the amount of reserve needed to run dropout with the input dimensions given by xDesc. The same reserve space is expected to be passed to cudnnDropoutForward() and cudnnDropoutBackward(), and its contents is expected to remain unchanged between <u>cudnnDropoutForward()</u> and <u>cudnnDropoutBackward()</u> calls.

Parameters

xDesc

Input. Handle to a previously initialized tensor descriptor, describing input to a dropout operation.

sizeInBytes

Output. Amount of GPU memory needed as reserve space to be able to run dropout with an input tensor descriptor specified by xDesc.

Returns

CUDNN STATUS SUCCESS

The query was successful.

3.2.36. cudnnDropoutGetStatesSize()

```
cudnnStatus t cudnnDropoutGetStatesSize(
   cudnnHandle_t
                       handle,
    size t
                       *sizeInBytes)
```

This function is used to query the amount of space required to store the states of the random number generators used by cudnnDropoutForward() function.

Parameters

handle

Input. Handle to a previously created cuDNN context.

sizeInBytes

Output. Amount of GPU memory needed to store random generator states.

CUDNN STATUS SUCCESS

The guery was successful.

3.2.37. cudnnGetActivationDescriptor()

```
cudnnStatus t cudnnGetActivationDescriptor(
        const cudnnActivationDescriptor t
                                           activationDesc.
        cudnnActivationMode t
                                           *mode,
                                           *reluNanOpt,
       cudnnNanPropagation t
                                           *coef)
```

This function queries a previously initialized generic activation descriptor object.

Parameters

activationDesc

Input. Handle to a previously created activation descriptor.

mode

Output. Enumerant to specify the activation mode.

reluNanOpt

Output. Enumerant to specify the Nan propagation mode.

coef

Output. Floating point number to specify the clipping threshold when the activation mode is set to CUDNN ACTIVATION CLIPPED RELU or to specify the alpha coefficient when the activation mode is set to CUDNN ACTIVATION ELU.

Returns

CUDNN STATUS SUCCESS

The object was queried successfully.

3.2.38. cudnnGetActivationDescriptorSwishBeta()

```
\verb|cudnnGetActivationDescriptorSwishBeta| (\verb|cudnnActivationDescriptor| t|
activationDesc, double* swish beta)
```

This function gueries the current beta parameter set for SWISH activation.

Parameters

activationDesc

Input. Handle to a previously created activation descriptor.

swish beta

Output. Pointer to a double value that will receive the currently configured SWISH beta parameter.

Returns

```
CUDNN STATUS SUCCESS
```

The beta parameter was queried successfully.

```
CUDNN STATUS BAD PARAM
```

At least one of activationDesc or swish beta were NULL.

3.2.39. cudnnGetAlgorithmDescriptor()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnGetAlgorithmDescriptor(
                                             algoDesc,
        const cudnnAlgorithmDescriptor t
        cudnnAlgorithm t
                                             *algorithm)
```

This function queries a previously initialized generic algorithm descriptor object.

Parameters

algorithmDesc

Input. Handle to a previously created algorithm descriptor.

algorithm

Input. Struct to specify the algorithm.

Returns

CUDNN STATUS_SUCCESS

The object was queried successfully.

3.2.40. cudnnGetAlgorithmPerformance()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnGetAlgorithmPerformance(
        const cudnnAlgorithmPerformance t
                                              algoPerf,
        cudnnAlgorithmDescriptor t*
                                              algoDesc,
        cudnnStatus t*
                                              status,
        float*
                                              time.
        size t*
                                              memory)
```

This function queries a previously initialized generic algorithm performance object.

algoPerf

Input/Output. Handle to a previously created algorithm performance object.

algoDesc

Output. The algorithm descriptor which the performance results describe.

status

Output. The cuDNN status returned from running the algoDesc algorithm.

timecoef

Output. The GPU time spent running the algoDesc algorithm.

memory

Output. The GPU memory needed to run the algoDesc algorithm.

Returns

CUDNN STATUS SUCCESS

The object was gueried successfully.

3.2.41. cudnnGetAlgorithmSpaceSize()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnGetAlgorithmSpaceSize(
   cudnnHandle t
                               handle,
   cudnnAlgorithmDescriptor t algoDesc,
                              algoSpaceSizeInBytes)
```

This function queries for the amount of host memory needed to call cudnnSaveAlgorithm(), much like the "get workspace size" function guery for the amount of device memory needed.

Parameters

handle

Input. Handle to a previously created cuDNN context.

algoDesc

Input. A previously created algorithm descriptor.

algoSpaceSizeInBytes

Output. Amount of host memory needed as a workspace to be able to save the metadata from the specified algoDesc.

CUDNN STATUS SUCCESS

The function launched successfully.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the arguments is NULL.

3.2.42. cudnnGetCallback()

```
cudnnStatus t cudnnGetCallback(
      unsigned mask,
                       **udata,
      void
      cudnnCallback t fptr)
```

This function queries the internal states of cuDNN error reporting functionality.

Parameters

mask

Output. Pointer to the address where the current internal error reporting message bit mask will be outputted.

udata

Output. Pointer to the address where the current internally stored udata address will be stored.

fptr

Output. Pointer to the address where the current internally stored callback function pointer will be stored. When the built-in default callback function is used, NULL will be outputted.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

```
CUDNN STATUS BAD PARAM
```

If any of the input parameters are NULL.

3.2.43. cudnnGetCudartVersion()

```
size t cudnnGetCudartVersion()
```

The same version of a given cuDNN library can be compiled against different CUDA toolkit versions. This routine returns the CUDA toolkit version that the currently used cuDNN library has been compiled against.

3.2.44. cudnnGetDropoutDescriptor()

```
cudnnStatus t cudnnGetDropoutDescriptor(
   cudnnDropoutDescriptor_t dropoutDesc,
   cudnnHandle t
                              handle,
                              *dropout,
   float
                              **states,
   unsigned long long
                             *seed)
```

This function queries the fields of a previously initialized dropout descriptor.

Parameters

dropoutDesc

Input. Previously initialized dropout descriptor.

handle

Input. Handle to a previously created cuDNN context.

dropout

Output. The probability with which the value from input is set to 0 during the dropout layer.

states

Output. Pointer to user-allocated GPU memory that holds random number generator states.

seed

Output. Seed used to initialize random number generator states.

Returns

CUDNN STATUS SUCCESS

The call was successful.

```
CUDNN STATUS BAD PARAM
```

One or more of the arguments was an invalid pointer.

3.2.45. cudnnGetErrorString()

```
const char * cudnnGetErrorString(cudnnStatus t status)
```

This function converts the cuDNN status code to a NULL terminated (ASCIIZ) static string. For example, when the input argument is CUDNN STATUS SUCCESS, the returned string is CUDNN STATUS SUCCESS. When an invalid status value is passed to the function, the returned string is CUDNN UNKNOWN_STATUS.

status

Input. cuDNN enumerant status code.

Returns

Pointer to a static, NULL terminated string with the status name.

3.2.46. cudnnGetFilter4dDescriptor()

```
cudnnStatus t cudnnGetFilter4dDescriptor(
   const cudnnFilterDescriptor_t
                                     filterDesc,
   cudnnDataType_t
                              *dataType,
                              *format,
   cudnnTensorFormat t
   int
                               *k,
   int
                               *c,
   int
                               *h,
   int
                               *w)
```

This function queries the parameters of the previously initialized filter descriptor object.

Parameters

filterDesc

Input. Handle to a previously created filter descriptor.

datatype

Output. Data type.

format

Output. Type of format.

k

Output. Number of output feature maps.

С

Output. Number of input feature maps.

h

Output. Height of each filter.

Output. Width of each filter.

Returns

CUDNN_STATUS_SUCCESS

The object was set successfully.

3.2.47. cudnnGetFilterNdDescriptor()

```
cudnnStatus t cudnnGetFilterNdDescriptor(
   const cudnnFilterDescriptor_t wDesc,
                                  nbDimsRequested,
                                 *dataType,
   cudnnDataType t
   cudnnTensorFormat_t
                                  *format,
                                  *nbDims,
   int.
   int
                                  filterDimA[])
```

This function gueries a previously initialized filter descriptor object.

Parameters

wDesc

Input. Handle to a previously initialized filter descriptor.

nbDimsRequested

Input. Dimension of the expected filter descriptor. It is also the minimum size of the arrays filterDimA in order to be able to hold the results

datatype

Output. Data type.

format

Output. Type of format.

nbDims

Output. Actual dimension of the filter.

filterDimA

Output. Array of dimensions of at least nbDimsRequested that will be filled with the filter parameters from the provided filter descriptor.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

```
CUDNN_STATUS_BAD_PARAM
```

The parameter nbDimsRequested is negative.

3.2.48. cudnnGetFilterSizeInBytes()

```
cudnnStatus t
cudnnGetFilTerSizeInBytes(const cudnnFilterDescriptor t filterDesc, size t *size);
```

This function returns the size of the filter tensor in memory with respect to the given descriptor. It can be used to know the amount of GPU memory to be allocated to hold that filter tensor.

filterDesc

Input. handle to a previously initialized filter descriptor.

size

Output. size in bytes needed to hold the tensor in GPU memory.

Returns

```
CUDNN_STATUS_SUCCESS
  filterDesc is valid.
CUDNN STATUS BAD PARAM
  filerDesc is invald.
```

3.2.49. cudnnGetLRNDescriptor()

```
cudnnStatus t cudnnGetLRNDescriptor(
   cudnnLRNDescriptor_t
                          normDesc,
   unsigned
                           *lrnN,
                           *lrnAlpha,
   double
                           *lrnBeta,
   double
   double
                           *lrnK)
```

This function retrieves values stored in the previously initialized LRN descriptor object.

Parameters

normDesc

Output. Handle to a previously created LRN descriptor.

lrnN, lrnAlpha, lrnBeta, lrnK

Output. Pointers to receive values of parameters stored in the descriptor object. For more information, refer to <u>cudnnSetLRNDescriptor()</u>. Any of these pointers can be NULL (no value is returned for the corresponding parameter).

Returns

CUDNN STATUS SUCCESS

Function completed successfully.

3.2.50. cudnnGetOpTensorDescriptor()

```
cudnnStatus t cudnnGetOpTensorDescriptor(
   const cudnnOpTensorDescriptor_t opTensorDesc,
   cudnnOpTensorOp t
                                  *opTensorOp,
                                *opTensorCompType,
   cudnnDataType t
 cudnnNanPropagation t *opTensorNanOpt)
```

This function returns the configuration of the passed tensor pointwise math descriptor.

Parameters

opTensorDesc

Input. Tensor pointwise math descriptor passed to get the configuration from.

opTensorOp

Output. Pointer to the tensor pointwise math operation type, associated with this tensor pointwise math descriptor.

opTensorCompType

Output. Pointer to the cuDNN data-type associated with this tensor pointwise math descriptor.

opTensorNanOpt

Output. Pointer to the NAN propagation option associated with this tensor pointwise math descriptor.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

```
CUDNN STATUS BAD PARAM
```

Input tensor pointwise math descriptor passed is invalid.

3.2.51. cudnnGetPooling2dDescriptor()

```
cudnnStatus t cudnnGetPooling2dDescriptor(
   const cudnnPoolingDescriptor_t
                                       poolingDesc,
                                       *mode,
   cudnnPoolingMode t
   cudnnNanPropagation t
                                       *maxpoolingNanOpt,
                                       *windowHeight,
   int
   int
                                       *windowWidth,
                                       *verticalPadding,
   int
   int
                                       *horizontalPadding,
                                       *verticalStride,
   int
                                       *horizontalStride)
```

This function gueries a previously created 2D pooling descriptor object.

Parameters

poolingDesc

Input. Handle to a previously created pooling descriptor.

mode

Output. Enumerant to specify the pooling mode.

maxpoolingNanOpt

Output. Enumerant to specify the Nan propagation mode.

windowHeight

Output. Height of the pooling window.

windowWidth

Output. Width of the pooling window.

verticalPadding

Output. Size of vertical padding.

horizontalPadding

Output. Size of horizontal padding.

verticalStride

Output. Pooling vertical stride.

horizontalStride

Output. Pooling horizontal stride.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

3.2.52. cudnnGetPooling2dForwardOutputDim()

```
cudnnStatus_t cudnnGetPooling2dForwardOutputDim(
   const cudnnPoolingDescriptor t
                                        poolingDesc,
    const cudnnTensorDescriptor t
                                         inputDesc,
                                        *outN,
   int
    int
                                        *outC,
    int
                                        *outH,
    int
                                         *outW)
```

This function provides the output dimensions of a tensor after 2d pooling has been applied.

Each dimension h and w of the output images is computed as follows:

```
outputDim = 1 + (inputDim + 2*padding - windowDim)/poolingStride;
```

Parameters

poolingDesc

Input. Handle to a previously initialized pooling descriptor.

inputDesc

Input. Handle to the previously initialized input tensor descriptor.

N

Output. Number of images in the output.

С

Output. Number of channels in the output.

Н

Output. Height of images in the output.

W

Output. Width of images in the output.

Returns

```
CUDNN STATUS SUCCESS
```

The function launched successfully.

```
CUDNN STATUS BAD PARAM
```

At least one of the following conditions are met:

- poolingDesc has not been initialized.
- poolingDesc or inputDesc has an invalid number of dimensions (2 and 4 respectively are required).

3.2.53. cudnnGetPoolingNdDescriptor()

```
cudnnStatus t cudnnGetPoolingNdDescriptor(
const cudnnPoolingDescriptor_t poolingDesc,
int
                                   nbDimsRequested,
cudnnPoolingMode t
                                  *mode,
cudnnNanPropagation t
                                  *maxpoolingNanOpt,
int
                                  *nbDims,
int
                                   windowDimA[],
                                   paddingA[],
int
                                    strideA[])
```

This function queries a previously initialized generic pooling descriptor object.

Parameters

poolingDesc

Input. Handle to a previously created pooling descriptor.

nbDimsRequested

Input. Dimension of the expected pooling descriptor. It is also the minimum size of the arrays windowDimA, paddingA, and strideA in order to be able to hold the results.

mode

Output. Enumerant to specify the pooling mode.

maxpoolingNanOpt

Input. Enumerant to specify the Nan propagation mode.

nbDims

Output. Actual dimension of the pooling descriptor.

windowDimA

Output. Array of dimension of at least nbDimsRequested that will be filled with the window parameters from the provided pooling descriptor.

paddingA

Output. Array of dimension of at least nbDimsRequested that will be filled with the padding parameters from the provided pooling descriptor.

strideA

Output. Array of dimension at least nbDimsRequested that will be filled with the stride parameters from the provided pooling descriptor.

Returns

CUDNN STATUS SUCCESS

The object was gueried successfully.

```
CUDNN STATUS NOT SUPPORTED
```

The parameter nbDimsRequested is greater than CUDNN DIM MAX.

3.2.54. cudnnGetPoolingNdForwardOutputDim()

```
cudnnStatus t cudnnGetPoolingNdForwardOutputDim(
    const cudnnPoolingDescriptor t poolingDesc,
    const cudnnTensorDescriptor t
                                    inputDesc,
    int
                                    nbDims,
                                    outDimA[])
```

This function provides the output dimensions of a tensor after Nd pooling has been applied.

Each dimension of the (nbDims-2) -D images of the output tensor is computed as follows:

```
outputDim = 1 + (inputDim + 2*padding - windowDim)/poolingStride;
```

Parameters

poolingDesc

Input. Handle to a previously initialized pooling descriptor.

inputDesc

Input. Handle to the previously initialized input tensor descriptor.

nbDims

Input. Number of dimensions in which pooling is to be applied.

outDimA

Output. Array of nbDims output dimensions.

Returns

```
CUDNN_STATUS_SUCCESS
```

The function launched successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- poolingDesc has not been initialized.
- ▶ The value of nbDims is inconsistent with the dimensionality of poolingDesc and inputDesc.

3.2.55. cudnnGetProperty()

```
cudnnStatus t cudnnGetProperty(
   libraryPropertyType
                           type,
```

This function writes a specific part of the cuDNN library version number into the provided host storage.

Parameters

type

Input. Enumerant type that instructs the function to report the numerical value of the cuDNN major version, minor version, or the patch level.

value

Output. Host pointer where the version information should be written.

Returns

```
CUDNN STATUS INVALID VALUE
```

Invalid value of the type argument.

```
CUDNN STATUS SUCCESS
```

Version information was stored successfully at the provided address.

3.2.56. cudnnGetReduceTensorDescriptor()

```
cudnnStatus t cudnnGetReduceTensorDescriptor(
   const cudnnReduceTensorDescriptor_t reduceTensorDesc,
   cudnnReduceTensorOp t
                                        *reduceTensorOp,
```

```
cudnnDataType t
                                    *reduceTensorCompType,
cudnnNanPropagation t
                                   *reduceTensorNanOpt,
cudnnReduceTensorIndices t
                                    *reduceTensorIndices,
                                    *reduceTensorIndicesType)
cudnnIndicesType t
```

This function queries a previously initialized reduce tensor descriptor object.

Parameters

reduceTensorDesc

Input. Pointer to a previously initialized reduce tensor descriptor object.

reduceTensorOp

Output. Enumerant to specify the reduce tensor operation.

reduceTensorCompType

Output. Enumerant to specify the computation datatype of the reduction.

reduceTensorNanOpt

Input. Enumerant to specify the Nan propagation mode.

reduceTensorIndices

Output. Enumerant to specify the reduced tensor indices.

reduceTensorIndicesType

Output. Enumerant to specify the reduce tensor indices type.

Returns

CUDNN STATUS SUCCESS

The object was queried successfully.

CUDNN STATUS BAD PARAM

reduceTensorDesc is NULL.

3.2.57. cudnnGetReductionIndicesSize()

```
cudnnStatus t cudnnGetReductionIndicesSize(
  cudnnHandle t
                             handle,
  const cudnnReduceTensorDescriptor_t reduceDesc,
  size t
                             *sizeInBytes)
```

This is a helper function to return the minimum size of the index space to be passed to the reduction given the input and output tensors.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

reduceDesc

Input. Pointer to a previously initialized reduce tensor descriptor object.

aDesc

Input. Pointer to the input tensor descriptor.

cDesc

Input. Pointer to the output tensor descriptor.

sizeInBytes

Output. Minimum size of the index space to be passed to the reduction.

Returns

CUDNN STATUS SUCCESS

The index space size is returned successfully.

3.2.58. cudnnGetReductionWorkspaceSize()

```
cudnnStatus t cudnnGetReductionWorkspaceSize(
  cudnnHandle t
  const cudnnReduceTensorDescriptor t reduceDesc,
  size t
                             *sizeInBytes)
```

This is a helper function to return the minimum size of the workspace to be passed to the reduction given the input and output tensors.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

reduceDesc

Input. Pointer to a previously initialized reduce tensor descriptor object.

aDesc

Input. Pointer to the input tensor descriptor.

Input. Pointer to the output tensor descriptor.

sizeInBytes

Output. Minimum size of the index space to be passed to the reduction.

CUDNN STATUS SUCCESS

The workspace size is returned successfully.

3.2.59. cudnnGetStream()

```
cudnnStatus t cudnnGetStream(
   cudnnHandle_t handle,
   cudaStream t
                 *streamId)
```

This function retrieves the user CUDA stream programmed in the cuDNN handle. When the user's CUDA stream is not set in the cuDNN handle, this function reports the nullstream.

Parameters

handle

Input. Pointer to the cuDNN handle.

streamID

Output. Pointer where the current CUDA stream from the cuDNN handle should be stored.

Returns

```
CUDNN STATUS BAD PARAM
```

Invalid (NULL) handle.

CUDNN STATUS SUCCESS

The stream identifier was retrieved successfully.

3.2.60. cudnnGetTensor4dDescriptor()

```
cudnnStatus_t cudnnGetTensor4dDescriptor(
   const cudnnTensorDescriptor_t tensorDesc,
                            *dataType,
   cudnnDataType t
                            *n,
   int
   int
                             *c,
                            *h,
   int
   int
                             ∗w,
                             *nStride,
   int
   int
                             *cStride,
   int
                             *hStride,
                            *wStride)
```

This function queries the parameters of the previously initialized tensor4D descriptor object.

tensorDesc

Input. Handle to a previously initialized tensor descriptor.

datatype

Output. Data type.

n

Output. Number of images.

С

Output. Number of feature maps per image.

h

Output. Height of each feature map.

Output. Width of each feature map.

nStride

Output. Stride between two consecutive images.

cStride

Output. Stride between two consecutive feature maps.

hStride

Output. Stride between two consecutive rows.

wStride

Output. Stride between two consecutive columns.

Returns

CUDNN_STATUS_SUCCESS

The operation succeeded.

3.2.61. cudnnGetTensorNdDescriptor()

```
cudnnStatus t cudnnGetTensorNdDescriptor(
    const cudnnTensorDescriptor t tensorDesc,
    int
                                    nbDimsRequested,
    cudnnDataType t
                                    *dataType,
                                    *nbDims,
    int
   int
                                     dimA[],
   int
                                     strideA[])
```

This function retrieves values stored in a previously initialized tensor descriptor object.

tensorDesc

Input. Handle to a previously initialized tensor descriptor.

nbDimsRequested

Input. Number of dimensions to extract from a given tensor descriptor. It is also the minimum size of the arrays dimA and strideA. If this number is greater than the resulting nbDims[0], only nbDims[0] dimensions will be returned.

datatype

Output. Data type.

nbDims

Output. Actual number of dimensions of the tensor will be returned in nbDims[0].

dimA

Output. Array of dimensions of at least nbDimsRequested that will be filled with the dimensions from the provided tensor descriptor.

strideA

Output. Array of dimensions of at least nbDimsRequested that will be filled with the strides from the provided tensor descriptor.

Returns

CUDNN STATUS SUCCESS

The results were returned successfully.

CUDNN STATUS BAD PARAM

Either tensorDesc or nbDims pointer is NULL.

3.2.62. cudnnGetTensorSizeInBytes()

```
cudnnStatus t cudnnGetTensorSizeInBytes(
   const cudnnTensorDescriptor t tensorDesc,
```

This function returns the size of the tensor in memory in respect to the given descriptor. This function can be used to know the amount of GPU memory to be allocated to hold that tensor.

Parameters

tensorDesc

Input. Handle to a previously initialized tensor descriptor.

size

Output. Size in bytes needed to hold the tensor in GPU memory.

Returns

CUDNN STATUS SUCCESS

The results were returned successfully.

3.2.63. cudnnGetTensorTransformDescriptor()

```
cudnnStatus t cudnnGetTensorTransformDescriptor(
 cudnnTensorTransformDescriptor t transformDesc,
 uint32 t nbDimsRequested,
 cudnnTensorFormat t *destFormat,
 int32 t padBefore\overline{A}[],
int32_t padAfterA[],
uint32_t foldA[],
cudnnFoldingDirection_t *direction);
```

This function returns the values stored in a previously initialized tensor transform descriptor.

Parameters

transformDesc

Input. A previously initialized tensor transform descriptor.

nbDimsRequested

Input. The number of dimensions to consider. For more information, refer to Tensor Descriptor in the cuDNN Developer Guide.

destFormat

Output. The transform format that will be returned.

padBeforeA[]

Output. An array filled with the amount of padding to add before each dimension. The dimension of this padBeforeA[] parameter is equal to nbDimsRequested.

padAfterA[]

Output. An array filled with the amount of padding to add after each dimension. The dimension of this padBeforeA[] parameter is equal to nbDimsRequested.

Output. An array that was filled with the folding parameters for each spatial dimension. The dimension of this foldA[] array is nbDimsRequested-2.

Output. The setting that selects folding or unfolding. For more information, refer to cudnnFoldingDirection_t.

Returns

CUDNN STATUS SUCCESS

The results were obtained successfully.

CUDNN STATUS BAD PARAM

If transformDesc is NULL or if nbDimsRequested is less than 3 or greater than CUDNN DIM MAX.

3.2.64. cudnnGetVersion()

```
size t cudnnGetVersion()
```

This function returns the version number of the cuDNN library. It returns the CUDNN VERSION defined present in the cudnn.h header file. Starting with release R2, the routine can be used to identify dynamically the current cuDNN library used by the application. The defined CUDNN VERSION can be used to have the same application linked against different cuDNN versions using conditional compilation statements.

3.2.65. cudnnInitTransformDest()

```
cudnnStatus t cudnnInitTransformDest(
const cudnnTensorTransformDescriptor t transformDesc,
const cudnnTensorDescriptor t srcDesc,
cudnnTensorDescriptor t destDesc,
size t *destSizeInBytes);
```

This function initializes and returns a destination tensor descriptor destDesc for tensor transform operations. The initialization is done with the desired parameters described in the transform descriptor cudnnTensorDescriptor_t.



Note: The returned tensor descriptor will be packed.

Parameters

transformDesc

Input. Handle to a previously initialized tensor transform descriptor.

Input. Handle to a previously initialized tensor descriptor.

destDesc

Output. Handle of the tensor descriptor that will be initialized and returned.

destSizeInBytes

Output. A pointer to hold the size, in bytes, of the new tensor.

Returns

CUDNN STATUS SUCCESS

The tensor descriptor was initialized successfully.

CUDNN STATUS BAD PARAM

If either srcDesc or destDesc is NULL, or if the tensor descriptor's nbDims is incorrect.

For more information, refer to <u>Tensor Descriptor</u> in the *cuDNN Developer Guide*.

CUDNN STATUS NOT SUPPORTED

If the provided configuration is not 4D.

CUDNN STATUS EXECUTION FAILED

Function failed to launch on the GPU.

3.2.66. cudnnLRNCrossChannelForward()

```
cudnnStatus t cudnnLRNCrossChannelForward(
   cudnnHandle_t
                                   handle.
   cudnnLRNDescriptor t
                                   normDesc,
   cudnnLRNMode t
                                   lrnMode,
                                  *alpha,
   const void
   const cudnnTensorDescriptor t xDesc,
                                   *x,
   const void
   const void
                                   *beta,
   const cudnnTensorDescriptor t
                                   yDesc,
```

This function performs the forward LRN layer computation.



Note: Supported formats are: positive-strided, NCHW and NHWC for 4D x and y, and only NCDHW DHW-packed for 5D (for both x and y). Only non-overlapping 4D and 5D tensors are supported. NCHW layout is preferred for performance.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

normDesc

Input. Handle to a previously initialized LRN parameter descriptor.

lrnMode

Input. LRN layer mode of operation. Currently only CUDNN LRN CROSS CHANNEL DIM1 is implemented. Normalization is performed along the tensor's dimA[1].

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the layer output value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc, yDesc

Input. Tensor descriptor objects for the input and output tensors.

x

Input. Input tensor data pointer in device memory.

У

Output. Output tensor data pointer in device memory.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ▶ One of the tensor pointers x, y is NULL.
- Number of input tensor dimensions is 2 or less.
- LRN descriptor parameters are outside of their valid ranges.
- One of the tensor parameters is 5D but is not in NCDHW DHW-packed format.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

- Any of the input tensor datatypes is not the same as any of the output tensor datatype.
- x and y tensor dimensions mismatch.
- Any tensor parameters strides are negative.

3.2.67. cudnnNormalizationForwardInference()

```
cudnnStatus t
cudnnNormalizationForwardInference(cudnnHandle t handle,
                                   cudnnNormMode t mode,
                                cudnnNormOps t normOps,
                                  cudnnNormAlgo t algo,
                               const void *alpha,
                                const void *beta,
                                const cudnnTensorDescriptor t xDesc,
                                const void *x,
                               const cudnnTensorDescriptor t normScaleBiasDesc,
                               const void *normScale,
                               const void *normBias,
                               const cudnnTensorDescriptor t normMeanVarDesc,
                                const void *estimatedMean,
                               const void *estimatedVariance,
                               const cudnnTensorDescriptor t zDesc,
                               const void *z,
                                  cudnnActivationDescriptor t activationDesc,
                                const cudnnTensorDescriptor t yDesc,
                                void *y,
                                double epsilon,
                               int groupCnt);
```

This function performs the forward normalization layer computation for the inference phase. Per-channel normalization layer is based on the paper Batch Normalization:

Accelerating Deep Network Training by Reducing Internal Covariate Shift, S. loffe, C. Szegedy, 2015.



Note:

- Only 4D and 5D tensors are supported.
- The input transformation performed by this function is defined as:
 - y = beta*y + alpha *[normBias + (normScale * (x-estimatedMean)/sqrt(epsilon + estimatedVariance)]
- ▶ The epsilon value has to be the same during training, backpropagation, and inference.
- For the training phase, refer to <u>cudnnNormalizationForwardTraining()</u>.
- Higher performance can be obtained when HW-packed tensors are used for all of xand y.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Input. Mode of operation (per-channel or per-activation). For more information, refer to cudnnNormMode_t.

normOps

Input. Mode of post-operative. Currently, CUDNN NORM OPS NORM ACTIVATION and CUDNN NORM OPS NORM ADD ACTIVATION are not supported.

algo

Input. Algorithm to be performed. For more information, refer to cudnnNormAlgo_t.

alpha, beta

Inputs. Pointers to scaling factors (in host memory) used to blend the layer output value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc, yDesc

Input. Handles to the previously initialized tensor descriptors.

*x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc, for the layer's x input data.

*y

Output. Data pointer to GPU memory associated with the tensor descriptor yDesc, for the y output of the normalization layer.

zDesc. *z

Input. Tensor descriptors and pointers in device memory for residual addition to the result of the normalization operation, prior to the activation. zDesc and *z are optional and are only used when normops is CUDNN NORM OPS NORM ADD ACTIVATION, otherwise users may pass NULL. When in use, z should have exactly the same dimension as x and the final output v. For more information, refer to cudnnTensorDescriptor_t.

Since normops is only supported for CUDNN NORM OPS NORM, we can set these to NULL for now.

normScaleBiasDesc, normScale, normBias

Inputs. Tensor descriptors and pointers in device memory for the normalization scale and bias parameters (in the original paper bias is referred to as beta and scale as gamma).

normMeanVarDesc, estimatedMean, estimatedVariance

Inputs. Mean and variance tensors and their tensor descriptors. The estimatedMean and estimated Variance inputs, accumulated during the training phase from the <u>cudnnNormalizationForwardTraining()</u> call, should be passed as inputs here.

activationDesc

Input. Descriptor for the activation operation. When the normops input is set to either cudnn norm ops norm activation or cudnn norm ops norm add activation then this activation is used, otherwise the user may pass NULL. Since normOps is only supported for CUDNN NORM OPS NORM, we can set these to NULL for now.

epsilon

Input. Epsilon value used in the normalization formula. Its value should be equal to or greater than zero.

groutCnt

Input. Only support 1 for now.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN STATUS NOT SUPPORTED

A compute or data type other than what is supported was chosen, or an unknown algorithm type was chosen.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

One of the pointers alpha, beta, x, y, normScale, normBias, estimatedMean, and estimatedInvVariance is NULL.

- The number of xDesc or yDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported).
- normScaleBiasDesc and normMeanVarDesc dimensions are not lxCxlx1 for 4D and 1xCx1x1x1 for 5D for per-channel, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for per-activation mode.
- epsilon value is less than zero.
- ▶ Dimensions or data types mismatch for xDesc and yDesc.

CUDNN STATUS NOT SUPPORTED

A compute or data type other than FLOAT was chosen, or an unknown algorithm type was chosen.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

3.2.68. cudnnOpsInferVersionCheck()

```
cudnnStatus t cudnnOpsInferVersionCheck(void)
```

This function is the first of a series of corresponding functions that check for consistent library versions among DLL files for different modules.

Returns

CUDNN STATUS SUCCESS

The version of this DLL file is consistent with cuDNN DLLs on which it depends.

CUDNN STATUS VERSION MISMATCH

The version of this DLL file does not match that of a cuDNN DLLs on which it depends.

3.2.69. cudnnOpTensor()

```
cudnnStatus t cudnnOpTensor(
   cudnnHandle t
                                    handle,
   const cudnnOpTensorDescriptor_t opTensorDesc,
                                   *alpha1,
   const void
   const cudnnTensorDescriptor t
                                   aDesc,
                                   *A,
   const void
                                   *alpha2,
   const void
                                   bDesc,
   const cudnnTensorDescriptor t
                                   *B,
   const void
   const void
                                   *beta,
   const cudnnTensorDescriptor t
                                    cDesc,
```

This function implements the equation C = op(alpha1[0] * A, alpha2[0] * B) + beta[0] * C, given the tensors A, B, and C and the scaling factors alpha1, alpha2, and beta. The op to use is indicated by the descriptor cudnnOpTensorDescriptor_t, meaning, the type of opTensorDesc. Currently-supported ops are listed by the cudnnOpTensorOp_t enum.

The following restrictions on the input and destination tensors apply:

- ▶ Each dimension of the input tensor A must match the corresponding dimension of the destination tensor c, and each dimension of the input tensor B must match the corresponding dimension of the destination tensor c or must be equal to 1. In the latter case, the same value from the input tensor B for those dimensions will be used to blend into the c tensor.
- The data types of the input tensors A and B, and the destination tensor C, must satisfy Table 12.

Table 12. Supported Datatypes

opTensorCompType in opTensorDesc	A	В	c (destination)
FLOAT	FLOAT	FLOAT	FLOAT
FLOAT	INT8	INT8	FLOAT
FLOAT	HALF	HALF	FLOAT
FLOAT	BFLOAT16	BFLOAT16	FLOAT
DOUBLE	DOUBLE	DOUBLE	DOUBLE
FLOAT	FLOAT	FLOAT	HALF
FLOAT	HALF	HALF	HALF
FLOAT	INT8	INT8	INT8
FLOAT	FLOAT	FLOAT	INT8
FLOAT	FLOAT	FLOAT	BFLOAT16
FLOAT	BFLOAT16	BFLOAT16	BFLOAT16



Note: CUDNN TENSOR NCHW VECT C is not supported as input tensor format. All tensors up to dimension five (5) are supported. This routine does not support tensor formats beyond these dimensions.

Parameters

handle

Input. Handle to a previously created cuDNN context.

opTensorDesc

Input. Handle to a previously initialized op tensor descriptor.

alpha1, alpha2, beta

Input. Pointers to scaling factors (in host memory) used to blend the source value with prior value in the destination tensor as follows:

dstValue = alpha[0]*resultValue + beta[0]*priorDstValue

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

aDesc, bDesc, cDesc

Input. Handle to a previously initialized tensor descriptor.

A, B

Input. Pointer to data of the tensors described by the aDesc and bDesc descriptors, respectively.

С

Input/Output. Pointer to data of the tensor described by the cDesc descriptor.

Returns

CUDNN STATUS SUCCESS

The function executed successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

- The dimensions of the bias tensor and the output tensor dimensions are above 5.
- opTensorCompType is not set as stated above.

CUDNN STATUS BAD PARAM

The data type of the destination tensor c is unrecognized, or the restrictions on the input and destination tensors, stated above, are not met.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

3.2.70. cudnnPoolingForward()

```
cudnnStatus t cudnnPoolingForward(
   cudnnHandle t
                                   handle,
   const cudnnPoolingDescriptor t poolingDesc,
                                  *alpha,
   const void
   const cudnnTensorDescriptor t xDesc,
   const void
                                   *x,
                                   *beta,
   const void
   const cudnnTensorDescriptor t
                                   yDesc,
```

This function computes pooling of input values (meaning, the maximum or average of several adjacent values) to produce an output with smaller height and/or width.

Note:

All tensor formats are supported, best performance is expected when using HWpacked tensors. Only 2 and 3 spatial dimensions are allowed. Vectorized tensors are only supported if they have 2 spatial dimensions.

- The dimensions of the output tensor yDesc can be smaller or bigger than the dimensions advised by the routine cudnnGetPooling2dForwardOutputDim() or cudnnGetPoolingNdForwardOutputDim().
- For average pooling, the compute type is float even for integer input and output data type. Output round is nearest-even and clamp to the most negative or most positive value of type if out of range.

Parameters

handle

Input. Handle to a previously created cuDNN context.

poolingDesc

Input. Handle to a previously initialized pooling descriptor.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc

Input. Handle to the previously initialized input tensor descriptor. Must be of type FLOAT, DOUBLE, HALF, INT8, INT8×4, INT8×32, or BFLOAT16. For more information, refer to cudnnDataType_t.

x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc.

yDesc

Input. Handle to the previously initialized output tensor descriptor. Must be of type FLOAT, DOUBLE, HALF, INT8, INT8×4, INT8×32, or BFLOAT16. For more information, refer to cudnnDataType_t.

У

Output. Data pointer to GPU memory associated with the output tensor descriptor yDesc.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

▶ The dimensions n, c of the input tensor and output tensors differ.

▶ The datatype of the input tensor and output tensors differs.

```
CUDNN STATUS NOT SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN STATUS EXECUTION FAILED
```

The function failed to launch on the GPU.

3.2.71. cudnnQueryRuntimeError()

```
cudnnStatus t cudnnQueryRuntimeError(
     cudnnHandle t
                                       handle,
     cudnnStatus_t *rstatus,
cudnnErrQueryMode_t mode,
cudnnRuntimeTag_t *tag)
```

cuDNN library functions perform extensive input argument checking before launching GPU kernels. The last step is to verify that the GPU kernel actually started. When a kernel fails to start, CUDNN STATUS EXECUTION FAILED is returned by the corresponding API call. Typically, after a GPU kernel starts, no runtime checks are performed by the kernel itself - numerical results are simply written to output buffers.

When the CUDNN BATCHNORM SPATIAL PERSISTENT mode is selected in cudnnBatchNormalizationForwardTraining() or cudnnBatchNormalizationBackward(), the algorithm may encounter numerical overflows where CUDNN BATCHNORM SPATIAL performs just fine albeit at a slower speed. The user can invoke cudnnQueryRuntimeError() to make sure numerical overflows did not occur during the kernel execution. Those issues are reported by the kernel that performs computations.

cudnnQueryRuntimeError() can be used in polling and blocking software control flows. There are two polling modes (CUDNN ERRQUERY RAWCODE and CUDNN ERRQUERY NONBLOCKING) and one blocking mode CUDNN ERRQUERY BLOCKING.

CUDNN ERRQUERY RAWCODE reads the error storage location regardless of the kernel completion status. The kernel might not even start and the error storage (allocated per cuDNN handle) might be used by an earlier call.

CUDNN ERRQUERY NONBLOCKING checks if all tasks in the user stream are completed. The cudnnQueryRuntimeError() function will return immediately and report CUDNN STATUS RUNTIME IN PROGRESS in rstatus if some tasks in the user stream are pending. Otherwise, the function will copy the remote kernel error code to rstatus.

In the blocking mode (CUDNN ERRQUERY BLOCKING), the function waits for all tasks to drain in the user stream before reporting the remote kernel error code. The blocking flavor can be further adjusted by calling cudaSetDeviceFlags with the cudaDeviceScheduleSpin, cudaDeviceScheduleYield, Or cudaDeviceScheduleBlockingSync flag.

CUDNN ERRQUERY NONBLOCKING and CUDNN ERRQUERY BLOCKING modes should not be used when the user stream is changed in the cuDNN handle, meaning, cudnnSetStream() is invoked between functions that report runtime kernel errors and the cudnnQueryRuntimeError() function.

The remote error status reported in rstatus can be set to: CUDNN STATUS SUCCESS, CUDNN STATUS RUNTIME IN PROGRESS, OF CUDNN STATUS RUNTIME FP OVERFLOW. The remote kernel error is automatically cleared by cudnnQueryRuntimeError().



Note: The cudnnQueryRuntimeError() function should be used in conjunction with cudnnBatchNormalizationForwardTraining() and cudnnBatchNormalizationBackward() when the <u>cudnnBatchNormMode</u> t argument is CUDNN BATCHNORM SPATIAL PERSISTENT.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rstatus

Output. Pointer to the user's error code storage.

mode

Input. Remote error query mode.

Input/Output. Currently, this argument should be NULL.

Returns

CUDNN STATUS SUCCESS

No errors detected (rstatus holds a valid value).

```
CUDNN STATUS BAD PARAM
```

Invalid input argument.

```
CUDNN STATUS INTERNAL ERROR
```

A stream blocking synchronization or a non-blocking stream guery failed.

```
CUDNN STATUS MAPPING ERROR
```

The device cannot access zero-copy memory to report kernel errors.

3.2.72. cudnnReduceTensor()

```
cudnnStatus t cudnnReduceTensor(
   cudnnHandle t
                                           handle,
   const cudnnReduceTensorDescriptor t
                                           reduceTensorDesc,
                                          *indices,
   void
   size t
                                           indicesSizeInBytes,
                                          *workspace,
   void
   size_t
                                           workspaceSizeInBytes,
   const void
                                           *alpha,
   const cudnnTensorDescriptor t
                                           aDesc,
   const void
                                           *A,
                                          *beta,
   const void
   const cudnnTensorDescriptor t
                                           cDesc,
                                           *C)
```

This function reduces tensor A by implementing the equation C = alpha * reduce op (A) + beta * C, given tensors A and C and scaling factors alpha and beta. The reduction op to use is indicated by the descriptor reduceTensorDesc. Currentlysupported ops are listed by the cudnnReduceTensorOp t enum.

Each dimension of the output tensor c must match the corresponding dimension of the input tensor A or must be equal to 1. The dimensions equal to 1 indicate the dimensions of A to be reduced.

The implementation will generate indices for the min and max ops only, as indicated by the <u>cudnnReduceTensorIndices</u> t enum of the reduceTensorDesc. Requesting indices for the other reduction ops results in an error. The data type of the indices is indicated by the cudnnl<u>ndicesType t</u> enum; currently only the 32-bit (unsigned int) type is supported.

The indices returned by the implementation are not absolute indices but relative to the dimensions being reduced. The indices are also flattened, meaning, not coordinate tuples.

The data types of the tensors A and C must match if of type double. In this case, alpha and beta and the computation enum of reduceTensorDesc are all assumed to be of type double.

The HALF and INT8 data types may be mixed with the FLOAT data types. In these cases, the computation enum of reduceTensorDesc is required to be of type FLOAT.



Note:

Up to dimension 8, all tensor formats are supported. Beyond those dimensions, this routine is not supported.

Parameters

handle

Input. Handle to a previously created cuDNN context.

reduceTensorDesc

Input. Handle to a previously initialized reduce tensor descriptor.

indices

Output. Handle to a previously allocated space for writing indices.

indicesSizeInBytes

Input. Size of the above previously allocated space.

workspace

Input. Handle to a previously allocated space for the reduction implementation.

workspaceSizeInBytes

Input. Size of the above previously allocated space.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the source value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

aDesc, cDesc

Input. Handle to a previously initialized tensor descriptor.

Α

Input. Pointer to data of the tensor described by the aDesc descriptor.

C

Input/Output. Pointer to data of the tensor described by the cDesc descriptor.

Returns

CUDNN STATUS SUCCESS

The function executed successfully.

CUDNN_STATUS_NOT_SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

- The dimensions of the input tensor and the output tensor are above 8.
- reduceTensorCompType is not set as stated above.

CUDNN STATUS BAD PARAM

The corresponding dimensions of the input and output tensors all match, or the conditions in the above paragraphs are unmet.

```
CUDNN INVALID VALUE
```

The allocations for the indices or workspace are insufficient.

```
CUDNN STATUS EXECUTION FAILED
```

The function failed to launch on the GPU.

3.2.73. cudnnRestoreAlgorithm()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnRestoreAlgorithm(
   cudnnHandle t
   void*
                               algoSpace,
                               algoSpaceSizeInBytes,
   size t
   cudnnAlgorithmDescriptor t algoDesc)
```

This function reads algorithm metadata from the host memory space provided by the user in algoSpace, allowing the user to use the results of RNN finds from previous cuDNN sessions.

Parameters

handle

Input. Handle to a previously created cuDNN context.

algoDesc

Input. A previously created algorithm descriptor.

algoSpace

Input. Pointer to the host memory to be read.

algoSpaceSizeInBytes

Input. Amount of host memory needed as a workspace to be able to hold the metadata from the specified algoDesc.

Returns

```
CUDNN STATUS SUCCESS
```

The function launched successfully.

```
CUDNN STATUS NOT SUPPORTED
```

The metadata is from a different cuDNN version.

CUDNN STATUS BAD PARAM

At least one of the following conditions is met:

- One of the arguments is NULL.
- The metadata is corrupted.

3.2.74. cudnnRestoreDropoutDescriptor()

```
cudnnStatus_t cudnnRestoreDropoutDescriptor(
   cudnnDropoutDescriptor_t dropoutDesc,
                           handle,
   cudnnHandle t
   float
                           dropout,
   void
                           *states,
   size t
                           stateSizeInBytes,
   unsigned long long
                           seed)
```

This function restores a dropout descriptor to a previously saved-off state.

Parameters

dropoutDesc

Input/Output. Previously created dropout descriptor.

handle

Input. Handle to a previously created cuDNN context.

dropout

Input. Probability with which the value from an input tensor is set to 0 when performing dropout.

states

Input. Pointer to GPU memory that holds random number generator states initialized by a prior call to cudnnSetDropoutDescriptor().

stateSizeInBytes

Input. Size in bytes of buffer holding random number generator states.

Seed

Input. Seed used in prior calls to cudnnSetDropoutDescriptor() that initialized states buffer. Using a different seed from this has no effect. A change of seed, and subsequent update to random number generator states can be achieved by calling cudnnSetDropoutDescriptor().

Returns

CUDNN STATUS SUCCESS

The call was successful.

```
CUDNN STATUS INVALID VALUE
```

States buffer size (as indicated in stateSizeInBytes) is too small.

3.2.75. cudnnSaveAlgorithm()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnSaveAlgorithm(
   cudnnHandle t
    cudnnAlgorithmDescriptor_t algoDesc,
   void*
                             algoSpace
   size t
                             algoSpaceSizeInBytes)
```

This function writes algorithm metadata into the host memory space provided by the user in algoSpace, allowing the user to preserve the results of RNN finds after cuDNN exits.

Parameters

handle

Input. Handle to a previously created cuDNN context.

algoDesc

Input. A previously created algorithm descriptor.

algoSpace

Input. Pointer to the host memory to be written.

algoSpaceSizeInBytes

Input. Amount of host memory needed as a workspace to be able to save the metadata from the specified algoDesc.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions is met:

- One of the arguments is NULL.
- algoSpaceSizeInBytes is too small.

3.2.76. cudnnScaleTensor()

```
cudnnStatus t cudnnScaleTensor(
   cudnnHandle t
                                    handle,
   const cudnnTensorDescriptor t
                                   yDesc,
                                   *y,
   void
                                   *alpha)
```

This function scales all the elements of a tensor by a given factor.

Parameters

handle

Input. Handle to a previously created cuDNN context.

yDesc

Input. Handle to a previously initialized tensor descriptor.

У

Input/Output. Pointer to data of the tensor described by the yDesc descriptor.

alpha

Input. Pointer in the host memory to a single value that all elements of the tensor will be scaled with. For more information, refer to Scaling Parameters in the cuDNN Developer Guide.

Returns

CUDNN_STATUS_SUCCESS

The function launched successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

```
CUDNN STATUS BAD PARAM
```

One of the provided pointers is nil.

```
CUDNN STATUS EXECUTION FAILED
```

The function failed to launch on the GPU.

3.2.77. cudnnSetActivationDescriptor()

```
cudnnStatus_t cudnnSetActivationDescriptor(
  cudnnActivationMode t
  cudnnNanPropagation t
                         reluNanOpt,
```

This function initializes a previously created generic activation descriptor object.

Parameters

activationDesc

Input/Output. Handle to a previously created activation descriptor.

mode

Input. Enumerant to specify the activation mode.

reluNanOpt

Input. Enumerant to specify the Nan propagation mode.

coef

Input. Floating point number. When the activation mode (refer to cudnnActivationMode_t) is set to CUDNN ACTIVATION CLIPPED RELU, this input specifies the clipping threshold; and when the activation mode is set to CUDNN ACTIVATION RELU, this input specifies the upper bound.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

```
CUDNN STATUS BAD PARAM
```

mode or relunanopt has an invalid enumerant value.

3.2.78. cudnnSetActivationDescriptorSwishBeta()

```
cudnnStatus t cudnnSetActivationDescriptorSwishBeta(cudnnActivationDescriptor t
activationDesc, double swish beta)
```

This function sets the beta parameter of the SWISH activation function to swish beta.

Parameters

activationDesc

Input/Output. Handle to a previously created activation descriptor.

swish_beta

Input. The value to set the SWISH activations' beta parameter to.

Returns

```
CUDNN_STATUS_SUCCESS
```

The value was set successfully.

```
CUDNN STATUS BAD PARAM
```

The activation descriptor is a NULL pointer.

3.2.79. cudnnSetAlgorithmDescriptor()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnSetAlgorithmDescriptor(
   cudnnAlgorithmDescriptor t
                                    algorithmDesc,
                                    algorithm)
   cudnnAlgorithm t
```

This function initializes a previously created generic algorithm descriptor object.

Parameters

algorithmDesc

Input/Output. Handle to a previously created algorithm descriptor.

algorithm

Input. Struct to specify the algorithm.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

cudnnSetAlgorithmPerformance()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnSetAlgorithmPerformance(
    cudnnAlgorithmPerformance t
                                     algoPerf,
    cudnnAlgorithmDescriptor t
                                     algoDesc,
   cudnnStatus_t
                                     status.
    float
                                     time,
    size t
                                     memory)
```

This function initializes a previously created generic algorithm performance object.

Parameters

algoPerf

Input/Output. Handle to a previously created algorithm performance object.

algoDesc

Input. The algorithm descriptor which the performance results describe.

status

Input. The cuDNN status returned from running the algoDesc algorithm.

time

Input. The GPU time spent running the algoDesc algorithm.

memory

Input. The GPU memory needed to run the algoDesc algorithm.

Returns

```
CUDNN STATUS SUCCESS
```

The object was set successfully.

```
CUDNN STATUS BAD PARAM
```

mode or relunanOpt has an invalid enumerate value.

3.2.81. cudnnSetCallback()

```
cudnnStatus t cudnnSetCallback(
      unsigned mask,
                       *udata,
      cudnnCallback t fptr)
```

This function sets the internal states of cuDNN error reporting functionality.

Parameters

mask

Input. An unsigned integer. The four least significant bits (LSBs) of this unsigned integer are used for switching on and off the different levels of error reporting messages. This applies for both the default callbacks, and for the customized callbacks. The bit position is in correspondence with the enum of cudnnSeverity t. The user may utilize the predefined macros CUDNN SEV ERROR EN, CUDNN SEV WARNING EN, and CUDNN SEV INFO EN to form the bit mask. When a bit is set to 1, the corresponding message channel is enabled.

For example, when bit 3 is set to 1, the API logging is enabled. Currently, only the log output of level CUDNN SEV INFO is functional; the others are not yet implemented. When used for turning on and off the logging with the default callback, the user may pass NULL to udata and fptr. In addition, the environment variable CUDNN LOGDEST DBG must be set. For more information, refer to Backward Compatibility and Deprecation Policy in the cuDNN Developer Guide.

- CUDNN SEV INFO EN= 0b1000 (functional).
- CUDNN SEV ERROR EN= 0b0010 (not yet functional).
- ► CUDNN SEV WARNING EN= Ob0100 (not yet functional).

The output of CUDNN SEV FATAL is always enabled and cannot be disabled.

udata

Input. A pointer provided by the user. This pointer will be passed to the user's custom logging callback function. The data it points to will not be read, nor be changed by cuDNN. This pointer may be used in many ways, such as in a mutex or in a communication socket for the user's callback function for logging. If the user is utilizing the default callback function, or doesn't want to use this input in the customized callback function, they may pass in NULL.

fptr

Input. A pointer to a user-supplied callback function. When NULL is passed to this pointer, then cuDNN switches back to the built-in default callback function. The usersupplied callback function prototype must be similar to the following (also defined in the header file):

```
void customizedLoggingCallback (cudnnSeverity_t sev, void *udata, const
cudnnDebug t *dbg, const char *msg);
```

- The structure cudnnDebug t is defined in the header file. It provides the metadata, such as time, time since start, stream ID, process and thread ID, that the user may choose to print or store in their customized callback.
- The variable msq is the logging message generated by cuDNN. Each line of this message is terminated by \0, and the end of the message is terminated by \0\0. Users may select what is necessary to show in the log, and may reformat the string.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

3.2.82. cudnnSetDropoutDescriptor()

```
cudnnStatus t cudnnSetDropoutDescriptor(
   cudnnDropoutDescriptor_t dropoutDesc,
   cudnnHandle t
                              handle.
   float
                              dropout,
   void
                              *states,
   size t
                               stateSizeInBytes,
   unsigned long long
```

This function initializes a previously created dropout descriptor object. If the states argument is equal to NULL, then the random number generator states won't be initialized, and only the dropout value will be set. The user is expected not to change the memory pointed at by states for the duration of the computation.

When the states argument is not NULL, a cuRAND initialization kernel is invoked by cudnnSetDropoutDescriptor(). This kernel requires a substantial amount of GPU memory for the stack. Memory is released when the kernel finishes. The CUDNN STATUS ALLOC FAILED status is returned when no sufficient free memory is available for the GPU stack.

Parameters

dropoutDesc

Input/Output. Previously created dropout descriptor object.

handle

Input. Handle to a previously created cuDNN context.

dropout

Input. The probability with which the value from input is set to zero during the dropout layer.

states

Output. Pointer to user-allocated GPU memory that will hold random number generator states.

stateSizeInBytes

Input. Specifies the size in bytes of the provided memory for the states.

seed

Input. Seed used to initialize random number generator states.

Returns

CUDNN STATUS SUCCESS

The call was successful.

CUDNN STATUS INVALID VALUE

The sizeInBytes argument is less than the value returned by cudnnDropoutGetStatesSize().

CUDNN STATUS ALLOC FAILED

The function failed to temporarily extend the GPU stack.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

CUDNN STATUS INTERNAL ERROR

Internally used CUDA functions returned an error status.

3.2.83. cudnnSetFilter4dDescriptor()

```
cudnnStatus t cudnnSetFilter4dDescriptor(
    cudnnFilterDescriptor_t filterDesc,
                             dataType,
    cudnnDataType t
   cudnnTensorFormat t
                              format,
   int
                              k,
   int
                               c,
   int
                               h,
   int
```

This function initializes a previously created filter descriptor object into a 4D filter. The layout of the filters must be contiguous in memory.

Tensor format CUDNN TENSOR NHWC has limited support in <u>cudnnConvolutionForward()</u>, cudnnConvolutionBackwardData(), and cudnnConvolutionBackwardFilter().

Parameters

filterDesc

Input/Output. Handle to a previously created filter descriptor.

datatype

Input. Data type.

format

Input. Type of the filter layout format. If this input is set to CUDNN TENSOR NCHW, which is one of the enumerant values allowed by cudnnTensorFormat t descriptor, then the layout of the filter is in the form of KCRS, where:

- K represents the number of output feature maps
- c is the number of input feature maps
- R is the number of rows per filter
- s is the number of columns per filter

If this input is set to CUDNN TENSOR NHWC, then the layout of the filter is in the form of KRSC. For more information, refer to cudnnTensorFormat t.

k

Input. Number of output feature maps.

С

Input. Number of input feature maps.

h

Input. Height of each filter.

Input. Width of each filter.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

```
CUDNN STATUS BAD PARAM
```

At least one of the parameters k, c, h, w is negative or dataType or format has an invalid enumerant value.

3.2.84. cudnnSetFilterNdDescriptor()

```
cudnnStatus t cudnnSetFilterNdDescriptor(
   cudnnFilterDescriptor_t filterDesc,
   cudnnDataType t
                           dataType,
   cudnnTensorFormat t format,
                           nbDims,
   const int
                           filterDimA[])
```

This function initializes a previously created filter descriptor object. The layout of the filters must be contiguous in memory.

The tensor format CUDNN TENSOR NHWC has limited support in cudnnConvolutionForward(), cudnnConvolutionBackwardData(), and cudnnConvolutionBackwardFilter().

Parameters

filterDesc

Input/Output. Handle to a previously created filter descriptor.

datatype

Input. Data type.

format.

Input. Type of the filter layout format. If this input is set to CUDNN TENSOR NCHW, which is one of the enumerant values allowed by <u>cudnnTensorFormat</u> descriptor, then the layout of the filter is as follows:

- For N=4, a 4D filter descriptor, the filter layout is in the form of KCRS:
 - K represents the number of output feature maps
 - c is the number of input feature maps
 - R is the number of rows per filter
 - s is the number of columns per filter
- For N=3, a 3D filter descriptor, the number s (number of columns per filter) is omitted.

For N=5 and greater, the layout of the higher dimensions immediately follows RS.

On the other hand, if this input is set to CUDNN TENSOR NHWC, then the layout of the filter is as follows:

- For N=4, a 4D filter descriptor, the filter layout is in the form of KRSC.
- ► For N=3, a 3D filter descriptor, the number s (number of columns per filter) is omitted and the layout of C immediately follows R.
- ► For N=5 and greater, the layout of the higher dimensions are inserted between S and c. For more information, refer to cudnnTensorFormat_t.

nbDims

Input. Dimension of the filter.

filterDimA

Input. Array of dimension nbDims containing the size of the filter for each dimension.

Returns

CUDNN_STATUS_SUCCESS

The object was set successfully.

CUDNN_STATUS_BAD_PARAM

At least one of the elements of the array filterDimA is negative or dataType or format has an invalid enumerant value.

CUDNN_STATUS_NOT_SUPPORTED

The parameter nbdims exceeds CUDNN DIM MAX.

3.2.85. cudnnSetLRNDescriptor()

```
cudnnStatus_t cudnnSetLRNDescriptor(
   cudnnLRNDescriptor t normDesc,
   unsigned
                           lrnN,
   double
                          lrnAlpha,
   double
                           lrnBeta,
   double
                           1rnK)
```

This function initializes a previously created LRN descriptor object.



Note:

- Macros Cudnn Lrn Min n, Cudnn Lrn Max n, Cudnn Lrn Min k, Cudnn Lrn Min beta defined in cudnn.h specify valid ranges for parameters.
- Values of double parameters will be cast down to the tensor datatype during computation.

Parameters

normDesc

Output. Handle to a previously created LRN descriptor.

lrnN

Input. Normalization window width in elements. The LRN layer uses a window [centerlookBehind, center+lookAhead], where lookBehind = floor((lrnN-1)/2), lookAhead = lrnN-lookBehind-1. So for n=10, the window is [k-4...k...k+5] with a total of 10 samples. For the DivisiveNormalization layer, the window has the same extent as above in all spatial dimensions (dimA[2], dimA[3], dimA[4]). By default, lrnN is set to 5 in cudnnCreateLRNDescriptor().

lrnAlpha

Input. Value of the alpha variance scaling parameter in the normalization formula. Inside the library code, this value is divided by the window width for LRN and by (window width) \(^\pm \) patial Dimensions for Divisive Normalization. By default, this value is set to 1e-4 in cudnnCreateLRNDescriptor().

lrnBeta

Input. Value of the beta power parameter in the normalization formula. By default, this value is set to 0.75 in cudnnCreateLRNDescriptor().

lrnK

Input. Value of the k parameter in the normalization formula. By default, this value is set to 2.0.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

CUDNN STATUS BAD PARAM

One of the input parameters was out of valid range as described above.

3.2.86. cudnnSetOpTensorDescriptor()

```
cudnnStatus t cudnnSetOpTensorDescriptor(
       cudnnOpTensorDescriptor_t opTensorDesc,
cudnnOpTensorOp_t opTensorOp,
cudnnDataType_t opTensorCompType,
cudnnNanPropagation_t opTensorNanOpt)
```

This function initializes a tensor pointwise math descriptor.

Parameters

opTensorDesc

Output. Pointer to the structure holding the description of the tensor pointwise math descriptor.

opTensorOp

Input. Tensor pointwise math operation for this tensor pointwise math descriptor.

opTensorCompType

Input. Computation datatype for this tensor pointwise math descriptor.

opTensorNanOpt

Input. NAN propagation policy.

Returns

```
CUDNN STATUS SUCCESS
```

The function returned successfully.

```
CUDNN STATUS BAD PARAM
```

At least one of the input parameters passed is invalid.

3.2.87. cudnnSetPooling2dDescriptor()

```
cudnnStatus_t cudnnSetPooling2dDescriptor(
   cudnnPoolingDescriptor_t poolingDesc, cudnnPoolingMode_t mode,
   windowHeight,
   int
   int
                             windowWidth,
   int
                             verticalPadding,
                             horizontal Padding,
   int
                             verticalStride,
   int
                             horizontalStride)
```

This function initializes a previously created generic pooling descriptor object into a 2D description.

Parameters

poolingDesc

Input/Output. Handle to a previously created pooling descriptor.

mode

Input. Enumerant to specify the pooling mode.

maxpoolingNanOpt

Input. Enumerant to specify the Nan propagation mode.

windowHeight

Input. Height of the pooling window.

windowWidth

Input. Width of the pooling window.

verticalPadding

Input. Size of vertical padding.

horizontalPadding

Input. Size of horizontal padding

verticalStride

Input. Pooling vertical stride.

horizontalStride

Input. Pooling horizontal stride.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

CUDNN STATUS BAD PARAM

At least one of the parameters windowHeight, windowWidth, verticalStride, horizontalStride is negative or mode or maxpoolingNanOpt has an invalid enumerate value.

3.2.88. cudnnSetPoolingNdDescriptor()

```
cudnnStatus t cudnnSetPoolingNdDescriptor(
                             poolingDesc,
   cudnnPoolingDescriptor_t
   const cudnnPoolingMode t
                                mode,
   const cudnnNanPropagation_t maxpoolingNanOpt,
   int
                                nbDims,
   const int
                                windowDimA[],
   const int
                                paddingA[],
   const int
                                strideA[])
```

This function initializes a previously created generic pooling descriptor object.

Parameters

poolingDesc

Input/Output. Handle to a previously created pooling descriptor.

mode

Input. Enumerant to specify the pooling mode.

maxpoolingNanOpt

Input. Enumerant to specify the Nan propagation mode.

nbDims

Input. Dimension of the pooling operation. Must be greater than zero.

windowDimA

Input. Array of dimension nbDims containing the window size for each dimension. The value of array elements must be greater than zero.

paddingA

Input. Array of dimension nbDims containing the padding size for each dimension. Negative padding is allowed.

strideA

Input. Array of dimension nbpims containing the striding size for each dimension. The value of array elements must be greater than zero (meaning, negative striding size is not allowed).

Returns

CUDNN STATUS SUCCESS

The object was initialized successfully.

```
CUDNN STATUS NOT SUPPORTED
```

```
If (nbDims > CUDNN DIM MAX-2).
```

CUDNN STATUS BAD PARAM

Either nbDims, or at least one of the elements of the arrays windowDimA or strideA is negative, or mode or maxpoolingNanOpt has an invalid enumerate value.

3.2.89. cudnnSetReduceTensorDescriptor()

```
cudnnStatus t cudnnSetReduceTensorDescriptor(
       cudnnReduceTensorDescriptor_t reduceTensorDesc,
       cudnnReduceTensorDescriptor_t reduceTensorDesc,
cudnnDataType_t reduceTensorCompType,
cudnnNanPropagation_t reduceTensorNanOpt,
cudnnReduceTensorIndices_t reduceTensorIndices,
cudnnIndicesType_t reduceTensorIndicesType)
```

This function initializes a previously created reduce tensor descriptor object.

Parameters

reduceTensorDesc

Input/Output. Handle to a previously created reduce tensor descriptor.

reduceTensorOp

Input. Enumerant to specify the reduce tensor operation.

reduceTensorCompType

Input. Enumerant to specify the computation datatype of the reduction.

reduceTensorNanOpt

Input. Enumerant to specify the Nan propagation mode.

reduceTensorIndices

Input. Enumerant to specify the reduced tensor indices.

reduceTensorIndicesType

Input. Enumerant to specify the reduce tensor indices type.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

CUDNN STATUS BAD PARAM

reduceTensorDesc is NULL (reduceTensorOp, reduceTensorCompType, reduceTensorNanOpt, reduceTensorIndices Or reduceTensorIndicesType has an invalid enumerant value).

3.2.90. cudnnSetSpatialTransformerNdDescriptor()

```
cudnnStatus t cudnnSetSpatialTransformerNdDescriptor(
   cudnnSpatialTransformerDescriptor_t
    cudnnSamplerType t
                                             samplerType,
   cudnnDataType_t
                                             dataType,
   const int
                                             nbDims,
   const int
                                             dimA[])
```

This function initializes a previously created generic spatial transformer descriptor object.

Parameters

stDesc

Input/Output. Previously created spatial transformer descriptor object.

samplerType

Input. Enumerant to specify the sampler type.

dataType

Input. Data type.

nbDims

Input. Dimension of the transformed tensor.

dimA

Input. Array of dimension nbDims containing the size of the transformed tensor for every dimension.

Returns

```
CUDNN STATUS SUCCESS
```

The call was successful.

```
CUDNN STATUS BAD PARAM
```

At least one of the following conditions are met:

- ▶ Either stDesc or dimA is NULL.
- ▶ Either dataType or samplerType has an invalid enumerant value

3.2.91. cudnnSetStream()

```
cudnnStatus t cudnnSetStream(
   cudnnHandle t handle,
   cudaStream t
                 streamId)
```

This function sets the user's CUDA stream in the cuDNN handle. The new stream will be used to launch cuDNN GPU kernels or to synchronize to this stream when cuDNN kernels are launched in the internal streams. If the cuDNN library stream is not set, all kernels use the default (NULL) stream. Setting the user stream in the cuDNN handle quarantees the issue-order execution of cuDNN calls and other GPU kernels launched in the same stream.

Starting in cuDNN 8.5.0 for CUDA 11.x, internal streams have the same priority as the stream set by the last call to this function, except in the case of CUDA graph capture mode, which is a known limitation that will be fixed in a future release.

Parameters

handle

Input. Pointer to the cuDNN handle.

streamID

Input. New CUDA stream to be written to the cuDNN handle.

Returns

CUDNN STATUS BAD PARAM

Invalid (NULL) handle.

```
CUDNN STATUS MAPPING ERROR
```

Mismatch between the user stream and the cuDNN handle context.

CUDNN STATUS SUCCESS

The new stream was set successfully.

3.2.92. cudnnSetTensor()

```
cudnnStatus t cudnnSetTensor(
                                     handle,
   cudnnHandle t
   const cudnnTensorDescriptor t
                                    yDesc,
    void
                                    *v,
                                    *valuePtr)
   const void
```

This function sets all the elements of a tensor to a given value.

Parameters

handle

Input. Handle to a previously created cuDNN context.

yDesc

Input. Handle to a previously initialized tensor descriptor.

У

Input/Output. Pointer to data of the tensor described by the yDesc descriptor.

valuePtr

Input. Pointer in host memory to a single value. All elements of the y tensor will be set to value[0]. The data type of the element in value[0] has to match the data type of tensor y.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN STATUS BAD PARAM
```

One of the provided pointers is nil.

```
CUDNN STATUS EXECUTION FAILED
```

The function failed to launch on the GPU.

3.2.93. cudnnSetTensor4dDescriptor()

```
cudnnStatus t cudnnSetTensor4dDescriptor(
   cudnnTensorDescriptor_t tensorDesc,
   cudnnTensorFormat_t
                          format,
   cudnnDataType t
                           dataType,
   int
                           n,
```

int

This function initializes a previously created generic tensor descriptor object into a 4D tensor. The strides of the four dimensions are inferred from the format parameter and set in such a way that the data is contiguous in memory with no padding between dimensions.



Note: The total size of a tensor including the potential padding between dimensions is limited to 2 Giga-elements of type datatype.

Parameters

tensorDesc

Input/Output. Handle to a previously created tensor descriptor.

format

Input. Type of format.

datatype

Input. Data type.

n

Input. Number of images.

С

Input. Number of feature maps per image.

h

Input. Height of each feature map.

Input. Width of each feature map.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

CUDNN STATUS BAD PARAM

At least one of the parameters n, c, h, w was negative or format has an invalid enumerant value or dataType has an invalid enumerant value.

CUDNN STATUS NOT SUPPORTED

The total size of the tensor descriptor exceeds the maximum limit of 2 Giga-elements.

3.2.94. cudnnSetTensor4dDescriptorEx()

cudnnStatus t cudnnSetTensor4dDescriptorEx(

```
cudnnTensorDescriptor t tensorDesc,
cudnnDataType_t
                            dataType,
int
                            n,
int
                            C,
int
                            h,
int.
                            w,
                            nStride,
int
int
                            cStride,
int
                            hStride,
int
                            wStride)
```

This function initializes a previously created generic tensor descriptor object into a 4D tensor, similarly to cudnnSetTensor4dDescriptor() but with the strides explicitly passed as parameters. This can be used to lay out the 4D tensor in any order or simply to define gaps between dimensions.



Note:

- At present, some cuDNN routines have limited support for strides. Those routines will return CUDNN STATUS NOT SUPPORTED if a 4D tensor object with an unsupported stride is used. <u>cudnnTransformTensor()</u> can be used to convert the data to a supported layout.
- The total size of a tensor including the potential padding between dimensions is limited to 2 Giga-elements of type datatype.

Parameters

tensorDesc

Input/Output. Handle to a previously created tensor descriptor.

datatype

Input. Data type.

n

Input. Number of images.

С

Input. Number of feature maps per image.

h

Input. Height of each feature map.

Input. Width of each feature map.

nStride

Input. Stride between two consecutive images.

cStride

Input. Stride between two consecutive feature maps.

hStride

Input. Stride between two consecutive rows.

wStride

Input. Stride between two consecutive columns.

Returns

```
CUDNN STATUS SUCCESS
```

The object was set successfully.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the parameters n, c, h, w or nStride, cStride, hStride, wStride is negative or dataType has an invalid enumerant value.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The total size of the tensor descriptor exceeds the maximum limit of 2 Giga-elements.

3.2.95. cudnnSetTensorNdDescriptor()

```
cudnnStatus_t cudnnSetTensorNdDescriptor(
    cudnnTensorDescriptor_t tensorDesc,
    cudnnDataType_t dataType,
    int nbDims,
    const int dimA[],
    const int strideA[])
```

This function initializes a previously created generic tensor descriptor object.



Note: The total size of a tensor including the potential padding between dimensions is limited to 2 Giga-elements of type ${\tt datatype}$. Tensors are restricted to having at least 4 dimensions, and at most ${\tt cudnn_DIM_MAX}$ dimensions (defined in ${\tt cudnn.h}$). When working with lower dimensional data, it is recommended that the user create a 4D tensor, and set the size along unused dimensions to 1.

Parameters

tensorDesc

Input/Output. Handle to a previously created tensor descriptor.

datatype

Input. Data type.

nbDims

Input. Dimension of the tensor.



Note: Do not use 2 dimensions. Due to historical reasons, the minimum number of dimensions in the filter descriptor is three. For more information, refer to cudnnGetRNNLinLayerBiasParams().

dimA

Input. Array of dimension nbDims that contain the size of the tensor for every dimension. The size along unused dimensions should be set to 1. By convention, the ordering of dimensions in the array follows the format - [N, C, D, H, W], with W occupying the smallest index in the array.

strideA

Input. Array of dimension nbDims that contain the stride of the tensor for every dimension. By convention, the ordering of the strides in the array follows the format - [Nstride, Cstride, Dstride, Hstride, Wstride], with Wstride occupying the smallest index in the array.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

CUDNN_STATUS_BAD_PARAM

At least one of the elements of the array dimA was negative or zero, or dataType has an invalid enumerant value.

CUDNN STATUS NOT SUPPORTED

The parameter nbDims is outside the range [4, CUDNN_DIM_MAX], or the total size of the tensor descriptor exceeds the maximum limit of 2 Giga-elements.

3.2.96. cudnnSetTensorNdDescriptorEx()

```
cudnnStatus_t cudnnSetTensorNdDescriptorEx(
    cudnnTensorDescriptor_t tensorDesc,
    cudnnTensorFormat_t format,
    cudnnDataType_t dataType,
    int nbDims,
    const int dimA[])
```

This function initializes an n-D tensor descriptor.

Parameters

tensorDesc

Output. Pointer to the tensor descriptor struct to be initialized.

format

Input. Tensor format.

dataType

Input. Tensor data type.

nbDims

Input. Dimension of the tensor.



Note: Do not use 2 dimensions. Due to historical reasons, the minimum number of dimensions in the filter descriptor is three. For more information, refer to cudnnGetRNNLinLayerBiasParams().

dimA

Input. Array containing the size of each dimension.

Returns

CUDNN STATUS SUCCESS

The function was successful.

```
CUDNN STATUS BAD PARAM
```

Tensor descriptor was not allocated properly; or input parameters are not set correctly.

```
CUDNN STATUS NOT SUPPORTED
```

Dimension size requested is larger than maximum dimension size supported.

3.2.97. cudnnSetTensorTransformDescriptor()

```
cudnnStatus_t cudnnSetTensorTransformDescriptor(
  cudnnTensorTransformDescriptor_t transformDesc,
  const uint32_t nbDims,
  const cudnnTensorFormat_t destFormat,
  const int32_t padBeforeA[],
  const int32_t padAfterA[],
  const uint32_t foldA[],
  const cudnnFoldingDirection t direction);
```

This function initializes a tensor transform descriptor that was previously created using the <u>cudnnCreateTensorTransformDescriptor()</u> function.

Parameters

transformDesc

Output. The tensor transform descriptor to be initialized.

nbDims

Input. The dimensionality of the transform operands. Must be greater than 2. For more information, refer to <u>Tensor Descriptor</u> in the *cuDNN Developer Guide*.

destFormat

Input. The desired destination format.

padBeforeA[]

Input. An array that contains the amount of padding that should be added before each dimension. Set to NULL for no padding.

padAfterA[]

Input. An array that contains the amount of padding that should be added after each dimension. Set to NULL for no padding.

foldA[]

Input. An array that contains the folding parameters for each spatial dimension (dimensions 2 and up). Set to NULL for no folding.

direction

Input. Selects folding or unfolding. This input has no effect when folding parameters are all <= 1. For more information, refer to cudnnFoldingDirection_t.

Returns

CUDNN STATUS SUCCESS

The function was launched successfully.

CUDNN STATUS BAD PARAM

The parameter transformDesc is NULL, or if direction is invalid, or nbDims is <= 2.

CUDNN STATUS NOT SUPPORTED

If the dimension size requested is larger than maximum dimension size supported (meaning, one of the nbDims is larger than CUDNN DIM MAX), or if destFromat is something other than NCHW or NHWC.

3.2.98. cudnnSoftmaxForward()

```
cudnnStatus t cudnnSoftmaxForward(
   cudnnHandle t
                                  handle,
   cudnnSoftmaxAlgorithm t
                                  algorithm,
   cudnnSoftmaxMode t
                                  mode,
   const cudnnTensorDescriptor_t xDesc,
                                  *x,
   const void
                                  *beta,
   const void
   const cudnnTensorDescriptor_t yDesc,
   void
```

This routine computes the softmax function.



Note: All tensor formats are supported for all modes and algorithms with 4 and 5D tensors. Performance is expected to be highest with NCHW fully-packed tensors. For more than 5 dimensions tensors must be packed in their spatial dimensions.

Data Types

This function supports the following data types:

- CUDNN DATA FLOAT
- ► CUDNN DATA DOUBLE
- ► CUDNN DATA HALF
- ► CUDNN DATA BFLOAT16
- ► CUDNN DATA INT8

Parameters

handle

Input. Handle to a previously created cuDNN context.

algorithm

Input. Enumerant to specify the softmax algorithm.

mode

Input. Enumerant to specify the softmax mode.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*result + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the cuDNN Developer Guide.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc.

yDesc

Input. Handle to the previously initialized output tensor descriptor.

У

Output. Data pointer to GPU memory associated with the output tensor descriptor yDesc.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions are met:

- ► The dimensions n, c, h, w of the input tensor and output tensors differ.
- ▶ The datatype of the input tensor and output tensors differ.
- ▶ The parameters algorithm or mode have an invalid enumerant value.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

3.2.99. cudnnSpatialTfGridGeneratorForward()

This function generates a grid of coordinates in the input tensor corresponding to each pixel from the output tensor.



Note: Only 2d transformation is supported.

Parameters

handle

Input. Handle to a previously created cuDNN context.

stDesc

Input. Previously created spatial transformer descriptor object.

theta

Input. Affine transformation matrix. It should be of size n*2*3 for a 2d transformation, where n is the number of images specified in stDesc.

grid

Output. A grid of coordinates. It is of size n*h*w*2 for a 2d transformation, where n, h, w is specified in stDesc. In the 4th dimension, the first coordinate is x, and the second coordinate is y.

Returns

CUDNN_STATUS_SUCCESS

The call was successful.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- handle is NULL.
- ▶ One of the parameters grid or theta is NULL.

CUDNN_STATUS_NOT_SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

▶ The dimension of the transformed tensor specified in stDesc > 4.

CUDNN_STATUS_EXECUTION_FAILED

The function failed to launch on the GPU.

3.2.100.cudnnSpatialTfSamplerForward()

This function performs a sampler operation and generates the output tensor using the grid given by the grid generator.



Note: Only 2d transformation is supported.

Parameters

handle

Input. Handle to a previously created cuDNN context.

stDesc

Input. Previously created spatial transformer descriptor object.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the source value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*srcValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc.

grid

Input. A grid of coordinates generated by cudnnspatialTfGridGeneratorForward().

yDesc

Input. Handle to the previously initialized output tensor descriptor.

У

 $\it Output.$ Data pointer to GPU memory associated with the output tensor descriptor $\it vDesc.$

Returns

CUDNN STATUS SUCCESS

The call was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- handle is NULL.
- ▶ One of the parameters x, y or grid is NULL.

CUDNN_STATUS_NOT_SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

The dimension of transformed tensor > 4.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

3.2.101.cudnnTransformFilter()

```
cudnnStatus_t cudnnTransformFilter(
  cudnnHandle_t handle,
  const cudnnTensorTransformDescriptor_t transDesc,
  const void *alpha,
```

```
const cudnnFilterDescriptor_t srcDesc,
const void *srcData,
const void *beta,
const cudnnFilterDescriptor_t destDesc,
void *destData);
```

This function converts the filter between different formats, data types, or dimensions based on the described transformation. It can be used to convert a filter with an unsupported layout format to a filter with a supported layout format.

This function copies the scaled data from the input filter <code>srcDesc</code> to the output tensor <code>destDesc</code> with a different layout. If the filter descriptors of <code>srcDesc</code> and <code>destDesc</code> have different dimensions, they must be consistent with folding and padding amount and order <code>specified</code> in <code>transDesc</code>.

The srcDesc and destDesc tensors must not overlap in any way (imeaning, tensors cannot be transformed in place).



Note: When performing a folding transform or a zero-padding transform, the scaling factors (alpha, beta) should be set to (1, 0). However, unfolding transforms support any (alpha, beta) values. This function is thread safe.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle t.

transDesc

Input. A descriptor containing the details of the requested filter transformation. For more information, refer to <u>cudnnTensorTransformDescriptor</u> <u>t</u>.

alpha, beta

Input. Pointers, in the host memory, to the scaling factors used to scale the data in the input tensor <code>srcDesc</code>. <code>beta</code> is used to scale the destination tensor, while <code>alpha</code> is used to scale the source tensor. For more information, refer to Scaling Parameters in the <code>cuDNN Developer Guide</code>.

The beta scaling value is not honored in the folding and zero-padding cases. Unfolding supports any (alpha, beta).

srcDesc, destDesc

Input. Handles to the previously initiated filter descriptors. srcDesc and destDesc must not overlap. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

srcData, destData

Input. Pointers, in the host memory, to the data of the tensor described by srcDesc and destDesc respectively.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN_STATUS_BAD_PARAM

A parameter is uninitialized or initialized incorrectly, or the number of dimensions is different between srcDesc and destDesc.

CUDNN_STATUS NOT SUPPORTED

The function does not support the provided configuration. Also, in the folding and padding paths, any value other than A=1 and B=0 will result in a CUDNN STATUS NOT SUPPORTED.

CUDNN_STATUS_EXECUTION_FAILED

The function failed to launch on the GPU.

3.2.102.cudnnTransformTensor()

This function copies the scaled data from one tensor to another tensor with a different layout. Those descriptors need to have the same dimensions but not necessarily the same strides. The input and output tensors must not overlap in any way (meaning, tensors cannot be transformed in place). This function can be used to convert a tensor with an unsupported format to a supported one.

Parameters

handle

Input. Handle to a previously created cuDNN context.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the source value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*srcValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc

Input. Handle to a previously initialized tensor descriptor. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

x

Input. Pointer to data of the tensor described by the xDesc descriptor.

yDesc

Input. Handle to a previously initialized tensor descriptor. For more information, refer to cudnnTensorDescriptor_t.

У

Output. Pointer to data of the tensor described by the yDesc descriptor.

Returns

```
CUDNN STATUS SUCCESS
```

The function launched successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN_STATUS_BAD_PARAM
```

The dimensions n, c, h, w or the dataType of the two tensor descriptors are different.

```
CUDNN_STATUS_EXECUTION_FAILED
```

The function failed to launch on the GPU.

3.2.103.cudnnTransformTensorEx()

```
cudnnStatus_t cudnnTransformTensorEx(
  cudnnHandle_t handle,
  const cudnnTensorTransformDescriptor_t transDesc,

const void *alpha,
  const cudnnTensorDescriptor_t srcDesc,
  const void *srcData,
  const void *beta,
  const cudnnTensorDescriptor_t destDesc,
  void *destData);
```

This function converts the tensor layouts between different formats. It can be used to convert a tensor with an unsupported layout format to a tensor with a supported layout format.

This function copies the scaled data from the input tensor <code>srcDesc</code> to the output tensor <code>destDesc</code> with a different layout. The tensor descriptors of <code>srcDesc</code> and <code>destDesc</code> should have the same dimensions but need not have the same strides.

The srcDesc and destDesc tensors must not overlap in any way (meaning, tensors cannot be transformed in place).



Note: When performing a folding transform or a zero-padding transform, the scaling factors (alpha, beta) should be set to (1, 0). However, unfolding transforms support any (alpha, beta) values. This function is thread safe.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle_t.

transDesc

Input. A descriptor containing the details of the requested tensor transformation. For more information, refer to cudnnTensorTransformDescriptor_t.

alpha, beta

Input. Pointers, in the host memory, to the scaling factors used to scale the data in the input tensor ${\tt srcDesc.beta}$ is used to scale the destination tensor, while ${\tt alpha}$ is used to scale the source tensor. For more information, refer to <u>Scaling Parameters</u> in the ${\tt cuDNN Developer Guide}$.

The beta scaling value is not honored in the folding and zero-padding cases. Unfolding supports any (alpha, beta).

srcDesc, destDesc

Input. Handles to the previously initiated tensor descriptors. srcDesc and destDesc must not overlap. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

srcData, destData

Input. Pointers, in the host memory, to the data of the tensor described by srcDesc and destDesc respectively.

Returns

CUDNN STATUS SUCCESS

The function was launched successfully.

CUDNN STATUS BAD PARAM

A parameter is uninitialized or initialized incorrectly, or the number of dimensions is different between srcDesc and destDesc.

CUDNN STATUS NOT SUPPORTED

Function does not support the provided configuration. Also, in the folding and padding paths, any value other than A=1 and B=0 will result in a CUDNN STATUS NOT SUPPORTED.

CUDNN STATUS EXECUTION FAILED

Function failed to launch on the GPU.

Chapter 4. cudnn_ops_train.so Library

4.1. API Functions

4.1.1. cudnnActivationBackward()

```
cudnnStatus t cudnnActivationBackward(
   cudnnHandle t
                                   handle,
                                   activationDesc,
   cudnnActivationDescriptor t
   const void
                                  *alpha,
   const cudnnTensorDescriptor t
                                   yDesc,
                                   *y,
   const void
   const cudnnTensorDescriptor t
                                    dyDesc,
                                   *dy,
   const void
   const cudnnTensorDescriptor t
                                  xDesc,
                                   *x,
   const void
   const void
                                   *beta,
   const cudnnTensorDescriptor t dxDesc,
                                   *dx)
```

This routine computes the gradient of a neuron activation function.



Note:

- In-place operation is allowed for this routine; meaning $\mathrm{d} y$ and $\mathrm{d} x$ pointers may be equal. However, this requires the corresponding tensor descriptors to be identical (particularly, the strides of the input and output must match for an in-place operation to be allowed).
- ▶ All tensor formats are supported for 4 and 5 dimensions, however, the best performance is obtained when the strides of yDesc and xDesc are equal and HW-packed. For more than 5 dimensions the tensors must have their spatial dimensions packed.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle_t.

activationDesc

Input. Activation descriptor. For more information, refer to <u>cudnnActivationDescriptor_t</u>.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*result + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

yDesc

Input. Handle to the previously initialized input tensor descriptor. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

У

Input. Data pointer to GPU memory associated with the tensor descriptor y Desc.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

dy

Input. Data pointer to GPU memory associated with the tensor descriptor dyDesc.

xDesc

Input. Handle to the previously initialized output tensor descriptor.

x

Input. Data pointer to GPU memory associated with the output tensor descriptor xDesc.

dxDesc

Input. Handle to the previously initialized output differential tensor descriptor.

dx

Output. Data pointer to GPU memory associated with the output tensor descriptor dxDesc.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

▶ The strides nStride, cStride, hStride, wStride of the input differential tensor and output differential tensor differ and in-place operation is used.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

- ► The dimensions n, c, h, w of the input tensor and output tensor differ.
- ▶ The datatype of the input tensor and output tensor differs.
- ► The strides nStride, cStride, hStride, wStride of the input tensor and the input differential tensor differ.
- ► The strides nStride, cStride, hStride, wStride of the output tensor and the output differential tensor differ.

CUDNN_STATUS_EXECUTION_FAILED

The function failed to launch on the GPU.

4.1.2. cudnnBatchNormalizationBackward()

```
cudnnStatus t cudnnBatchNormalizationBackward(
     cudnnHandle t
                                      handle,
     cudnnBatchNormMode t
                                     mode,
     const void
                                     *alphaDataDiff,
     const void
                                     *betaDataDiff,
                                     *alphaParamDiff,
     const void
                                    *betaParamDiff,
     const void
     const cudnnTensorDescriptor t
                                      xDesc,
     const void
                                     *x,
     const cudnnTensorDescriptor t
                                     dyDesc,
                                     *dy,
     const void
     const cudnnTensorDescriptor t
                                     dxDesc,
                                     *dx,
                                    bnScaleBiasDiffDesc,
     const cudnnTensorDescriptor t
     const void
                                     *bnScale,
                                     *resultBnScaleDiff,
     void
     void
                                     *resultBnBiasDiff,
     double
                                      epsilon,
     const void
                                     *savedMean,
     const void
                                *savedInvVariance)
```

This function performs the backward batch normalization layer computation. This layer is based on the paper <u>Batch Normalization: Accelerating Deep Network Training by Reducing Internal Covariate Shift, S. loffe, C. Szegedy, 2015.</u>



Note:

- Only 4D and 5D tensors are supported.
- ▶ The epsilon value has to be the same during training, backpropagation, and inference.
- ► Higher performance can be obtained when HW-packed tensors are used for all of x, dy, dx.

For more information, refer to <u>cudnnDeriveBNTensorDescriptor()</u> for the secondary tensor descriptor generation for the parameters used in this function.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Input. Mode of operation (spatial or per-activation). For more information, refer to cudnnBatchNormMode_t.

*alphaDataDiff, *betaDataDiff

Inputs. Pointers to scaling factors (in host memory) used to blend the gradient output dx with a prior value in the destination tensor as follows:

```
dstValue = alphaDataDiff[0]*resultValue + betaDataDiff[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

*alphaParamDiff, *betaParamDiff

Inputs. Pointers to scaling factors (in host memory) used to blend the gradient outputs resultBnScaleDiff and resultBnBiasDiff with prior values in the destination tensor as follows:

```
dstValue = alphaParamDiff[0]*resultValue + betaParamDiff[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u>.

xDesc, dxDesc, dyDesc

Inputs. Handles to the previously initialized tensor descriptors.

*x

Inputs. Data pointer to GPU memory associated with the tensor descriptor xDesc, for the layer's x data.

*dv

Inputs. Data pointer to GPU memory associated with the tensor descriptor dyDesc, for the backpropagated differential dy input.

*dx

Inputs/Outputs. Data pointer to GPU memory associated with the tensor descriptor dxDesc, for the resulting differential output with respect to x.

bnScaleBiasDiffDesc

Input. Shared tensor descriptor for the following five tensors: bnScale, resultBnScaleDiff, resultBnBiasDiff, savedMean, savedInvVariance. The

dimensions for this tensor descriptor are dependent on normalization mode. For more information, refer to <u>cudnnDeriveBNTensorDescriptor()</u>.



Note: The data type of this tensor descriptor must be float for FP16 and FP32 input tensors, and double for FP64 input tensors.

*bnScale

Input. Pointer in the device memory for the batch normalization scale parameter (in the original paper the quantity scale is referred to as gamma).



Note: The bnBias parameter is not needed for this layer's computation.

resultBnScaleDiff, resultBnBiasDiff

Outputs. Pointers in device memory for the resulting scale and bias differentials computed by this routine. Note that these scale and bias gradients are weight gradients specific to this batch normalization operation, and by definition are not backpropagated.

epsilon

Input. Epsilon value used in batch normalization formula. Its value should be equal to or greater than the value defined for <code>CUDNN_BN_MIN_EPSILON</code> in <code>cudnn.h</code>. The same <code>epsilon</code> value should be used in forward and backward functions.

*savedMean, *savedInvVariance

Inputs. Optional cache parameters containing saved intermediate results that were computed during the forward pass. For this to work correctly, the layer's x and bnScale data have to remain unchanged until this backward function is called.



Note: Both these parameters can be \mathtt{NULL} but only at the same time. It is recommended to use this cache since the memory overhead is relatively small.

Supported configurations

This function supports the following combinations of data types for various descriptors.

Table 13. Supported configurations

Data Type Configuration	xDesc	bnScaleBiasM	alphaDataDiff, betaDataDiff, betaParamDif		dxDesc
PSEUDO_HALF_C	O nfin n_data_h <i>i</i>	LEUDNN_DATA_FL	OCUDNN_DATA_FL	OAUDNN_DATA_HA	L E UDNN_DATA_HAI
FLOAT_CONFIG	CUDNN_DATA_FI	OCUDNN_DATA_FL	OAUDNN_DATA_FL	OAUDNN_DATA_FL	OAUDNN_DATA_FLO
DOUBLE_CONFIG	CUDNN_DATA_DO	UBUBNN_DATA_DO	UBUENN_DATA_DO	UBUENN_DATA_DO	UBUENN_DATA_DOU

Returns

CUDNN_STATUS_SUCCESS

The computation was performed successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions are met:

- ► Any of the pointers alpha, beta, x, dy, dx, bnScale, resultBnScaleDiff, resultBnBiasDiff is NULL.
- ► The number of xDesc or yDesc or dxDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported).
- bnScaleBiasDiffDesc dimensions are not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for spatial, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for per-activation mode.
- ► Exactly one of savedMean, savedInvVariance pointers is NULL.
- ▶ epsilon value is less than CUDNN BN MIN EPSILON.
- Dimensions or data types mismatch for any pair of xDesc, dyDesc, dxDesc.

4.1.3. cudnnBatchNormalizationBackwardEx()

```
cudnnStatus t cudnnBatchNormalizationBackwardEx (
   cudnnHandle t
                                      handle,
   cudnnBatchNormMode t
                                      mode.
   cudnnBatchNormOps t
                                      bnOps,
                                      *alphaDataDiff,
   const void
   const void
                                       *betaDataDiff,
   const void
                                       *alphaParamDiff,
                                      *betaParamDiff,
   const void
   const cudnnTensorDescriptor t
                                     xDesc,
   const void
                                       *xData,
                                     yDesc,
   const cudnnTensorDescriptor t
   const void
                                       *yData,
   const cudnnTensorDescriptor t
                                      dyDesc,
   const void
                                       *dyData,
   const cudnnTensorDescriptor t
                                      dzDesc,
                                       *dzData,
   void
                                     dxDesc,
   const cudnnTensorDescriptor t
                                       *dxData,
   const cudnnTensorDescriptor t
                                     dBnScaleBiasDesc,
   const void
                                       *bnScaleData,
   const void
                                       *bnBiasData,
   void
                                       *dBnScaleData,
                                       *dBnBiasData,
   void
   double
                                      epsilon,
   const void
                                       *savedMean,
   const void
                                       *savedInvVariance,
   const cudnnActivationDescriptor_t activationDesc,
   void
                                       *workspace,
   size t
                                      workSpaceSizeInBytes
                                      *reserveSpace
```

size t

reserveSpaceSizeInBytes);

This function is an extension of the <u>cudnnBatchNormalizationBackward()</u> for performing the backward batch normalization layer computation with a fast NHWC semi-persistent kernel. This API will trigger the new semi-persistent NHWC kernel when the following conditions are true:

- ▶ All tensors, namely, x, y, dz, dy, dx must be NHWC-fully packed, and must be of the type CUDNN DATA_HALF.
- ▶ The input parameter mode must be set to CUDNN BATCHNORM SPATIAL PERSISTENT.
- workspace is not NULL.
- ▶ Before cuDNN version 8.2.0, the tensor c dimension should always be a multiple of 4. After 8.2.0, the tensor c dimension should be a multiple of 4 only when bnops is CUDNN BATCHNORM OPS BN ADD ACTIVATION.
- workSpaceSizeInBytes is equal to or larger than the amount required by cudnnGetBatchNormalizationBackwardExWorkspaceSize().
- reserveSpaceSizeInBytes is equal to or larger than the amount required by cudnnGetBatchNormalizationTrainingExReserveSpaceSize().
- ► The content in reserveSpace stored by <u>cudnnBatchNormalizationForwardTrainingEx()</u> must be preserved.

If workspace is NULL and workSpaceSizeInBytes of zero is passed in, this API will function exactly like the non-extended function cudnnBatchNormalizationBackward.

This workspace is not required to be clean. Moreover, the workspace does not have to remain unchanged between the forward and backward pass, as it is not used for passing any information.

This extended function can accept a *workspace pointer to the GPU workspace, and workSpaceSizeInBytes, the size of the workspace, from the user.

The bnops input can be used to set this function to perform either only the batch normalization, or batch normalization followed by activation, or batch normalization followed by element-wise addition and then activation.

Only 4D and 5D tensors are supported. The epsilon value has to be the same during the training, the backpropagation, and the inference.

When the tensor layout is NCHW, higher performance can be obtained when HW-packed tensors are used for x, dy, dx.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Input. Mode of operation (spatial or per-activation). For more information, refer to cudnnBatchNormMode t.

bn0ps

Input. Mode of operation. Currently, <code>CUDNN_BATCHNORM_OPS_BN_ACTIVATION</code> and <code>CUDNN_BATCHNORM_OPS_BN_ADD_ACTIVATION</code> are only supported in the NHWC layout. For more information, refer to <code>cudnnBatchNormOps_t</code>. This input can be used to set this function to perform either only the batch normalization, or batch normalization followed by activation, or batch normalization followed by element-wise addition and then activation.

*alphaDataDiff, *betaDataDiff

Inputs. Pointers to scaling factors (in host memory) used to blend the gradient output dx with a prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to Scaling Parameters in the cuDNN Developer Guide.

*alphaParamDiff, *betaParamDiff

Inputs. Pointers to scaling factors (in host memory) used to blend the gradient outputs dBnScaleData and dBnBiasData with prior values in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc, *x, yDesc, *yData, dyDesc, *dyData

Inputs. Tensor descriptors and pointers in the device memory for the layer's x data, backpropagated gradient input dy, the original forward output y data. yDesc and yData are not needed if bnOps is set to $CUDNN_BATCHNORM_OPS_BN$, users may pass NULL. For more information, refer to $CUDNN_BATCHNORM_OPS_BN$.

dzDesc, *dzData, dxDesc, *dxData

Outputs. Tensor descriptors and pointers in the device memory for the computed gradient output dz, and dx. dzDesc and *dzData are not needed when bnOps is CUDNN_BATCHNORM_OPS_BN or CUDNN_BATCHNORM_OPS_BN_ACTIVATION, users may pass NULL. For more information, refer to cudnnTensorDescriptor_t.

dBnScaleBiasDesc

Input. Shared tensor descriptor for the following six tensors: bnScaleData, bnBiasData, dBnScaleData, dBnBiasData, savedMean, and savedInvVariance. For more information, refer to <u>cudnnDeriveBNTensorDescriptor()</u>.

The dimensions for this tensor descriptor are dependent on normalization mode.



Note: The data type of this tensor descriptor must be float for FP16 and FP32 input tensors and double for FP64 input tensors.

For more information, refer to cudnnTensorDescriptor_t.

*bnScaleData

Input. Pointer in the device memory for the batch normalization scale parameter (in the <u>original paper</u> the quantity scale is referred to as gamma).

*bnBiasData

Input. Pointers in the device memory for the batch normalization bias parameter (in the <u>original paper</u> bias is referred to as beta). This parameter is used only when activation should be performed.

*dBnScaleData, dBnBiasData

Inputs. Pointers in the device memory for the gradients of bnScaleData and bnBiasData, respectively.

epsilon

Input. Epsilon value used in batch normalization formula. Its value should be equal to or greater than the value defined for CUDNN_BN_MIN_EPSILON in cudnn.h. The same epsilon value should be used in forward and backward functions.

*savedMean, *savedInvVariance

Inputs. Optional cache parameters containing saved intermediate results computed during the forward pass. For this to work correctly, the layer's x and bnScaleData, bnBiasData data has to remain unchanged until this backward function is called. Note that both these parameters can be NULL but only at the same time. It is recommended to use this cache since the memory overhead is relatively small.

activationDesc

Input. Descriptor for the activation operation. When the bnops input is set to either CUDNN_BATCHNORM_OPS_BN_ACTIVATION or CUDNN_BATCHNORM_OPS_BN_ADD_ACTIVATION then this activation is used, otherwise user may pass NULL.

workspace

Input. Pointer to the GPU workspace. If workspace is NULL and workSpaceSizeInBytes of zero is passed in, then this API will function exactly like the non-extended function cudnnBatchNormalizationBackward().

workSpaceSizeInBytes

Input. The size of the workspace. It must be large enough to trigger the fast NHWC semi-persistent kernel by this function.

*reserveSpace

Input. Pointer to the GPU workspace for the reserveSpace.

reserveSpaceSizeInBytes

Input. The size of the reserveSpace. It must be equal or larger than the amount required by <u>cudnnGetBatchNormalizationTrainingExReserveSpaceSize()</u>.

Supported configurations

This function supports the following combinations of data types for various descriptors.

Table 14. Supported configurations

Data Type Configurations	xDesc, yDesc	dBnScaleBiasDe:	alphaDataDiff, betaDataDiff,alp betaParamDiff	dyDesc, dzDesc, dxDesc
PSEUDO_HALF_CONF	ICUDNN_DATA_HALF	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_HALF
FLOAT_CONFIG	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT
DOUBLE_CONFIG	CUDNN_DATA_DOUBL	ECUDNN_DATA_DOUBL	ECUDNN_DATA_DOUBL	ECUDNN_DATA_DOUBLE

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

```
CUDNN STATUS NOT SUPPORTED
```

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► Any of the pointers alphaDataDiff, betaDataDiff, alphaParamDiff, betaParamDiff, x, dy, dx, bnScale, resultBnScaleDiff, resultBnBiasDiff is NULL.
- ► The number of xDesc or yDesc or dxDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported).
- dBnScaleBiasDesc dimensions not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for spatial, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for per-activation mode.
- Exactly one of savedMean, savedInvVariance pointers is NULL.
- ▶ epsilon value is less than CUDNN_BN_MIN_EPSILON.
- Dimensions or data types mismatch for any pair of xDesc, dyDesc, dxDesc.

4.1.4. cudnnBatchNormalizationForwardTraining()

```
cudnnStatus t cudnnBatchNormalizationForwardTraining(
                                    handle,
    cudnnHandle t
    cudnnBatchNormMode t
                                     mode,
                                    *alpha,
    const void
                                    *beta,
    const void
    const cudnnTensorDescriptor t
                                    xDesc,
                                    *x,
    const void
    const cudnnTensorDescriptor t
                                     yDesc,
                                    *y,
    void
    const cudnnTensorDescriptor t
                                    bnScaleBiasMeanVarDesc,
    const void
                                    *bnScale,
    const void
                                    *bnBias,
    double
                                     exponentialAverageFactor,
                                    *resultRunningMean,
    void
                                    *resultRunningVariance,
    void
```

```
doubleepsilon,void*resultSaveMean,void*resultSaveInvVariance)
```

This function performs the forward batch normalization layer computation for the training phase. This layer is based on the paper <u>Batch Normalization: Accelerating Deep Network Training by Reducing Internal Covariate Shift</u>, S. loffe, C. Szegedy, 2015.



Note:

- Only 4D and 5D tensors are supported.
- ► The epsilon value has to be the same during training, backpropagation, and inference.
- ▶ For the inference phase, use cudnnBatchNormalizationForwardInference.
- \blacktriangleright Higher performance can be obtained when HW-packed tensors are used for both x and y.

Refer to <u>cudnnDeriveBNTensorDescriptor()</u> for the secondary tensor descriptor generation for the parameters used in this function.

Parameters

handle

Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Mode of operation (spatial or per-activation). For more information, refer to cudnnBatchNormMode t.

alpha, beta

Inputs. Pointers to scaling factors (in host memory) used to blend the layer output value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc, yDesc

Tensor descriptors and pointers in device memory for the layer's x and y data. For more information, refer to cudnnTensorDescriptor_t.

*x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc, for the layer's x input data.

*у

Input. Data pointer to GPU memory associated with the tensor descriptor yDesc, for the youtput of the batch normalization layer.

bnScaleBiasMeanVarDesc

Shared tensor descriptor desc for the secondary tensor that was derived by <u>cudnnDeriveBNTensorDescriptor()</u>. The dimensions for this tensor descriptor are dependent on the normalization mode.

bnScale, bnBias

Inputs. Pointers in device memory for the batch normalization scale and bias parameters (in the <u>original paper</u> bias is referred to as beta and scale as gamma). Note that <code>bnBias</code> parameter can replace the previous layer's bias parameter for improved efficiency.

exponentialAverageFactor

Input. Factor used in the moving average computation as follows:

```
runningMean = runningMean*(1-factor) + newMean*factor
```

Use a factor=1/(1+n) at N-th call to the function to get Cumulative Moving Average (CMA) behavior such that:

```
CMA[n] = (x[1]+...+x[n])/n
```

This is proved below:

```
 \begin{array}{lll} \text{CMA}[n+1] &=& (n*\text{CMA}[n]+x[n+1]) / (n+1) \\ &=& ((n+1)*\text{CMA}[n]-\text{CMA}[n]) / (n+1) + x[n+1] / (n+1) \\ &=& \text{CMA}[n]*(1-1/(n+1))+x[n+1]*1 / (n+1) \\ &=& \text{CMA}[n]*(1-\text{factor}) + x(n+1)*\text{factor} \\ \end{array}
```

resultRunningMean, resultRunningVariance

Inputs/Outputs. Running mean and variance tensors (these have the same descriptor as the bias and scale). Both of these pointers can be \mathtt{NULL} but only at the same time. The value stored in $\mathtt{resultRunningVariance}$ (or passed as an input in inference mode) is the sample variance and is the moving average of $\mathtt{variance}[x]$ where the variance is computed either over batch or spatial+batch dimensions depending on the mode. If these pointers are not \mathtt{NULL} , the tensors should be initialized to some reasonable values or to 0.

epsilon

Input. Epsilon value used in the batch normalization formula. Its value should be equal to or greater than the value defined for <code>CUDNN_BN_MIN_EPSILON</code> in <code>cudnn.h</code>. The same <code>epsilon</code> value should be used in forward and backward functions.

resultSaveMean, resultSaveInvVariance

Outputs. Optional cache to save intermediate results computed during the forward pass. These buffers can be used to speed up the backward pass when supplied to the cudnnBatchNormalizationBackward() function. The intermediate results stored in resultSaveMean and resultSaveInvVariance buffers should not be used directly by the user. Depending on the batch normalization mode, the results stored in resultSaveInvVariance may vary. For the cache to work correctly, the input layer data must remain unchanged until the backward function is called. Note that both parameters can be NULL but only at the same time. In such a case, intermediate statistics will not be saved, and cudnnBatchNormalizationBackward() will have to

re-compute them. It is recommended to use this cache as the memory overhead is relatively small because these tensors have a much lower product of dimensions than the data tensors.

Supported configurations

This function supports the following combinations of data types for various descriptors.

Table 15. Supported configurations

Data Type Configurations	xDesc	bnScaleBiasMea	alpha, beta	yDesc
PSEUDO_HALF_CONF	ICUDNN_DATA_HALF	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_HALF
FLOAT_CONFIG	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT
DOUBLE_CONFIG	CUDNN_DATA_DOUBL	ECUDNN_DATA_DOUBL	ECUDNN_DATA_DOUBL	ECUDNN_DATA_DOUBLE
PSEUDO_BFLOAT16_	COMBNIC_DATA_BFLOA	T1166DNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_BFLOAT

Returns

CUDNN_STATUS_SUCCESS

The computation was performed successfully.

CUDNN_STATUS_NOT_SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ▶ One of the pointers alpha, beta, x, y, bnScale, bnBias is NULL.
- The number of xDesc or yDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported).
- bnScaleBiasMeanVarDesc dimensions are not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for spatial, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for peractivation mode.
- ▶ Exactly one of resultSaveMean, resultSaveInvVariance pointers are NULL.
- Exactly one of resultRunningMean, resultRunningInvVariance pointers are NULL.
- ▶ epsilon value is less than CUDNN_BN_MIN_EPSILON.
- ▶ Dimensions or data types mismatch for xDesc, yDesc.

4.1.5. cudnnBatchNormalizationForwardTrainingEx()

```
cudnnStatus_t cudnnBatchNormalizationForwardTrainingEx(
    cudnnHandle_t handle,
    cudnnBatchNormMode t mode,
```

```
bnOps,
cudnnBatchNormOps t
                              *alpha,
 const void
 const void
                              *beta,
                             xDesc,
 const cudnnTensorDescriptor t
 const void
                              *xData.
 const cudnnTensorDescriptor t
                             zDesc,
 const void
                              *zData,
                             yDesc,
 const cudnnTensorDescriptor_t
                              *yData,
 const void
                              *bnScaleData,
                              *bnBiasData,
 const void
 double
                             exponentialAverageFactor,
 void
                              *resultRunningMeanData,
 void
                              *resultRunningVarianceData,
 double
                             epsilon,
 void
                              *saveMean,
 *saveInvVariance,
 size t
                             workSpaceSizeInBytes
 void
                              *reserveSpace
 size t
                             reserveSpaceSizeInBytes);
```

This function is an extension of the <u>cudnnBatchNormalizationForwardTraining()</u> for performing the forward batch normalization layer computation.

This API will trigger the new semi-persistent NHWC kernel when the following conditions are true:

- ▶ All tensors, namely, x, y, dz, dy, dx must be NHWC-fully packed and must be of the type CUDNN DATA_HALF.
- ▶ The input parameter mode must be set to CUDNN BATCHNORM SPATIAL PERSISTENT.
- workspace is not NULL.
- ▶ Before cuDNN version 8.2.0, the tensor c dimension should always be a multiple of 4. After 8.2.0, the tensor c dimension should be a multiple of 4 only when bnops is CUDNN BATCHNORM OPS BN ADD ACTIVATION.
- workSpaceSizeInBytes is equal to or larger than the amount required by cudnnGetBatchNormalizationForwardTrainingExWorkspaceSize().
- reserveSpaceSizeInBytes is equal to or larger than the amount required by cudnnGetBatchNormalizationTrainingExReserveSpaceSize().
- ► The content in reserveSpace stored by <u>cudnnBatchNormalizationForwardTrainingEx()</u> must be preserved.

If workspace is NULL and workSpaceSizeInBytes of zero is passed in, this API will function exactly like the non-extended function cudnnBatchNormalizationForwardTraining().

This workspace is not required to be clean. Moreover, the workspace does not have to remain unchanged between the forward and backward pass, as it is not used for passing any information.

This extended function can accept a *workspace pointer to the GPU workspace, and workSpaceSizeInBytes, the size of the workspace, from the user.

The bnops input can be used to set this function to perform either only the batch normalization, or batch normalization followed by activation, or batch normalization followed by element-wise addition and then activation.

Only 4D and 5D tensors are supported. The epsilon value has to be the same during the training, the backpropagation, and the inference.

When the tensor layout is NCHW, higher performance can be obtained when HW-packed tensors are used for x, dy, dx.

Parameters

handle

Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Mode of operation (spatial or per-activation). For more information, refer to cudnnBatchNormMode_t.

bn0ps

Input. Mode of operation for the fast NHWC kernel. For more information, refer to <u>cudnnBatchNormOps_t</u>. This input can be used to set this function to perform either only the batch normalization, or batch normalization followed by activation, or batch normalization followed by element-wise addition and then activation.

*alpha, *beta

Inputs. Pointers to scaling factors (in host memory) used to blend the layer output value with prior value in the destination tensor as follows:

dstValue = alpha[0]*resultValue + beta[0]*priorDstValue

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc, *xData, zDesc, *zData, yDesc, *yData

Tensor descriptors and pointers in device memory for the layer's input x and output y, and for the optional z tensor input for residual addition to the result of the batch normalization operation, prior to the activation. The optional $z \, \text{Des}$ and $z \, \text{Des}$ and $z \, \text{Des}$ and $z \, \text{Des}$ and $z \, \text{Des}$ are only used when $z \, \text{Des}$ is $z \, \text{Cudnn} \, \text{Batchnorm} \, \text{Ops} \, \text{Bn} \, \text{Add} \, \text{Activation}$, otherwise users may pass $z \, \text{Null}$. When in use, $z \, \text{Should}$ have exactly the same dimension as $z \, \text{Des}$ and the final output $z \, \text{Des}$ more information, refer to $z \, \text{CudnnTensorDescriptor} \, \text{Descriptor} \, \text{Descriptor}$

bnScaleBiasMeanVarDesc

Shared tensor descriptor desc for the secondary tensor that was derived by <u>cudnnDeriveBNTensorDescriptor()</u>. The dimensions for this tensor descriptor are dependent on the normalization mode.

*bnScaleData, *bnBiasData

Inputs. Pointers in device memory for the batch normalization scale and bias parameters (in the <u>original paper</u>, bias is referred to as beta and scale as gamma).

Note that bnBiasData parameter can replace the previous layer's bias parameter for improved efficiency.

${\tt exponentialAverageFactor}$

Input. Factor used in the moving average computation as follows:

```
runningMean = runningMean*(1-factor) + newMean*factor
```

Use a factor=1/(1+n) at N-th call to the function to get Cumulative Moving Average (CMA) behavior such that:

```
CMA[n] = (x[1]+...+x[n])/n
```

This is proved below:

Writing

*resultRunningMeanData, *resultRunningVarianceData

Inputs/Outputs. Pointers to the running mean and running variance data. Both these pointers can be <code>NULL</code> but only at the same time. The value stored in <code>resultRunningVarianceData</code> (or passed as an input in inference mode) is the sample variance and is the moving average of <code>variance[x]</code> where the variance is computed either over batch or spatial+batch dimensions depending on the mode. If these pointers are not <code>NULL</code>, the tensors should be initialized to some reasonable values or to <code>0</code>.

epsilon

Input. Epsilon value used in the batch normalization formula. Its value should be equal to or greater than the value defined for <code>CUDNN_BN_MIN_EPSILON</code> in <code>cudnn.h</code>. The same <code>epsilon</code> value should be used in forward and backward functions.

*saveMean, *saveInvVariance

Outputs. Optional cache parameters containing saved intermediate results computed during the forward pass. For this to work correctly, the layer's x and bnScaleData, bnBiasData data has to remain unchanged until this backward function is called. Note that both these parameters can be NULL but only at the same time. It is recommended to use this cache since the memory overhead is relatively small.

activationDesc

Input. The tensor descriptor for the activation operation. When the bnOps input is set to either CUDNN_BATCHNORM_OPS_BN_ACTIVATION or CUDNN_BATCHNORM_OPS_BN_ADD_ACTIVATION then this activation is used, otherwise user may pass NULL.

*workspace, workSpaceSizeInBytes

Inputs. *workspace is a pointer to the GPU workspace, and workspaceSizeInBytes is the size of the workspace. When *workspace is not NULL and *workspaceSizeInBytes is large enough, and the tensor layout is NHWC and the data type configuration is supported, then this function will trigger a new semi-persistent NHWC kernel for

batch normalization. The workspace is not required to be clean. Also, the workspace does not need to remain unchanged between the forward and backward passes.

*reserveSpace

Input. Pointer to the GPU workspace for the reserveSpace.

reserveSpaceSizeInBytes

Input. The size of the reserveSpace. Must be equal or larger than the amount required by cudnnGetBatchNormalizationTrainingExReserveSpaceSize().

Supported configurations

This function supports the following combinations of data types for various descriptors.

Table 16. Supported configurations

Data Type Configuration	xDesc	bnScaleBiasM	alpha, beta	zDesc	yDesc
PSEUDO_HALF_C	O VFDV N_DATA_HA	LEUDNN_DATA_FL	oaudnn_data_fl	OCUDNN_DATA_HA	L E UDNN_DATA_HALI
FLOAT_CONFIG	CUDNN_DATA_FL	OAUDNN_DATA_FL	o au dnn_data_fl	oNot supported	CUDNN_DATA_FLOA
DOUBLE_CONFIG	CUDNN_DATA_DO	UBUENN_DATA_DO	UBUENN_DATA_DC	u Not supported	CUDNN_DATA_DOU

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ▶ One of the pointers alpha, beta, x, y, bnScaleData, bnBiasData is NULL.
- The number of xDesc or yDesc tensor descriptor dimensions is not within the [4,5] range (only 4D and 5D tensors are supported).
- bnScaleBiasMeanVarDesc dimensions are not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for spatial, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for peractivation mode.
- ▶ Exactly one of saveMean, saveInvVariance pointers are NULL.
- Exactly one of resultRunningMeanData, resultRunningInvVarianceData pointers are NULL.
- ▶ epsilon value is less than CUDNN BN MIN EPSILON.
- ▶ Dimensions or data types mismatch for xDesc, yDesc.

4.1.6. cudnnDivisiveNormalizationBackward()

```
cudnnStatus t cudnnDivisiveNormalizationBackward(
  cudnnHandle t
                                  handle,
  cudnnLRNDescriptor t
                                   normDesc,
  cudnnLRNDescriptor_t
cudnnDivNormMode_t
const void
                                   mode,
  const void *alpha,
const cudnnTensorDescriptor_t xDesc,
const void
  const void
                                  *x,
  const void
  const void
                                   *means,
  const void
                                   *dy,
  void
                                   *temp,
  void
                                   *temp2,
  const void
                                   *beta,
  *dx,
  void
                                   *dMeans)
```

This function performs the backward DivisiveNormalization layer computation.



Note: Supported tensor formats are NCHW for 4D and NCDHW for 5D with any non-overlapping non-negative strides. Only 4D and 5D tensors are supported.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

normDesc

Input. Handle to a previously initialized LRN parameter descriptor (this descriptor is used for both LRN and DivisiveNormalization layers).

mode

Input. DivisiveNormalization layer mode of operation. Currently only CUDNN_DIVNORM_PRECOMPUTED_MEANS is implemented. Normalization is performed using the means input tensor that is expected to be precomputed by the user.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the layer output value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the cuDNN Developer Guide.

xDesc, x, means

Input. Tensor descriptor and pointers in device memory for the layer's x and means data. Note that the means tensor is expected to be precomputed by the user. It can also contain any valid values (not required to be actual means, and can be for instance a result of a convolution with a Gaussian kernel).

dy

Input. Tensor pointer in device memory for the layer's dy cumulative loss differential data (error backpropagation).

temp, temp2

Workspace. Temporary tensors in device memory. These are used for computing intermediate values during the backward pass. These tensors do not have to be preserved from forward to backward pass. Both use xDesc as a descriptor.

dxDesc

Input. Tensor descriptor for dx and dMeans.

dx, dMeans

Output. Tensor pointers (in device memory) for the layers resulting in cumulative gradients dx and dMeans (dLoss/dx and dLoss/dMeans). Both share the same descriptor.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ▶ One of the tensor pointers x, dx, temp, tmep2, dy is NULL.
- Number of any of the input or output tensor dimensions is not within the [4,5] range.
- ▶ Either alpha or beta pointer is NULL.
- ▶ A mismatch in dimensions between xDesc and dxDesc.
- LRN descriptor parameters are outside of their valid ranges.
- Any of the tensor strides is negative.

CUDNN STATUS UNSUPPORTED

The function does not support the provided configuration, for example, any of the input and output tensor strides mismatch (for the same dimension) is a nonsupported configuration.

4.1.7. cudnnDropoutBackward()

size t

reserveSpaceSizeInBytes)

This function performs backward dropout operation over d_{y} returning results in d_{x} . If during forward dropout operation value from x was propagated to y then during backward operation value from d_{y} will be propagated to d_{x} , otherwise, d_{x} value will be set to 0.



Note: Better performance is obtained for fully packed tensors.

Parameters

handle

Input. Handle to a previously created cuDNN context.

dropoutDesc

Input. Previously created dropout descriptor object.

dyDesc

Input. Handle to a previously initialized tensor descriptor.

dy

Input. Pointer to data of the tensor described by the dyDesc descriptor.

dxDesc

Input. Handle to a previously initialized tensor descriptor.

dx

Output. Pointer to data of the tensor described by the dxDesc descriptor.

reserveSpace

Input. Pointer to user-allocated GPU memory used by this function. It is expected that reserveSpace was populated during a call to cudnnDropoutForward and has not been changed.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided memory for the reserve space

Returns

CUDNN STATUS SUCCESS

The call was successful.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

The number of elements of input tensor and output tensors differ.

- ▶ The datatype of the input tensor and output tensors differs.
- ► The strides of the input tensor and output tensors differ and in-place operation is used (i.e., x and y pointers are equal).
- ► The provided reserveSpaceSizeInBytes is less than the value returned by cudnnDropoutGetReserveSpaceSize.
- cudnnSetDropoutDescriptor has not been called on dropoutDesc with the non-NULL states argument.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

4.1.8. cudnnGetBatchNormalizationBackwardExWorkspac

This function returns the amount of GPU memory workspace the user should allocate to be able to call <code>cudnnGetBatchNormalizationBackwardExWorkspaceSize()</code> function for the specified <code>bnOps</code> input setting. The workspace allocated will then be passed to the function <code>cudnnGetBatchNormalizationBackwardExWorkspaceSize()</code>.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to <u>cudnnHandle_t</u>.

mode

Input. Mode of operation (spatial or per-activation). For more information, refer to <u>cudnnBatchNormMode_t</u>.

bnOps

Input. Mode of operation for the fast NHWC kernel. For more information, refer to cudnnBatchNormOps_t. This input can be used to set this function to perform either only the batch normalization, or batch normalization followed by activation, or batch normalization followed by element-wise addition and then activation.

xDesc, yDesc, dyDesc, dzDesc, dxDesc

Tensor descriptors and pointers in the device memory for the layer's x data, back propagated differential dy (inputs), the optional y input data, the optional dz output,

and the dx output, which is the resulting differential with respect to x. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

dBnScaleBiasDesc

Input. Shared tensor descriptor for the following six tensors: bnScaleData, bnBiasData, dBnBiasData, savedMean, and savedInvVariance. This is the shared tensor descriptor desc for the secondary tensor that was derived by <u>cudnnDeriveBNTensorDescriptor()</u>. The dimensions for this tensor descriptor are dependent on normalization mode. Note that the data type of this tensor descriptor must be float for FP16 and FP32 input tensors, and double for FP64 input tensors.

activationDesc

Input. Descriptor for the activation operation. When the bnops input is set to either CUDNN_BATCHNORM_OPS_BN_ACTIVATION or CUDNN_BATCHNORM_OPS_BN_ADD_ACTIVATION, then this activation is used, otherwise user may pass NULL.

*sizeInBytes

Output. Amount of GPU memory required for the workspace, as determined by this function, to be able to execute the cudnnGetBatchNormalizationForwardTrainingExWorkspaceSize() function with the specified bnops input setting.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- Number of xDesc, yDesc or dxDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported).
- ▶ dBnScaleBiasDesc dimensions not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for spatial, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for per-activation mode.
- Dimensions or data types mismatch for any pair of xDesc, dyDesc, dxDesc.

4.1.9. cudnnGetBatchNormalizationForwardTrainingExW

```
const cudnnTensorDescriptor_t
const cudnnActivationDescriptor_t
size_t
bnScaleBiasMeanVarDesc,
activationDesc,
*sizeInBytes);
```

This function returns the amount of GPU memory workspace the user should allocate to be able to call <code>cudnnGetBatchNormalizationForwardTrainingExWorkspaceSize()</code> function for the specified <code>bnOps</code> input setting. The workspace allocated should then be passed by the user to the function <code>cudnnGetBatchNormalizationForwardTrainingExWorkspaceSize()</code>.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Input. Mode of operation (spatial or per-activation). For more information, refer to cudnnBatchNormMode_t.

bn0ps

Input. Mode of operation for the fast NHWC kernel. For more information, refer to <u>cudnnBatchNormOps_t</u>. This input can be used to set this function to perform either only the batch normalization, or batch normalization followed by activation, or batch normalization followed by element-wise addition and then activation.

xDesc, zDesc, yDesc

Tensor descriptors and pointers in the device memory for the layer's x data, the optional z input data, and the y output. zDesc is only needed when bnOps is $CUDNN_BATCHNORM_OPS_BN_ADD_ACTIVATION$, otherwise the user may pass NULL. For more information, refer to cudnnTensorDescriptor t.

bnScaleBiasMeanVarDesc

Input. Shared tensor descriptor for the following six tensors: bnScaleData, bnBiasData, dBnScaleData, dBnBiasData, savedMean, and savedInvVariance. This is the shared tensor descriptor desc for the secondary tensor that was derived by <u>cudnnDeriveBNTensorDescriptor()</u>. The dimensions for this tensor descriptor are dependent on normalization mode. Note that the data type of this tensor descriptor must be float for FP16 and FP32 input tensors, and double for FP64 input tensors.

activationDesc

Input. Descriptor for the activation operation. When the bnops input is set to either CUDNN_BATCHNORM_OPS_BN_ACTIVATION or CUDNN_BATCHNORM_OPS_BN_ADD_ACTIVATION then this activation is used, otherwise the user may pass NULL.

*sizeInBytes

Output. Amount of GPU memory required for the workspace, as determined by this function, to be able to execute the <code>cudnnGetBatchNormalizationForwardTrainingExWorkspaceSize()</code> function with the specified <code>bnOps</code> input setting.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions are met:

- Number of xDesc, yDesc or dxDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported).
- ▶ dBnScaleBiasDesc dimensions not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for spatial, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for per-activation mode.
- Dimensions or data types mismatch for xDesc, yDesc.

4.1.10. cudnnGetBatchNormalizationTrainingExReserveS

This function returns the amount of reserve GPU memory workspace the user should allocate for the batch normalization operation, for the specified <code>bnOps</code> input setting. In contrast to the <code>workspace</code>, the reserved space should be preserved between the forward and backward calls, and the data should not be altered.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Input. Mode of operation (spatial or per-activation). For more information, refer to cudnnBatchNormMode t.

bn0ps

Input. Mode of operation for the fast NHWC kernel. For more information, refer to <u>cudnnBatchNormOps_t</u>. This input can be used to set this function to perform either only the batch normalization, or batch normalization followed by activation, or batch normalization followed by element-wise addition and then activation.

xDesc

Tensor descriptors for the layer's \times data. For more information, refer to $\underline{\text{cudnnTensorDescriptor_t}}$.

activationDesc

Input. Descriptor for the activation operation. When the bnops input is set to either CUDNN_BATCHNORM_OPS_BN_ACTIVATION or CUDNN_BATCHNORM_OPS_BN_ADD_ACTIVATION then this activation is used, otherwise user may pass NULL.

*sizeInBytes

Output. Amount of GPU memory reserved.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

```
CUDNN STATUS NOT SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions are met:

The xDesc tensor descriptor dimension is not within the [4,5] range (only 4D and 5D tensors are supported).

4.1.11. cudnnGetNormalizationBackwardWorkspaceSize()

```
cudnnStatus t
cudnnGetNormalizationBackwardWorkspaceSize(cudnnHandle t handle,
                                           cudnnNormMode_t mode,
                                           cudnnNormOps_t normOps,
                                           cudnnNormAlgo t algo,
                                           const cudnnTensorDescriptor t xDesc,
                                           const cudnnTensorDescriptor t yDesc,
                                           const cudnnTensorDescriptor t dyDesc,
                                        const cudnnTensorDescriptor t dzDesc,
                                           const cudnnTensorDescriptor t dxDesc,
                                           const cudnnTensorDescriptor t
 dNormScaleBiasDesc,
                                        const cudnnActivationDescriptor t
 activationDesc,
                                           const cudnnTensorDescriptor t
 normMeanVarDesc,
                                           size t *sizeInBytes,
                                           int groupCnt);
```

This function returns the amount of GPU memory workspace the user should allocate to be able to call <u>cudnnNormalizationBackward()</u> function for the specified <u>normOps</u> and <u>algo</u> input setting. The workspace allocated will then be passed to the function cudnnNormalizationBackward().

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Input. Mode of operation (per-channel or per-activation). For more information, refer to cudnnNormMode_t.

normOps

Input. Mode of post-operative. Currently <code>cudnn_norm_ops_norm_activation</code> and <code>cudnn_norm_ops_norm_add_activation</code> are only supported in the NHWC layout. For more information, refer to <code>cudnnNormOps_t</code>. This input can be used to set this function to perform either only the normalization, or normalization followed by activation, or normalization followed by element-wise addition and then activation.

algo

Input. Algorithm to be performed. For more information, refer to cudnnNormAlgo_t.

xDesc, yDesc, dyDesc, dzDesc, dxDesc

Tensor descriptors and pointers in the device memory for the layer's x data, back propagated differential $\mathrm{d}y$ (inputs), the optional y input data, the optional $\mathrm{d}z$ output, and the $\mathrm{d}x$ output, which is the resulting differential with respect to x. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

dNormScaleBiasDesc

Input. Shared tensor descriptor for the following four tensors: normScaleData, normBiasData, dNormScaleData, dNormBiasData. The dimensions for this tensor descriptor are dependent on normalization mode. Note that the data type of this tensor descriptor must be float for FP16 and FP32 input tensors, and double for FP64 input tensors.

activationDesc

Input. Descriptor for the activation operation. When the normops input is set to either CUDNN_NORM_OPS_NORM_ACTIVATION or CUDNN_NORM_OPS_NORM_ADD_ACTIVATION, then this activation is used, otherwise the user may pass NULL.

normMeanVarDesc

Input. Shared tensor descriptor for the following tensors: savedMean and savedInvVariance. The dimensions for this tensor descriptor are dependent on normalization mode. Note that the data type of this tensor descriptor must be float for FP16 and FP32 input tensors, and double for FP64 input tensors.

*sizeInBytes

Output. Amount of GPU memory required for the workspace, as determined by this function, to be able to execute the cudnnGetNormalizationForwardTrainingWorkspaceSize() function with the specified normops input setting.

groutCnt

Input. Only support 1 for now.

Returns

CUDNN_STATUS_SUCCESS

The computation was performed successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- Number of xDesc, yDesc or dxDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported).
- dNormScaleBiasDesc dimensions not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for per-channel, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for per-activation mode.
- ▶ Dimensions or data types mismatch for any pair of xDesc, dyDesc, dxDesc.

4.1.12. cudnnGetNormalizationForwardTrainingWorkspac

```
cudnnGetNormalizationForwardTrainingWorkspaceSize(cudnnHandle t handle,
                                                      cudnnNormMode_t mode,
                                                     cudnnNormOps_t normOps,
cudnnNormAlgo_t algo,
                                                  const cudnnTensorDescriptor t xDesc,
                                                     const cudnnTensorDescriptor t
 zDesc.
                                                     const cudnnTensorDescriptor t
 yDesc,
                                                  const cudnnTensorDescriptor t
 normScaleBiasDesc,
                                                     const cudnnActivationDescriptor t
 activationDesc,
                                                     const cudnnTensorDescriptor t
 normMeanVarDesc,
                                                      size t *sizeInBytes,
                                                      int groupCnt);
```

This function returns the amount of GPU memory workspace the user should allocate to be able to call $\underline{\text{cudnnNormalizationForwardTraining()}}$ function for the specified $\underline{\text{normOps}}$ and $\underline{\text{algo}}$ input setting. The workspace allocated should then be passed by the user to the function $\underline{\text{cudnnNormalizationForwardTraining()}}$.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Input. Mode of operation (per-channel or per-activation). For more information, refer to cudnnNormMode_t.

normOps

Input. Mode of post-operative. Currently <code>cudnn_norm_ops_norm_activation</code> and <code>cudnn_norm_ops_norm_add_activation</code> are only supported in the NHWC layout. For more information, refer to <code>cudnnNormOps_t</code>. This input can be used to set this function to perform either only the normalization, or normalization followed by activation, or normalization followed by element-wise addition and then activation.

algo

Input. Algorithm to be performed. For more information, refer to cudnnNormAlgo_t.

xDesc, zDesc, yDesc

Tensor descriptors and pointers in the device memory for the layer's x data, the optional z input data, and the y output. zDesc is only needed when normOps is $CUDNN_NORM_OPS_NORM_ADD_ACTIVATION$, otherwise the user may pass NULL. For more information, refer to $cudnnTensorDescriptor_t$.

normScaleBiasDesc

Input. Shared tensor descriptor for the following tensors: normScaleData and normBiasData. The dimensions for this tensor descriptor are dependent on normalization mode. Note that the data type of this tensor descriptor must be float for FP16 and FP32 input tensors, and double for FP64 input tensors.

activationDesc

Input. Descriptor for the activation operation. When the <code>normOps</code> input is set to either <code>cudnn_norm_ops_norm_activation</code> or <code>cudnn_norm_ops_norm_add_activation</code>, then this activation is used, otherwise the user may pass <code>null</code>.

normMeanVarDesc

Input. Shared tensor descriptor for the following tensors: savedMean and savedInvVariance. The dimensions for this tensor descriptor are dependent on normalization mode. Note that the data type of this tensor descriptor must be float for FP16 and FP32 input tensors, and double for FP64 input tensors.

*sizeInBytes

Output. Amount of GPU memory required for the workspace, as determined by this function, to be able to execute the

<u>cudnnGetNormalizationForwardTrainingWorkspaceSize()</u> function with the specified normops input setting.

groutCnt

Input. Only support 1 for now.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

```
CUDNN STATUS NOT SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN STATUS BAD PARAM
```

At least one of the following conditions are met:

- Number of xDesc, yDesc or zDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported).
- normScaleBiasDesc dimensions not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for per-channel, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for per-activation mode.
- Dimensions or data types mismatch for xDesc, yDesc.

4.1.13. cudnnGetNormalizationTrainingReserveSpaceSiz

This function returns the amount of reserve GPU memory workspace the user should allocate for the normalization operation, for the specified normops input setting. In contrast to the workspace, the reserved space should be preserved between the forward and backward calls, and the data should not be altered.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle t.

mode

Input. Mode of operation (per-channel or per-activation). For more information, refer to <u>cudnnNormMode_t</u>.

normOps

Input. Mode of post-operative. Currently <code>cudnn_norm_ops_norm_activation</code> and <code>cudnn_norm_ops_norm_add_activation</code> are only supported in the NHWC layout. For more information, refer to <code>cudnnNormOps_t</code>. This input can be used to set this function to perform either only the normalization, or normalization followed by activation, or normalization followed by element-wise addition and then activation.

algo

Input. Algorithm to be performed. For more information, refer to <u>cudnnNormAlgo_t</u>.

xDesc

Tensor descriptors for the layer's \times data. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

activationDesc

Input. Descriptor for the activation operation. When the normops input is set to either CUDNN_NORM_OPS_NORM_ACTIVATION or CUDNN_NORM_OPS_NORM_ADD_ACTIVATION then this activation is used, otherwise the user may pass NULL.

*sizeInBytes

Output. Amount of GPU memory reserved.

groutCnt

Input. Only support 1 for now.

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

```
CUDNN STATUS BAD PARAM
```

At least one of the following conditions are met:

The xDesc tensor descriptor dimension is not within the [4,5] range (only 4D and 5D tensors are supported).

4.1.14. cudnnLRNCrossChannelBackward()

This function performs the backward LRN layer computation.



Note: Supported formats are: positive-strided, NCHW and NHWC for 4D x and y, and only NCDHW DHW-packed for 5D (for both x and y). Only non-overlapping 4D and 5D tensors are supported. NCHW layout is preferred for performance.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

normDesc

Input. Handle to a previously initialized LRN parameter descriptor.

lrnMode

Input. LRN layer mode of operation. Currently, only CUDNN_LRN_CROSS_CHANNEL_DIM1 is implemented. Normalization is performed along the tensor's dimA[1].

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the layer output value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

yDesc, y

Input. Tensor descriptor and pointer in device memory for the layer's y data.

dyDesc, dy

Input. Tensor descriptor and pointer in device memory for the layer's input cumulative loss differential data dy (including error backpropagation).

xDesc, x

Input. Tensor descriptor and pointer in device memory for the layer's \times data. Note that these values are not modified during backpropagation.

dxDesc, dx

Output. Tensor descriptor and pointer in device memory for the layer's resulting cumulative loss differential data dx (including error backpropagation).

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- One of the tensor pointers x, y is NULL.
- Number of input tensor dimensions is 2 or less.
- LRN descriptor parameters are outside of their valid ranges.
- One of the tensor parameters is 5D but is not in NCDHW DHW-packed format.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

- Any of the input tensor datatypes is not the same as any of the output tensor datatype.
- Any pairwise tensor dimensions mismatch for x, y, dx, dy.
- Any tensor parameters strides are negative.

4.1.15. cudnnNormalizationBackward()

```
cudnnStatus t
cudnnNormalizationBackward(cudnnHandle t handle,
                           cudnnNormMode t mode,
                           cudnnNormOps t normOps,
                           cudnnNormAlgo t algo,
                           const void *alphaDataDiff,
                        const void *betaDataDiff,
                           const void *alphaParamDiff,
                           const void *betaParamDiff,
                           const cudnnTensorDescriptor t xDesc,
                           const void *xData,
                           const cudnnTensorDescriptor t yDesc,
                           const void *yData,
                           const cudnnTensorDescriptor t dyDesc,
                           const void *dyData,
                        const cudnnTensorDescriptor t dzDesc,
                           void *dzData,
                           const cudnnTensorDescriptor t dxDesc,
                           void *dxData,
                           const cudnnTensorDescriptor t dNormScaleBiasDesc,
                           const void *normScaleData,
                           const void *normBiasData,
                           void *dNormScaleData,
                           void *dNormBiasData,
                           double epsilon,
                           const cudnnTensorDescriptor t normMeanVarDesc,
                           const void *savedMean,
                           const void *savedInvVariance,
                           cudnnActivationDescriptor t activationDesc,
                           void *workSpace,
                           size t workSpaceSizeInBytes,
                           void *reserveSpace,
                           size t reserveSpaceSizeInBytes,
                        int groupCnt)
```

This function performs backward normalization layer computation that is specified by mode. Per-channel normalization layer is based on the paper Batch Normalization:

Accelerating Deep Network Training by Reducing Internal Covariate Shift, S. loffe, C. Szegedy, 2015.



Note: Only 4D and 5D tensors are supported.

The <code>epsilon</code> value has to be the same during training, backpropagation, and inference. This workspace is not required to be clean. Moreover, the workspace does not have to remain unchanged between the forward and backward pass, as it is not used for passing any information.

This function can accept a *workspace pointer to the GPU workspace, and workSpaceSizeInBytes, the size of the workspace, from the user.

The normops input can be used to set this function to perform either only the normalization, or normalization followed by activation, or normalization followed by element-wise addition and then activation.

When the tensor layout is NCHW, higher performance can be obtained when HW-packed tensors are used for x, dy, dx.

Higher performance for <code>CUDNN_NORM_PER_CHANNEL</code> mode can be obtained when the following conditions are true:

- ▶ All tensors, namely, x, y, dz, dy, and dx must be NHWC-fully packed, and must be of the type CUDNN DATA HALF.
- ▶ The tensor C dimension should be a multiple of 4.
- ▶ The input parameter mode must be set to CUDNN_NORM_PER_CHANNEL.
- ▶ The input parameter algo must be set to CUDNN NORM ALGO PERSIST.
- ▶ Workspace is not NULL.
- workSpaceSizeInBytes is equal to or larger than the amount required by cudnnGetNormalizationBackwardWorkspaceSize().
- reserveSpaceSizeInBytes is equal to or larger than the amount required by <u>cudnnGetNormalizationTrainingReserveSpaceSize()</u>.
- ► The content in reserveSpace stored by <u>cudnnNormalizationForwardTraining()</u> must be preserved.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle_t.

mode

Input. Mode of operation (per-channel or per-activation). For more information, refer to cudnnNormMode t.

normOps

Input. Mode of post-operative. Currently CUDNN_NORM_OPS_NORM_ACTIVATION and CUDNN NORM OPS NORM ADD ACTIVATION are only supported in the NHWC layout.

For more information, refer to <u>cudnnNormOps_t</u>. This input can be used to set this function to perform either only the normalization, or normalization followed by activation, or normalization followed by element-wise addition and then activation.

algo

Input. Algorithm to be performed. For more information, refer to <u>cudnnNormAlgo_t</u>.

*alphaDataDiff, *betaDataDiff

Inputs. Pointers to scaling factors (in host memory) used to blend the gradient output dx with a prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to Scaling Parameters in the cuDNN Developer Guide.

*alphaParamDiff, *betaParamDiff

Inputs. Pointers to scaling factors (in host memory) used to blend the gradient outputs dNormScaleData and dNormBiasData with prior values in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc, *xData, yDesc, *yData, dyDesc, *dyData

Inputs. Tensor descriptors and pointers in the device memory for the layer's x data, backpropagated gradient input dy, the original forward output y data. yDesc and yData are not needed if normOps is set to CUDNN_NORM_OPS_NORM, users may pass NULL. For more information, refer to <u>cudnnTensorDescriptor</u> t.

dzDesc, *dzData, dxDesc, *dxData

Outputs. Tensor descriptors and pointers in the device memory for the computed gradient output dz and dx. dzDesc and *dzData is not needed when normOps is CUDNN_NORM_OPS_NORM or CUDNN_NORM_OPS_NORM_ACTIVATION, users may pass NULL. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

dNormScaleBiasDesc

Input. Shared tensor descriptor for the following six tensors: normScaleData, normBiasData, dNormScaleData, and dNormBiasData. The dimensions for this tensor descriptor are dependent on normalization mode.



Note: The data type of this tensor descriptor must be float for FP16 and FP32 input tensors and double for FP64 input tensors.

For more information, refer to <u>cudnnTensorDescriptor</u> <u>t</u>.

*normScaleData

Input. Pointer in the device memory for the normalization scale parameter (in the <u>original paper</u> the quantity scale is referred to as gamma).

*normBiasData

Input. Pointers in the device memory for the normalization bias parameter (in the <u>original paper</u> bias is referred to as beta). This parameter is used only when activation should be performed.

*dNormScaleData, dNormBiasData

Inputs. Pointers in the device memory for the gradients of normScaleData and normBiasData, respectively.

epsilon

Input. Epsilon value used in normalization formula. Its value should be equal to or greater than zero. The same epsilon value should be used in forward and backward functions.

normMeanVarDesc

Input. Shared tensor descriptor for the following tensors: savedMean and savedInvVariance. The dimensions for this tensor descriptor are dependent on normalization mode.



Note: The data type of this tensor descriptor must be float for FP16 and FP32 input tensors and double for FP64 input tensors.

For more information, refer to <u>cudnnTensorDescriptor_t</u>.

*savedMean. *savedInvVariance

Inputs. Optional cache parameters containing saved intermediate results computed during the forward pass. For this to work correctly, the layer's x and normScaleData, normBiasData data has to remain unchanged until this backward function is called. Note that both these parameters can be NULL but only at the same time. It is recommended to use this cache since the memory overhead is relatively small.

activationDesc

Input. Descriptor for the activation operation. When the normops input is set to either CUDNN_NORM_OPS_NORM_ACTIVATION or CUDNN_NORM_OPS_NORM_ADD_ACTIVATION then this activation is used, otherwise the user may pass NULL.

workspace

Input. Pointer to the GPU workspace.

workSpaceSizeInBytes

Input. The size of the workspace. It must be large enough to trigger the fast NHWC semi-persistent kernel by this function.

*reserveSpace

Input. Pointer to the GPU workspace for the reserveSpace.

reserveSpaceSizeInBytes

Input. The size of the reserveSpace. It must be equal or larger than the amount required by <u>cudnnGetNormalizationTrainingReserveSpaceSize()</u>.

groutCnt

Input. Only support 1 for now.

Returns

```
CUDNN STATUS SUCCESS
```

The computation was performed successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN STATUS BAD PARAM
```

At least one of the following conditions are met:

- ► Any of the pointers alphaDataDiff, betaDataDiff, alphaParamDiff, betaParamDiff, xData, dyData, dxData, normScaleData, dNormScaleData, and dNormBiasData is NULL.
- ► The number of xDesc or yDesc or dxDesc tensor descriptor dimensions is not within the range of [4,5] (only 4D and 5D tensors are supported).
- dNormScaleBiasDesc dimensions not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for per-channel, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for per-activation mode.
- **Exactly one of** savedMean, savedInvVariance pointers is NULL.
- epsilon value is less than zero.
- ▶ Dimensions or data types mismatch for any pair of xDesc, dyDesc, dxDesc, dNormScaleBiasDesc, and normMeanVarDesc.

4.1.16. cudnnNormalizationForwardTraining()

```
cudnnStatus t
cudnnNormalizationForwardTraining(cudnnHandle t handle,
                                   cudnnNormMode t mode,
                                  cudnnNormOps t normOps,
                                  cudnnNormAlgo t algo,
                               const void *alpha,
                               const void *beta,
                               const cudnnTensorDescriptor t xDesc,
                               const void *xData,
                               const cudnnTensorDescriptor t normScaleBiasDesc,
                               const void *normScale,
                               const void *normBias,
                               double exponentialAverageFactor,
                               const cudnnTensorDescriptor t normMeanVarDesc,
                               void *resultRunningMean,
                               void *resultRunningVariance,
                                  double epsilon,
                               void *resultSaveMean,
```

This function performs the forward normalization layer computation for the training phase. Depending on mode, different normalization operations will be performed. Perchannel layer is based on the paper <u>Batch Normalization</u>: <u>Accelerating Deep Network Training by Reducing Internal Covariate Shift, S. loffe, C. Szegedy, 2015</u>.



Note:

- Only 4D and 5D tensors are supported.
- The epsilon value has to be the same during training, back propagation, and inference.
- For the inference phase, refer to <u>cudnnNormalizationForwardInference()</u>.
- \blacktriangleright Higher performance can be obtained when HW-packed tensors are used for both x and y.

This API will trigger the new semi-persistent NHWC kernel when the following conditions are true:

- ▶ All tensors, namely, xData, yData must be NHWC-fully packed and must be of the type CUDNN DATA HALF.
- ▶ The tensor C dimension should be a multiple of 4.
- ▶ The input parameter mode must be set to CUDNN NORM PER CHANNEL.
- ▶ The input parameter algo must be set to CUDNN NORM ALGO PERSIST.
- workspace is not NULL.
- workSpaceSizeInBytes is equal to or larger than the amount required by cudnnGetNormalizationForwardTrainingWorkspaceSize().
- reserveSpaceSizeInBytes is equal to or larger than the amount required by cudnnGetNormalizationTrainingReserveSpaceSize().
- ► The content in reserveSpace stored by <u>cudnnNormalizationForwardTraining()</u> must be preserved.

This workspace is not required to be clean. Moreover, the workspace does not have to remain unchanged between the forward and backward pass, as it is not used for passing any information. This extended function can accept a *workspace pointer to the GPU workspace, and workspaceSizeInBytes, the size of the workspace, from the user.

The normops input can be used to set this function to perform either only the normalization, or normalization followed by activation, or normalization followed by element-wise addition and then activation.

Only 4D and 5D tensors are supported. The epsilon value has to be the same during the training, the backpropagation, and the inference.

When the tensor layout is NCHW, higher performance can be obtained when HW-packed tensors are used for xData, yData.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor. For more information, refer to cudnnHandle_t.

mode

Input. Mode of operation (per-channel or per-activation). For more information, refer to cudnnNormMode t.

normOps

Input. Mode of post-operative. Currently <code>cudnn_norm_ops_norm_activation</code> and <code>cudnn_norm_ops_norm_add_activation</code> are only supported in the NHWC layout. For more information, refer to <code>cudnnNormOps_t</code>. This input can be used to set this function to perform either only the normalization, or normalization followed by activation, or normalization followed by element-wise addition and then activation.

algo

Input. Algorithm to be performed. For more information, refer to cudnnNormAlgo_t.

*alpha, *beta

Inputs. Pointers to scaling factors (in host memory) used to blend the layer output value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to Scaling Parameters in the cuDNN Developer Guide.

xDesc, yDesc

Input. Handles to the previously initialized tensor descriptors.

*xData

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc, for the layer's x input data.

*yData

Output. Data pointer to GPU memory associated with the tensor descriptor yDesc, for the y output of the normalization layer.

zDesc, *zData

Input. Tensor descriptors and pointers in device memory for residual addition to the result of the normalization operation, prior to the activation. zDesc and *zData are optional and are only used when normops is $CUDNN_NORM_OPS_NORM_ADD_ACTIVATION$, otherwise the user may pass NULL. When in use, z should have exactly the same

dimension as xData and the final output yData. For more information, refer to cudnnTensorDescriptor_t.

normScaleBiasDesc, normScale, normBias

Inputs. Tensor descriptors and pointers in device memory for the normalization scale and bias parameters (in the <u>original paper</u> bias is referred to as beta and scale as gamma). The dimensions for the tensor descriptor are dependent on the normalization mode.

exponentialAverageFactor

Input. Factor used in the moving average computation as follows:

```
runningMean = runningMean*(1-factor) + newMean*factor
```

Use a factor=1/(1+n) at N-th call to the function to get Cumulative Moving Average (CMA) behavior such that:

```
CMA[n] = (x[1]+...+x[n])/n
```

This is proved below:

```
Writing
CMA[n+1] = (n*CMA[n]+x[n+1])/(n+1)
= ((n+1)*CMA[n]-CMA[n])/(n+1) + x[n+1]/(n+1)
= CMA[n]*(1-1/(n+1))+x[n+1]*1/(n+1)
= CMA[n]*(1-factor) + x(n+1)*factor
```

normMeanVarDesc

Inputs. Tensor descriptor used for following tensors: resultRunningMean, resultRunningVariance, resultSaveMean, resultSaveInvVariance.

*resultRunningMean, *resultRunningVariance

Inputs/Outputs. Pointers to the running mean and running variance data. Both these pointers can be <code>NULL</code> but only at the same time. The value stored in <code>resultRunningVariance</code> (or passed as an input in inference mode) is the sample variance and is the moving average of <code>variance[x]</code> where the variance is computed either over batch or spatial+batch dimensions depending on the mode. If these pointers are not <code>NULL</code>, the tensors should be initialized to some reasonable values or to <code>O</code>.

epsilon

Input. Epsilon value used in the normalization formula. Its value should be equal to or greater than zero.

*resultSaveMean, *resultSaveInvVariance

Outputs. Optional cache parameters containing saved intermediate results computed during the forward pass. For this to work correctly, the layer's \times and normScale, normBias data has to remain unchanged until this backward function is called. Note that both these parameters can be NULL but only at the same time. It is recommended to use this cache since the memory overhead is relatively small.

activationDesc

Input. The tensor descriptor for the activation operation. When the normops input is set to either CUDNN_NORM_OPS_NORM_ACTIVATION or CUDNN_NORM_OPS_NORM_ADD_ACTIVATION then this activation is used, otherwise the user may pass NULL.

*workspace, workSpaceSizeInBytes

Inputs. *workspace is a pointer to the GPU workspace, and workspaceSizeInBytes is the size of the workspace. When *workspace is not NULL and *workspaceSizeInBytes is large enough, and the tensor layout is NHWC and the data type configuration is supported, then this function will trigger a semi-persistent NHWC kernel for normalization. The workspace is not required to be clean. Also, the workspace does not need to remain unchanged between the forward and backward passes.

*reserveSpace

Input. Pointer to the GPU workspace for the reserveSpace.

reserveSpaceSizeInBytes

Input. The size of the reserveSpace. Must be equal or larger than the amount required by cudnnGetNormalizationTrainingReserveSpaceSize().

groutCnt

Input. Only support 1 for now.

Supported configurations

This function supports the following combinations of data types for various descriptors.

Table 17. Supported configurations

Data Type Configurations	xDesc, yDesc, zDesc	normScaleBiasDesc, normMeanVarDesc
PSEUDO_HALF_CONFIG	CUDNN_DATA_HALF	CUDNN_DATA_FLOAT
FLOAT_CONFIG	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT
DOUBLE_CONFIG	CUDNN_DATA_DOUBLE	CUDNN_DATA_DOUBLE
PSEUDO_BFLOAT16_CONFIG	CUDNN_DATA_BFLOAT16	CUDNN_DATA_FLOAT

Returns

CUDNN STATUS SUCCESS

The computation was performed successfully.

CUDNN_STATUS_NOT_SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ▶ One of the pointers alpha, beta, xData, yData, normScale, and normBias is NULL.
- ► The number of xDesc or yDesc tensor descriptor dimensions is not within the [4,5] range (only 4D and 5D tensors are supported).
- normScaleBiasDesc dimensions are not 1xCx1x1 for 4D and 1xCx1x1x1 for 5D for per-channel mode, and are not 1xCxHxW for 4D and 1xCxDxHxW for 5D for per-activation mode.
- **Exactly one of** resultSaveMean, resultSaveInvVariance pointers are NULL.
- Exactly one of resultRunningMean, resultRunningInvVariance pointers are NULL.
- epsilon value is less than zero.
- ▶ Dimensions or data types mismatch for xDesc, yDesc.

4.1.17. cudnnOpsTrainVersionCheck()

```
cudnnStatus t cudnnOpsTrainVersionCheck(void)
```

This function checks whether the version of the OpsTrain subset of the library is consistent with the other sub-libraries.

Returns

CUDNN_STATUS_SUCCESS

The version is consistent with other sub-libraries.

CUDNN_STATUS_VERSION_MISMATCH

The version of OpsTrain is not consistent with other sub-libraries. Users should check the installation and make sure all sub-component versions are consistent.

4.1.18. cudnnPoolingBackward()

```
cudnnStatus t cudnnPoolingBackward(
   cudnnHandle t
                                       handle,
   const cudnnPoolingDescriptor t
                                       poolingDesc,
   const void
                                       *alpha,
   const cudnnTensorDescriptor t
                                      yDesc,
   const void
                                       *y,
   const cudnnTensorDescriptor t
                                      dyDesc,
                                      *dy,
   const void
   const cudnnTensorDescriptor t
                                      xDesc,
   const void
                                      *xData,
                                      *beta,
   const void
   const cudnnTensorDescriptor_t
                                       dxDesc,
                                       *dx)
```

This function computes the gradient of a pooling operation.

As of cuDNN version 6.0, a deterministic algorithm is implemented for max backwards pooling. This algorithm can be chosen via the pooling mode enum of poolingDesc. The

deterministic algorithm has been measured to be up to 50% slower than the legacy max backwards pooling algorithm, or up to 20% faster, depending upon the use case.



Note: Tensor vectorization is not supported for any tensor descriptor arguments in this function. Best performance is expected when using ${\tt HW-packed}$ tensors. Only 2 and 3 spatial dimensions are supported.

Parameters

handle

Input. Handle to a previously created cuDNN context.

poolingDesc

Input. Handle to the previously initialized pooling descriptor.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

yDesc

Input. Handle to the previously initialized input tensor descriptor. Can be \mathtt{NULL} for avg pooling.

У

Input. Data pointer to GPU memory associated with the tensor descriptor y Desc. Can be NULL for avg pooling.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor. Must be of type FLOAT, DOUBLE, HALF, or BFLOAT16. For more information, refer to cudnnDataType_t.

dy

Input. Data pointer to GPU memory associated with the tensor descriptor dyData.

xDesc

Input. Handle to the previously initialized output tensor descriptor. Can be \mathtt{NULL} for avg pooling.

x

Input. Data pointer to GPU memory associated with the output tensor descriptor xDesc. Can be NULL for avg pooling.

dxDesc

Input. Handle to the previously initialized output differential tensor descriptor. Must be of type FLOAT, DOUBLE, HALF, or BFLOAT16. For more information, refer to cudnnDataType t.

dx

Output. Data pointer to GPU memory associated with the output tensor descriptor

Returns

CUDNN_STATUS_SUCCESS

The function launched successfully.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ► The dimensions n, c, h, w of the yDesc and dyDesc tensors differ.
- ► The strides nStride, cStride, hStride, wStride of the yDesc and dyDesc tensors differ.
- ► The dimensions n, c, h, w of the dxDesc and dxDesc tensors differ.
- ► The strides nStride, cStride, hStride, wStride of the xDesc and dxDesc tensors differ.
- The datatype of the four tensors differ.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

▶ The wStride of input tensor or output tensor is not 1.

CUDNN_STATUS_EXECUTION_FAILED

The function failed to launch on the GPU.

4.1.19. cudnnSoftmaxBackward()

```
cudnnStatus t cudnnSoftmaxBackward(
   cudnnHandle t
                                    handle,
   cudnnSoftmaxAlgorithm t
                                   algorithm,
   cudnnSoftmaxMode t
                                   mode,
                                  *alpha,
   const void
   const cudnnTensorDescriptor t
                                   yDesc,
   const void
                                   *yData,
   const cudnnTensorDescriptor t
                                    dyDesc,
                                   *dy,
   const void
                                  *beta,
   const cudnnTensorDescriptor t
                                   dxDesc,
                                   *dx)
```

This routine computes the gradient of the softmax function.



Note:

- ▶ In-place operation is allowed for this routine; meaning, dy and dx pointers may be equal. However, this requires dyDesc and dxDesc descriptors to be identical (particularly, the strides of the input and output must match for in-place operation to be allowed).
- All tensor formats are supported for all modes and algorithms with 4 and 5D tensors. Performance is expected to be highest with NCHW fully-packed tensors. For more than 5 dimensions tensors must be packed in their spatial dimensions.

Data Types

This function supports the following data types:

- ► CUDNN DATA FLOAT
- ► CUDNN DATA DOUBLE
- ► CUDNN DATA HALF
- ► CUDNN DATA BFLOAT16

Parameters

handle

Input. Handle to a previously created cuDNN context.

algorithm

Input. Enumerant to specify the softmax algorithm.

mode

Input. Enumerant to specify the softmax mode.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*result + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

yDesc

Input. Handle to the previously initialized input tensor descriptor.

У

Input. Data pointer to GPU memory associated with the tensor descriptor yDesc.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

dy

Input. Data pointer to GPU memory associated with the tensor descriptor dyData.

dxDesc

Input. Handle to the previously initialized output differential tensor descriptor.

dx

Output. Data pointer to GPU memory associated with the output tensor descriptor dxDesc.

Returns

CUDNN_STATUS_SUCCESS

The function launched successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ► The dimensions n, c, h, w of the yDesc, dyDesc and dxDesc tensors differ.
- ► The strides nStride, cStride, hStride, wStride of the yDesc and dyDesc tensors differ.
- ▶ The datatype of the three tensors differs.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

4.1.20. cudnnSpatialTfGridGeneratorBackward()

This function computes the gradient of a grid generation operation.



Note: Only 2d transformation is supported.

Parameters

handle

Input. Handle to a previously created cuDNN context.

stDesc

Input. Previously created spatial transformer descriptor object.

dgrid

Input. Data pointer to GPU memory contains the input differential data.

dtheta

Output. Data pointer to GPU memory contains the output differential data.

Returns

```
CUDNN_STATUS_SUCCESS
```

The call was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- handle is NULL.
- One of the parameters dgrid or dtheta is NULL.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

► The dimension of the transformed tensor specified in stDesc > 4.

```
CUDNN STATUS EXECUTION FAILED
```

The function failed to launch on the GPU.

4.1.21. cudnnSpatialTfSamplerBackward()

```
cudnnStatus t cudnnSpatialTfSamplerBackward(
    cudnnHandle t
                                                 handle,
   const cudnnSpatialTransformerDescriptor_t stDesc,
const void *alpha,
   const void
   const cudnnTensorDescriptor t
                                                 xDesc,
   const void
                                                *x,
   const void
                                                *beta,
    const cudnnTensorDescriptor t
                                                 dxDesc,
   void
                                                *dx,
                                                *alphaDgrid,
   const void
    const cudnnTensorDescriptor_t
                                                 dyDesc,
                                                 *dy,
    const void
    const void
                                                 *grid,
    const void
                                                 *betaDgrid,
    void
                                                *dgrid)
```

This function computes the gradient of a sampling operation.



Note: Only 2d transformation is supported.

Parameters

handle

Input. Handle to a previously created cuDNN context.

stDesc

Input. Previously created spatial transformer descriptor object.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the source value with prior value in the destination tensor as follows:

```
dstValue = alpha[0]*srcValue + beta[0]*priorDstValue
```

For more information, refer to Scaling Parameters in the cuDNN Developer Guide.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc.

dxDesc

Input. Handle to the previously initialized output differential tensor descriptor.

dx

 $\it Output$. Data pointer to GPU memory associated with the output tensor descriptor dxDesc.

alphaDgrid, betaDgrid

Input. Pointers to scaling factors (in host memory) used to blend the gradient outputs dgrid with prior value in the destination pointer as follows:

```
dstValue = alpha[0]*srcValue + beta[0]*priorDstValue
```

For more information, refer to Scaling Parameters in the cuDNN Developer Guide.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

dу

Input. Data pointer to GPU memory associated with the tensor descriptor dyDesc.

grid

Input. A grid of coordinates generated by cudnnSpatialTfGridGeneratorForward().

dgrid

Output. Data pointer to GPU memory contains the output differential data.

Returns

CUDNN_STATUS_SUCCESS

The call was successful.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- handle is NULL.
- ► One of the parameters x, dx, y, dy, grid, dgrid is NULL.
- ▶ The dimension of dy differs from those specified in stDesc.

CUDNN_STATUS_NOT_SUPPORTED

The function does not support the provided configuration. See the following for some examples of non-supported configurations:

► The dimension of transformed tensor > 4.

CUDNN_STATUS_EXECUTION_FAILED

The function failed to launch on the GPU.

Chapter 5. cudnn_cnn_infer.so Library

For the backend data and descriptor types, refer to the <u>cuDNN Backend API</u> section.

5.1. Data Type References

5.1.1. Pointer To Opaque Struct Types

5.1.1.1. cudnnConvolutionDescriptor_t

cudnnConvolutionDescriptor_t is a pointer to an opaque structure holding the description of a convolution operation. cudnnCreateConvolutionDescriptor() is used to create one instance, and cudnnSetConvolutionNdDescriptor() or cudnnSetConvolution2dDescriptor() must be used to initialize this instance.

5.1.2. Struct Types

5.1.2.1. cudnnConvolutionBwdDataAlgoPerf_t

cudnnConvolutionBwdDataAlgoPerf_t is a structure containing performance results returned by <u>cudnnFindConvolutionBackwardDataAlgorithm()</u> or heuristic results returned by <u>cudnnGetConvolutionBackwardDataAlgorithm</u> v7().

Data Members

cudnnConvolutionBwdDataAlgo t algo

The algorithm runs to obtain the associated performance metrics.

cudnnStatus t status

If any error occurs during the workspace allocation or timing of cudnnConvolutionBackwardData(), this status will represent that error. Otherwise, this status will be the return status of cudnnConvolutionBackwardData().

- CUDNN_STATUS_ALLOC_FAILED if any error occurred during workspace allocation or if the provided workspace is insufficient.
- CUDNN_STATUS_INTERNAL_ERROR if any error occurred during timing calculations or workspace deallocation.
- Otherwise, this will be the return status of cudnnConvolutionBackwardData().

float time

The execution time of <u>cudnnConvolutionBackwardData()</u> (in milliseconds).

size t memory

The workspace size (in bytes).

cudnnDeterminism t determinism

The determinism of the algorithm.

cudnnMathType t mathType

The math type provided to the algorithm.

int reserved[3]

Reserved space for future properties.

5.1.2.2. cudnnConvolutionFwdAlgoPerf_t

 ${\tt cudnnConvolutionFwdAlgoPerf_t} \ is \ a \ structure \ containing \ performance \ results \\ returned \ by \ \underline{\tt cudnnFindConvolutionForwardAlgorithm()} \ or \ heuristic \ results \ returned \ by \ \underline{\tt cudnnGetConvolutionForwardAlgorithm_v7()}.$

Data Members

cudnnConvolutionFwdAlgo_t algo

The algorithm runs to obtain the associated performance metrics.

cudnnStatus t status

If any error occurs during the workspace allocation or timing of <u>cudnnConvolutionForward()</u>, this status will represent that error. Otherwise, this status will be the return status of <u>cudnnConvolutionForward()</u>.

- CUDNN_STATUS_ALLOC_FAILED if any error occurred during workspace allocation or if the provided workspace is insufficient.
- CUDNN_STATUS_INTERNAL_ERROR if any error occurred during timing calculations or workspace deallocation.
- Otherwise, this will be the return status of <u>cudnnConvolutionForward()</u>.

float time

The execution time of cudnnConvolutionForward() (in milliseconds).

size t memory

The workspace size (in bytes).

cudnnDeterminism_t determinism

The determinism of the algorithm.

cudnnMathType t mathType

The math type provided to the algorithm.

int reserved[3]

Reserved space for future properties.

5.1.3. Enumeration Types

5.1.3.1. cudnnConvolutionBwdDataAlgo_t

cudnnConvolutionBwdDataAlgo_t is an enumerated type that exposes the different algorithms available to execute the backward data convolution operation.

Values

CUDNN CONVOLUTION BWD DATA ALGO 0

This algorithm expresses the convolution as a sum of matrix products without actually explicitly forming the matrix that holds the input tensor data. The sum is done using the atomic add operation, thus the results are non-deterministic.

CUDNN CONVOLUTION BWD DATA ALGO 1

This algorithm expresses the convolution as a matrix product without actually explicitly forming the matrix that holds the input tensor data. The results are deterministic.

CUDNN_CONVOLUTION_BWD_DATA_ALGO_FFT

This algorithm uses a Fast-Fourier Transform approach to compute the convolution. A significant memory workspace is needed to store intermediate results. The results are deterministic.

CUDNN CONVOLUTION BWD DATA ALGO FFT TILING

This algorithm uses the Fast-Fourier Transform approach but splits the inputs into tiles. A significant memory workspace is needed to store intermediate results but less than <code>CUDNN_CONVOLUTION_BWD_DATA_ALGO_FFT</code> for large size images. The results are deterministic.

CUDNN CONVOLUTION BWD DATA ALGO WINOGRAD

This algorithm uses the Winograd Transform approach to compute the convolution. A reasonably sized workspace is needed to store intermediate results. The results are deterministic.

CUDNN CONVOLUTION BWD DATA ALGO WINOGRAD NONFUSED

This algorithm uses the Winograd Transform approach to compute the convolution. A significant workspace may be needed to store intermediate results. The results are deterministic.

5.1.3.2. cudnnConvolutionBwdFilterAlgo_t

cudnnConvolutionBwdFilterAlgo_t is an enumerated type that exposes the different algorithms available to execute the backward filter convolution operation.

Values

CUDNN_CONVOLUTION_BWD_FILTER_ALGO_0

This algorithm expresses the convolution as a sum of matrix products without actually explicitly forming the matrix that holds the input tensor data. The sum is done using the atomic add operation, thus the results are non-deterministic.

CUDNN_CONVOLUTION_BWD_FILTER_ALGO_1

This algorithm expresses the convolution as a matrix product without actually explicitly forming the matrix that holds the input tensor data. The results are deterministic.

CUDNN_CONVOLUTION_BWD_FILTER_ALGO_FFT

This algorithm uses the Fast-Fourier Transform approach to compute the convolution. A significant workspace is needed to store intermediate results. The results are deterministic.

CUDNN CONVOLUTION BWD FILTER ALGO 3

This algorithm is similar to CUDNN_CONVOLUTION_BWD_FILTER_ALGO_0 but uses some small workspace to precompute some indices. The results are also non-deterministic.

CUDNN CONVOLUTION BWD FILTER WINOGRAD NONFUSED

This algorithm uses the Winograd Transform approach to compute the convolution. A significant workspace may be needed to store intermediate results. The results are deterministic.

CUDNN CONVOLUTION BWD FILTER ALGO FFT TILING

This algorithm uses the Fast-Fourier Transform approach to compute the convolution but splits the input tensor into tiles. A significant workspace may be needed to store intermediate results. The results are deterministic.

5.1.3.3. cudnnConvolutionFwdAlgo_t

cudnnConvolutionFwdAlgo_t is an enumerated type that exposes the different algorithms available to execute the forward convolution operation.

Values

CUDNN CONVOLUTION FWD ALGO IMPLICIT GEMM

This algorithm expresses the convolution as a matrix product without actually explicitly forming the matrix that holds the input tensor data.

CUDNN CONVOLUTION FWD ALGO IMPLICIT PRECOMP GEMM

This algorithm expresses convolution as a matrix product without actually explicitly forming the matrix that holds the input tensor data, but still needs some memory workspace to precompute some indices in order to facilitate the implicit construction of the matrix that holds the input tensor data.

CUDNN_CONVOLUTION_FWD_ALGO_GEMM

This algorithm expresses the convolution as an explicit matrix product. A significant memory workspace is needed to store the matrix that holds the input tensor data.

CUDNN_CONVOLUTION_FWD_ALGO_DIRECT

This algorithm expresses the convolution as a direct convolution (for example, without implicitly or explicitly doing a matrix multiplication).

CUDNN_CONVOLUTION_FWD_ALGO_FFT

This algorithm uses the Fast-Fourier Transform approach to compute the convolution. A significant memory workspace is needed to store intermediate results.

CUDNN CONVOLUTION FWD ALGO FFT TILING

This algorithm uses the Fast-Fourier Transform approach but splits the inputs into tiles. A significant memory workspace is needed to store intermediate results but less than CUDNN CONVOLUTION FWD ALGO FFT for large size images.

CUDNN CONVOLUTION FWD ALGO WINOGRAD

This algorithm uses the Winograd Transform approach to compute the convolution. A reasonably sized workspace is needed to store intermediate results.

CUDNN CONVOLUTION FWD ALGO WINOGRAD NONFUSED

This algorithm uses the Winograd Transform approach to compute the convolution. A significant workspace may be needed to store intermediate results.

5.1.3.4. cudnnConvolutionMode_t

cudnnConvolutionMode_t is an enumerated type used by cudnnSetConvolution2dDescriptor() to configure a convolution descriptor. The filter used for the convolution can be applied in two different ways, corresponding mathematically to a convolution or to a cross-correlation. (A cross-correlation is equivalent to a convolution with its filter rotated by 180 degrees.)

Values

CUDNN CONVOLUTION

In this mode, a convolution operation will be done when applying the filter to the images.

CUDNN CROSS CORRELATION

In this mode, a cross-correlation operation will be done when applying the filter to the images.

5.1.3.5. cudnnReorderType_t

```
typedef enum {
  CUDNN_DEFAULT_REORDER = 0,
  CUDNN_NO_REORDER = 1,
} cudnnReorderType t;
```

 ${\tt cudnnReorderType_t}$ is an enumerated type to set the convolution reordering type. The reordering type can be set by ${\tt cudnnSetConvolutionReorderType()}$ and its status can be read by ${\tt cudnnGetConvolutionReorderType()}$.

5.2. API Functions

5.2.1. cudnnCnnInferVersionCheck()

```
cudnnStatus_t cudnnCnnInferVersionCheck(void)
```

This function checks whether the version of the CnnInfer subset of the library is consistent with the other sub-libraries.

Returns

CUDNN STATUS SUCCESS

The version is consistent with other sub-libraries.

CUDNN_STATUS_VERSION_MISMATCH

The version of CnnInfer is not consistent with other sub-libraries. Users should check the installation and make sure all sub-component versions are consistent.

5.2.2. cudnnConvolutionBackwardData()

```
cudnnStatus t cudnnConvolutionBackwardData(
   cudnnHandle t
                                       handle,
   const void
                                      *alpha,
   const cudnnFilterDescriptor t
                                       wDesc,
                                      *W,
   const void
   const cudnnTensorDescriptor t
                                      dyDesc,
                                      *dy,
   const void
   const cudnnConvolutionDescriptor_t convDesc,
   cudnnConvolutionBwdDataAlgo_t
                                      algo,
                                      *workSpace,
```

This function computes the convolution data gradient of the tensor dy, where y is the output of the forward convolution in <u>cudnnConvolutionForward()</u>. It uses the specified algo, and returns the results in the output tensor dx. Scaling factors alpha and beta can be used to scale the computed result or accumulate with the current dx.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle_t.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*result + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

wDesc

Input. Handle to a previously initialized filter descriptor. For more information, refer to <u>cudnnFilterDescriptor_t</u>.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

dy

Input. Data pointer to GPU memory associated with the input differential tensor descriptor dyDesc.

convDesc

Input. Previously initialized convolution descriptor. For more information, refer to <u>cudnnConvolutionDescriptor</u> <u>t</u>.

algo

Input. Enumerant that specifies which backward data convolution algorithm should be used to compute the results. For more information, refer to cudnnConvolutionBwdDataAlgo_t.

workSpace

Input. Data pointer to GPU memory to a workspace needed to be able to execute the specified algorithm. If no workspace is needed for a particular algorithm, that pointer can be nil.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workSpace.

dxDesc

Input. Handle to the previously initialized output tensor descriptor.

dx

Input/Output. Data pointer to GPU memory associated with the output tensor descriptor dxDesc that carries the result.

Supported configurations

This function supports the following combinations of data types for wDesc, dyDesc, convDesc, and dxDesc.

Data Type Configurations	wDesc, dyDesc and dxDesc Data Type	convDesc Data Type
TRUE_HALF_CONFIG (only supported on architectures with true FP16 support, meaning, compute capability 5.3 and later)	CUDNN_DATA_HALF	CUDNN_DATA_HALF
PSEUDO_HALF_CONFIG	CUDNN_DATA_HALF	CUDNN_DATA_FLOAT
PSEUDO_BFLOAT16_CONFIG	CUDNN_DATA_BFLOAT16	CUDNN_DATA_FLOAT
FLOAT_CONFIG	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT
DOUBLE_CONFIG	CUDNN_DATA_DOUBLE	CUDNN_DATA_DOUBLE

Supported algorithms



Note: Specifying a separate algorithm can cause changes in performance, support and computation determinism. See the following for a list of algorithm options, and their respective supported parameters and deterministic behavior.

The table below shows the list of the supported 2D and 3D convolutions. The 2D convolutions are described first, followed by the 3D convolutions.

For the following terms, the short-form versions shown in the parentheses are used in the table below, for brevity:

CUDNN CONVOLUTION BWD DATA ALGO 0 (_ALGO_0)

- ► CUDNN_CONVOLUTION_BWD_DATA_ALGO_1 (_ALGO_1)
- ► CUDNN CONVOLUTION BWD DATA ALGO FFT (_FFT)
- ► CUDNN CONVOLUTION BWD DATA ALGO FFT TILING (_FFT_TILING)
- ▶ CUDNN CONVOLUTION BWD DATA ALGO WINOGRAD (_WINOGRAD)
- ▶ CUDNN CONVOLUTION BWD DATA ALGO WINOGRAD NONFUSED (_WINOGRAD_NONFUSED)
- ► CUDNN TENSOR NCHW (_NCHW)
- ► CUDNN TENSOR NHWC (_NHWC)
- ► CUDNN TENSOR NCHW VECT C (_NCHW_VECT_C)

Table 18. For 2D convolutions: wDesc: _NHWC

Filter descriptor wDesc: _NHWC (refer to cudnnTensorFormat_t)						
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important	
_ALGO_0 _ALGO_1		NHWC HWC- packed	NHWC HWC- packed	TRUE_HALF_CON PSEUDO_HALF_CON PSEUDO_BFLOAT FLOAT_CONFIG	ONFIG	

Table 19. For 2D convolutions: wDesc: NCHW

Filter descriptor wDesc: _NCHW.							
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important		
_ALGO_0	No	NCHW CHW- packed	All except _NCHW_VECT_C.	TRUE_HALF_CON PSEUDO_HALF_CON PSEUDO_BFLOAT FLOAT_CONFIG DOUBLE_CONFIG	greater than ONFIG O for all dimensions convDesc		
_ALGO_1	Yes	NCHW CHW- packed	All except _NCHW_VECT_C.	TRUE_HALF_CON	FDdation: greater than		

Filter descript	or wDesc: _NCH	łW.			
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important
FFT	Yes	NCHW CHW-	NCHW HW-	PSEUDO_HALF_CONFIG DOUBLE_CONFIG PSEUDO_HALF_CONFIG	dimensions 16_CONFIG convDesc Group Count Support: Greater than 0
_FFT	res	nchw chw- packed	nchw hw- packed	PSEUDO_HALF_C	all dimensions convDesc Group Count Support: Greater than C dxDesc feature map height + 2 * convDesc zero-padding height must equal 256 or less dxDesc feature map width + 2 * convDesc zero-padding width must equal 256 or less convDesc zero-padding width must equal 256 or less convDesc zero-padding width must equal 256 or less convDesc vertical and horizontal filter stride must equal 1 wDesc filter

Filter descript	or wDesc: _NCH	IW.			
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important
					be greater than convDesc zero-padding height wDesc filter width must be greater than convDesc zero-padding width
_FFT_TILING	Yes	NCHW CHW-packed	NCHW HW-packed	PSEUDO_HALF_CO FLOAT_CONFIG DOUBLE_CONFIG is also supported when the task can be handled by 1D FFT, meaning, one of the filter dimensions, width or height is 1.	obilation: 1 for all dimensions convDesc Group Count Support: Greater than 0 When neither of wDesc filter dimension is 1, the filter width and height must not be larger than 32 When either of wDesc filter dimension is 1, the largest filter dimension is 1, the convDesc filter dimension should not exceed 256 convDesc vertical and horizontal

Filter descriptor wDesc: _NCHW.						
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important	
					filter stride must equal 1 when either the filter width or filter height is 1, otherwise, the stride can be 1 or 2	
					wDesc filter height must be greater than convDesc zero-padding height	
					wDesc filter width must be greater than convDesc zero-padding width	
_WINOGRAD	Yes	NCHW CHW-packed	All except _NCHW_VECT_C.	PSEUDO_HALF_C	oDilation: 1 for all dimensions convDesc Group Count Support: Greater than 0 convDesc vertical and horizontal filter stride must equal 1 wDesc filter height must be 3	

Filter descript	Filter descriptor wDesc: _NCHW.						
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important		
					wDesc filter width must be 3		
_WINOGRAD_NON	F ∀es d	NCHW CHW-packed	All except _NCHW_VECT_C.	TRUE_HALF_CON PSEUDO_HALF_CON PSEUDO_BFLOAT FLOAT_CONFIG	all dimensions ONFIG		

Table 20. For 3D convolutions: wDesc: _NCHW

Filter descript	or wDesc: _NCH	IW.			
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important
_ALGO_0	Yes	NCDHW CDHW- packed	All except _NCDHW_VECT_C	PSEUDO_HALF_COPERING PSEUDO_BFLOAT_CONFIG DOUBLE_CONFIG	greater than 16 CONFIG O for all dimensions
_ALGO_1	Yes	NCDHW CDHW- packed	NCDHW CDHW- packed	TRUE_HALF_CON PSEUDO_BFLOAT PSEUDO_HALF_CONFIGDO FLOAT_CONFIGDO	all dimensions 16_CONFIG CONVDESC ONFIG Group Count
_FFT_TILING	Yes	NCDHW CDHW- packed	NCDHW DHW-packed	PSEUDO_HALF_COFIGEDOUBLE_CONFI	all dimensions convDesc Group Count Support: Greater than C wDesc filter height must equal 16 or less wDesc filter width must equal 16 or less wDesc filter depth must equal 16 or

Filter descript	or wDesc: _NCH	IW.			
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important
					must have all filter strides equal to 1 wDesc filter height must be greater than convDesc zero-padding height wDesc filter width must be greater than convDesc zero-padding width wDesc filter depth must be greater than convDesc zero-padding width

Table 21. For 3D convolutions: wDesc: _NHWC

Filter descriptor wDesc: _NHWC						
Algo Name (3D Convolutions)	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important	
_ALGO_1	Yes	NDHWC DHWC- packed	NDHWC DHWC- packed	TRUE_HALF_CONPIGE TRUE_HALF_CONFIG	Greater ONFIG than O for all	

Filter descriptor wDesc: _NHWC					
Algo Name (3D Convolutions)	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important
					convDesc Group Count Support: Greater than 0

Returns

CUDNN STATUS SUCCESS

The operation was launched successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- At least one of the following is NULL: handle, dyDesc, wDesc, convDesc, dxDesc, dy, w, dx, alpha, beta
- wDesc and dyDesc have a non-matching number of dimensions
- wDesc and dxDesc have a non-matching number of dimensions
- wDesc has fewer than three number of dimensions
- wDesc, dxDesc, and dyDesc have a non-matching data type.
- wDesc and dxDesc have a non-matching number of input feature maps per image (or group in case of grouped convolutions).
- dyDesc spatial sizes do not match with the expected size as determined by cudnnGetConvolutionNdForwardOutputDim

CUDNN STATUS NOT SUPPORTED

At least one of the following conditions are met:

- dyDesc or dxDesc have a negative tensor striding
- dyDesc, wDesc or dxDesc has a number of dimensions that is not 4 or 5
- The chosen algo does not support the parameters provided; see above for an exhaustive list of parameters that support each algo
- dyDesc or wDesc indicate an output channel count that isn't a multiple of group count (if group count has been set in convDesc).

CUDNN_STATUS_MAPPING_ERROR

An error occurs during the texture binding of texture object creation associated with the filter data or the input differential tensor data.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

5.2.3. cudnnConvolutionBiasActivationForward()

```
cudnnStatus t cudnnConvolutionBiasActivationForward(
   cudnnHandle t
                                      handle,
   const void
                                     *alpha1,
   const cudnnTensorDescriptor t
                                      xDesc,
                                      *x,
   const void
   const cudnnFilterDescriptor t
                                      wDesc,
                                     *w,
   const void
   const cudnnConvolutionDescriptor_t convDesc,
   cudnnConvolutionFwdAlgo_t
                                     *workSpace,
   void
   size t
                                      workSpaceSizeInBytes,
                                     *alpha2,
   const void
   const cudnnTensorDescriptor t
                                      zDesc,
   const void
                                      *z,
   const cudnnTensorDescriptor t
                                      biasDesc,
                                     *bias,
   const void
   const cudnnActivationDescriptor t activationDesc,
   const cudnnTensorDescriptor t
                                     yDesc,
```

This function applies a bias and then an activation to the convolutions or cross-correlations of $\underline{\text{cudnnConvolutionForward()}}$, returning results in y. The full computation follows the equation y = act ($\underline{\text{alpha1}} * \underline{\text{conv}}(x) + \underline{\text{alpha2}} * \underline{\text{z}} + \underline{\text{bias}}$).



Note:

- The routine cudnnGetConvolutionNdForwardOutputDim() can be used to determine the proper dimensions of the output tensor descriptor yDesc with respect to xDesc, convDesc, and wDesc.
- ▶ Only the CUDNN_CONVOLUTION_FWD_ALGO_IMPLICIT_PRECOMP_GEMM algo is enabled with CUDNN_ACTIVATION_IDENTITY. In other words, in the <u>cudnnActivationDescriptor_t</u> structure of the input activationDesc, if the mode of the <u>cudnnActivationMode_t</u> field is set to the enum value <u>CUDNN_ACTIVATION_IDENTITY</u>, then the input <u>cudnnConvolutionFwdAlgo_t</u> of this function <u>cudnnConvolutionBiasActivationForward()</u> must be set to the enum value <u>CUDNN_CONVOLUTION_FWD_ALGO_IMPLICIT_PRECOMP_GEMM</u>. For more information, refer to <u>cudnnSetActivationDescriptor()</u>.
- Device pointer z and y may be pointing to the same buffer, however, x cannot point to the same buffer as z or y.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle t.

alpha1, alpha2

Input. Pointers to scaling factors (in host memory) used to blend the computation result of convolution with z and bias as follows:

```
y = act (alpha1 * conv(x) + alpha2 * z + bias)
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc

Input. Handle to a previously initialized tensor descriptor. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc.

wDesc

Input. Handle to a previously initialized filter descriptor. For more information, refer to cudnnFilterDescriptor_t.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

convDesc

Input. Previously initialized convolution descriptor. For more information, refer to <u>cudnnConvolutionDescriptor_t</u>.

algo

Input. Enumerant that specifies which convolution algorithm should be used to compute the results. For more information, refer to cudnnConvolutionFwdAlgo_t.

workSpace

Input. Data pointer to GPU memory to a workspace needed to be able to execute the specified algorithm. If no workspace is needed for a particular algorithm, that pointer can be nil.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workSpace.

zDesc

Input. Handle to a previously initialized tensor descriptor.

z

Input. Data pointer to GPU memory associated with the tensor descriptor zDesc.

biasDesc

Input. Handle to a previously initialized tensor descriptor.

bias

Input. Data pointer to GPU memory associated with the tensor descriptor biasDesc.

activationDesc

Input. Handle to a previously initialized activation descriptor. For more information, refer to <u>cudnnActivationDescriptor_t</u>.

yDesc

Input. Handle to a previously initialized tensor descriptor.

У

Input/Output. Data pointer to GPU memory associated with the tensor descriptor yDesc that carries the result of the convolution.

For the convolution step, this function supports the specific combinations of data types for xDesc, wDesc, convDesc, and yDesc as listed in the documentation of cudnnConvolutionForward(). The following table specifies the supported combinations of data types for x, y, z, bias, and alpha1/alpha2.

Table 22. Supported combinations of data types (x = CUDNN DATA)

x	w	convDesc	y and z	bias	alpha1/ alpha2
X_DOUBLE	X_DOUBLE	X_DOUBLE	X_DOUBLE	X_DOUBLE	X_DOUBLE
X_FLOAT	X_FLOAT	X_FLOAT	X_FLOAT	X_FLOAT	X_FLOAT
X_HALF	X_HALF	X_FLOAT	X_HALF	X_HALF	X_FLOAT
X_BFLOAT16	X_BFLOAT16	X_FLOAT	X_BFLOAT16	X_BFLOAT16	X_FLOAT
X_INT8	X_INT8	X_INT32	X_INT8	X_FLOAT	X_FLOAT
X_INT8	X_INT8	X_INT32	X_FLOAT	X_FLOAT	X_FLOAT
X_INT8x4	X_INT8×4	X_INT32	X_INT8x4	X_FLOAT	X_FLOAT
X_INT8x4	X_INT8x4	X_INT32	X_FLOAT	X_FLOAT	X_FLOAT
X_UINT8	X_INT8	X_INT32	X_INT8	X_FLOAT	X_FLOAT
X_UINT8	X_INT8	X_INT32	X_FLOAT	X_FLOAT	X_FLOAT
X_UINT8x4	X_INT8x4	X_INT32	X_INT8x4	X_FLOAT	X_FLOAT
X_UINT8x4	X_INT8x4	X_INT32	X_FLOAT	X_FLOAT	X_FLOAT
X_INT8x32	X_INT8x32	X_INT32	X_INT8x32	X_FLOAT	X_FLOAT

Returns

In addition to the error values listed by the documentation of <u>cudnnConvolutionForward()</u>, the possible error values returned by this function and their meanings are listed below.

CUDNN STATUS SUCCESS

The operation was launched successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- At least one of the following is NULL: handle, xDesc, wDesc, convDesc, yDesc, zDesc, biasDesc, activationDesc, xData, wData, yData, zData, bias, alpha1, alpha2.
- ► The number of dimensions of xDesc, wDesc, yDesc, zDesc is not equal to the array length of convDesc + 2.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration. Some examples of non-supported configurations are as follows:

- ► The mode of activationDesc is neither CUDNN_ACTIVATION_RELU or CUDNN ACTIVATION IDENTITY.
- ▶ The relunanOpt of activationDesc is not CUDNN NOT PROPAGATE NAN.
- ▶ The second stride of biasDesc is not equal to one.
- ▶ The first dimension of biasDesc is not equal to one.
- ▶ The second dimension of biasDesc and the first dimension of filterDesc are not equal.
- ► The data type of biasDesc does not correspond to the data type of yDesc as listed in the above data types table.
- zDesc and destDesc do not match.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

5.2.4. cudnnConvolutionForward()

```
cudnnStatus t cudnnConvolutionForward(
   cudnnHandle t
                                       handle,
                                      *alpha,
   const void
   const cudnnTensorDescriptor t
                                      xDesc,
   const void
                                      *x,
   const cudnnFilterDescriptor t
                                      wDesc.
   const void
                                      *w,
   const cudnnConvolutionDescriptor t convDesc,
   cudnnConvolutionFwdAlgo t
                                       algo,
                                      *workSpace,
   void
   size t
                                      workSpaceSizeInBytes,
                                      *beta,
   const void
   const cudnnTensorDescriptor_t
                                       yDesc,
                                      *y)
```

This function executes convolutions or cross-correlations over x using filters specified with w, returning results in y. Scaling factors alpha and beta can be used to scale the input tensor and the output tensor respectively.



Note: The routine $\underline{\text{cudnnGetConvolution2dForwardOutputDim()}}$ or $\underline{\text{cudnnGetConvolutionNdForwardOutputDim()}}$ can be used to determine the proper dimensions of the output tensor descriptor $\underline{\text{yDesc}}$ with respect to $\underline{\text{xDesc}}$, $\underline{\text{convDesc}}$, and $\underline{\text{wDesc}}$.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle t.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*result + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc

Input. Handle to a previously initialized tensor descriptor. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc.

wDesc

Input. Handle to a previously initialized filter descriptor. For more information, refer to cudnnFilterDescriptor_t.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

convDesc

Input. Previously initialized convolution descriptor. For more information, refer to <u>cudnnConvolutionDescriptor_t</u>.

algo

Input. Enumerant that specifies which convolution algorithm should be used to compute the results. For more information, refer to cudnnConvolutionFwdAlgo_t.

workSpace

Input. Data pointer to GPU memory to a workspace needed to be able to execute the specified algorithm. If no workspace is needed for a particular algorithm, that pointer can be nil.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workSpace.

yDesc

Input. Handle to a previously initialized tensor descriptor.

У

Input/Output. Data pointer to GPU memory associated with the tensor descriptor yDesc that carries the result of the convolution.

Supported configurations

This function supports the following combinations of data types for xDesc, wDesc, convDesc, and yDesc.

Table 23. Supported configurations

Data Type			
Configurations	xDesc and wDesc	convDesc	yDesc
true_HALF_CONFIG (only supported on architectures with true FP16 support, meaning, compute capability 5.3 and later)	CUDNN_DATA_HALF	CUDNN_DATA_HALF	CUDNN_DATA_HALF
PSEUDO_HALF_CONFIG	CUDNN_DATA_HALF	CUDNN_DATA_FLOAT	CUDNN_DATA_HALF
pseudo_BFLOAT16_co (only support on architecture with bfloat16 support, meaning, compute capability 8.0 and later)	NRIINN_DATA_BFLOAT16	CUDNN_DATA_FLOAT	CUDNN_DATA_BFLOAT16
FLOAT_CONFIG	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT
DOUBLE_CONFIG	CUDNN_DATA_DOUBLE	CUDNN_DATA_DOUBLE	CUDNN_DATA_DOUBLE
INT8_CONFIG (only supported on architectures with DP4A support, meaning, compute	CUDNN_DATA_INT8	CUDNN_DATA_INT32	CUDNN_DATA_INT8

Data Type Configurations	xDesc and wDesc	convDesc	yDesc
capability 6.1 and later)			
INT8_EXT_CONFIG (only supported on architectures with DP4A support, meaning, compute capability 6.1 and later)	CUDNN_DATA_INT8	CUDNN_DATA_INT32	CUDNN_DATA_FLOAT
INT8x4_CONFIG (only supported on architectures with DP4A support, meaning, compute capability 6.1 and later)	CUDNN_DATA_INT8x4	CUDNN_DATA_INT32	CUDNN_DATA_INT8x4
INT8x4_EXT_CONFIG (only supported on architectures with DP4A support, meaning, compute capability 6.1 and later)	CUDNN_DATA_INT8x4	CUDNN_DATA_INT32	CUDNN_DATA_FLOAT
(only supported on architectures with DP4A support, meaning, compute capability 6.1 and later)	xDesc: CUDNN_DATA_UINT8 wDesc: CUDNN_DATA_INT8	CUDNN_DATA_INT32	CUDNN_DATA_INT8
(only supported on architectures with DP4A support, meaning, compute capability 6.1 and later)	xDesc: CUDNN_DATA_UINT8x4 wDesc: CUDNN_DATA_INT8x4	CUDNN_DATA_INT32	CUDNN_DATA_INT8x4
UINT8_EXT_CONFIG (only supported	xDesc: CUDNN_DATA_UINT8	CUDNN_DATA_INT32	CUDNN_DATA_FLOAT

NVIDIA cuDNN PR-09702-001_v8.5.0 | 182

Data Type Configurations	xDesc and wDesc	convDesc	уDesc
on architectures with DP4A support, meaning, compute capability 6.1 and later)	wDesc: CUDNN_DATA_INT8		
(only supported on architectures with DP4A support, meaning, compute capability 6.1 and later)	xDesc: CUDNN_DATA_UINT8x4 wDesc: CUDNN_DATA_INT8x4	CUDNN_DATA_INT32	CUDNN_DATA_FLOAT
INT8x32_CONFIG (only supported on architectures with IMMA support, meaning compute capability 7.5 and later)	CUDNN_DATA_INT8x32	CUDNN_DATA_INT32	CUDNN_DATA_INT8x32

Supported algorithms



Note: For this function, all algorithms perform deterministic computations. Specifying a separate algorithm can cause changes in performance and support.

The table below shows the list of the supported 2D and 3D convolutions. The 2D convolutions are described first, followed by the 3D convolutions.

For the following terms, the short-form versions shown in the parenthesis are used in the table below, for brevity:

- CUDNN CONVOLUTION FWD ALGO IMPLICIT GEMM (_IMPLICIT_GEMM)
- ► CUDNN CONVOLUTION FWD ALGO IMPLICIT PRECOMP GEMM (_IMPLICIT_PRECOMP_GEMM)
- CUDNN CONVOLUTION FWD ALGO GEMM (_GEMM)
- CUDNN CONVOLUTION FWD ALGO DIRECT (_DIRECT)
- CUDNN CONVOLUTION FWD ALGO FFT (_FFT)
- CUDNN CONVOLUTION FWD ALGO FFT TILING (_FFT_TILING)
- CUDNN CONVOLUTION FWD ALGO WINOGRAD (_WINOGRAD)
- ► CUDNN CONVOLUTION FWD ALGO WINOGRAD NONFUSED (_WINOGRAD_NONFUSED)
- ► CUDNN TENSOR NCHW (_NCHW)

- ► CUDNN_TENSOR_NHWC (_NHWC)
- ► CUDNN_TENSOR_NCHW_VECT_C (_NCHW_VECT_C)

Table 24. For 2D convolutions: wDesc: NCHW

 $\label{eq:filter_descriptor_wdesc:_NCHW} \textbf{(refer to } \underline{\textbf{cudnnTensorFormat_t)}}$

convDesc Group count support: Greater than 0, for all algos.					
Algo Name	Tensor Formats Supported for xDesc	Tensor Formats Supported for yDesc	Data Type Configurations Supported	Important	
_IMPLICIT_GEMM	All except _NCHW_VECT_C.	All except _NCHW_VECT_C.	TRUE_HALF_CONFIG PSEUDO_HALF_CONF PSEUDO_BFLOAT16_ FLOAT_CONFIG DOUBLE_CONFIG	than 0 for all ^{IG} dimensions	
_IMPLICIT_PRECOM	PAtexcept _NCHW_VECT_C.	All except _NCHW_VECT_C.	TRUE_HALF_CONFIG PSEUDO_HALF_CONF PSEUDO_BFLOAT16_ FLOAT_CONFIG DOUBLE_CONFIG	dimensions ^{IG}	
_GEMM	All except _NCHW_VECT_C.	All except _NCHW_VECT_C.	PSEUDO_HALF_CONF FLOAT_CONFIG DOUBLE_CONFIG	ɪDilation: 1 for all dimensions	
_FFT	NCHW HW- packed	NCHW HW- packed	PSEUDO_HALF_CONF	iDilation: 1 for all dimensions xDesc feature map height + 2 * convDesc zero- padding height must equal 256 or less xDesc feature map width + 2 * convDesc zero- padding width	

NVIDIA cuDNN PR-09702-001_v8.5.0 | 184

Filter descriptor wDesc: _NCHW (refer to cudnnTensorFormat_t)

convDesc Group	convDesc Group count support: Greater than 0, for all algos.				
Algo Name	Tensor Formats Supported for	Tensor Formats Supported for yDesc	Data Type Configurations Supported	Important	
Algo Name	xDesc	ypesc	Supported	must equal 256 or less convDesc vertical and horizontal filter stride must equal 1 wDesc filter height must be greater than convDesc zero- padding height wDesc filter width must be greater than convDesc zero-padding	
_FFT_TILING			PSEUDO_HALF_CONFIG FLOAT_CONFIG is also supported when the task can be handled by 1D FFT, meaning, one of the filter dimensions, width or height is 1.	width Dilation: 1 for all dimensions When neither of wDesc filter dimension is 1, the filter width and height must not be larger than 32 When either of wDesc filter dimension is 1, the largest filter dimension should not exceed 256 convDesc vertical and horizontal filter stride	

NVIDIA cuDNN PR-09702-001_v8.5.0 | 185 Filter descriptor wDesc: _NCHW (refer to cudnnTensorFormat_t)

convDesc Group count support: Greater than 0, for all algos.

convDesc Group	count support: Gr	eater than 0, for a	all algos.	
Algo Name	Tensor Formats Supported for xDesc	Tensor Formats Supported for yDesc	Data Type Configurations Supported	Important
				must equal 1 when either the filter width or filter height is 1, otherwise the stride can be a 1 or 2 wDesc filter height must be greater than convDesc zero- padding height wDesc filter width must be greater than convDesc zero-padding width
_WINOGRAD		All _except_NCHW_VECT	PSEUDO_HALF_CONF C. FLOAT_CONFIG TRUE_HALF_CONFIG PSEUDO_HALF_CONF PSEUDO_BFLOAT16_ FLOAT_CONFIG	dimensions convDesc vertical and horizontal filter stride must equal 1 wDesc filter height must be 3 wDesc filter width must be 3 Dilation: 1 for all dimensions

NVIDIA cuDNN PR-09702-001_v8.5.0 | 186

Filter descriptor wDesc: _NCHW (refer to <u>cudnnTensorFormat_t</u>) convDesc Group count support: Greater than 0, for all algos. Tensor Formats | Tensor Formats | Data Type **Configurations** Supported for Supported for Algo Name **Supported Important** xDesc yDesc wDesc filter (height, width) must be (3,3) or (5,5)If wDesc filter (height, width) is (5,5), then data type config TRUE_HALF_CONFIG is not supported. Currently not implemented in cuDNN. DIRECT

Table 25. For 2D convolutions: wDesc: _NCHWC

Filter descriptor wDesc: _NCHWC

convDesc Group count support: Greater than 0.

convides Group Count Support. Greater than o.				
Algo Name	xDesc	yDesc	Data Type Configurations Supported	Important
_IMPLICIT_GEMM _IMPLICIT_PRECOM	_NCHW_VECT_C	_NCHW_VECT_C	INT8x4_CONFIG UINT8x4_CONFIG	Dilation: 1 for all dimensions
_IMPLICIT_PRECOM	P_NGEHMM_VECT_C	_NCHW_VECT_C	INT8x32_CONFIG	Dilation: 1 for all dimensions Requires compute capability 7.2 or above.

NVIDIA cuDNN PR-09702-001_v8.5.0 | 187

Table 26. For 2D convolutions: wDesc: _NHWC

Filter descriptor wDesc: _NHWC

convDesc Group count support: Greater than 0.

Algo Name	xDesc	yDesc	Data Type Configurations Supported	Important
_IMPLICIT_GEMM _IMPLICIT_PRECOM	NHWC fully- packed P_GEMM	NHWC fully- packed	INT8_CONFIG INT8_EXT_CONFIG UINT8_CONFIG UINT8_EXT_CONFIG	Dilation: 1 for all dimensions Input and output feature maps must be a multiple of 4. Output features maps can be non-multiple in the case of INT8_EXT_CONFIG or UINT8_EXT_CONFIG
_IMPLICIT_GEMM _IMPLICIT_PRECOM	NHWC HWC- packed. P_GEMM	NHWC HWC- packed. NCHW CHW- packed	TRUE_HALF_CONFIG PSEUDO_HALF_CONF PSEUDO_BFLOAT16_ FLOAT_CONFIG DOUBLE_CONFIG	IG

Table 27. For 3D convolutions: wDesc: _NCHW

Filter descriptor wDesc: _NCHW					
convDesc Group	count support: G	reater than 0, for	all algos.		
			Data Type Configurations		
Algo Name	xDesc	yDesc	Supported	Important	
_IMPLICIT_GEMM	All except	All except	PSEUDO_HALF_CONF	ıDilation: Greater	
	_NCHW_VECT_C.	_NCHW_VECT_C.	PSEUDO_BFLOAT16_	than O for all CONFIG dimensions	
			FLOAT_CONFIG		
			DOUBLE_CONFIG		

Filter descriptor wDesc: _NCHW

convDesc Group count support: Greater than 0, for all algos.

Algo Name	xDesc	yDesc	Data Type Configurations Supported	Important
_IMPLICIT_PRECOM	IP_GEMM			Dilation: Greater than 0 for all dimensions
_FFT_TILING	NCDHW DHW-packed	NCDHW DHW-packed		Dilation: 1 for all dimensions wDesc filter height must equal 16 or less wDesc filter width must equal 16 or less wDesc filter depth must equal 16 or less convDesc must have all filter strides equal to 1 wDesc filter height must be greater than convDesc zero-padding height wDesc filter width must be greater than convDesc zero-padding width wDesc filter depth must be greater than convDesc zero-padding width wDesc filter depth must be greater than convDesc zero-padding width

NVIDIA cuDNN PR-09702-001_v8.5.0 | 189

Table 28. For 3D convolutions: wDesc: NHWC

Filter descriptor wDesc: _NHWC

convDesc Group count support: Greater than 0, for all algos.

Algo Name	xDesc	yDesc	Data Type Configurations Supported	Important
_IMPLICIT_PRECOM	PN DHWYC	NDHWC	PSEUDO_HALF_CONF	ɪDilation: Greater
	DHWC-packed	DHWC-packed	PSEUDO_BFLOAT16_	than O for all CONFIG dimensions
			FLOAT_CONFIG	



Note: Tensors can be converted to and from <code>CUDNN_TENSOR_NCHW_VECT_C</code> with <code>cudnnTransformTensor()</code>.

Returns

CUDNN STATUS SUCCESS

The operation was launched successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- At least one of the following is NULL: handle, xDesc, wDesc, convDesc, yDesc, xData, w, yData, alpha, beta
- xDesc and yDesc have a non-matching number of dimensions
- xDesc and wDesc have a non-matching number of dimensions
- xDesc has fewer than three number of dimensions
- xDesc's number of dimensions is not equal to convDesc array length + 2
- xDesc and wDesc have a non-matching number of input feature maps per image (or group in case of grouped convolutions)
- yDesc or wDesc indicate an output channel count that isn't a multiple of group count (if group count has been set in convDesc).
- xDesc, wDesc, and yDesc have a non-matching data type
- For some spatial dimension, wDesc has a spatial size that is larger than the input spatial size (including zero-padding size)

CUDNN STATUS NOT SUPPORTED

At least one of the following conditions are met:

- xDesc or yDesc have negative tensor striding
- xDesc, wDesc, or yDesc has a number of dimensions that is not 4 or 5

- yDesc spatial sizes do not match with the expected size as determined by cudnnGetConvolutionNdForwardOutputDim()
- The chosen algo does not support the parameters provided; see above for an exhaustive list of parameters supported for each algo

```
CUDNN STATUS MAPPING ERROR
```

An error occurs during the texture object creation associated with the filter data.

```
CUDNN STATUS EXECUTION FAILED
```

The function failed to launch on the GPU.

5.2.5. cudnnCreateConvolutionDescriptor()

```
cudnnStatus_t cudnnCreateConvolutionDescriptor(
    cudnnConvolutionDescriptor t *convDesc)
```

This function creates a convolution descriptor object by allocating the memory needed to hold its opaque structure. For more information, refer to <u>cudnnConvolutionDescriptor_t</u>.

Returns

```
CUDNN STATUS SUCCESS
```

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

5.2.6. cudnnDestroyConvolutionDescriptor()

```
cudnnStatus_t cudnnDestroyConvolutionDescriptor(
    cudnnConvolutionDescriptor_t convDesc)
```

This function destroys a previously created convolution descriptor object.

Returns

CUDNN STATUS SUCCESS

The descriptor was destroyed successfully.

5.2.7. cudnnFindConvolutionBackwardDataAlgorithm()

This function attempts all algorithms available for <u>cudnnConvolutionBackwardData()</u>. It will attempt both the provided <u>convDesc mathType</u> and <u>CUDNN_DEFAULT_MATH</u> (assuming the two differ).



Note: Algorithms without the CUDNN_TENSOR_OP_MATH availability will only be tried with CUDNN_DEFAULT_MATH, and returned as such.

Memory is allocated via <code>cudaMalloc()</code>. The performance metrics are returned in the user-allocated array of <code>cudnnConvolutionBwdDataAlgoPerf_t</code>. These metrics are written in a sorted fashion where the first element has the lowest compute time. The total number of resulting algorithms can be queried through the API <code>cudnnGetConvolutionBackwardDataAlgorithmMaxCount()</code>.



Note:

- This function is host blocking.
- It is recommended to run this function prior to allocating layer data; doing otherwise may needlessly inhibit some algorithm options due to resource usage.

Parameters

handle

Input. Handle to a previously created cuDNN context.

wDesc

Input. Handle to a previously initialized filter descriptor.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

convDesc

Input. Previously initialized convolution descriptor.

dxDesc

Input. Handle to the previously initialized output tensor descriptor.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- handle is not allocated properly.
- ▶ wDesc, dyDesc, or dxDesc is not allocated properly.
- wDesc, dyDesc, or dxDesc has fewer than 1 dimension.
- ▶ Either returnedCount or perfResults is nil.
- requestedCount is less than 1.

CUDNN STATUS ALLOC FAILED

This function was unable to allocate memory to store sample input, filters and output.

CUDNN STATUS INTERNAL ERROR

At least one of the following conditions are met:

- ▶ The function was unable to allocate necessary timing objects.
- The function was unable to deallocate necessary timing objects.
- ▶ The function was unable to deallocate sample input, filters and output.

5.2.8. cudnnFindConvolutionBackwardDataAlgorithmEx(

```
cudnnStatus t cudnnFindConvolutionBackwardDataAlgorithmEx(
   cudnnHandle t
                                          handle,
   const cudnnFilterDescriptor t
                                          wDesc.
                                         *w,
   const void
   const cudnnTensorDescriptor t
                                         dyDesc,
                                         *dy,
   const void
   const cudnnConvolutionDescriptor t convDesc,
   const cudnnTensorDescriptor_t
                                          dxDesc,
                                         *dx,
   void
                                         requestedAlgoCount,
   const int
                                         *returnedAlgoCount,
   cudnnConvolutionBwdDataAlgoPerf t
                                         *perfResults,
   void
                                         *workSpace,
   size t
                                          workSpaceSizeInBytes)
```

This function attempts all algorithms available for cudnnConvolutionBackwardData(). It will attempt both the provided convDesc mathType and CUDNN_DEFAULT_MATH (assuming the two differ).



Note: Algorithms without the CUDNN_TENSOR_OP_MATH availability will only be tried with CUDNN DEFAULT MATH, and returned as such.

Memory is allocated via <code>cudaMalloc()</code>. The performance metrics are returned in the user-allocated array of <code>cudnnConvolutionBwdDataAlgoPerf_t</code>. These metrics

are written in a sorted fashion where the first element has the lowest compute time. The total number of resulting algorithms can be queried through the API cudnnGetConvolutionBackwardDataAlgorithmMaxCount().



Note: This function is host blocking.

Parameters

handle

Input. Handle to a previously created cuDNN context.

wDesc

Input. Handle to a previously initialized filter descriptor.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

dy

Input. Data pointer to GPU memory associated with the filter descriptor dyDesc.

convDesc

Input. Previously initialized convolution descriptor.

dxDesc

Input. Handle to the previously initialized output tensor descriptor.

dxDesc

Input/Output. Data pointer to GPU memory associated with the tensor descriptor dxDesc. The content of this tensor will be overwritten with arbitrary values.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

${\tt returnedAlgoCount}$

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

workSpace

Input. Data pointer to GPU memory is a necessary workspace for some algorithms. The size of this workspace will determine the availability of algorithms. A nil pointer is considered a workspace of 0 bytes.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workSpace.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- handle is not allocated properly.
- wDesc, dyDesc, or dxDesc is not allocated properly.
- ▶ wDesc, dyDesc, or dxDesc has fewer than 1 dimension.
- w, dy, or dx is nil.
- ▶ Either returnedCount or perfResults is nil.
- requestedCount is less than 1.

CUDNN STATUS INTERNAL ERROR

At least one of the following conditions are met:

- The function was unable to allocate necessary timing objects.
- The function was unable to deallocate necessary timing objects.
- The function was unable to deallocate sample input, filters and output.

5.2.9. cudnnFindConvolutionForwardAlgorithm()

This function attempts all algorithms available for cudnnConvolutionForward(). It will attempt both the provided convDesc mathType and CUDNN_DEFAULT_MATH (assuming the two differ).



Note: Algorithms without the ${\tt CUDNN_TENSOR_OP_MATH}$ availability will only be tried with ${\tt CUDNN_DEFAULT_MATH}$, and returned as such.

Memory is allocated via cudaMalloc(). The performance metrics are returned in the user-allocated array of $\underline{cudnnConvolutionFwdAlgoPerf_t}$. These metrics are written in a sorted fashion where the first element has the lowest compute

time. The total number of resulting algorithms can be queried through the API <u>cudnnGetConvolutionForwardAlgorithmMaxCount()</u>.



Note:

- This function is host blocking.
- It is recommended to run this function prior to allocating layer data; doing otherwise may needlessly inhibit some algorithm options due to resource usage.

Parameters

handle

Input. Handle to a previously created cuDNN context.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

wDesc

Input. Handle to a previously initialized filter descriptor.

convDesc

Input. Previously initialized convolution descriptor.

yDesc

Input. Handle to the previously initialized output tensor descriptor.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

Returns

CUDNN_STATUS_SUCCESS

The guery was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- handle is not allocated properly.
- xDesc, wDesc, or yDesc are not allocated properly.
- xDesc, wDesc, or yDesc has fewer than 1 dimension.

- ▶ Either returnedCount or perfResults is nil.
- requestedCount is less than 1.

CUDNN STATUS ALLOC FAILED

This function was unable to allocate memory to store sample input, filters and output.

CUDNN STATUS INTERNAL ERROR

At least one of the following conditions are met:

- ▶ The function was unable to allocate necessary timing objects.
- The function was unable to deallocate necessary timing objects.
- The function was unable to deallocate sample input, filters and output.

5.2.10. cudnnFindConvolutionForwardAlgorithmEx()

```
cudnnStatus t cudnnFindConvolutionForwardAlgorithmEx(
   cudnnHandle t
                                       handle,
   const cudnnTensorDescriptor t
                                       xDesc.
   const void
                                      *x,
   const cudnnFilterDescriptor t
                                       wDesc,
                                      *w,
   const void
   const cudnnConvolutionDescriptor t convDesc,
   const cudnnTensorDescriptor t
                                      yDesc,
   void
   const int
                                      requestedAlgoCount,
                                      *returnedAlgoCount,
   int
   cudnnConvolutionFwdAlgoPerf t
                                      *perfResults,
   void
                                      *workSpace,
                                      workSpaceSizeInBytes)
   size t
```

This function attempts all algorithms available for <u>cudnnConvolutionForward()</u>. It will attempt both the provided <u>convDesc mathType</u> and <u>CUDNN_DEFAULT_MATH</u> (assuming the two differ).



Note: Algorithms without the CUDNN_TENSOR_OP_MATH availability will only be tried with CUDNN DEFAULT MATH, and returned as such.

Memory is allocated via <code>cudaMalloc()</code>. The performance metrics are returned in the user-allocated array of <code>cudnnConvolutionFwdAlgoPerf_t</code>. These metrics are written in a sorted fashion where the first element has the lowest compute time. The total number of resulting algorithms can be queried through the API <code>cudnnGetConvolutionForwardAlgorithmMaxCount()</code>.



Note: This function is host blocking.

Parameters

handle

Input. Handle to a previously created cuDNN context.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc.

wDesc

Input. Handle to a previously initialized filter descriptor.

w

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

convDesc

Input. Previously initialized convolution descriptor.

yDesc

Input. Handle to the previously initialized output tensor descriptor.

У

Input/Output. Data pointer to GPU memory associated with the tensor descriptor yDesc. The content of this tensor will be overwritten with arbitrary values.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

workSpace

Input. Data pointer to GPU memory is a necessary workspace for some algorithms. The size of this workspace will determine the availability of algorithms. A nil pointer is considered a workspace of 0 bytes.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workSpace.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- handle is not allocated properly.
- xDesc, wDesc, or yDesc are not allocated properly.
- xDesc, wDesc, or yDesc has fewer than 1 dimension.
- x, w, or y is nil.
- ▶ Either returnedCount or perfResults is nil.
- requestedCount is less than 1.

CUDNN STATUS INTERNAL ERROR

At least one of the following conditions are met:

- ▶ The function was unable to allocate necessary timing objects.
- The function was unable to deallocate necessary timing objects.
- The function was unable to deallocate sample input, filters and output.

5.2.11. cudnnGetConvolution2dDescriptor()

This function queries a previously initialized 2D convolution descriptor object.

Parameters

convDesc

Input/Output. Handle to a previously created convolution descriptor.

pad h

Output. Zero-padding height: number of rows of zeros implicitly concatenated onto the top and onto the bottom of input images.

pad w

Output. Zero-padding width: number of columns of zeros implicitly concatenated onto the left and onto the right of input images.

u

Output. Vertical filter stride.

v

Output. Horizontal filter stride.

dilation h

Output. Filter height dilation.

dilation w

Output. Filter width dilation.

mode

Output. Convolution mode.

computeType

Output. Compute precision.

Returns

CUDNN STATUS SUCCESS

The operation was successful.

```
CUDNN_STATUS_BAD_PARAM
```

The parameter convDesc is nil.

5.2.12. cudnnGetConvolution2dForwardOutputDim()

This function returns the dimensions of the resulting 4D tensor of a 2D convolution, given the convolution descriptor, the input tensor descriptor and the filter descriptor. This function can help to setup the output tensor and allocate the proper amount of memory prior to launch the actual convolution.

Each dimension h and w of the output images is computed as follows:

```
outputDim = 1 + ( inputDim + 2*pad - (((filterDim-1)*dilation)+1) )/
convolutionStride;
```



Note: The dimensions provided by this routine must be strictly respected when calling <u>cudnnConvolutionForward()</u> or <u>cudnnConvolutionBackwardBias()</u>. Providing a smaller or larger output tensor is not supported by the convolution routines.

Parameters

convDesc

Input. Handle to a previously created convolution descriptor.

inputTensorDesc

Input. Handle to a previously initialized tensor descriptor.

filterDesc

Input. Handle to a previously initialized filter descriptor.

n

Output. Number of output images.

С

Output. Number of output feature maps per image.

h

Output. Height of each output feature map.

W

Output. Width of each output feature map.

Returns

CUDNN STATUS BAD PARAM

One or more of the descriptors has not been created correctly or there is a mismatch between the feature maps of inputTensorDesc and filterDesc.

CUDNN STATUS SUCCESS

The object was set successfully.

5.2.13. cudnnGetConvolutionBackwardDataAlgorithmMaxC

```
cudnnStatus_t cudnnGetConvolutionBackwardDataAlgorithmMaxCount(
    cudnnHandle_t handle,
    int *count)
```

This function returns the maximum number of algorithms which can be returned from cudnnFindConvolutionBackwardDataAlgorithm() and cudnnGetConvolutionForwardAlgorithm_v7(). This is the sum of all algorithms plus the sum of all algorithms with Tensor Core operations supported for the current device.

Parameters

handle

Input. Handle to a previously created cuDNN context.

count

Output. The resulting maximum number of algorithms.

Returns

CUDNN STATUS SUCCESS

The function was successful.

```
CUDNN STATUS BAD PARAM
```

The provided handle is not allocated properly.

5.2.14. cudnnGetConvolutionBackwardDataAlgorithm_v7(

This function serves as a heuristic for obtaining the best suited algorithm for cudnnConvolutionBackwardData() for the given layer specifications. This function will return all algorithms (including <code>CUDNN_TENSOR_OP_MATH</code> and <code>CUDNN_DEFAULT_MATH</code> versions of algorithms where <code>CUDNN_TENSOR_OP_MATH</code> may be available) sorted by expected (based on internal heuristic) relative performance with the fastest being index 0 of <code>perfResults</code>. For an exhaustive search for the fastest algorithm, use cudnnFindConvolutionBackwardDataAlgorithm(). The total number of resulting algorithms can be queried through the returnedAlgoCount variable.

Parameters

handle

Input. Handle to a previously created cuDNN context.

wDesc

Input. Handle to a previously initialized filter descriptor.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

convDesc

Input. Previously initialized convolution descriptor.

dxDesc

Input. Handle to the previously initialized output tensor descriptor.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

Returns

CUDNN STATUS SUCCESS

The query was successful.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions are met:

- One of the parameters handle, wDesc, dyDesc, convDesc, dxDesc, perfResults, returnedAlgoCount is NULL.
- The numbers of feature maps of the input tensor and output tensor differ.
- ► The dataType of the two tensor descriptors or the filters are different.
- requestedAlgoCount is less than or equal to 0.

5.2.15. cudnnGetConvolutionBackwardDataWorkspaceSize

This function returns the amount of GPU memory workspace the user needs to allocate to be able to call cudnnConvolutionBackwardData() with the specified algorithm. The workspace allocated will then be passed to the routine cudnnConvolutionBackwardData(). The specified algorithm can be the result of the call to cudnnGetConvolutionBackwardDataAlgorithm_v7() or can be chosen arbitrarily by the user. Note that not every algorithm is available for every configuration of the input tensor and/or every configuration of the convolution descriptor.

Parameters

handle

Input. Handle to a previously created cuDNN context.

wDesc

Input. Handle to a previously initialized filter descriptor.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

convDesc

Input. Previously initialized convolution descriptor.

dxDesc

Input. Handle to the previously initialized output tensor descriptor.

algo

Input. Enumerant that specifies the chosen convolution algorithm.

sizeInBytes

Output. Amount of GPU memory needed as workspace to be able to execute a forward convolution with the specified algo.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ▶ The numbers of feature maps of the input tensor and output tensor differ.
- ► The dataType of the two tensor descriptors or the filter are different.

CUDNN STATUS NOT SUPPORTED

The combination of the tensor descriptors, filter descriptor and convolution descriptor is not supported for the specified algorithm.

5.2.16. cudnnGetConvolutionForwardAlgorithmMaxCount(

```
cudnnStatus_t cudnnGetConvolutionForwardAlgorithmMaxCount(
    cudnnHandle_t handle,
    int *count)
```

This function returns the maximum number of algorithms which can be returned from cudnnFindConvolutionForwardAlgorithm v7(). This is the sum of all algorithms plus the sum of all algorithms with Tensor Core operations supported for the current device.

Parameters

handle

Input. Handle to a previously created cuDNN context.

count

Output. The resulting maximum number of algorithms.

Returns

CUDNN STATUS SUCCESS

The function was successful.

```
CUDNN STATUS BAD PARAM
```

The provided handle is not allocated properly.

5.2.17. cudnnGetConvolutionForwardAlgorithm_v7()

This function serves as a heuristic for obtaining the best suited algorithm for cudnnConvolutionForward() for the given layer specifications. This function will return all algorithms (including CUDNN_TENSOR_OP_MATH and CUDNN_DEFAULT_MATH versions of algorithms where CUDNN_TENSOR_OP_MATH may be available) sorted by expected (based on internal heuristic) relative performance with the fastest being index 0 of perfResults. For an exhaustive search for the fastest algorithm, use cudnnFindConvolutionForwardAlgorithm(). The total number of resulting algorithms can be queried through the returnedAlgoCount variable.

Parameters

handle

Input. Handle to a previously created cuDNN context.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

wDesc

Input. Handle to a previously initialized convolution filter descriptor.

convDesc

Input. Previously initialized convolution descriptor.

yDesc

Input. Handle to the previously initialized output tensor descriptor.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

Returns

CUDNN STATUS SUCCESS

The query was successful.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions are met:

- One of the parameters handle, xDesc, wDesc, convDesc, yDesc, perfResults, returnedAlgoCount is NULL.
- ► Either yDesc or wDesc have different dimensions from xDesc.
- ► The data types of tensors xDesc, yDesc or wDesc are not all the same.
- ▶ The number of feature maps in xDesc and wDesc differs.
- ► The tensor xDesc has a dimension smaller than 3.
- requestedAlgoCount is less than or equal to 0.

5.2.18. cudnnGetConvolutionForwardWorkspaceSize()

```
cudnnStatus_t cudnnGetConvolutionForwardWorkspaceSize(
    cudnnHandle_t handle,
    const cudnnTensorDescriptor_t xDesc,
    const cudnnFilterDescriptor_t wDesc,
    const cudnnConvolutionDescriptor_t convDesc,
    const cudnnTensorDescriptor_t yDesc,
    cudnnConvolutionFwdAlgo_t algo,
    size_t *sizeInBytes)
```

This function returns the amount of GPU memory workspace the user needs to allocate to be able to call cudnnConvolutionForward() with the specified algorithm. The workspace allocated will then be passed to the routine cudnnConvolutionForward(). The specified algorithm can be the result of the call to cudnnGetConvolutionForwardAlgorithm_v7() or can be chosen arbitrarily by the user. Note that not every algorithm is available for every configuration of the input tensor and/or every configuration of the convolution descriptor.

Parameters

handle

Input. Handle to a previously created cuDNN context.

xDesc

Input. Handle to the previously initialized x tensor descriptor.

wDesc

Input. Handle to a previously initialized filter descriptor.

convDesc

Input. Previously initialized convolution descriptor.

yDesc

Input. Handle to the previously initialized y tensor descriptor.

algo

Input. Enumerant that specifies the chosen convolution algorithm.

sizeInBytes

Output. Amount of GPU memory needed as workspace to be able to execute a forward convolution with the specified algo.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ▶ One of the parameters handle, xDesc, wDesc, convDesc, yDesc is NULL.
- ► The tensor yDesc or wDesc are not of the same dimension as xDesc.
- ► The tensor xDesc, yDesc or wDesc are not of the same data type.
- ▶ The numbers of feature maps of the tensor xDesc and wDesc differ.
- ▶ The tensor xDesc has a dimension smaller than 3.

CUDNN STATUS NOT SUPPORTED

The combination of the tensor descriptors, filter descriptor and convolution descriptor is not supported for the specified algorithm.

5.2.19. cudnnGetConvolutionGroupCount()

```
cudnnStatus_t cudnnGetConvolutionGroupCount(
    cudnnConvolutionDescriptor_t convDesc,
    int *groupCount)
```

This function returns the group count specified in the given convolution descriptor.

Returns

CUDNN STATUS SUCCESS

The group count was returned successfully.

CUDNN STATUS BAD PARAM

An invalid convolution descriptor was provided.

5.2.20. cudnnGetConvolutionMathType()

```
cudnnStatus_t cudnnGetConvolutionMathType(
    cudnnConvolutionDescriptor_t convDesc,
    cudnnMathType_t *mathType)
```

This function returns the math type specified in a given convolution descriptor.

Returns

CUDNN STATUS SUCCESS

The math type was returned successfully.

```
CUDNN_STATUS_BAD_PARAM
```

An invalid convolution descriptor was provided.

5.2.21. cudnnGetConvolutionNdDescriptor()

This function queries a previously initialized convolution descriptor object.

Parameters

convDesc

Input/Output. Handle to a previously created convolution descriptor.

arrayLengthRequested

Input. Dimension of the expected convolution descriptor. It is also the minimum size of the arrays padA, filterStrideA, and dilationA in order to be able to hold the results

arrayLength

Output. Actual dimension of the convolution descriptor.

padA

Output. Array of dimension of at least arrayLengthRequested that will be filled with the padding parameters from the provided convolution descriptor.

filterStrideA

Output. Array of dimension of at least arrayLengthRequested that will be filled with the filter stride from the provided convolution descriptor.

dilationA

Output. Array of dimension of at least arrayLengthRequested that will be filled with the dilation parameters from the provided convolution descriptor.

mode

Output. Convolution mode of the provided descriptor.

datatype

Output. Datatype of the provided descriptor.

Returns

CUDNN STATUS SUCCESS

The query was successful.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions are met:

- ► The descriptor convDesc is nil.
- ► The arrayLengthRequest is negative.

CUDNN_STATUS_NOT_SUPPORTED

The arrayLengthRequested is greater than CUDNN DIM MAX-2.

5.2.22. cudnnGetConvolutionNdForwardOutputDim()

This function returns the dimensions of the resulting n-D tensor of a nbDims-2-D convolution, given the convolution descriptor, the input tensor descriptor and the filter descriptor This function can help to setup the output tensor and allocate the proper amount of memory prior to launch the actual convolution.

Each dimension of the (nbDims-2) -D images of the output tensor is computed as follows:

```
outputDim = 1 + ( inputDim + 2*pad - (((filterDim-1)*dilation)+1) )/
convolutionStride;
```



Note: The dimensions provided by this routine must be strictly respected when calling <u>cudnnConvolutionForward()</u> or <u>cudnnConvolutionBackwardBias()</u>. Providing a smaller or larger output tensor is not supported by the convolution routines.

Parameters

convDesc

Input. Handle to a previously created convolution descriptor.

inputTensorDesc

Input. Handle to a previously initialized tensor descriptor.

filterDesc

Input. Handle to a previously initialized filter descriptor.

nbDims

Input. Dimension of the output tensor.

tensorOuputDimA

Output. Array of dimensions nbDims that contains on exit of this routine the sizes of the output tensor.

Returns

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ▶ One of the parameters convDesc, inputTensorDesc, and filterDesc is nil.
- ► The dimension of the filter descriptor filterDesc is different from the dimension of input tensor descriptor inputTensorDesc.
- ► The dimension of the convolution descriptor is different from the dimension of input tensor descriptor inputTensorDesc-2.
- ► The features map of the filter descriptor filterDesc is different from the one of input tensor descriptor inputTensorDesc.
- ► The size of the dilated filter filterDesc is larger than the padded sizes of the input tensor.
- ► The dimension nbDims of the output array is negative or greater than the dimension of input tensor descriptor inputTensorDesc.

CUDNN STATUS SUCCESS

The routine exited successfully.

5.2.23. cudnnGetConvolutionReorderType()

```
cudnnStatus_t cudnnGetConvolutionReorderType(
  cudnnConvolutionDescriptor_t convDesc,
  cudnnReorderType t *reorderType);
```

This function retrieves the convolution reorder type from the given convolution descriptor.

Parameters

convDesc

Input. The convolution descriptor from which the reorder type should be retrieved.

reorderType

Output. The retrieved reorder type. For more information, refer to <u>cudnnReorderType_t</u>.

Returns

CUDNN_STATUS_BAD_PARAM

One of the inputs to this function is not valid.

CUDNN STATUS SUCCESS

The reorder type is retrieved successfully.

5.2.24. cudnnGetFoldedConvBackwardDataDescriptors()

```
cudnnStatus t
cudnnGetFoldedConvBackwardDataDescriptors(const cudnnHandle t handle,
                                             const cudnnFilterDescriptor_t filterDesc,
                                             const cudnnTensorDescriptor t diffDesc,
                                             const cudnnConvolutionDescriptor t
 convDesc,
                                             const cudnnTensorDescriptor t gradDesc,
                                             const cudnnTensorFormat_t transformFormat,
cudnnFilterDescriptor_t foldedFilterDesc,
                                             cudnnTensorDescriptor t paddedDiffDesc,
                                             cudnnConvolutionDescriptor t
 foldedConvDesc,
                                             cudnnTensorDescriptor t foldedGradDesc,
                                             cudnnTensorTransformDescriptor t
 filterFoldTransDesc,
                                             cudnnTensorTransformDescriptor t
 diffPadTransDesc,
                                             cudnnTensorTransformDescriptor t
 gradFoldTransDesc,
                                             cudnnTensorTransformDescriptor t
 gradUnfoldTransDesc) ;
```

This function calculates folding descriptors for backward data gradients. It takes as input the data descriptors along with the convolution descriptor and computes the folded data descriptors and the folding transform descriptors. These can then be used to do the actual folding transform.

Parameters

handle

Input. Handle to a previously created cuDNN context.

filterDesc

Input. Filter descriptor before folding.

diffDesc

Input. Diff descriptor before folding.

convDesc

Input. Convolution descriptor before folding.

gradDesc

Input. Gradient descriptor before folding.

transformFormat

Input. Transform format for folding.

foldedFilterDesc

Output. Folded filter descriptor.

paddedDiffDesc

Output. Padded Diff descriptor.

foldedConvDesc

Output. Folded convolution descriptor.

foldedGradDesc

Output. Folded gradient descriptor.

filterFoldTransDesc

Output. Folding transform descriptor for filter.

diffPadTransDesc

Output. Folding transform descriptor for Desc.

${\tt gradFoldTransDesc}$

Output. Folding transform descriptor for gradient.

gradUnfoldTransDesc

Output. Unfolding transform descriptor for folded gradient.

Returns

CUDNN STATUS SUCCESS

Folded descriptors were computed successfully.

CUDNN STATUS BAD PARAM

If any of the input parameters is \mathtt{NULL} or if the input tensor has more than 4 dimensions.

CUDNN STATUS EXECUTION FAILED

Computing the folded descriptors failed.

5.2.25. cudnnIm2Col()

```
cudnnStatus_t cudnnIm2Col(
    cudnnHandle t handle,
```

```
cudnnTensorDescriptor_t srcDesc,
const void *srcData,
cudnnFilterDescriptor_t filterDesc,
cudnnConvolutionDescriptor_t convDesc,
void *colBuffer)
```

This function constructs the A matrix necessary to perform a forward pass of GEMM convolution. This A matrix has a height of batch_size*y_height*y_width and width of input channels*filter height*filter width, where:

- ▶ batch size is xDesc first dimension
- y_height/y_width are computed from cudnnGetConvolutionNdForwardOutputDim()
- ▶ input channels is xDesc second dimension
- ▶ filter height/filter width are wDesc third and fourth dimension

The A matrix is stored in format HW fully-packed in GPU memory.

Parameters

handle

Input. Handle to a previously created cuDNN context.

srcDesc

Input. Handle to a previously initialized tensor descriptor.

srcData

Input. Data pointer to GPU memory associated with the input tensor descriptor.

filterDesc

Input. Handle to a previously initialized filter descriptor.

convDesc

Input. Handle to a previously initialized convolution descriptor.

colBuffer

Output. Data pointer to GPU memory storing the output matrix.

Returns

CUDNN STATUS BAD PARAM

srcData Or colBuffer iS NULL.

CUDNN_STATUS_NOT_SUPPORTED

Any of srcDesc, filterDesc, convDesc has dataType of CUDNN_DATA_INT8, CUDNN_DATA_INT8x4, CUDNN_DATA_INT8 or CUDNN_DATA_INT8x4 convDesc has groupCount larger than 1.

CUDNN STATUS EXECUTION FAILED

The CUDA kernel execution was unsuccessful.

CUDNN STATUS SUCCESS

The output data array is successfully generated.

5.2.26. cudnnReorderFilterAndBias()

```
cudnnStatus_t cudnnReorderFilterAndBias(
  cudnnHandle_t handle,
  const cudnnFilterDescriptor_t filterDesc,
  cudnnReorderType_t reorderType,
  const void *filterData,
  void *reorderedFilterData,
  int reorderBias,
  const void *biasData,
  void *reorderedBiasData);
```

This function <u>cudnnReorderFilterAndBias()</u>, reorders the filter and bias values for tensors with data type <u>cudnn_data_int8x32</u> and tensor format <u>cudnn_tensor_nchw_vect_c</u>. It can be used to enhance the inference time by separating the reordering operation from convolution. Currently, only 2D filters are supported.

Filter and bias tensors with data type <code>CUDNN_DATA_INT8x32</code> (also implying tensor format <code>CUDNN_TENSOR_NCHW_VECT_C</code>) requires permutation of output channel axes in order to take advantage of the Tensor Core IMMA instruction. This is done in every <code>cudnnConvolutionForward()</code> and <code>cudnnConvolutionBiasActivationForward()</code> call when the reorder type attribute of the convolution descriptor is set to <code>CUDNN_DEFAULT_REORDER</code>. Users can avoid the repeated reordering kernel call by first using this call to reorder the filter and bias tensor and call the convolution forward APIs with reorder type set to <code>CUDNN_NO_REORDER</code>.

For example, convolutions in a neural network of multiple layers can require reordering of kernels at every layer, which can take up a significant fraction of the total inference time. Using this function, the reordering can be done one time on the filter and bias data followed by the convolution operations at the multiple layers, thereby enhancing the inference time.

Parameters

handle

Input. Handle to a previously created cuDNN context.

filterDesc

Input. Descriptor for the kernel dataset.

reorderType

Input. Setting to either perform reordering or not. For more information, refer to <u>cudnnReorderType_t</u>.

filterData

Input. Pointer to the filter (kernel) data location in the device memory.

reorderedFilterData

Output. Pointer to the location in the device memory where the reordered filter data will be written to, by this function. This tensor has the same dimensions as filterData.

reorderBias

Input. If > 0, then reorders the bias data also. If <= 0 then does not perform reordering operations on the bias data.

biasData

Input. Pointer to the bias data location in the device memory.

reorderedBiasData

Output. Pointer to the location in the device memory where the reordered bias data will be written to, by this function. This tensor has the same dimensions as biasData.

Returns

CUDNN STATUS SUCCESS

Reordering was successful.

```
CUDNN STATUS EXECUTION FAILED
```

Either the reordering of the filter data or of the bias data failed.

5.2.27. cudnnSetConvolution2dDescriptor()

```
cudnnStatus t cudnnSetConvolution2dDescriptor(
    cudnnConvolutionDescriptor t
                                     convDesc,
                                     pad h,
    int
   int
                                     pad w,
   int
   int.
   int
                                     dilation h,
                                     dilation_w,
    cudnnConvolutionMode t
                                     mode,
    cudnnDataType t
                                     computeType)
```

This function initializes a previously created convolution descriptor object into a 2D correlation. This function assumes that the tensor and filter descriptors correspond to the forward convolution path and checks if their settings are valid. That same convolution descriptor can be reused in the backward path provided it corresponds to the same layer.

Parameters

convDesc

Input/Output. Handle to a previously created convolution descriptor.

pad h

Input. Zero-padding height: number of rows of zeros implicitly concatenated onto the top and onto the bottom of input images.

pad_w

Input. Zero-padding width: number of columns of zeros implicitly concatenated onto the left and onto the right of input images.

11

Input. Vertical filter stride.

v

Input. Horizontal filter stride.

dilation h

Input. Filter height dilation.

dilation w

Input. Filter width dilation.

mode

Input. Selects between CUDNN CONVOLUTION and CUDNN CROSS CORRELATION.

computeType

Input. Compute precision.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The descriptor convDesc is nil.
- One of the parameters pad h, pad w is strictly negative.
- One of the parameters u, v is negative or zero.
- ▶ One of the parameters dilation h, dilation w is negative or zero.
- ► The parameter mode has an invalid enumerant value.

5.2.28. cudnnSetConvolutionGroupCount()

```
cudnnStatus_t cudnnSetConvolutionGroupCount(
    cudnnConvolutionDescriptor_t convDesc,
    int groupCount)
```

This function allows the user to specify the number of groups to be used in the associated convolution.

Returns

CUDNN STATUS SUCCESS

The group count was set successfully.

CUDNN_STATUS_BAD_PARAM

An invalid convolution descriptor was provided

5.2.29. cudnnSetConvolutionMathType()

```
cudnnStatus_t cudnnSetConvolutionMathType(
    cudnnConvolutionDescriptor_t convDesc,
    cudnnMathType_t mathType)
```

This function allows the user to specify whether or not the use of tensor op is permitted in the library routines associated with a given convolution descriptor.

Returns

CUDNN STATUS SUCCESS

The math type was set successfully.

```
CUDNN STATUS BAD PARAM
```

Either an invalid convolution descriptor was provided or an invalid math type was specified.

5.2.30. cudnnSetConvolutionNdDescriptor()

```
cudnnStatus_t cudnnSetConvolutionNdDescriptor(
    cudnnConvolutionDescriptor_t convDesc,
    int arrayLength,
    const int padA[],
    const int filterStrideA[],
    const int dilationA[],
    cudnnConvolutionMode_t mode,
    cudnnDataType_t dataType)
```

This function initializes a previously created generic convolution descriptor object into a n-D correlation. That same convolution descriptor can be reused in the backward path provided it corresponds to the same layer. The convolution computation will be done in the specified <code>dataType</code>, which can be potentially different from the input/output tensors.

Parameters

convDesc

Input/Output. Handle to a previously created convolution descriptor.

arrayLength

Input. Dimension of the convolution.

padA

Input. Array of dimension <code>arrayLength</code> containing the zero-padding size for each dimension. For every dimension, the padding represents the number of extra zeros implicitly concatenated at the start and at the end of every element of that dimension.

filterStrideA

Input. Array of dimension <code>arrayLength</code> containing the filter stride for each dimension. For every dimension, the filter stride represents the number of elements to slide to reach the next start of the filtering window of the next point.

dilationA

Input. Array of dimension <code>arrayLength</code> containing the dilation factor for each dimension.

mode

Input. Selects between CUDNN CONVOLUTION and CUDNN CROSS CORRELATION.

datatype

Input. Selects the data type in which the computation will be done.



Note: <code>cudnn_data_half</code> in <code>cudnnSetConvolutionNdDescriptor()</code> with <code>half_convolution_bwd_filter</code> is not recommended as it is known to not be useful for any practical use case for training and will be considered to be blocked in a future <code>cudnN</code> release. The use of <code>cudnn_data_half</code> for input tensors in <code>cudnnSetTensorNdDescriptor()</code> and <code>cudnn_data_float</code> in <code>cudnnSetConvolutionNdDescriptor()</code> with <code>half_convolution_bwd_filter</code> is recommended and is used with the automatic mixed precision (AMP) training in many well known deep learning frameworks.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- The descriptor convDesc is nil.
- ► The arrayLengthRequest is negative.
- ▶ The enumerant mode has an invalid value.
- ► The enumerant datatype has an invalid value.
- One of the elements of padA is strictly negative.
- One of the elements of strideA is negative or zero.
- One of the elements of dilationA is negative or zero.

CUDNN STATUS NOT SUPPORTED

At least one of the following conditions are met:

▶ The arrayLengthRequest is greater than CUDNN DIM MAX.

5.2.31. cudnnSetConvolutionReorderType()

cudnnStatus_t cudnnSetConvolutionReorderType(
 cudnnConvolutionDescriptor_t convDesc,
 cudnnReorderType t reorderType);

This function sets the convolution reorder type for the given convolution descriptor.

Parameters

convDesc

Input. The convolution descriptor for which the reorder type should be set.

reorderType

Input. Set the reorder type to this value. For more information, refer to <u>cudnnReorderType_t</u>.

Returns

CUDNN STATUS BAD PARAM

The reorder type supplied is not supported.

CUDNN STATUS SUCCESS

Reorder type is set successfully.

Chapter 6. cudnn_cnn_train.so Library

For the backend data and descriptor types, refer to the <u>cuDNN Backend API</u> section.

6.1. Data Type References

6.1.1. Pointer To Opaque Struct Types

6.1.1.1. cudnnFusedOpsConstParamPack_t

cudnnFusedOpsConstParamPack_t is a pointer to an opaque structure holding the description of the cudnnFusedOps constant parameters. Use the function cudnnCreateFusedOpsConstParamPack() to create one instance of this structure, and the function cudnnDestroyFusedOpsConstParamPack() to destroy a previously-created descriptor.

6.1.1.2. cudnnFusedOpsPlan_t

cudnnFusedOpsPlan_t is a pointer to an opaque structure holding the description of the cudnnFusedOpsPlan. This descriptor contains the plan information, including the problem type and size, which kernels should be run, and the internal workspace partition. Use the function cudnnCreateFusedOpsPlan() to create one instance of this structure, and the function cudnnDestroyFusedOpsPlan() to destroy a previously-created descriptor.

6.1.1.3. cudnnFusedOpsVariantParamPack_t

 ${\tt cudnnFusedOpsVariantParamPack_t} \ is \ a \ pointer \ to \ an \ opaque \ structure \ holding \ the \ description \ of \ the \ cudnnFusedOps \ variant \ parameters. Use the function <math display="block"> \underline{ cudnnCreateFusedOpsVariantParamPack()} \ to \ create \ one \ instance \ of \ this \ structure, \ and \ the \ function \ \underline{ cudnnDestroyFusedOpsVariantParamPack()} \ to \ destroy \ a \ previously-created \ descriptor.$

6.1.2. Struct Types

6.1.2.1. cudnnConvolutionBwdFilterAlgoPerf_t

 ${\tt cudnnConvolutionBwdFilterAlgoPerf_t} \ is \ a \ structure \ containing \ performance \ results \ returned \ by \ \underline{cudnnFindConvolutionBackwardFilterAlgorithm()} \ or \ heuristic \ results \ returned \ by \ \underline{cudnnGetConvolutionBackwardFilterAlgorithm_v7()}.$

Data Members

cudnnConvolutionBwdFilterAlgo t algo

The algorithm runs to obtain the associated performance metrics.

cudnnStatus t status

If any error occurs during the workspace allocation or timing of <u>cudnnConvolutionBackwardFilter()</u>, this status will represent that error. Otherwise, this status will be the return status of cudnnConvolutionBackwardFilter().

- CUDNN_STATUS_ALLOC_FAILED if any error occurred during workspace allocation or if the provided workspace is insufficient.
- CUDNN_STATUS_INTERNAL_ERROR if any error occurred during timing calculations or workspace deallocation.
- Otherwise, this will be the return status of <u>cudnnConvolutionBackwardFilter()</u>.

float time

The execution time of cudnnConvolutionBackwardFilter() (in milliseconds).

size t memory

The workspace size (in bytes).

cudnnDeterminism t determinism

The determinism of the algorithm.

cudnnMathType t mathType

The math type provided to the algorithm.

int reserved[3]

Reserved space for future properties.

6.1.3. Enumeration Types

6.1.3.1. cudnnFusedOps_t

The <code>cudnnFusedOps_t</code> type is an enumerated type to select a specific sequence of computations to perform in the fused operations.

Member Description				
CUDNN_FUSED_SCALE_BIAS_ACTIVATION_CONV_BNSOATES per-channel basis, it performs these operations in this order: scale, add bias, activation, convolution, and generate batchnorm statistics.				
CUDNN_FUSED_SCALE_BIAS_ACTIVATION_WGR = 1	On a per-channel basis, it performs these operations in this order: scale, add bias, activation, convolution backward weights, and generate batchnorm statistics.			
CUDNN_FUSED_SCAL	E_BIAS_ACTIVATION_WGRAD			
Output	Input			
dw ← wgrad F	ReLU Scale & equivalent scale equivalent bias			
y ₁ = 1	ReLU(y ₀) $y_0 = scale(x) + bias$ dy			
CUDNN_FUSED_BN_FINALIZE_STATISTICS_TR = 2	AININGomputes the equivalent scale and bias from ySum, ySqSum and learned scale, bias. Optionally update running statistics and generate saved stats			
CUDNN_FUSED_BN_FINALIZE_STATISTICS_INFERENComputes the equivalent scale and bias from the learned running statistics and the learned scale, bias.				
CUDNN_FUSED_CONV_SCALE_BIAS_ADD_ACTIVATIONON a per-channel basis, performs these operations in this order: convolution, scale, add bias, element-wise addition with another tensor, and activation.				
CUDNN_FUSED_SCALE_BIAS_ADD_ACTIVATION_GEN Operations in this order: scale and bias on tensor, scale, and bias on a second tensor element-wise addition of these two tensor and on the resulting tensor perform activated and generate activation bit mask.				

Member	Description
CUDNN_FUSED_DACTIVATION_FORK_DBATCHNORM = 6	On a per-channel basis, performs these operations in this order: backward activation, fork (meaning, write out gradient for the residual branch), and backward batch norm.

6.1.3.2. cudnnFusedOpsConstParamLabel_t

The cudnnFusedOpsConstParamLabel t is an enumerated type for the selection of the type of the cudnnFusedOps descriptor. For more information, refer to cudnnSetFusedOpsConstParamPackAttribute().

```
typedef enum {
 CUDNN_PARAM_XDESC
                                                                                                          = 0,
 CUDNN_PARAM_XDATA_PLACEHOLDER
CUDNN_PARAM_BN_MODE
 CUDNN PARAM BN MODE
CUDNN PARAM BN EQSCALEBIAS DESC
CUDNN PARAM BN EQSCALE PLACEHOLDER
CUDNN PARAM BN EQBIAS PLACEHOLDER
                                                                                                       = 4,
 CUDNN_PARAM_ACTIVATION_DESC
CUDNN_PARAM_CONV_DESC
CUDNN_PARAM_WDESC
CUDNN_PARAM_WDATA_PLACEHOLDER
                                                                                                         = 7,
                                                                                                       = 8,
                                                                                                       = 9,
  CUDNN_PARAM_DWDESC
                                                                                                          = 10,
 CUDNN_PARAM_DWDATA_PLACEHOLDER
CUDNN_PARAM_YDESC
                                                                                                          = 11,
                                                                                                         = 12,
  CUDNN PARAM YDATA PLACEHOLDER
                                                                                                         = 13,
  CUDNN PARAM DYDESC
                                                                                                       = 14,
 CUDNN_PARAM_DYDESC = 14,
CUDNN_PARAM_DYDATA_PLACEHOLDER = 15,
CUDNN_PARAM_YSTATS_DESC = 16,
CUDNN_PARAM_YSUM_PLACEHOLDER = 17,
CUDNN_PARAM_YSQUM_PLACEHOLDER = 18,
CUDNN_PARAM_BN_SCALEBIAS_MEANVAR_DESC = 19,
CUDNN_PARAM_BN_SCALE_PLACEHOLDER = 20,
CUDNN_PARAM_BN_BIAS_PLACEHOLDER = 21,
CUDNN_PARAM_BN_BIAS_PLACEHOLDER = 21,
CUDNN_PARAM_BN_SAVED_MEAN_PLACEHOLDER = 23,
CUDNN_PARAM_BN_SAVED_INVSTD_PLACEHOLDER = 24.
  CUDNN PARAM BN RUNNING MEAN PLACEHOLDER = 24,
 CUDNN PARAM BN RUNNING MEAN FLACEHOLDER = 24,
CUDNN PARAM BN RUNNING VAR PLACEHOLDER = 25,
CUDNN PARAM ZDESC = 26,
CUDNN PARAM ZDATA PLACEHOLDER = 27,
CUDNN PARAM BN Z EQSCALEBIAS DESC = 28,
CUDNN PARAM BN Z EQSCALE PLACEHOLDER = 29,
CUDNN PARAM BN Z EQBIAS PLACEHOLDER = 30,
CUDNN PARAM ACTIVATION BITMASK DESC = 31,
CUDNN PARAM ACTIVATION BITMASK DESC = 31,
 CUDNN_PARAM_ACTIVATION_BITMASK_PLACEHOLDER = 32,
CUDNN_PARAM_DXDESC = 33,
 CUDNN PARAM DZDESC = 33,
CUDNN PARAM DZDESC = 35
CUDNN PARAM DZDESC = 35
 CUDNN_PARAM_BN_DSCALE_PLACEHOLDER = 36,
CUDNN_PARAM_BN_DSCALE_PLACEHOLDER = 37,
CUDNN_PARAM_BN_DBIAS_PLACEHOLDER = 38.
} cudnnFusedOpsCopatRy
 CUDNN_PARAM_DZDATA_PLACEHOLDER
 } cudnnFusedOpsConstParamLabel t;
```

Short-form used	Stands for
Setter	$\underline{\text{cudnnSetFusedOpsConstParamPackAttribute()}}$
Getter	$\underline{\text{cudnnGetFusedOpsConstParamPackAttribute()}}$
X_PointerPlaceHolder_t	cudnnFusedOpsPointerPlaceHolder_t
x_ prefix in the <i>Attribute</i> column	Stands for CUDNN_PARAM_ in the enumerator name

Table 29. CUDNN_FUSED_SCALE_BIAS_ACTIVATION_CONV_BNSTATS

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
X_XDESC	In the setter, the *param should be xDesc, a pointer to a previously initialized cudnnTensorDescripto	Tensor descriptor describing the size, layout, and datatype of the x (input) tensor.	NULL
X_XDATA_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether xData pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_BN_MODE	In the setter, the *param should be a pointer to a previously initialized cudnnBatchNormMode	Describes the mode of operation for the scale, bias and the statistics. †* As of cuDNN 7.6.0, only CUDNN_BATCHNORM_SPAT and CUDNN_BATCHNORM_SPAT are supported, meaning, scale, bias, and statistics are all per-channel.	
X_BN_EQSCALEBIAS_DES	cIn the setter, the *param should be a pointer to a previously initialized cudnnTensorDescriptor	Tensor descriptor describing the size, layout, and datatype of the batchNorm equivalent scale and bias tensors. The shapes must match the mode specified in CUDNN_PARAM_BN_MODE. If set to NULL, both scale and bias operation will become a NOP.	NULL
X_BN_EQSCALE_PLACEHO	Librithe setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether batchnorm equivalent scale pointer in the VariantParamPack will be NULL, or if not,	CUDNN_PTR_NULL

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
		user promised pointer alignment *.	
		If set to CUDNN_PTR_NULL, then the scale operation becomes a NOP.	
X_BN_EQBIAS_PLACEHO	*param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether batchnorm equivalent bias pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
		If set to CUDNN_PTR_NULL, then the bias operation becomes a NOP.	
X_ACTIVATION_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnActivationDescrip	Describes the activation operation. As of cuDNN 7.6.0, only of activation modes of CUDNN_ACTIVATION_REL and	NULL
		CUDNN_ACTIVATION_IDE are supported. If set to NULL or if the activation mode is set to CUDNN_ACTIVATION_IDE then the activation in the op sequence becomes a NOP.	
x_conv_desc	In the setter, the *param should be a pointer to a previously initialized cudnnConvolutionDescri	Describes the convolution operation.	NULL
X_WDESC	In the setter, the *param should be a pointer to a previously initialized cudnnFilterDescriptor_t	Filter descriptor describing the size, layout and datatype of the w (filter) tensor.	NULL

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
X_WDATA_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether w (filter) tensor pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_YDESC	In the setter, the *param should be a pointer to a previously initialized cudnnTensorDescriptor	Tensor descriptor describing the size, layout and datatype of the y (output) tensor. t*.	NULL
X_YDATA_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether y (output) tensor pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_YSTATS_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnTensorDescripto	Tensor descriptor describing the size, layout and datatype of the sum of y and remain of y square tensors. The shapes need to match the mode specified in CUDNN_PARAM_BN_MODE. If set to NULL, the y	NULL
		statistics generation operation will become a NOP.	
X_YSUM_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether sum of y pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
		If set to CUDNN_PTR_NULL, the y statistics generation operation will become a NOP.	

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
K_YSQSUM_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether sum of y square pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
		If set to CUDNN_PTR_NULL, the y statistics generation operation will become a NOP.	



Note:

- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_NULL, then the device pointer in the VariantParamPack needs to be NULL as well.
- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_ELEM_ALIGNED or CUDNN_PTR_16B_ALIGNED, then the device pointer in the VariantParamPack may not be NULL and need to be at least element-aligned or 16 bytes-aligned, respectively.

As of cuDNN 7.6.0, if the conditions in <u>Table 30</u> are met, then the fully fused fast path will be triggered. Otherwise, a slower partially fused path will be triggered.

Table 30. Conditions for Fully Fused Fast Path (Forward)

Parameter	Condition
Device compute capability	Need to be one of 7.0, 7.2 or 7.5.
CUDNN_PARAM_XDESC	Tensor is 4 dimensional
CUDNN_PARAM_XDATA_PLACEHOLDER	Datatype is CUDNN_DATA_HALF
	Layout is NHWC fully packed
	Alignment is CUDNN_PTR_16B_ALIGNED
	Tensor's ${\tt C}$ dimension is a multiple of 8.
CUDNN_PARAM_BN_EQSCALEBIAS_DESC	If either one of scale and bias operation is not
CUDNN PARAM BN EQSCALE PLACEHOLDER	turned into a NOP:
CUDNN PARAM BN EQBIAS PLACEHOLDER	Tensor is 4 dimensional with shape 1xCx1x1
	Datatype is CUDNN_DATA_HALF
	Layout is fully packed

Parameter	Condition
	Alignment is CUDNN_PTR_16B_ALIGNED
CUDNN_PARAM_CONV_DESC	Convolution descriptor's mode needs to be CUDNN_CROSS_CORRELATION.
CUDNN_PARAM_WDESC CUDNN_PARAM_WDATA_PLACEHOLDER	Convolution descriptor's dataType needs to be CUDNN_DATA_FLOAT.
	Convolution descriptor's dilationA is (1,1).
	Convolution descriptor's group count needs to be 1.
	Convolution descriptor's mathType needs to be CUDNN_TENSOR_OP_MATH or CUDNN_TENSOR_OP_MATH_ALLOW_CONVERSION.
	Filter is in NHWC layout
	Filter's data type is CUDNN_DATA_HALF
	Filter's K dimension is a multiple of 32
	Filter size RxS is either 1x1 or 3x3
	If filter size RxS is 1x1, convolution descriptor's padA needs to be (0,0) and filterStrideA needs to be (1,1).
	Filter's alignment is CUDNN_PTR_16B_ALIGNED
CUDNN_PARAM_YDESC	Tensor is 4 dimensional
CUDNN_PARAM_YDATA_PLACEHOLDER	Datatype is CUDNN_DATA_HALF
	Layout is NHWC fully packed
	Alignment is CUDNN_PTR_16B_ALIGNED
CUDNN_PARAM_YSTATS_DESC CUDNN_PARAM_YSUM_PLACEHOLDER	If the generate statistics operation is not turned into a NOP:
CUDNN PARAM YSQSUM PLACEHOLDER	Tensor is 4 dimensional with shape 1xKx1x1
CODMW_LW/WW19890M_LMWCFMOTDEV	Datatype is CUDNN_DATA_FLOAT
	Layout is fully packed
	Alignment is CUDNN_PTR_16B_ALIGNED

Table 31. CUDNN_FUSED_SCALE_BIAS_ACTIVATION_WGRAD

For the attribute CUDNN_FUSED_SCALE_BIAS_ACTIVATION_WGRAD in cudnnfusedOp_t			
Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
X_XDESC	In the setter, the *param should be	Tensor descriptor describing the size,	NULL

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation	
	xDesc, a pointer to a previously initialized cudnnTensorDescrip	layout and datatype of the x (input) tænsor		
X_XDATA_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether xData pointer in the VariantParamPack will be NULL, or if enot,*user promised pointer alignment *.	CUDNN_PTR_NULL	
X_BN_MODE	In the setter, the *param should be a pointer to a previously initialized cudnnBatchNormMon	Describes the mode of operation for the scale, bias and the statistics. de t* As of cuDNN 7.6.0, only CUDNN_BATCHNORM_SPA and CUDNN_BATCHNORM_SPA are supported, meaning, scale, bias, and statistics are all per-channel.		VATIO
X_BN_EQSCALEBIAS_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnTensorDescript	Tensor descriptor describing the size, layout and datatype of the batchNorm orgulivalent scale and bias tensors. The shapes must match the mode specified in CUDNN_PARAM_BN_MODE If set to NULL, both scale and bias operation will become a NOP.	NULL	
X_BN_EQSCALE_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether batchnorm equivalent scale pointer in the eVartantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL	

For the attribute CUDNN_FUSED_SCALE_BIAS_ACTIVATION_WGRAD in cudnnFusedOp_t				
Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation	
		then the scale operation becomes a NOP.		
X_BN_EQBIAS_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether batchnorm equivalent bias pointer in the eVat*antParamPack will be NULL, or if not, user promised pointer alignment *. If set to CUDNN_PTR_NULL, then the bias operation becomes a NOP.	CUDNN_PTR_NULL	
X_ACTIVATION_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnActivationDesc	Describes the activation operation. As of cuDNN 7.6.0, only the ripto, only the activation mode of CUDNN_ACTIVATION_RE and CUDNN_ACTIVATION_ID is supported. If set to NULL or if the activation mode is set to CUDNN_ACTIVATION_ID then the activation in the op sequence becomes a NOP.	ENTITY	
X_CONV_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnConvolutionDe	Describes the convolution operation. scriptor_t*.	NULL	
X_DWDESC	In the setter, the *param should be a pointer to a previously initialized cudnnFilterDescripto	Filter descriptor describing the size, layout and datatype of the dw (filter rgradient output) tensor.	NULL	

For the attribute CUDNN_FUSED_SCALE_BIAS_ACTIVATION_WGRAD in cudnnFusedOp_t				
Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation	
X_DWDATA_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether dw (filter gradient output) tensor pointer in the eVartantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL	
X_DYDESC	In the setter, the *param should be a pointer to a previously initialized cudnnTensorDescript	Tensor descriptor describing the size, layout and datatype of the dy (gradient tanpåt) tensor.	NULL	
X_DYDATA_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether dy (gradient input) tensor pointer in the VariantParamPack ewill be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL	



Note:

- If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_NULL, then the device pointer in the VariantParamPack needs to be NULL as well.
- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_ELEM_ALIGNED or CUDNN_PTR_16B_ALIGNED, then the device pointer in the VariantParamPack may not be NULL and needs to be at least element-aligned or 16 bytes-aligned, respectively.

As of cuDNN 7.6.0, if the conditions in <u>Table 32</u> are met, then the fully fused fast path will be triggered. Otherwise a slower partially fused path will be triggered.

Table 32. Conditions for Fully Fused Fast Path (Backward)

Parameter	Condition
Device compute capability	Needs to be one of 7.0, 7.2 or 7.5.
CUDNN_PARAM_XDESC	Tensor is 4 dimensional
CUDNN_PARAM_XDATA_PLACEHOLDER	Datatype is CUDNN_DATA_HALF
	Layout is NHWC fully packed
	Alignment is CUDNN_PTR_16B_ALIGNED

Parameter	Condition
	Tensor's c dimension is a multiple of 8.
CUDNN_PARAM_BN_EQSCALEBIAS_DESC	If either one of scale and bias operation is not turned into a NOP:
CUDNN_PARAM_BN_EQSCALE_PLACEHOLDER	Tensor is 4 dimensional with shape 1xCx1x1
CUDNN_PARAM_BN_EQBIAS_PLACEHOLDER	Datatype is CUDNN_DATA_HALF
	Layout is fully packed
	Alignment is CUDNN_PTR_16B_ALIGNED
CUDNN_PARAM_CONV_DESC CUDNN PARAM DWDESC	Convolution descriptor's mode needs to be CUDNN_CROSS_CORRELATION.
CUDNN_PARAM_DWDATA_PLACEHOLDER	Convolution descriptor's dataType needs to be CUDNN_DATA_FLOAT.
	Convolution descriptor's dilationA is (1,1)
	Convolution descriptor's group count needs to be 1.
	Convolution descriptor's mathType needs to be CUDNN_TENSOR_OP_MATH Or CUDNN_TENSOR_OP_MATH_ALLOW_CONVERSION.
	Filter gradient is in NHWC layout
	Filter gradient's data type is CUDNN_DATA_HALF
	Filter gradient's K dimension is a multiple of 32.
	Filter gradient size RxS is either 1x1 or 3x3
	If filter gradient size RxS is 1x1, convolution descriptor's padA needs to be (0,0) and filterStrideA needs to be (1,1).
	Filter gradient's alignment is CUDNN_PTR_16B_ALIGNED
CUDNN_PARAM_DYDESC	Tensor is 4 dimensional
CUDNN_PARAM_DYDATA_PLACEHOLDER	Datatype is CUDNN_DATA_HALF
	Layout is NHWC fully packed
	Alignment is CUDNN_PTR_16B_ALIGNED

Table 33. CUDNN_FUSED_BN_FINALIZE_STATISTICS_TRAINING

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
X_BN_MODE	In the setter, the *param should be a pointer to a previously initialized cudnnBatchNormMo	Describes the mode of operation for the scale, bias and the statistics. de t* As of cuDNN 7.6.0, only CUDNN_BATCHNORM_SPA and CUDNN_BATCHNORM_SPA are supported, meaning, scale, bias and statistics are all per-channel.	
X_YSTATS_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnTensorDescrip	Tensor descriptor describing the size, layout and datatype of the sum of y and tsum of y square tensors. The shapes need to match the mode specified in CUDNN_PARAM_BN_MODE	NULL
X_YSUM_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether sum of y pointer in the VariantParamPack ewill be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_YSQSUM_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether sum of y square pointer in the VariantParamPack ewill be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_BN_SCALEBIAS_MEANVAR_	DE skn the setter, the *param should be a pointer to a previously initialized cudnnTensorDescript	A common tensor descriptor describing the size, layout and datatype of tahe. batchNorm trained scale, bias and statistics	NULL

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
		tensors. The shapes need to match the mode specified in CUDNN_PARAM_BN_MODE (similar to the bnScaleBiasMeanVarD field in the cudnnBatchNormaliza API).	esc
X_BN_SCALE_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm trained scale pointer in the	CUDNN_PTR_NULL
		will be NULL, or if not, user promised pointer alignment *.	
		If the output of BN_EQSCALE is not needed, then this is not needed and may be NULL.	
K_BN_BIAS_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm trained bias pointer in the eVattantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
		If neither output of BN_EQSCALE or BN_EQBIAS is needed, then this is not needed and may be NULL.	
X_BN_SAVED_MEAN_PLACEHOI	*param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm saved mean pointer in the VariantParamPack ewilt be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
		If set to CUDNN_PTR_NULL, then the computation for this output becomes a NOP.	
X_BN_SAVED_INVSTD_PLACEHO	Limethe setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm saved inverse standard deviation epointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
		If set to CUDNN_PTR_NULL, then the computation for this output becomes a NOP.	
X_BN_RUNNING_MEAN_PLACEHO	Limethe setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm running mean pointer in the eVartantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
		If set to CUDNN_PTR_NULL, then the computation for this output becomes a NOP.	
X_BN_RUNNING_VAR_PLACEHOL	burthe setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm running variance pointer in the eVartantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
		If set to CUDNN_PTR_NULL, then the computation for this output becomes a NOP.	
X_BN_EQSCALEBIAS_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnTensorDescript	and bias tensors. The shapes need to match the mode specified in CUDNN_PARAM_BN_MODE	NULL
		If neither output of BN_EQSCALE or BN_EQBIAS is needed, then this is not needed and may be NULL.	
X_BN_EQSCALE_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether batchnorm equivalent scale pointer in the eVattantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
		If set to CUDNN_PTR_NULL, then the computation for this output becomes a NOP.	
X_BN_EQBIAS_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether batchnorm equivalent bias pointer in the eVattantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL

For the attribute CUDNN_FUSED_BN_FINALIZE_STATISTICS_TRAINING in cudnnFusedOp_t				
Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation	
		If set to CUDNN_PTR_NULL, then the computation for this output becomes a NOP.		

Table 34. CUDNN_FUSED_BN_FINALIZE_STATISTICS_INFERENCE

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
X_BN_MODE	In the setter, the *param should be a pointer to a previously initialized cudnnBatchNormMo	Describes the mode of operation for the scale, bias and the statistics. de t* As of cuDNN 7.6.0, only CUDNN_BATCHNORM_SPA and CUDNN_BATCHNORM_SPA are supported, meaning, scale, bias and statistics are all per-channel.	
X_BN_SCALEBIAS_MEANVAR_DE	stn the setter, the *param should be a pointer to a previously initialized cudnnTensorDescript	A common tensor descriptor describing the size, layout and datatype of othe batchNorm trained scale, bias and statistics tensors. The shapes need to match the mode specified in CUDNN_PARAM_BN_MODE (similar to the bnScaleBiasMeanVarD field in the	

	Expected Descriptor Type Passed in, in the		Default Value
Attribute	Setter	Description	After Creation
		cudnnBatchNormaliza API).	tion*
X_BN_SCALE_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm trained scale pointer in the eVartantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_BN_BIAS_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm trained bias pointer in the eVattantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_BN_RUNNING_MEAN_PLACEHO	Limethe setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm running mean pointer in the eVartantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_BN_RUNNING_VAR_PLACEHOI	Durathe setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether the batchNorm running variance pointer in the eVattantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_BN_EQSCALEBIAS_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnTensorDescript	Tensor descriptor describing the size, layout and datatype of the batchNorm or dequivalent scale and bias tensors. The shapes need to match the mode specified in CUDNN PARAM BN MODE	NULL

For the attribute CUDNN_FUSED_BN_FINALIZE_STATISTICS_INFERENCE in CudnnFusedOp_t				
Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation	
X_BN_EQSCALE_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether batchnorm equivalent scale pointer in the eVartantParamPack will be NULL, or if not, user promised pointer alignment *. If set to CUDNN_PTR_NULL, then the computation for this output becomes a NOP.	CUDNN_PTR_NULL	
X_BN_EQBIAS_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHold	Describes whether batchnorm equivalent bias pointer in the eVattantParamPack will be NULL, or if not, user promised pointer alignment *. If set to CUDNN_PTR_NULL, then the computation for this	CUDNN_PTR_NULL	

Table 35.CUDNN_FUSED_CONVOLUTION_SCALE_BIAS_ADD_RELU

For the attribute CUDNN_FUSED_CONVOLUTION_SCALE_BIAS_ADD_RELU in cudnnFusedOp_t
This operation performs the following computation, where * denotes convolution
operator: y=1 (w*x)+2 z+b

Expected
Descriptor Type

Passed in, in the Setter

Description

Tensor descriptor describing the size,

Default Value After Creation

Tensor descriptor describing the size,

For the attribute CUDNN_FUSED_CONVOLUTION_SCALE_BIAS_ADD_RELU in cudnnFusedOp_t
This operation performs the following computation, where * denotes convolution
operator: y=1 (w*x)+2 z+b

Attribute	Expected Descriptor Type Passed in, in the Setter	Description	Default Value After Creation
333336036	previously initialized cudnnTensorDescripto	layout and datatype of	
X_XDATA_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether xData pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_CONV_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnConvolutionDescri	Describes the convolution operation.	NULL
X_WDESC	In the setter, the *param should be a pointer to a previously initialized cudnnFilterDescriptor_t	Filter descriptor describing the size, layout and datatype of the w (filter) tensor.	NULL
X_WDATA_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether w (filter) tensor pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL
X_BN_EQSCALEBIAS_DES	cIn the setter, the *param should be a pointer to a previously initialized cudnnTensorDescriptor	Tensor descriptor describing the size, layout and datatype of the α_1 scale and bias tensors. The tensor should have shape $(1,K,1,1)$, K is the number of output features.	NULL
X_BN_EQSCALE_PLACEHO	Lbr. the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether batchnorm equivalent scale or α ₁ tensor pointer in the \[\VariantParamPack\] will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL

For the attribute CUDNN_FUSED_CONVOLUTION_SCALE_BIAS_ADD_RELU in cudnnFusedOp_t
This operation performs the following computation, where * denotes convolution
operator: y=1 (w*x)+2 z+b

operator: y=1 (w*x) +2	Expected			
Attribute	Descriptor Type Passed in, in the Setter	Description	Default Value After Creation	
		If set to $ \begin{array}{c} \text{CUDNN_PTR_NULL, then} \\ \alpha_1 \text{ scaling becomes an} \\ \text{NOP.} \end{array} $		
X_ZDESC	In the setter, the *param should be xDesc, a pointer to a previously initialized cudnnTensorDescripto	Tensor descriptor describing the size, layout and datatype of the z tensor. If tunset, then z scaleadd term becomes a NOP.	NULL	
CUDNN_PARAM_ZDATA_PL	Almethessetter, the *param Should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether z tensor pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *. If set to CUDNN_PTR_NULL, then z scale-add term becomes a NOP.	CUDNN_PTR_NULL	
CUDNN_PARAM_BN_Z_EQS	chathe settes the *param should be a pointer to a previously initialized cudnnTensorDescriptor	Tensor descriptor describing the size, layout and datatype of the α_2 tensor. If set to NULL then scaling for input z becomes a NOP.	NULLPTR	
CUDNN_PARAM_BN_Z_EQS	chathe settenther *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether batchnorm z-equivalent scaling pointer in the \text{VariantParamPack} will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL	
		If set to CUDNN_PTR_NULL, then the scaling for input z becomes a NOP.		

For the attribute CUDNN_FUSED_CONVOLUTION_SCALE_BIAS_ADD_RELU in cudnnFusedOp_t This operation performs the following computation, where * denotes convolution operator: y=1 (w*x)+2 z+b

Attribute	Expected Descriptor Type Passed in, in the ttribute Setter		Default Value After Creation	
X_ACTIVATION_DESC	In the setter, the *param should be a pointer to a previously initialized cudnnActivationDescrip	Describes the activation operation. As of 7.6.0, only activation modes of CUDNN_ACTIVATION_REL and CUDNN_ACTIVATION_IDE are supported. If set to NULL or if the activation mode is set to CUDNN_ACTIVATION_IDE then the activation in the op sequence becomes a NOP.	NTITY	
X_YDESC	In the setter, the *param should be a pointer to a previously initialized cudnnTensorDescripto	Tensor descriptor describing the size, layout and datatype of the y (output) tensor. **_t*.	NULL	
X_YDATA_PLACEHOLDER	In the setter, the *param should be a pointer to a previously initialized X_PointerPlaceHolder	Describes whether y (output) tensor pointer in the VariantParamPack will be NULL, or if not, user promised pointer alignment *.	CUDNN_PTR_NULL	

6.1.3.3. cudnnFusedOpsPointerPlaceHolder_t

 $\verb|cudnnFusedOpsPointerPlaceHolder_t| is an enumerated type used to select the alignment type of the \verb|cudnnFusedOps| descriptor pointer|.$

Member	Description
CUDNN_PTR_NULL = 0	Indicates that the pointer to the tensor in the variantPack will be NULL.
CUDNN_PTR_ELEM_ALIGNED = 1	Indicates that the pointer to the tensor in the variantPack will not be NULL, and will have element alignment.

Member	Description
CUDNN_PTR_16B_ALIGNED = 2	Indicates that the pointer to the tensor in the variantPack will not be NULL, and will have 16 byte alignment.

6.1.3.4. cudnnFusedOpsVariantParamLabel_t

The <code>cudnnFusedOpsVariantParamLabel_t</code> is an enumerated type that is used to set the buffer pointers. These buffer pointers can be changed in each iteration.

```
typedef enum {
CUDNN PTR XDATA
                                                  = 0,
                                                  = 1,
CUDNN_PTR_BN_EQSCALE
CUDNN_PTR_BN_EQBIAS
CUDNN_PTR_WDATA
CUDNN PTR DWDATA
CUDNN PTR YDATA
CUDNN PTR DYDATA
CUDNN_PTR_YSUM
CUDNN_PTR_YSQSUM
CUDNN PTR WORKSPACE
CUDNN PTR BN SCALE
                                                 = 10,
CUDNN_PTR_BN_BIAS
                                                 = 11,
CUDNN_PTR_BN_SAVED_MEAN
CUDNN_PTR_BN_SAVED_INVSTD
                                                 = 12,
                                                = 13,
CUDNN_PTR_BN_RUNNING_MEAN
                                                = 14,
CUDNN PTR BN RUNNING VAR
                                                = 15,
                                                 = 16,
CUDNN PTR ZDATA
CUDNN_PTR_BN_Z_EQSCALE
CUDNN_PTR_BN_Z_EQBIAS
                                                 = 17,
                                                 = 18,
CUDNN PTR ACTIVATION BITMASK
                                                = 19,
CUDNN PTR DXDATA
                                                = 20,
                                                = 21,
CUDNN PTR DZDATA
CUDNN_PTR_BN_DSCALE
                                                 = 22,
CUDNN PTR BN DBIAS
CUDNN SCALAR SIZE T WORKSPACE SIZE IN BYTES = 100,
CUDNN SCALAR INT64 T BN ACCUMULATION COUNT = 101,
CUDNN SCALAR DOUBLE BN EXP AVG FACTOR = 102,
CUDNN_SCALAR_DOUBLE_BN_EPSILON
                                                = 103,
} cudnnFusedOpsVariantParamLabel t;
```

Table 36. Legend For Tables in This Section

Short-form used	Stands for
Setter	cudnnSetFusedOpsVariantParamPackAttribute()
Getter	cudnnGetFusedOpsVariantParamPackAttribute()
x_{-} prefix in the Attribute key column	Stands for CUDNN_PTR_ or CUDNN_SCALAR_ in the enumerator name.

Table 37. CUDNN_FUSED_SCALE_BIAS_ACTIVATION_CONV_BNSTATS

	Evaceted			
Attribute key	Expected Descriptor Type Passed in, in the Setter	I/O Type	Description	Default Value
X_XDATA	void *	input	Pointer to x (input) tensor on device, need to agree with previously set CUDNN_PARAM_XDATA_PLACEHOLD attribute *.	NULL ER
X_BN_EQSCALE	void *	input	Pointer to batchnorm equivalent scale tensor on device, need to agree with previously set CUDNN_PARAM_BN_EQSCALE_PLAC attribute *.	NULL EHOLDER
X_BN_EQBIAS	void *	input	Pointer to batchnorm equivalent bias tensor on device, need to agree with previously set CUDNN_PARAM_BN_EQBIAS_PLACE attribute *.	NULL HOLDER
X_WDATA	void *	input	Pointer to w (filter) tensor on device, need to agree with previously set CUDNN_PARAM_WDATA_PLACEHOLD attribute *.	NULL ER
X_YDATA	void *	output	Pointer to y (output) tensor on device, need to agree with previously set CUDNN_PARAM_YDATA_PLACEHOLD attribute *.	NULL ER
x_YSUM	void *	output	Pointer to sum of y tensor on device, need to agree with previously set CUDNN_PARAM_YSUM_PLACEHOLDE attribute *.	NULL R
x_YSQSUM	void *	output	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_YSQSUM_PLACEHOL attribute *.	NULL DER
X_WORKSPACE	void *	input	Pointer to user allocated workspace on device. Can be	NULL

NVIDIA cuDNN

For the attribute CUDNN_FUSED_SCALE_BIAS_ACTIVATION_CONV_BNSTATS in cudnnFusedOp_t					
Attribute key	Expected Descriptor Type Passed in, in the Setter	I/O Type	Description	Default Value	
			NULL if the workspace size requested is 0.		
X_SIZE_T_WORKSPACE_SIZ	E <u>s</u> im <u>eB</u> ¥TES	input	Pointer to a size_t value in host memory describing the user allocated workspace size in bytes. The amount needs to be equal or larger than the amount requested in cudnnMakeFusedOpsPlan.	0	



Note:

- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_NULL, then the device pointer in the VariantParamPack needs to be NULL as well
- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_ELEM_ALIGNED or CUDNN_PTR_16B_ALIGNED, then the device pointer in the VariantParamPack may not be NULL and needs to be at least element-aligned or 16 bytes-aligned, respectively.

Table 38. CUDNN FUSED SCALE BIAS ACTIVATION WGRAD

For the attribute CUDNN_FUSED_SCALE_BIAS_ACTIVATION_WGRAD in cudnnFusedOp_t					
Attribute key	Expected Descriptor Type Passed in, in the Setter		Description	Default Value	
X_XDATA	void *	input	Pointer to x (input) tensor on device, need to agree with previously set CUDNN_PARAM_XDATA_PLACEHO attribute *.	NULL	
X_BN_EQSCALE	void *	input	Pointer to batchnorm equivalent scale tensor on device, need to agree with previously set CUDNN_PARAM_BN_EQSCALE_PI attribute *.	NULL LACEHOLDER	

For the attribute CUDNN_FUSED_SCALE_BIAS_ACTIVATION_WGRAD in cudnnFusedOp_t					
Attribute key	Expected Descriptor Type Passed in, in the Setter	I/O Type	Description	Default Value	
X_BN_EQBIAS	void *	input	Pointer to batchnorm equivalent bias tensor on device, need to agree with previously set CUDNN_PARAM_BN_EQBIAS_PLA attribute *.	NULL ACEHOLDER	
X_DWDATA	void *	output	Pointer to dw (filter gradient output) tensor on device, need to agree with previously set CUDNN_PARAM_WDATA_PLACEHO attribute *.	NULL	
X_DYDATA	void *	input	Pointer to dy (gradient input) tensor on device, need to agree with previously set CUDNN_PARAM_YDATA_PLACEHO attribute *.	NULL	
X_WORKSPACE	void *	input	Pointer to user allocated workspace on device. Can be NULL if the workspace size requested is 0.	NULL	
X_SIZE_T_WORKSPACE_SIZE_IN_E	YSESe_t *	input	Pointer to a size_t value in host memory describing the user allocated workspace size in bytes. The amount needs to be equal or larger than the amount requested in cudnnMakeFusedOpsPlan.	0	



Note:

- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_NULL, then the device pointer in the VariantParamPack needs to be NULL as well.
- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_ELEM_ALIGNED or CUDNN_PTR_16B_ALIGNED, then the device pointer in the VariantParamPack may not be NULL and needs to be at least element-aligned or 16 bytes-aligned, respectively.

Table 39. CUDNN_FUSED_BN_FINALIZE_STATISTICS_TRAINING

	Expected Descript Type Passed in, in the			Default
Attribute key	Setter	Туре	Description	Value
X_YSUM	void *	input	Pointer to sum of y tensor on device, need to agree with previously set CUDNN_PARAM_YSUM_PLACEHOLDE attribute *.	NULL R
X_YSQSUM	void *	input	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_YSQSUM_PLACEHOL attribute *.	NULL DER
X_BN_SCALE	void *	input	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_BN_SCALE_PLACEH attribute *.	NULL
X_BN_BIAS	void *	input	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_BN_BIAS_PLACEHO attribute *.	NULL LDER
X_BN_SAVED_MEAN	void *	output	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_BN_SAVED_MEAN_E attribute *.	NULL
X_BN_SAVED_INVSTD	void *	output	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_BN_SAVED_INVSTE attribute *.	NULL _PLACEHOL
X_BN_RUNNING_MEAN	void *	input/ output	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_BN_RUNNING_MEAN attribute *.	NULL
X_BN_RUNNING_VAR	void *	input/ output	Pointer to sum of y square tensor on device, need to agree with previously set	NULL

	Expected Descript Type Passed in, in the	I/O		Default
Attribute key	Setter	Type	Description	Value
			CUDNN_PARAM_BN_RUNNING_VAR_ attribute *.	PLACEHOLDE
X_BN_EQSCALE	void *	output	Pointer to batchnorm equivalent scale tensor on device, need to agree with previously set CUDNN_PARAM_BN_EQSCALE_PLAC attribute *.	NULL
X_BN_EQBIAS	void *	output	Pointer to batchnorm equivalent bias tensor on device, need to agree with previously set CUDNN_PARAM_BN_EQBIAS_PLACE attribute *.	NULL
X_INT64_T_BN_ACCUMULATION_C	o un 64_t *	input	Pointer to a scalar value in int64_t on host memory.	0
			This value should describe the number of tensor elements accumulated in the sum of $_{\rm Y}$ and sum of $_{\rm Y}$ square tensors.	
			For example, in the single GPU use case, if the mode is CUDNN_BATCHNORM_SPATIAL OR CUDNN_BATCHNORM_SPATIAL_PER the value should be equal to N*H*W of the tensor from which the statistics are calculated.	SISTENT,
			In multi-GPU use case, if all-reduce has been performed on the sum of y and sum of y square tensors, this value should be the sum of the single GPU accumulation count on each of the GPUs.	
X_DOUBLE_BN_EXP_AVG_FACTOR	double *	input	Pointer to a scalar value in double on host memory.	0.0
			Factor used in the moving average computation. See exponentialAverageFactor	

NVIDIA cuDNN PR-09702-001_v8.5.0 | 248

For the attribute CUDNN_FU	SED_BN_FIN	ALIZE_ST	ATISTICS_TRAINING in cudnnF	usedOp_t
Attribute key	Expected Descript Type Passed in, in the Setter		Description	Default Value
			in cudnnBatchNormalization* APIs.	
X_DOUBLE_BN_EPSILON	double *	input	Pointer to a scalar value in double on host memory.	0.0
			A conditioning constant used in the batch normalization formula. Its value should be equal to or greater than the value defined for CUDNN_BN_MIN_EPSILON in cudnn.h.	
			See exponentialAverageFactor in cudnnBatchNormalization* APIs.	
X_WORKSPACE	void *	input	Pointer to user allocated workspace on device. Can be NULL if the workspace size requested is 0.	NULL
X_SIZE_T_WORKSPACE_SIZE_IN	N_BYSTEXSE_t *	input	Pointer to a size_t value in host memory describing the user allocated workspace size in bytes. The amount needs to be equal or larger than the amount requested in cudnnMakeFusedOpsPlan.	0



Note:

- If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_NULL, then the device pointer in the VariantParamPack needs to be NULL as well.
- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_ELEM_ALIGNED or CUDNN_PTR_16B_ALIGNED, then the device pointer in the VariantParamPack may not be NULL and needs to be at least element-aligned or 16 bytes-aligned, respectively.

NVIDIA cuDNN PR-09702-001_v8.5.0 | 249

Table 40. CUDNN_FUSED_BN_FINALIZE_STATISTICS_INFERENCE

Attribute key	Expected Descripte Type Passed in, in the Setter		Description	Default Value
X_BN_SCALE	void *	input	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_BN_SCALE_PLACEHO attribute *.	NULL
X_BN_BIAS	void *	input	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_BN_BIAS_PLACEHOLATTIONS *.	NULL
X_BN_RUNNING_MEAN	void *	input/ output	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_BN_RUNNING_MEAN attribute *.	NULL PLACEHOLDE
X_BN_RUNNING_VAR	void *	input/ output	Pointer to sum of y square tensor on device, need to agree with previously set CUDNN_PARAM_BN_RUNNING_VAR_I attribute *.	NULL PLACEHOLDER
x_bn_eqscale	void *	output	Pointer to batchnorm equivalent scale tensor on device, need to agree with previously set CUDNN_PARAM_BN_EQSCALE_PLACE attribute *.	NULL
X_BN_EQBIAS	void *	output	Pointer to batchnorm equivalent bias tensor on device, need to agree with previously set CUDNN_PARAM_BN_EQBIAS_PLACE attribute *.	NULL
X_DOUBLE_BN_EPSILON	double *	input	Pointer to a scalar value in double on host memory. A conditioning constant used in the batch normalization formula. Its value should be equal to or greater	0.0

For the attribute CUDNN_FUSED_BN_FINALIZE_STATISTICS_INFERENCE in cudnnFusedOp_t					
Attribute key	Expected Descriptor Type Passed in, in the Setter		Description	Default Value	
			than the value defined for CUDNN_BN_MIN_EPSILON in cudnn.h.		
			See exponentialAverageFactor in cudnnBatchNormalization* APIs.		
X_WORKSPACE	void *	input	Pointer to user allocated workspace on device. Can be NULL if the workspace size requested is 0.	NULL	
X_SIZE_T_WORKSPACE_SIZE_IN	BSTTRS_t *	input	Pointer to a size_t value in host memory describing the user allocated workspace size in bytes. The amount needs to be equal or larger than the amount requested in cudnnMakeFusedOpsPlan.	0	

Note:

- If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_NULL, then the device pointer in the VariantParamPack needs to be NULL as well.
- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_ELEM_ALIGNED or CUDNN_PTR_16B_ALIGNED, then the device pointer in the VariantParamPack may not be NULL and needs to be at least element-aligned or 16 bytes-aligned, respectively.

Table 41. CUDNN_FUSED_SCALE_BIAS_ADD_RELU

For the attribute CUDNN_FUSED_BN_FINALIZE_STATISTICS_INFERENCE in cudnnFusedOp_t						
Expected Descriptor Type Passed in, in Attribute key the Setter I/O Type Description Default Value						
X_XDATA void * input Pointer to x (image) tensor						

Attribute key	Expected Descriptor Type Passed in, in the Setter	I/O Type	Description	Default Value
			on device, need to agree with previously set CUDNN_PARAM_XDA attribute *.	TA_PLACEHOLDER
X_WDATA	void *	input	Pointer to w (filter) tensor on device, need to agree with previously set CUDNN_PARAM_WDA attribute *.	NULL TA_PLACEHOLDER
X_BN_EQSCALE	void *	input	Pointer to alphal or batchnorm equivalent scale tensor on device; need to agree with previously set CUDNN_PARAM_BN_attribute *.	NULL EQSCALE_PLACEHOLDER
x_zdata	void *	input	Pointer to z (tensor on device; Need to agree with previously set CUDNN_PARAM_YDA attribute *.	NULL TA_PLACEHOLDER
X_BN_Z_EQSCALE	void *	input	Pointer to alpha2, equivalent scale tensor for z; Need to agree with previously set CUDNN_PARAM_BN_attribute *.	NULL Z_EQSCALE_PLACEHOLI
X_BN_Z_EQBIAS	void *	input	Pointer to batchnorm equivalent bias tensor on device, need to agree with previously set	NULL

Attribute key	Expected Descriptor Type Passed in, in the Setter	I/O Type	Description	Default Value
			CUDNN_PARAM_BN_Z attribute *.	_EQBIAS_PLACEHOLD
X_YDATA	void *	output	Pointer to y (output) tensor on device, need to agree with previously set CUDNN_PARAM_YDAT attribute *.	NULL A_PLACEHOLDER
x_workspace	void *	input	Pointer to user allocated workspace on device. Can be NULL if the workspace size requested is 0.	NULL
X_SIZE_T_WORKSPA	C.E.i_264_Z.EIN_BYTES	input	Pointer to a size_t value in host memory describing the user allocated workspace size in bytes. The amount needs to be equal or larger than the amount requested in cudnnMakeFusedOp	0

Note:

- If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_NULL, then the device pointer in the VariantParamPack needs to be NULL as well.
- ▶ If the corresponding pointer placeholder in ConstParamPack is set to CUDNN_PTR_ELEM_ALIGNED or CUDNN_PTR_16B_ALIGNED, then the device pointer in the VariantParamPack may not be NULL and needs to be at least element-aligned or 16 bytes-aligned, respectively.

6.2. API Functions

6.2.1. cudnnCnnTrainVersionCheck()

cudnnStatus t cudnnCnnTrainVersionCheck(void)

This function checks whether the version of the CnnTrain subset of the library is consistent with the other sub-libraries.

Returns

CUDNN_STATUS_SUCCESS

The version is consistent with other sub-libraries.

CUDNN STATUS VERSION MISMATCH

The version of CnnTrain is not consistent with other sub-libraries. Users should check the installation and make sure all sub-component versions are consistent.

6.2.2. cudnnConvolutionBackwardBias()

This function computes the convolution function gradient with respect to the bias, which is the sum of every element belonging to the same feature map across all of the images of the input tensor. Therefore, the number of elements produced is equal to the number of features maps of the input tensor.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle_t.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*resultValue + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the cuDNN Developer Guide.

dyDesc

Input. Handle to the previously initialized input tensor descriptor. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

dy

Input. Data pointer to GPU memory associated with the tensor descriptor dyDesc.

dbDesc

Input. Handle to the previously initialized output tensor descriptor.

db

Output. Data pointer to GPU memory associated with the output tensor descriptor dbDesc.

Returns

```
CUDNN STATUS SUCCESS
```

The operation was launched successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions are met:

- One of the parameters n, height, width of the output tensor is not 1.
- The numbers of feature maps of the input tensor and output tensor differ.
- The dataType of the two tensor descriptors is different.

6.2.3. cudnnConvolutionBackwardFilter()

```
cudnnStatus t cudnnConvolutionBackwardFilter(
   cudnnHandle t
                                      handle,
   const void
                                      *alpha,
   const cudnnTensorDescriptor t
                                      xDesc,
   const void
                                    dyDesc,
   const cudnnTensorDescriptor t
   const void
                                     *dy,
   const cudnnConvolutionDescriptor_t convDesc,
   cudnnConvolutionBwdFilterAlgo_t
                                      algo,
                                     *workSpace,
   void
                                      workSpaceSizeInBytes,
   size t
                                     *beta,
   const void
   const cudnnFilterDescriptor t
                                      dwDesc,
```

This function computes the convolution weight (filter) gradient of the tensor dy, where y is the output of the forward convolution in $\underline{\text{cudnnConvolutionForward}}$. It uses the specified algo, and returns the results in the output tensor dw. Scaling factors alpha and beta can be used to scale the computed result or accumulate with the current dw.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle t.

alpha, beta

Input. Pointers to scaling factors (in host memory) used to blend the computation result with prior value in the output layer as follows:

```
dstValue = alpha[0]*result + beta[0]*priorDstValue
```

For more information, refer to <u>Scaling Parameters</u> in the *cuDNN Developer Guide*.

xDesc

Input. Handle to a previously initialized tensor descriptor. For more information, refer to cudnnTensorDescriptor_t.

x

Input. Data pointer to GPU memory associated with the tensor descriptor xDesc.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

dy

Input. Data pointer to GPU memory associated with the backpropagation gradient tensor descriptor dyDesc.

convDesc

Input. Previously initialized convolution descriptor. For more information, refer to <u>cudnnConvolutionDescriptor_t</u>.

algo

Input. Enumerant that specifies which convolution algorithm should be used to compute the results. For more information, refer to cudnnConvolutionBwdFilterAlgo_t.

workSpace

Input. Data pointer to GPU memory to a workspace needed to be able to execute the specified algorithm. If no workspace is needed for a particular algorithm, that pointer can be nil.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workSpace.

dwDesc

Input. Handle to a previously initialized filter gradient descriptor. For more information, refer to cudnnFilterDescriptor t.

dw

Input/Output. Data pointer to GPU memory associated with the filter gradient descriptor dwDesc that carries the result.

Supported configurations

This function supports the following combinations of data types for xDesc, dyDesc, convDesc, and dwDesc.

Data Type Configurations	xDesc, dyDesc, and dwDesc Data Type	convDesc Data Type
TRUE_HALF_CONFIG (only supported on architectures with true FP16 support, meaning, compute capability 5.3 and later)	CUDNN_DATA_HALF	CUDNN_DATA_HALF
PSEUDO_HALF_CONFIG	CUDNN_DATA_HALF	CUDNN_DATA_FLOAT
PSEUDO_BFLOAT16_CONFIG	CUDNN_DATA_BFLOAT16	CUDNN_DATA_FLOAT
FLOAT_CONFIG	CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT
DOUBLE_CONFIG	CUDNN_DATA_DOUBLE	CUDNN_DATA_DOUBLE

Supported algorithms



Note: Specifying a separate algorithm can cause changes in performance, support and computation determinism. See the following table for an exhaustive list of algorithm options and their respective supported parameters and deterministic behavior.

The table below shows the list of the supported 2D and 3D convolutions. The 2D convolutions are described first, followed by the 3D convolutions.

For the following terms, the short-form versions shown in the parentheses are used in the table below, for brevity:

- CUDNN CONVOLUTION BWD FILTER ALGO 0 (_ALGO_0)
- CUDNN CONVOLUTION BWD FILTER ALGO 1 (_ALGO_1)
- ► CUDNN CONVOLUTION BWD FILTER ALGO 3 (_ALGO_3)
- CUDNN CONVOLUTION BWD FILTER ALGO FFT (_FFT)
- ► CUDNN CONVOLUTION BWD FILTER ALGO FFT TILING (_FFT_TILING)
- ▶ CUDNN CONVOLUTION BWD FILTER ALGO WINOGRAD NONFUSED (_WINOGRAD_NONFUSED)
- CUDNN TENSOR NCHW (_NCHW)
- CUDNN TENSOR NHWC (_NHWC)
- ► CUDNN TENSOR NCHW VECT C (_NCHW_VECT_C)

Table 42. For 2D convolutions: dwDesc: _NHWC

Filter descriptor dwDesc: _NHWC (refer to <u>cudnnTensorFormat_t</u>)						
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important	
_ALGO_0 and _ALGO_1		NHWC HWC- packed.	NHWC HWC- packed	PSEUDO_HALF_COPSEUDO_BFLOAT FLOAT_CONFIG		

Table 43. For 2D convolutions: dwDesc: _NCHW

Filter descriptor dwDesc: _NCHW						
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important	
_ALGO_0	No	All except _NCHW_VECT_C	NCHW CHW- packed	PSEUDO_HALF_COPSEUDO_BFLOAT FLOAT_CONFIG DOUBLE_CONFIG	greater than 16 CONFIG O for all dimensions	
_ALGO_1	Yes	All except _NCHW_VECT_C	NCHW CHW- packed	PSEUDO_HALF_CONTUE_HALF_CONTUE_HALF_CONTUE_HALF_CONTUE_HOAT_CONTUE_HOAT_CONTUE_HOAT_CONTUE_HOAT_CONTUE_HOAT_CONTUE_HOAT_HOAT_CONTUE_HALF_C	greater than FIG O for all dimensions convDesc	
_FFT	Yes	NCHW CHW- packed	NCHW CHW- packed	PSEUDO_HALF_C	oDilation: 1 for all dimensions convDesc Group Count	

Filter descript	Filter descriptor dwDesc: _NCHW							
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important			
					Support: Greater than 0 xDesc feature map height + 2 * convDesc zero-padding height must equal 256 or less xDesc feature map width + 2 * convDesc zero-padding width must equal 256 or less			
					vertical and horizontal filter stride must equal 1 dwDesc filter height must be greater than convDesc zero-padding height dwDesc filter width must be greater than convDesc zero-padding			
_ALGO_3	No	All except _NCHW_VECT_C	NCHW CHW- packed	PSEUDO_HALF_C				

Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important
				FLOAT_CONFIG DOUBLE_CONFIG	convDesc Group Count Support: Greater than 0
_WINOGRAD_NON	F Ves d	All except _NCHW_VECT_C	NCHW CHW-packed	TRUE_HALF_CON PSEUDO_HALF_CON PSEUDO_BFLOAT FLOAT_CONFIG	all dimensions
_FFT_TILING	Yes	NCHW CHW- packed	NCHW CHW- packed	PSEUDO_HALF_CONFIGER DOUBLE_CONFIGER	oDilation: 1 for all dimensions convDesc Group Count Support: Greater than 0

NVIDIA cuDNN PR-09702-001_v8.5.0 | 260

Filter descriptor dwDesc: _NCHW					
Algo Name	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important
					dyDesc width or height must equal 1 (the same dimension as in xDesc). The other dimension must be less than or equal to 256, meaning, the largest 1D tile size currently supported. convDesc vertical and horizontal filter stride must equal 1 dwDesc filter height must be greater than convDesc zero-padding height dwDesc filter width must be greater than convDesc zero-padding height dwDesc zero-padding width

NVIDIA cuDNN PR-09702-001_v8.5.0 | 261

Table 44. For 3D convolutions: dwDesc: _NCHW

Filter descriptor dwDesc: _NCHW.					
Algo Name (3D Convolutions)	Deterministic (Yes or No)	Tensor Formats Supported for dyDesc	Tensor Formats Supported for dxDesc	Data Type Configuration Supported	Important
_ALGO_0	No	All except _NCDHW_VECT_C.	 NCDHW CDHW- packed NCDHW W-packed NDHWC 	PSEUDO_HALF_C PSEUDO_BFLOAT FLOAT_CONFIG DOUBLE_CONFIG	greater than 16 CONFIG Ofor all dimensions
_ALGO_1	No	All except _NCDHW_VECT_C	NCDHW CDHW- packedNCDHW W-packedNDHWC	PSEUDO_HALF_C PSEUDO_BFLOAT FLOAT_CONFIG DOUBLE_CONFIG	greater than 16 CONFIG Ofor all dimensions
_ALGO_3	No	NCDHW fully- packed	NCDHW fully- packed	PSEUDO_HALF_C PSEUDO_BFLOAT FLOAT_CONFIG DOUBLE_CONFIG	greater than 16 CONFIG Ofor all dimensions

Table 45. For 3D convolutions: dwDesc: NHWC

Filter descriptor dwDesc: _NHWC.					
Algo Name (3D Convolutions)	Deterministic (Yes or No)	Tensor Formats Supported for xDesc	Tensor Formats Supported for dyDesc	Data Type Configuration Supported	Important
_ALGO_1	Yes	NDHWC HWC- packed	NDHWC HWC- packed	PSEUDO_HALF_COPSEUDO_BFLOT1 FLOAT_CONFIG TRUE_HALF_CON	greater than O for all dimensions

Returns

CUDNN STATUS SUCCESS

The operation was launched successfully.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- At least one of the following is NULL: handle, xDesc, dyDesc, convDesc, dwDesc, xData, dyData, dwData, alpha, beta
- xDesc and dyDesc have a non-matching number of dimensions
- xDesc and dwDesc have a non-matching number of dimensions
- xDesc has fewer than three number of dimensions
- xDesc, dyDesc, and dwDesc have a non-matching data type.
- xDesc and dwDesc have a non-matching number of input feature maps per image (or group in case of grouped convolutions).
- yDesc or dwDesc indicate an output channel count that isn't a multiple of group count (if group count has been set in convDesc).

CUDNN STATUS NOT SUPPORTED

At least one of the following conditions are met:

- xDesc or dyDesc have negative tensor striding
- xDesc, dyDesc or dwDesc has a number of dimensions that is not 4 or 5
- The chosen algo does not support the parameters provided; see above for exhaustive list of parameter support for each algo

CUDNN STATUS MAPPING ERROR

An error occurs during the texture object creation associated with the filter data.

```
CUDNN_STATUS_EXECUTION_FAILED
```

The function failed to launch on the GPU.

6.2.4. cudnnCreateFusedOpsConstParamPack()

```
cudnnStatus_t cudnnCreateFusedOpsConstParamPack(
  cudnnFusedOpsConstParamPack_t *constPack,
  cudnnFusedOps t ops);
```

This function creates an opaque structure to store the various problem size information, such as the shape, layout and the type of tensors, and the descriptors for convolution and activation, for the selected sequence of <code>cudnnFusedOps</code> computations.

Parameters

constPack

Input. The opaque structure that is created by this function. For more information, refer to <u>cudnnFusedOpsConstParamPack</u> t.

ops

Input. The specific sequence of computations to perform in the <code>cudnnFusedOps</code> computations, as defined in the enumerant type <code>cudnnFusedOps t</code>.

Returns

CUDNN STATUS BAD PARAM

If either constPack or ops is NULL.

CUDNN_STATUS_ALLOC_FAILED

The resources could not be allocated.

CUDNN STATUS SUCCESS

If the descriptor is created successfully.

6.2.5. cudnnCreateFusedOpsPlan()

```
cudnnStatus_t cudnnCreateFusedOpsPlan(
  cudnnFusedOpsPlan_t *plan,
  cudnnFusedOps t ops);
```

This function creates the plan descriptor for the <code>cudnnFusedOps</code> computation. This descriptor contains the plan information, including the problem type and size, which kernels should be run, and the internal workspace partition.

Parameters

plan

Input. A pointer to the instance of the descriptor created by this function.

ops

Input. The specific sequence of fused operations computations for which this plan descriptor should be created. For more information, refer to <u>cudnnFusedOps_t</u>.

Returns

CUDNN_STATUS_BAD_PARAM

If either the input *plan is NULL or the ops input is not a valid cudnnFusedOp enum.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

CUDNN STATUS SUCCESS

The plan descriptor is created successfully.

6.2.6. cudnnCreateFusedOpsVariantParamPack()

```
cudnnStatus_t cudnnCreateFusedOpsVariantParamPack(
  cudnnFusedOpsVariantParamPack_t *varPack,
  cudnnFusedOps t ops);
```

This function creates the variant pack descriptor for the <code>cudnnFusedOps</code> computation.

Parameters

varPack

Input. Pointer to the descriptor created by this function. For more information, refer to cudnnFusedOpsVariantParamPack_t.

ops

Input. The specific sequence of fused operations computations for which this descriptor should be created.

Returns

CUDNN STATUS SUCCESS

The descriptor is successfully created.

CUDNN STATUS ALLOC FAILED

The resources could not be allocated.

CUDNN STATUS BAD PARAM

If any input is invalid.

6.2.7. cudnnDestroyFusedOpsConstParamPack()

```
cudnnStatus_t cudnnDestroyFusedOpsConstParamPack(
  cudnnFusedOpsConstParamPack t constPack);
```

This function destroys a previously-created $\underline{\text{cudnnFusedOpsConstParamPack_t}}$ structure.

Parameters

constPack

Input. The cudnnFusedOpsConstParamPack_t structure that should be destroyed.

Returns

CUDNN STATUS SUCCESS

If the descriptor is destroyed successfully.

CUDNN STATUS INTERNAL ERROR

If the ops enum value is not supported or invalid.

6.2.8. cudnnDestroyFusedOpsPlan()

```
cudnnStatus_t cudnnDestroyFusedOpsPlan(
  cudnnFusedOpsPlan t plan);
```

This function destroys the plan descriptor provided.

Parameters

plan

Input. The descriptor that should be destroyed by this function.

Returns

CUDNN STATUS SUCCESS

If either the plan descriptor is NULL or the descriptor is successfully destroyed.

6.2.9. cudnnDestroyFusedOpsVariantParamPack()

```
cudnnStatus_t cudnnDestroyFusedOpsVariantParamPack(
  cudnnFusedOpsVariantParamPack t varPack);
```

This function destroys a previously-created descriptor for <code>cudnnFusedOps</code> constant parameters.

Parameters

varPack

Input. The descriptor that should be destroyed.

Returns

CUDNN STATUS SUCCESS

The descriptor is successfully destroyed.

6.2.10. cudnnFindConvolutionBackwardFilterAlgorithm(

cudnnStatus t cudnnFindConvolutionBackwardFilterAlgorithm(

This function attempts all algorithms available for cudnnConvolutionBackwardFilter(). It will attempt both the provided convDesc mathType and CUDNN_DEFAULT_MATH (assuming the two differ).



Note: Algorithms without the CUDNN_TENSOR_OP_MATH availability will only be tried with CUDNN DEFAULT MATH, and returned as such.

Memory is allocated via <code>cudaMalloc()</code>. The performance metrics are returned in the user-allocated array of <code>cudnnConvolutionBwdFilterAlgoPerf_t</code>. These metrics are written in a sorted fashion where the first element has the lowest compute time. The total number of resulting algorithms can be queried through the API <code>cudnnGetConvolutionBackwardFilterAlgorithmMaxCount()</code>.



Note:

- This function is host blocking.
- It is recommended to run this function prior to allocating layer data; doing otherwise may needlessly inhibit some algorithm options due to resource usage.

Parameters

handle

Input. Handle to a previously created cuDNN context.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

convDesc

Input. Previously initialized convolution descriptor.

dwDesc

Input. Handle to a previously initialized filter descriptor.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- handle is not allocated properly.
- xDesc, dyDesc, or dwDesc are not allocated properly.
- xDesc, dyDesc, or dwDesc has fewer than 1 dimension.
- ► Either returnedCount or perfResults is nil.
- requestedCount is less than 1.

CUDNN STATUS ALLOC FAILED

This function was unable to allocate memory to store sample input, filters and output.

CUDNN STATUS INTERNAL ERROR

At least one of the following conditions are met:

- ▶ The function was unable to allocate necessary timing objects.
- The function was unable to deallocate necessary timing objects.
- ▶ The function was unable to deallocate sample input, filters and output.

6.2.11. cudnnFindConvolutionBackwardFilterAlgorithmE

```
cudnnStatus t cudnnFindConvolutionBackwardFilterAlgorithmEx(
   cudnnHandle t
                                          handle,
   const cudnnTensorDescriptor t
                                          xDesc,
                                         *x,
   const void
   const cudnnTensorDescriptor t
                                         dyDesc,
   const void
                                         *dy,
   const cudnnConvolutionDescriptor t
                                         convDesc,
   const cudnnFilterDescriptor t
                                         dwDesc,
                                         *dw,
   void
   const int
                                         requestedAlgoCount,
                                         *returnedAlgoCount,
   cudnnConvolutionBwdFilterAlgoPerf t
                                         *perfResults,
                                         *workSpace,
  size t
                                        workSpaceSizeInBytes)
```

This function attempts all algorithms available for <u>cudnnConvolutionBackwardFilter()</u>. It will attempt both the provided <u>convDesc</u> mathType and <u>CUDNN_DEFAULT_MATH</u> (assuming the two differ).



Note: Algorithms without the CUDNN_TENSOR_OP_MATH availability will only be tried with CUDNN DEFAULT MATH, and returned as such.

Memory is allocated via cudaMalloc(). The performance metrics are returned in the user-allocated array of $\underline{cudnnConvolutionBwdFilterAlgoPerf_t}$. These metrics are written in a sorted fashion where the first element has the lowest compute time. The total number of resulting algorithms can be queried through the API $\underline{cudnnGetConvolutionBackwardFilterAlgorithmMaxCount()}$.



Note: This function is host blocking.

Parameters

handle

Input. Handle to a previously created cuDNN context.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

x

Input. Data pointer to GPU memory associated with the filter descriptor xDesc.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

dy

Input. Data pointer to GPU memory associated with the tensor descriptor dyDesc.

convDesc

Input. Previously initialized convolution descriptor.

dwDesc

Input. Handle to a previously initialized filter descriptor.

dw

Input/Output. Data pointer to GPU memory associated with the filter descriptor dwDesc. The content of this tensor will be overwritten with arbitrary values.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

workSpace

Input. Data pointer to GPU memory is a necessary workspace for some algorithms. The size of this workspace will determine the availability of algorithms. A nil pointer is considered a workspace of 0 bytes.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workSpace.

Returns

CUDNN_STATUS_SUCCESS

The query was successful.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- handle is not allocated properly.
- xDesc, dyDesc, or dwDesc are not allocated properly.
- xDesc, dyDesc, or dwDesc has fewer than 1 dimension.
- x, dy, or dw is nil.
- ▶ Either returnedCount or perfResults is nil.
- requestedCount is less than 1.

CUDNN STATUS INTERNAL ERROR

At least one of the following conditions are met:

- The function was unable to allocate necessary timing objects.
- The function was unable to deallocate necessary timing objects.
- ► The function was unable to deallocate sample input, filters and output.

6.2.12. cudnnFusedOpsExecute()

```
cudnnStatus_t cudnnFusedOpsExecute(
  cudnnHandle_t handle,
  const cudnnFusedOpsPlan_t plan,
  cudnnFusedOpsVariantParamPack t varPack);
```

This function executes the sequence of cudnnFusedOps operations.

Parameters

handle

Input. Pointer to the cuDNN library context.

plan

Input. Pointer to a previously-created and initialized plan descriptor.

varPack

Input. Pointer to the descriptor to the variant parameters pack.

Returns

CUDNN STATUS BAD PARAM

If the type of <u>cudnnFusedOps_t</u> in the plan descriptor is unsupported.

6.2.13. cudnnGetConvolutionBackwardFilterAlgorithmMa

```
cudnnStatus_t cudnnGetConvolutionBackwardFilterAlgorithmMaxCount(
    cudnnHandle_t handle,
    int *count)
```

This function returns the maximum number of algorithms which can be returned from cudnnFindConvolutionBackwardFilterAlgorithm) and cudnnGetConvolutionForwardAlgorithm v7(). This is the sum of all algorithms plus the sum of all algorithms with Tensor Core operations supported for the current device.

Parameters

handle

Input. Handle to a previously created cuDNN context.

count

Output. The resulting maximum count of algorithms.

Returns

```
CUDNN STATUS SUCCESS
```

The function was successful.

```
CUDNN STATUS BAD PARAM
```

The provided handle is not allocated properly.

6.2.14. cudnnGetConvolutionBackwardFilterAlgorithm_v

This function serves as a heuristic for obtaining the best suited algorithm for cudnnConvolutionBackwardFilter() for the given layer specifications. This function will return all algorithms (including CUDNN TENSOR OP MATH and CUDNN DEFAULT MATH

versions of algorithms where <code>CUDNN_TENSOR_OP_MATH</code> may be available) sorted by expected (based on internal heuristic) relative performance with fastest being index 0 of <code>perfResults</code>. For an exhaustive search for the fastest algorithm, use <code>cudnnFindConvolutionBackwardFilterAlgorithm()</code>. The total number of resulting algorithms can be queried through the <code>returnedAlgoCount</code> variable.

Parameters

handle

Input. Handle to a previously created cuDNN context.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

convDesc

Input. Previously initialized convolution descriptor.

dwDesc

Input. Handle to a previously initialized filter descriptor.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

Returns

CUDNN_STATUS_SUCCESS

The guery was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- One of the parameters handle, xDesc, dyDesc, convDesc, dwDesc, perfResults, returnedAlgoCount is NULL.
- The numbers of feature maps of the input tensor and output tensor differ.
- The dataType of the two tensor descriptors or the filter are different.
- requestedAlgoCount is less than or equal to 0.

6.2.15. cudnnGetConvolutionBackwardFilterWorkspaceSi

This function returns the amount of GPU memory workspace the user needs to allocate to be able to call cudnnConvolutionBackwardFilter() with the specified algorithm. The workspace allocated will then be passed to the routine cudnnConvolutionBackwardFilter(). The specified algorithm can be the result of the call to cudnnGetConvolutionBackwardFilterAlgorithm_v7() or can be chosen arbitrarily by the user. Note that not every algorithm is available for every configuration of the input tensor and/or every configuration of the convolution descriptor.

Parameters

handle

Input. Handle to a previously created cuDNN context.

xDesc

Input. Handle to the previously initialized input tensor descriptor.

dyDesc

Input. Handle to the previously initialized input differential tensor descriptor.

convDesc

Input. Previously initialized convolution descriptor.

dwDesc

Input. Handle to a previously initialized filter descriptor.

algo

Input. Enumerant that specifies the chosen convolution algorithm.

sizeInBytes

Output. Amount of GPU memory needed as workspace to be able to execute a forward convolution with the specified algo.

Returns

CUDNN STATUS SUCCESS

The guery was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ▶ The numbers of feature maps of the input tensor and output tensor differ.
- ► The dataType of the two tensor descriptors or the filter are different.

CUDNN STATUS_NOT_SUPPORTED

The combination of the tensor descriptors, filter descriptor and convolution descriptor is not supported for the specified algorithm.

6.2.16. cudnnGetFusedOpsConstParamPackAttribute()

```
cudnnStatus_t cudnnGetFusedOpsConstParamPackAttribute(
  const cudnnFusedOpsConstParamPack_t constPack,
  cudnnFusedOpsConstParamLabel_t paramLabel,
  void *param,
  int *isNULL);
```

This function retrieves the values of the descriptor pointed to by the param pointer input. The type of the descriptor is indicated by the enum value of paramLabel input.

Parameters

constPack

Input. The opaque <u>cudnnFusedOpsConstParamPack_t</u> structure that contains the various problem size information, such as the shape, layout and the type of tensors, and the descriptors for convolution and activation, for the selected sequence of <u>cudnnFusedOps_t</u> computations.

paramLabel

Input. Several types of descriptors can be retrieved by this getter function. The param input points to the descriptor itself, and this input indicates the type of the descriptor pointed to by the param input. The $\frac{\text{cudnnFusedOpsConstParamLabel}}{\text{cudnnFusedOpsConstParamLabel}} t$ enumerant type enables the selection of the type of the descriptor. Refer to the param description below.

param

Input. Data pointer to the host memory associated with the descriptor that should be retrieved. The type of this descriptor depends on the value of paramLabel. For the given paramLabel, if the associated value inside the constPack is set to NULL or by default NULL, then cuDNN will copy the value or the opaque structure in the constPack to the host memory buffer pointed to by param. For more information, see the table in $cudnnFusedOpsConstParamLabel_t$.

isNULL

Input/Output. Users must pass a pointer to an integer in the host memory in this field. If the value in the <code>constPack</code> associated with the given <code>paramLabel</code> is by default <code>NULL</code> or previously set by the user to <code>NULL</code>, then cuDNN will write a non-zero value to the location pointed by <code>isNULL</code>.

Returns

CUDNN STATUS SUCCESS

The descriptor values are retrieved successfully.

CUDNN STATUS BAD PARAM

If either constPack, param or isNULL is NULL; or if paramLabel is invalid.

6.2.17. cudnnGetFusedOpsVariantParamPackAttribute()

```
cudnnStatus_t cudnnGetFusedOpsVariantParamPackAttribute(
  const cudnnFusedOpsVariantParamPack_t varPack,
  cudnnFusedOpsVariantParamLabel_t paramLabel,
  void *ptr);
```

This function retrieves the settings of the variable parameter pack descriptor.

Parameters

varPack

Input. Pointer to the cudnnFusedOps variant parameter pack (varPack) descriptor.

paramLabel

Input. Type of the buffer pointer parameter (in the varPack descriptor). For more information, refer to $\underline{cudnnFusedOpsConstParamLabel_t}$. The retrieved descriptor values vary according to this type.

ptr

Output. Pointer to the host or device memory where the retrieved value is written by this function. The data type of the pointer, and the host/device memory location, depend on the paramLabel input selection. For more information, refer to cudnnFusedOpsVariantParamLabel t.

Returns

CUDNN STATUS SUCCESS

The descriptor values are retrieved successfully.

CUDNN STATUS BAD PARAM

If either varPack or ptr is NULL, or if paramLabel is set to invalid value.

6.2.18. cudnnMakeFusedOpsPlan()

```
cudnnStatus_t cudnnMakeFusedOpsPlan(
  cudnnHandle_t handle,
  cudnnFusedOpsPlan_t plan,
  const cudnnFusedOpsConstParamPack_t constPack,
  size_t *workspaceSizeInBytes);
```

This function determines the optimum kernel to execute, and the workspace size the user should allocate, prior to the actual execution of the fused operations by <u>cudnnFusedOpsExecute()</u>.

Parameters

handle

Input. Pointer to the cuDNN library context.

plan

Input. Pointer to a previously-created and initialized plan descriptor.

constPack

Input. Pointer to the descriptor to the const parameters pack.

workspaceSizeInBytes

Output. The amount of workspace size the user should allocate for the execution of this plan.

Returns

CUDNN STATUS BAD PARAM

If any of the inputs is \mathtt{NULL} , or if the type of $\underline{\mathtt{cudnnFusedOps}\ t}$ in the $\mathtt{constPack}$ descriptor is unsupported.

CUDNN STATUS SUCCESS

The function executed successfully.

6.2.19. cudnnSetFusedOpsConstParamPackAttribute()

```
cudnnStatus_t cudnnSetFusedOpsConstParamPackAttribute(
  cudnnFusedOpsConstParamPack_t constPack,
  cudnnFusedOpsConstParamLabel_t paramLabel,
  const void *param);
```

This function sets the descriptor pointed to by the param pointer input. The type of the descriptor to be set is indicated by the enum value of the paramLabel input.

Parameters

constPack

Input. The opaque <u>cudnnFusedOpsConstParamPack_t</u> structure that contains the various problem size information, such as the shape, layout and the type of tensors, the descriptors for convolution and activation, and settings for operations such as convolution and activation.

paramLabel

Input. Several types of descriptors can be set by this setter function. The param input points to the descriptor itself, and this input indicates the type of the descriptor pointed to by the param input. The <u>cudnnFusedOpsConstParamLabel_t</u> enumerant type enables the selection of the type of the descriptor.

param

Input. Data pointer to the host memory, associated with the specific descriptor. The type of the descriptor depends on the value of paramLabel. For more information, refer to the table in cudnnFusedOpsConstParamLabel t.

If this pointer is set to NULL, then the cuDNN library will record as such. If not, then the values pointed to by this pointer (meaning, the value or the opaque structure underneath) will be copied into the constPack during cudnnSetFusedOpsConstParamPackAttribute() operation.

Returns

CUDNN STATUS SUCCESS

The descriptor is set successfully.

CUDNN STATUS BAD PARAM

If constPack is NULL, or if paramLabel or the ops setting for constPack is invalid.

6.2.20. cudnnSetFusedOpsVariantParamPackAttribute()

```
cudnnStatus_t cudnnSetFusedOpsVariantParamPackAttribute(
  cudnnFusedOpsVariantParamPack_t varPack,
  cudnnFusedOpsVariantParamLabel_t paramLabel,
  void *ptr);
```

This function sets the variable parameter pack descriptor.

Parameters

varPack

Input. Pointer to the cudnnFusedOps variant parameter pack (varPack) descriptor.

paramLabel

Input. Type to which the buffer pointer parameter (in the varPack descriptor) is set by this function. For more information, refer to $\underline{cudnnFusedOpsConstParamLabel_t}$.

ptr

Input. Pointer, to the host or device memory, to the value to which the descriptor parameter is set. The data type of the pointer, and the host/device memory location, depend on the paramLabel input selection. For more information, refer to cudnnFusedOpsVariantParamLabel t.

Returns

CUDNN STATUS BAD PARAM

If varPack is NULL or if paramLabel is set to an unsupported value.

CUDNN STATUS SUCCESS

The descriptor was set successfully.

Chapter 7. cudnn_adv_infer.so Library

7.1. Data Type References

7.1.1. Pointer To Opaque Struct Types

7.1.1.1. cudnnAttnDescriptor_t

cudnnAttnDescriptor_t is a pointer to an opaque structure holding parameters of the multi-head attention layer such as:

- weight and bias tensor shapes (vector lengths before and after linear projections)
- parameters that can be set in advance and do not change when invoking functions to evaluate forward responses and gradients (number of attention heads, softmax smoothing/sharpening coefficient)
- other settings that are necessary to compute temporary buffer sizes.

Use the <u>cudnnCreateAttnDescriptor()</u> function to create an instance of the attention descriptor object and <u>cudnnDestroyAttnDescriptor()</u> to delete the previously created descriptor. Use the <u>cudnnSetAttnDescriptor()</u> function to configure the descriptor.

7.1.1.2. cudnnPersistentRNNPlan_t

This function is deprecated starting in cuDNN 8.0.0.

cudnnPersistentRNNPlan_t is a pointer to an opaque structure holding a plan to execute a dynamic persistent RNN. <u>cudnnCreatePersistentRNNPlan()</u> is used to create and initialize one instance.

7.1.1.3. cudnnRNNDataDescriptor_t

cudnnRNNDataDescriptor_t is a pointer to an opaque structure holding the description of an RNN data set. The function <u>cudnnCreateRNNDataDescriptor()</u> is used to create one instance, and <u>cudnnSetRNNDataDescriptor()</u> must be used to initialize this instance.

7.1.1.4. cudnnRNNDescriptor t

cudnnRNNDescriptor_t is a pointer to an opaque structure holding the description of an RNN operation. <u>cudnnCreateRNNDescriptor()</u> is used to create one instance.

7.1.1.5. cudnnSeqDataDescriptor_t

cudnnSeqDataDescriptor_t is a pointer to an opaque structure holding parameters of the sequence data container or buffer. The sequence data container is used to store fixed size vectors defined by the VECT dimension. Vectors are arranged in additional three dimensions: TIME, BATCH and BEAM.

The TIME dimension is used to bundle vectors into sequences of vectors. The actual sequences can be shorter than the TIME dimension, therefore, additional information is needed about each sequence length and how unused (padding) vectors should be saved.

It is assumed that the sequence data container is fully packed. The TIME, BATCH and BEAM dimensions can be in any order when vectors are traversed in the ascending order of addresses. Six data layouts (permutation of TIME, BATCH and BEAM) are possible.

The cudnnSeqDataDescriptor t object holds the following parameters:

- data type used by vectors
- ▶ TIME, BATCH, BEAM and VECT dimensions
- data layout
- ▶ the length of each sequence along the TIME dimension
- an optional value to be copied to output padding vectors

Use the <u>cudnnCreateSeqDataDescriptor()</u> function to create one instance of the sequence data descriptor object and <u>cudnnDestroySeqDataDescriptor()</u> to delete a previously created descriptor. Use the <u>cudnnSetSeqDataDescriptor()</u> function to configure the descriptor.

This descriptor is used by multi-head attention API functions.

7.1.2. Enumeration Types

7.1.2.1. cudnnDirectionMode_t

cudnnDirectionMode_t is an enumerated type used to specify the recurrence pattern in the <u>cudnnRNNForwardInference()</u>, <u>cudnnRNNForwardTraining()</u>, <u>cudnnRNNBackwardData()</u> and <u>cudnnRNNBackwardWeights()</u> routines.

Values

CUDNN UNIDIRECTIONAL

The network iterates recurrently from the first input to the last.

CUDNN BIDIRECTIONAL

Each layer of the network iterates recurrently from the first input to the last and separately from the last input to the first. The outputs of the two are concatenated at each iteration giving the output of the layer.

7.1.2.2. cudnnForwardMode_t

<code>cudnnForwardMode_t</code> is an enumerated type to specify inference or training mode in RNN API. This parameter allows the cuDNN library to tune more precisely the size of the workspace buffer that could be different in inference and training regimens.

Values

CUDNN FWD MODE INFERENCE

Selects the inference mode.

CUDNN FWD MODE TRAINING

Selects the training mode.

7.1.2.3. cudnnMultiHeadAttnWeightKind_t

cudnnMultiHeadAttnWeightKind_t is an enumerated type that specifies a group of weights or biases in the <u>cudnnGetMultiHeadAttnWeights()</u> function.

Values

CUDNN MH ATTN Q WEIGHTS

Selects the input projection weights for queries.

CUDNN_MH_ATTN_K_WEIGHTS

Selects the input projection weights for keys.

CUDNN_MH_ATTN_V_WEIGHTS

Selects the input projection weights for values.

CUDNN MH ATTN O WEIGHTS

Selects the output projection weights.

CUDNN_MH_ATTN_Q_BIASES

Selects the input projection biases for queries.

CUDNN MH ATTN K BIASES

Selects the input projection biases for keys.

CUDNN MH ATTN V BIASES

Selects the input projection biases for values.

CUDNN MH ATTN O BIASES

Selects the output projection biases.

7.1.2.4. cudnnRNNBiasMode t

 ${\tt cudnnRNNBiasMode_t}$ is an enumerated type used to specify the number of bias vectors for RNN functions. See the description of the ${\tt cudnnRNNMode_t}$ enumerated type for the equations for each cell type based on the bias mode.

Values

CUDNN RNN NO BIAS

Applies RNN cell formulas that do not use biases.

```
CUDNN RNN SINGLE INP BIAS
```

Applies RNN cell formulas that use one input bias vector in the input GEMM.

```
CUDNN RNN DOUBLE BIAS
```

Applies RNN cell formulas that use two bias vectors.

```
CUDNN RNN SINGLE REC BIAS
```

Applies RNN cell formulas that use one recurrent bias vector in the recurrent GEMM.

7.1.2.5. cudnnRNNClipMode t

cudnnRNNClipMode_t is an enumerated type used to select the LSTM cell clipping mode. It is used with <u>cudnnRNNSetClip()</u>, <u>cudnnRNNGetClip()</u> functions, and internally within LSTM cells.

Values

```
CUDNN RNN CLIP NONE
```

Disables LSTM cell clipping.

CUDNN RNN CLIP MINMAX

Enables LSTM cell clipping.

7.1.2.6. cudnnRNNDataLayout_t

cudnnRNNDataLayout_t is an enumerated type used to select the RNN data layout. It is used in the API calls <u>cudnnGetRNNDataDescriptor()</u> and <u>cudnnSetRNNDataDescriptor()</u>.

Values

CUDNN RNN DATA LAYOUT SEQ MAJOR UNPACKED

Data layout is padded, with outer stride from one time-step to the next.

```
CUDNN RNN DATA LAYOUT SEQ MAJOR PACKED
```

The sequence length is sorted and packed as in the basic RNN API.

CUDNN RNN DATA LAYOUT BATCH MAJOR UNPACKED

Data layout is padded, with outer stride from one batch to the next.

7.1.2.7. cudnnRNNInputMode_t

<code>cudnnRNNInputMode_t</code> is an enumerated type used to specify the behavior of the first layer in the <code>cudnnRNNForwardInference()</code>, <code>cudnnRNNForwardTraining()</code>, <code>cudnnRNNBackwardData()</code> and <code>cudnnRNNBackwardWeights()</code> routines.

Values

CUDNN LINEAR INPUT

A biased matrix multiplication is performed at the input of the first recurrent layer.

CUDNN SKIP INPUT

No operation is performed at the input of the first recurrent layer. If <code>CUDNN_SKIP_INPUT</code> is used the leading dimension of the input tensor must be equal to the hidden state size of the network.

7.1.2.8. cudnnRNNMode_t

 ${\tt cudnnRNNMode_t} \ is an enumerated type used to specify the type of network used in the \\ \underline{\tt cudnnRNNForwardInference}, \underline{\tt cudnnRNNForwardTraining}, \underline{\tt cudnnRNNBackwardData} \ and \\ \underline{\tt cudnnRNNBackwardWeights} \ routines.$

Values

CUDNN RNN RELU

A single-gate recurrent neural network with a ReLU activation function.

In the forward pass, the output h_t for a given iteration can be computed from the recurrent input h_{t-1} and the previous layer input x_t , given the matrices w, R and the bias vectors, where ReLU(x) = max(x, 0).

If cudnnRNNBiasMode_t biasMode in rnnDesc is CUDNN_RNN_DOUBLE_BIAS (default mode), then the following equation with biases b_W and b_R applies:

$$h_t = \text{ReLU}(W_i x_t + R_i h_{t-1} + b_{W_i} + b_{R_i})$$

If $cudnnRNNBiasMode_t$ biasMode in rnnDesc is $cudnn_RNN_SINGLE_INP_BIAS$ or $cudnn_RNN_SINGLE_REC_BIAS$, then the following equation with bias b applies:

$$h_t = \text{ReLU}(W_i X_t + R_i h_{t-1} + b_i)$$

If cudnnRNNBiasMode_t biasMode in rnnDesc is CUDNN_RNN_NO_BIAS, then the following equation applies:

$$h_t = \text{ReLU}(W_i x_t + R_i h_{t-1})$$

NVIDIA cuDNN

CUDNN RNN TANH

A single-gate recurrent neural network with a tanh activation function.

In the forward pass, the output h_t for a given iteration can be computed from the recurrent input h_{t-1} and the previous layer input x_t , given the matrices w, R and the bias vectors, and where tanh is the hyperbolic tangent function.

If cudnnRNNBiasMode_t biasMode in rnnDesc is CUDNN_RNN_DOUBLE_BIAS (default mode), then the following equation with biases b_W and b_R applies:

$$h_t = \tanh(W_i x_t + R_i h_{t-1} + b_{Wi} + b_{Ri})$$

If cudnnRNNBiasMode_t biasMode in rnnDesc is CUDNN_RNN_SINGLE_INP_BIAS or CUDNN RNN SINGLE REC BIAS, then the following equation with bias b applies:

$$h_t = \tanh \left(W_i x_t + R_i h_{t-1} + b_i \right)$$

If cudnnRNNBiasMode_t biasMode in rnnDesc is CUDNN_RNN_NO_BIAS, then the following equation applies:

$$h_t = \tanh(W_i x_t + R_i h_{t-1})$$

CUDNN LSTM

A four-gate Long Short-Term Memory (LSTM) network with no peephole connections.

In the forward pass, the output h_t and cell output c_t for a given iteration can be computed from the recurrent input h_{t-1} , the cell input c_{t-1} and the previous layer input x_t , given the matrices \mathbb{W} , \mathbb{R} and the bias vectors.

In addition, the following applies:

- σ is the sigmoid operator such that: $\sigma(x) = 1/(1 + e^{-x})$,
- represents a point-wise multiplication,
- tanh is the hyperbolic tangent function, and
- i_t , f_t , o_t , c'_t represent the input, forget, output and new gates respectively.

If cudnnRNNBiasMode_t biasMode in rnnDesc is CUDNN_RNN_DOUBLE_BIAS (default mode), then the following equations with biases b_W and b_R apply:

$$i_{t} = \sigma \left(W_{i}x_{t} + R_{i}h_{t-1} + b_{Wi} + b_{Ri} \right)$$

$$f_{t} = \sigma \left(W_{f}x_{t} + R_{f}h_{t-1} + b_{Wf} + b_{Rf} \right)$$

$$o_{t} = \sigma \left(W_{o}x_{t} + R_{o}h_{t-1} + b_{Wo} + b_{Ro} \right)$$

$$c'_{t} = \tanh \left(W_{c}x_{t} + R_{c}h_{t-1} + b_{Wc} + b_{Rc} \right)$$

$$c_{t} = f_{t} \circ c_{t-1} + i_{t} \circ c'_{t}$$

$$h_{t} = o_{t} \circ \tanh \left(c_{t} \right)$$

If $cudnnRNNBiasMode\ t\ biasMode\ in\ rnnDesc\ is\ CUDNN\ RNN\ SINGLE\ INP\ BIAS\ or$ CUDNN RNN SINGLE REC BIAS, then the following equations with bias b apply:

$$i_{t} = \sigma \left(W_{i}x_{t} + R_{i}h_{t-1} + b_{i} \right)$$

$$f_{t} = \sigma \left(W_{f}x_{t} + R_{f}h_{t-1} + b_{f} \right)$$

$$o_{t} = \sigma \left(W_{o}x_{t} + R_{o}h_{t-1} + b_{o} \right)$$

$$c'_{t} = \tanh \left(W_{c}x_{t} + R_{c}h_{t-1} + b_{c} \right)$$

$$c_{t} = f_{t} \circ c_{t-1} + i_{t} \circ c'_{t}$$

$$h_{t} = o_{t} \circ \tanh \left(c_{t} \right)$$

If cudnnRNNBiasMode t biasMode in rnnDesc is CUDNN RNN NO BIAS, then the following equations apply:

$$i_{t} = \sigma \left(W_{i}x_{t} + R_{i}h_{t-1}\right)$$

$$f_{t} = \sigma \left(W_{f}x_{t} + R_{f}h_{t-1}\right)$$

$$o_{t} = \sigma \left(W_{o}x_{t} + R_{o}h_{t-1}\right)$$

$$c'_{t} = \tanh \left(W_{c}x_{t} + R_{c}h_{t-1}\right)$$

$$c_{t} = f_{t} \circ c_{t-1} + i_{t} \circ c'_{t}$$

$$h_{t} = o_{t} \circ \tanh \left(c_{t}\right)$$

A three-gate network consisting of Gated Recurrent Units.

In the forward pass, the output h_t for a given iteration can be computed from the recurrent input h_{t-1} and the previous layer input x_t given matrices w, R and the bias vectors.

In addition, the following applies:

- σ is the sigmoid operator such that: $\sigma(x) = 1/(1 + e^{-x})$,
- represents a point-wise multiplication,
- tanh is the hyperbolic tangent function, and
- i_t , r_t , h'_t represent the input, reset, and new gates respectively.

If cudnnRNNBiasMode t biasMode in rnnDesc is CUDNN RNN DOUBLE BIAS (default mode), then the following equations with biases b_W and b_R apply:

$$i_t = \sigma \left(W_i x_t + R_i h_{t-1} + b_{Wi} + b_{Ri} \right)$$

 $r_t = \sigma \left(W_r x_t + R_r h_{t-1} + b_{Wr} + b_{Ri} \right)$

CUDNN GRU

$$h'_{t} = \tanh(W_{h}x_{t} + r_{t} \circ (R_{h}h_{t-1} + b_{Rh}) + b_{Wh})$$

$$h_t = (1 - i_t) \circ h'_t + i_t \circ h_{t-1}$$

If $cudnnRNNBiasMode_t$ biasMode in rnnDesc is $cudnn_RNN_SINGLE_INP_BIAS$, then the following equations with bias b apply:

$$i_t = \sigma \left(W_i x_t + R_i h_{t-1} + b_i \right)$$

$$r_t = \sigma \left(W_r x_t + R_r h_{t-1} + b_r \right)$$

$$h'_t = \tanh \left(W_h x_t + r_t \circ \left(R_h h_{t-1} \right) + b_{Wh} \right)$$

$$h_t = (1 - i_t) \circ h'_t + i_t \circ h_{t-1}$$

If $cudnnRNNBiasMode_t$ biasMode in rnnDesc is $cudnn_RNN_SINGLE_REC_BIAS$, then the following equations with bias b apply:

$$i_t = \sigma \left(W_i x_t + R_i h_{t-1} + b_i \right)$$

$$r_t = \sigma \left(W_r x_t + R_r h_{t-1} + b_r \right)$$

$$h'_t = \tanh \left(W_h x_t + r_t \circ \left(R_h h_{t-1} + b_{Rh} \right) \right)$$

$$h_t = (1 - i_t) \circ h'_t + i_t \circ h_{t-1}$$

If ${\tt cudnnRNNBiasMode_t}$ biasMode in ${\tt rnnDesc}$ is ${\tt cudnn_RNN_NO_BIAS}$, then the following equations apply:

$$i_t = \sigma \left(W_i x_t + R_i h_{t-1} \right)$$

$$r_t = \sigma \left(W_r x_t + R_r h_{t-1} \right)$$

$$h'_t = \tanh(W_h x_t + r_t \circ (R_h h_{t-1}))$$

$$h_t = (1 - i_t) \circ h'_t + i_t \circ h_{t-1}$$

7.1.2.9. cudnnRNNPaddingMode_t

cudnnRNNPaddingMode_t is an enumerated type used to enable or disable the padded input/output.

Values

CUDNN RNN PADDED IO DISABLED

Disables the padded input/output.

Enables the padded input/output.

7.1.2.10. cudnnSeqDataAxis t

 ${\tt cudnnSeqDataAxis_t}$ is an enumerated type that indexes active dimensions in the ${\tt dimA[]}$ argument that is passed to the ${\tt cudnnSetSeqDataDescriptor()}$ function to configure the sequence data descriptor of type ${\tt cudnnSeqDataDescriptor_t}$.

 ${\tt cudnnSeqDataAxis_t} \ constants \ are \ also \ used \ in \ the \ {\tt axis[]} \ argument \ of \ the \ \underline{\tt cudnnSetSeqDataDescriptor()} \ call \ to \ define \ the \ layout \ of \ the \ sequence \ data \ buffer \ in \ memory.$

Refer to <u>cudnnSetSeqDataDescriptor()</u> for a detailed description on how to use the <u>cudnnSeqDataAxis</u> t <u>enumerated type</u>.

The CUDNN_SEQDATA_DIM_COUNT macro defines the number of constants in the cudnnSeqDataAxis_t enumerated type. This value is currently set to 4.

Values

CUDNN SEQDATA TIME DIM

Identifies the TIME (sequence length) dimension or specifies the TIME in the data layout.

CUDNN SEQDATA BATCH DIM

Identifies the Batch dimension or specifies the Batch in the data layout.

CUDNN_SEQDATA_BEAM_DIM

Identifies the BEAM dimension or specifies the BEAM in the data layout.

CUDNN SEQDATA VECT DIM

Identifies the VECT (vector) dimension or specifies the VECT in the data layout.

7.2. API Functions

7.2.1. cudnnAdvInferVersionCheck()

cudnnStatus_t cudnnAdvInferVersionCheck(void)

This function checks to see whether the version of the AdvInfer subset of the library is consistent with the other sub-libraries.

Returns

CUDNN STATUS SUCCESS

The version is consistent with other sub-libraries.

CUDNN_STATUS_VERSION MISMATCH

The version of AdvInfer is not consistent with other sub-libraries. Users should check the installation and make sure all sub-component versions are consistent.

7.2.2. cudnnBuildRNNDynamic()

```
cudnnStatus_t cudnnBuildRNNDynamic(
  cudnnHandle_t handle,
  cudnnRNNDescriptor_t rnnDesc,
  int32_t miniBatch);
```

This function compiles the RNN persistent code using CUDA runtime compilation library (NVRTC) when the <code>CUDNN_RNN_ALGO_PERSIST_DYNAMIC</code> algo is selected. The code is tailored to the current GPU and specific hyperparameters (<code>miniBatch</code>). This call is expected to be expensive in terms of runtime and should be invoked infrequently. Note that the <code>CUDNN_RNN_ALGO_PERSIST_DYNAMIC</code> algo does not support variable length sequences within the batch.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

miniBatch

Input. The exact number of sequences in a batch.

Returns

CUDNN STATUS SUCCESS

The code was built and linked successfully.

CUDNN STATUS MAPPING ERROR

A GPU/CUDA resource, such as a texture object, shared memory, or zero-copy memory is not available in the required size or there is a mismatch between the user resource and cuDNN internal resources. A resource mismatch may occur, for example, when calling <code>cudnnSetStream()</code>. There could be a mismatch between the user provided CUDA stream and the internal CUDA events instantiated in the cuDNN handle when <code>cudnnCreate()</code> was invoked.

This error status may not be correctable when it is related to texture dimensions, shared memory size, or zero-copy memory availability. If <code>CUDNN_STATUS_MAPPING_ERROR</code> is returned by <code>cudnnSetStream()</code>, then it is typically correctable, however, it means that the cuDNN handle was created on one GPU and the user stream passed to this function is associated with another GPU.

CUDNN STATUS ALLOC FAILED

The resources could not be allocated.

CUDNN STATUS RUNTIME PREREQUISITE MISSING

The prerequisite runtime library could not be found.

```
CUDNN STATUS NOT SUPPORTED
```

The current hyper-parameters are invalid.

7.2.3. cudnnCreateAttnDescriptor()

```
cudnnStatus t cudnnCreateAttnDescriptor(cudnnAttnDescriptor t *attnDesc);
```

This function creates one instance of an opaque attention descriptor object by allocating the host memory for it and initializing all descriptor fields. The function writes <code>NULL</code> to <code>attnDesc</code> when the attention descriptor object cannot be allocated.

Use the <u>cudnnSetAttnDescriptor()</u> function to configure the attention descriptor and <u>cudnnDestroyAttnDescriptor()</u> to destroy it and release the allocated memory.

Parameters

attnDesc

Output. Pointer where the address to the newly created attention descriptor should be written.

Returns

```
CUDNN STATUS SUCCESS
```

The descriptor object was created successfully.

```
CUDNN STATUS BAD PARAM
```

An invalid input argument was encountered (attnDesc=NULL).

```
CUDNN STATUS ALLOC FAILED
```

The memory allocation failed.

7.2.4. cudnnCreatePersistentRNNPlan()

This function has been deprecated in cuDNN 8.0. Use cudnnBuildRNNDynamic() instead of cudnnCreatePersistentRNNPlan ().

This function creates a plan to execute persistent RNNs when using the <code>CUDNN_RNN_ALGO_PERSIST_DYNAMIC</code> algo. This plan is tailored to the current GPU and problem hyperparameters. This function call is expected to be expensive in terms of runtime and should be used infrequently. For more information, refer to <code>cudnnRNNDescriptor_t</code>, <code>cudnnDataType_t</code>, and <code>cudnnPersistentRNNPlan_t</code>.

Returns

CUDNN STATUS SUCCESS

The object was created successfully.

CUDNN_STATUS_MAPPING_ERROR

A GPU/CUDA resource, such as a texture object, shared memory, or zero-copy memory is not available in the required size or there is a mismatch between the user resource and cuDNN internal resources. A resource mismatch may occur, for example, when calling <code>cudnnSetStream()</code>. There could be a mismatch between the user provided CUDA stream and the internal CUDA events instantiated in the cuDNN handle when <code>cudnnCreate()</code> was invoked.

This error status may not be correctable when it is related to texture dimensions, shared memory size, or zero-copy memory availability. If <code>CUDNN_STATUS_MAPPING_ERROR</code> is returned by <code>cudnnSetStream()</code>, then it is typically correctable, however, it means that the cuDNN handle was created on one GPU and the user stream passed to this function is associated with another GPU.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

```
CUDNN STATUS RUNTIME PREREQUISITE MISSING
```

A prerequisite runtime library cannot be found.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The current hyperparameters are invalid.

7.2.5. cudnnCreateRNNDataDescriptor()

```
cudnnStatus_t cudnnCreateRNNDataDescriptor(
    cudnnRNNDataDescriptor t *RNNDataDesc)
```

This function creates a RNN data descriptor object by allocating the memory needed to hold its opaque structure.

Returns

CUDNN STATUS SUCCESS

The RNN data descriptor object was created successfully.

```
CUDNN STATUS BAD PARAM
```

RNNDataDesc is NULL.

CUDNN_STATUS_ALLOC_FAILED

The resources could not be allocated.

7.2.6. cudnnCreateRNNDescriptor()

```
cudnnStatus_t cudnnCreateRNNDescriptor(
    cudnnRNNDescriptor_t *rnnDesc)
```

This function creates a generic RNN descriptor object by allocating the memory needed to hold its opaque structure.

Returns

```
CUDNN STATUS SUCCESS
```

The object was created successfully.

```
CUDNN STATUS ALLOC FAILED
```

The resources could not be allocated.

7.2.7. cudnnCreateSeqDataDescriptor()

cudnnStatus t cudnnCreateSeqDataDescriptor(cudnnSeqDataDescriptor t *seqDataDesc);

This function creates one instance of an opaque sequence data descriptor object by allocating the host memory for it and initializing all descriptor fields. The function writes <code>NULL</code> to <code>seqDataDesc</code> when the sequence data descriptor object cannot be allocated.

Use the <u>cudnnSetSeqDataDescriptor()</u> function to configure the sequence data descriptor and <u>cudnnDestroySeqDataDescriptor()</u> to destroy it and release the allocated memory.

Parameters

seqDataDesc

Output. Pointer where the address to the newly created sequence data descriptor should be written.

Returns

CUDNN STATUS SUCCESS

The descriptor object was created successfully.

CUDNN_STATUS_BAD_PARAM

An invalid input argument was encountered (segDataDesc=NULL).

CUDNN STATUS ALLOC FAILED

The memory allocation failed.

7.2.8. cudnnDestroyAttnDescriptor()

cudnnStatus t cudnnDestroyAttnDescriptor(cudnnAttnDescriptor t attnDesc);

This function destroys the attention descriptor object and releases its memory. The attnDesc argument can be NULL. Invoking cudnnDestroyAttnDescriptor() with a NULL argument is a no operation (NOP).

The <code>cudnnDestroyAttnDescriptor()</code> function is not able to detect if the <code>attnDesc</code> argument holds a valid address. Undefined behavior will occur in case of passing an invalid pointer, not returned by the <code>cudnnCreateAttnDescriptor()</code> function, or in the double deletion scenario of a valid address.

Parameters

attnDesc

Input. Pointer to the attention descriptor object to be destroyed.

Returns

CUDNN_STATUS_SUCCESS

The descriptor was destroyed successfully.

7.2.9. cudnnDestroyPersistentRNNPlan()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus_t cudnnDestroyPersistentRNNPlan(
    cudnnPersistentRNNPlan t plan)
```

This function destroys a previously created persistent RNN plan object.

Returns

CUDNN STATUS SUCCESS

The object was destroyed successfully.

7.2.10. cudnnDestroyRNNDataDescriptor()

```
cudnnStatus_t cudnnDestroyRNNDataDescriptor(
    cudnnRNNDataDescriptor t RNNDataDesc)
```

This function destroys a previously created RNN data descriptor object.

Returns

CUDNN STATUS SUCCESS

The RNN data descriptor object was destroyed successfully.

7.2.11. cudnnDestroyRNNDescriptor()

```
cudnnStatus_t cudnnDestroyRNNDescriptor(
    cudnnRNNDescriptor_t rnnDesc)
```

This function destroys a previously created RNN descriptor object.

Returns

CUDNN_STATUS_SUCCESS

The object was destroyed successfully.

7.2.12. cudnnDestroySeqDataDescriptor()

```
cudnnStatus t cudnnDestroySeqDataDescriptor(cudnnSeqDataDescriptor t seqDataDesc);
```

This function destroys the sequence data descriptor object and releases its memory. The seqDataDesc argument can be NULL. Invoking cudnnDestroySeqDataDescriptor() with a NULL argument is a no operation (NOP).

The <code>cudnnDestroySeqDataDescriptor()</code> function is not able to detect if the <code>seqDataDesc</code> argument holds a valid address. Undefined behavior will occur in case of passing an invalid pointer, not returned by the <code>cudnnCreateSeqDataDescriptor()</code> function, or in the double deletion scenario of a valid address.

Parameters

seqDataDesc

Input. Pointer to the sequence data descriptor object to be destroyed.

Returns

CUDNN STATUS SUCCESS

The descriptor was destroyed successfully.

7.2.13. cudnnFindRNNForwardInferenceAlgorithmEx()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnFindRNNForwardInferenceAlgorithmEx(
                                  handle,
   cudnnHandle t
                                  rnnDesc
   const cudnnRNNDescriptor t
   const int
                                   seqLength,
   const cudnnTensorDescriptor_t *xDesc,
                                  *x,
   const void
   const cudnnTensorDescriptor t hxDesc,
   const void
                                   *hx,
   const cudnnTensorDescriptor t
                                   cxDesc,
                                   *cx,
   const. void
   const cudnnFilterDescriptor t
                                  wDesc,
                                   ∗w,
   const void
   const cudnnTensorDescriptor t
                                  *yDesc,
                                  hyDesc,
   const cudnnTensorDescriptor t
                                  *hy,
   const cudnnTensorDescriptor t
                                  cyDesc,
                                  *cy,
   void
   const float
                                  findIntensity,
   const int
                                  requestedAlgoCount,
   int
                                  *returnedAlgoCount,
   cudnnAlgorithmPerformance t
                                  *perfResults,
                                  *workspace,
   void
                                  workSpaceSizeInBytes)
   size t
```

This function attempts all available cuDNN algorithms for <u>cudnnRNNForwardInference()</u>, using user-allocated GPU memory. It outputs the parameters that influence the performance of the algorithm to a user-allocated array of <u>cudnnAlgorithmPerformance_t</u>. These parameter metrics are written in sorted fashion where the first element has the lowest compute time.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

seqLength

Input. Number of iterations to unroll over. The value of this seqLength must not exceed the value that was used in the $\underline{cudnnGetRNNWorkspaceSize()}$ function for querying the workspace size required to execute the RNN.

xDesc

Input. An array of fully packed tensor descriptors describing the input to each recurrent iteration (one descriptor per iteration). The first dimension (batch size) of the tensors may decrease from element n to element n+1 but may not increase. Each tensor descriptor must have the same second dimension (vector length).

x

Input. Data pointer to GPU memory associated with the tensor descriptors in the array xDesc. The data are expected to be packed contiguously with the first element of iteration n+1 following directly from the last element of iteration n.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

cxDesc

Input. A fully packed tensor descriptor describing the initial cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

СX

Input. Data pointer to GPU memory associated with the tensor descriptor cxDesc. If a NULL pointer is passed, the initial cell state of the network will be initialized to zero.

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

yDesc

Input. An array of fully packed tensor descriptors describing the output from each recurrent iteration (one descriptor per iteration). The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor n must match the first dimension of the tensor n in xDesc.

У

Output. Data pointer to GPU memory associated with the output tensor descriptor y Desc. The data are expected to be packed contiguously with the first element of iteration n+1 following directly from the last element of iteration n.

hyDesc

Input. A fully packed tensor descriptor describing the final hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hy

Output. Data pointer to GPU memory associated with the tensor descriptor hydesc. If a NULL pointer is passed, the final hidden state of the network will not be saved.

cyDesc

Input. A fully packed tensor descriptor describing the final cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

су

Output. Data pointer to GPU memory associated with the tensor descriptor cyDesc. If a NULL pointer is passed, the final cell state of the network will not be saved.

findIntensity

Input. This input was previously unused in versions prior to 7.2.0. It is used in cuDNN 7.2.0 and later versions to control the overall runtime of the RNN find algorithms, by selecting the percentage of a large Cartesian product space to be searched.

- ▶ Setting findIntensity within the range (0,1.] will set a percentage of the entire RNN search space to search. When findIntensity is set to 1.0, a full search is performed over all RNN parameters.
- ▶ When findIntensity is set to 0.0f, a quick, minimal search is performed. This setting has the best runtime. However, in this case the parameters returned by this function will not correspond to the best performance of the algorithm; a longer search might discover better parameters. This option will execute up to three instances of the configured RNN problem. Runtime will vary proportionally to RNN problem size, as it will in the other cases, hence no guarantee of an explicit time bound can be given.

- ➤ Setting findIntensity within the range [-1.,0) sets a percentage of a reduced Cartesian product space to be searched. This reduced search space has been heuristically selected to have good performance. The setting of -1.0 represents a full search over this reduced search space.
- ▶ Values outside the range [-1,1] are truncated to the range [-1,1], and then interpreted as per the above.
- ▶ Setting findIntensity to 1.0 in cuDNN 7.2 and later versions is equivalent to the behavior of this function in versions prior to cuDNN 7.2.0.
- This function times the single RNN executions over large parameter spaces one execution per parameter combination. The times returned by this function are latencies.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- ► At least one of the descriptors hxDesc, cxDesc, wDesc, hyDesc, cyDesc or one of the descriptors in xDesc, yDesc is invalid.
- ► The descriptors in one of xDesc, hxDesc, cxDesc, wDesc, yDesc, hyDesc, cyDesc have incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

```
CUDNN_STATUS_ALLOC_FAILED
```

The function was unable to allocate memory.

7.2.14. cudnnGetAttnDescriptor()

```
cudnnStatus t cudnnGetAttnDescriptor(
    cudnnAttnDescriptor t attnDesc,
    unsigned *attnMode,
   int *nHeads,
   double *smScaler,
    cudnnDataType_t *dataType,
    cudnnDataType t *computePrec,
    cudnnMathType t *mathType,
    cudnnDropoutDescriptor_t *attnDropoutDesc,
    cudnnDropoutDescriptor_t *postDropoutDesc,
    int *qSize,
    int *kSize,
   int *vSize,
    int *qProjSize,
    int *kProjSize,
   int *vProjSize,
int *oProjSize,
    int *qoMaxSeqLength,
    int *kvMaxSeqLength,
    int *maxBatchSize,
    int *maxBeamSize);
```

This function retrieves settings from the previously created attention descriptor. The user can assign <code>NULL</code> to any pointer except <code>attnDesc</code> when the retrieved value is not needed.

Parameters

attnDesc

Input. Attention descriptor.

attnMode

Output. Pointer to the storage for binary attention flags.

nHeads

Output. Pointer to the storage for the number of attention heads.

smScale

Output. Pointer to the storage for the softmax smoothing/sharpening coefficient.

dataType

Output. Data type for attention weights, sequence data inputs, and outputs.

computePrec

Output. Pointer to the storage for the compute precision.

mathType

Output. NVIDIA Tensor Core settings.

attnDropoutDesc

Output. Descriptor of the dropout operation applied to the softmax output.

postDropoutDesc

Output. Descriptor of the dropout operation applied to the multi-head attention output.

qSize, kSize, vSize

Output. Q, K, and V embedding vector lengths.

qProjSize, kProjSize, vProjSize

Output. Q, K, and V embedding vector lengths after input projections.

oProjSize

Output. Pointer to store the output vector length after projection.

qoMaxSeqLength

Output. Largest sequence length expected in sequence data descriptors related to Q, O, dQ, dO inputs and outputs.

kvMaxSeqLength

Output. Largest sequence length expected in sequence data descriptors related to K, V, dK, dV inputs and outputs.

maxBatchSize

Output. Largest batch size expected in the cudnnSegDataDescriptor_t container.

maxBeamSize

Output. Largest beam size expected in the <u>cudnnSeqDataDescriptor_t</u> container.

Returns

CUDNN STATUS SUCCESS

Requested attention descriptor fields were retrieved successfully.

CUDNN STATUS BAD PARAM

An invalid input argument was found.

7.2.15. cudnnGetMultiHeadAttnBuffers()

```
cudnnStatus_t cudnnGetMultiHeadAttnBuffers(
  cudnnHandle_t handle,
  const cudnnAttnDescriptor_t attnDesc,
  size_t *weightSizeInBytes,
  size_t *workSpaceSizeInBytes,
  size t *reserveSpaceSizeInBytes);
```

This function computes weight, work, and reserve space buffer sizes used by the following functions:

- cudnnMultiHeadAttnForward()
- cudnnMultiHeadAttnBackwardData()
- <u>cudnnMultiHeadAttnBackwardWeights()</u>

Assigning NULL to the reserveSpaceSizeInBytes argument indicates that the user does not plan to invoke multi-head attention gradient functions:

<u>cudnnMultiHeadAttnBackwardData()</u> and <u>cudnnMultiHeadAttnBackwardWeights()</u>. This situation occurs in the inference mode.



Note: NULL cannot be assigned to weightSizeInBytes and workSpaceSizeInBytes pointers.

The user must allocate weight, work, and reserve space buffer sizes in the GPU memory using <code>cudaMalloc()</code> with the reported buffer sizes. The buffers can be also carved out from a larger chunk of allocated memory but the buffer addresses must be at least 16B aligned.

The work-space buffer is used for temporary storage. Its content can be discarded or modified after all GPU kernels launched by the corresponding API complete. The reserve-space buffer is used to transfer intermediate results from cudnnMultiHeadAttnForward() to cudnnMultiHeadAttnBackwardData(), and from cudnnMultiHeadAttnBackwardData() to cudnnMultiHeadAttnBackwardWeights(). The content of the reserve-space buffer cannot be modified until all GPU kernels launched by the above three multi-head attention API functions finish.

All multi-head attention weight and bias tensors are stored in a single weight buffer. For speed optimizations, the cuDNN API may change tensor layouts and their relative locations in the weight buffer based on the provided attention parameters. Use the cudnnGetMultiHeadAttnWeights() function to obtain the start address and the shape of each weight or bias tensor.

Parameters

handle

Input. The current cuDNN context handle.

attnDesc

Input. Pointer to a previously initialized attention descriptor.

weightSizeInBytes

Output. Minimum buffer size required to store all multi-head attention trainable parameters.

workSpaceSizeInBytes

Output. Minimum buffer size required to hold all temporary surfaces used by the forward and gradient multi-head attention API calls.

reserveSpaceSizeInBytes

Output. Minimum buffer size required to store all intermediate data exchanged between forward and backward (gradient) multi-head attention functions. Set this parameter to NULL in the inference mode indicating that gradient API calls will not be invoked.

Returns

```
CUDNN STATUS SUCCESS
```

The requested buffer sizes were computed successfully.

```
CUDNN_STATUS_BAD_PARAM
```

An invalid input argument was found.

7.2.16. cudnnGetMultiHeadAttnWeights()

```
cudnnStatus_t cudnnGetMultiHeadAttnWeights(
    cudnnHandle_t handle,
    const cudnnAttnDescriptor_t attnDesc,
    cudnnMultiHeadAttnWeightKind_t wKind,
    size_t weightSizeInBytes,
    const void *weights,
    cudnnTensorDescriptor_t wDesc,
    void **wAddr);
```

This function obtains the shape of the weight or bias tensor. It also retrieves the start address of tensor data located in the <code>weight</code> buffer. Use the <code>wKind</code> argument to select a particular tensor. For more information, refer to <code>cudnnMultiHeadAttnWeightKind_t</code> for the description of the enumerant type.

Biases are used in the input and output projections when the CUDNN_ATTN_ENABLE_PROJ_BIASES flag is set in the attention descriptor. Refer to cudnnSetAttnDescriptor() for the description of flags to control projection biases.

When the corresponding weight or bias tensor does not exist, the function writes NULL to the storage location pointed by wAddr and returns zeros in the wDesc tensor descriptor. The return status of the $\underline{cudnnGetMultiHeadAttnWeights()}$ function is CUDNN STATUS SUCCESS in this case.

The cuDNN multiHeadAttention sample code demonstrates how to access multihead attention weights. Although the buffer with weights and biases should be allocated in the GPU memory, the user can copy it to the host memory and invoke the cudnnGetMultiHeadAttnWeights() function with the host weights address to obtain tensor pointers in the host memory. This scheme allows the user to inspect trainable parameters directly in the CPU memory.

Parameters

handle

Input. The current cuDNN context handle.

attnDesc

Input. A previously configured attention descriptor.

wKind

Input. Enumerant type to specify which weight or bias tensor should be retrieved.

weightSizeInBytes

Input. Buffer size that stores all multi-head attention weights and biases.

weights

Input. Pointer to the weight buffer in the host or device memory.

wDesc

Output. The descriptor specifying weight or bias tensor shape. For weights, the wDesc.dimA[] array has three elements: [nHeads, projected size, original size]. For biases, the wDesc.dimA[] array also has three elements: [nHeads, projected size, 1]. The wDesc.strideA[] array describes how tensor elements are arranged in memory.

wAddr

Output. Pointer to a location where the start address of the requested tensor should be written. When the corresponding projection is disabled, the address written to wAddr is NULL.

Returns

CUDNN STATUS SUCCESS

The weight tensor descriptor and the address of data in the device memory were successfully retrieved.

CUDNN STATUS BAD PARAM

An invalid or incompatible input argument was encountered. For example, wKind did not have a valid value or weightSizeInBytes was too small.

7.2.17. cudnnGetRNNBackwardWeightsAlgorithmMaxCount(

This function has been deprecated in cuDNN 8.0.

7.2.18. cudnnGetRNNBiasMode()

This function has been deprecated in cuDNN 8.0. Use cudnnGetRNNDescriptor_v8() instead of cudnnGetRNNBiasMode ()

```
cudnnStatus_t cudnnGetRNNBiasMode(
   cudnnRNNDescriptor_t rnnDesc,
   cudnnRNNBiasMode_t *biasMode)
```

This function retrieves the RNN bias mode that was configured by cudnnSetRNNBiasMode(). The default value of biasMode in rnnDesc after cudnnCreateRNNDescriptor() is CUDNN_RNN_DOUBLE_BIAS.

Parameters

rnnDesc

Input. A previously created RNN descriptor.

*biasMode

Output. Pointer to where RNN bias mode should be saved.

Returns

```
CUDNN_STATUS_BAD_PARAM
```

Either the rnnDesc or *biasMode is NULL.

```
CUDNN STATUS SUCCESS
```

The biasMode parameter was retrieved successfully.

7.2.19. cudnnGetRNNDataDescriptor()

```
cudnnStatus_t cudnnGetRNNDataDescriptor(
    cudnnRNNDataDescriptor_t RNNDataDesc,
    cudnnDataType_t *dataType,
    cudnnRNNDataLayout_t *layout,
    int *maxSeqLength,
    int *batchSize,
    int *vectorSize,
    int arrayLengthRequested,
    int seqLengthArray[],
    void *paddingFill);
```

This function retrieves a previously created RNN data descriptor object.

Parameters

RNNDataDesc

Input. A previously created and initialized RNN descriptor.

dataType

Output. Pointer to the host memory location to store the datatype of the RNN data tensor.

layout

Output. Pointer to the host memory location to store the memory layout of the RNN data tensor.

maxSeqLength

Output. The maximum sequence length within this RNN data tensor, including the padding vectors.

batchSize

Output. The number of sequences within the mini-batch.

vectorSize

Output. The vector length (meaning, embedding size) of the input or output tensor at each time-step.

arrayLengthRequested

Input. The number of elements that the user requested for seqLengthArray.

seqLengthArray

Output. Pointer to the host memory location to store the integer array describing the length (meaning, number of time-steps) of each sequence. This is allowed to be a <code>NULL pointer</code> if <code>arrayLengthRequested</code> is 0.

paddingFill

Output. Pointer to the host memory location to store the user defined symbol. The symbol should be interpreted as the same data type as the RNN data tensor.

Returns

CUDNN STATUS SUCCESS

The parameters are fetched successfully.

CUDNN STATUS BAD PARAM

Any one of these have occurred:

- Any of RNNDataDesc, dataType, layout, maxSeqLength, batchSize, vectorSize, paddingFill is NULL.
- seqLengthArray is NULL while arrayLengthRequested is greater than zero.
- arrayLengthRequested is less than zero.

7.2.20. cudnnGetRNNDescriptor_v6()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnGetRNNDescriptor_v8()</u> instead of <u>cudnnGetRNNDescriptor_v6()</u>.

```
cudnnStatus_t cudnnGetRNNDescriptor_v6(
  cudnnHandle_t handle,
  cudnnRNNDescriptor_t rnnDesc,
  int *hiddenSize,
  int *numLayers,
      cudnnDropoutDescriptor_t *dropoutDesc,
  cudnnRNNInputMode_t *inputMode,
  cudnnDirectionMode_t *direction,
  cudnnRNNMode_t *cellMode,
  cudnnRNNAlgo_t *algo,
  cudnnDataType_t *mathPrec) {
```

This function retrieves RNN network parameters that were configured by cudnnSetRNNDescriptor_v60. All pointers passed to the function should be not-NULL or cudnn_status_bad_parameters. The function does not check the validity of retrieved parameters.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

rnnDesc

Input. A previously created and initialized RNN descriptor.

hiddenSize

Output. Pointer to where the size of the hidden state should be stored (the same value is used in every RNN layer).

numLayers

Output. Pointer to where the number of RNN layers should be stored.

dropoutDesc

Output. Pointer to where the handle to a previously configured dropout descriptor should be stored.

inputMode

Output. Pointer to where the mode of the first RNN layer should be saved.

direction

Output. Pointer to where RNN uni-directional/bi-directional mode should be saved.

mode

Output. Pointer to where RNN cell type should be saved.

algo

Output. Pointer to where RNN algorithm type should be stored.

mathPrec

Output. Pointer to where the math precision type should be stored.

Returns

CUDNN STATUS SUCCESS

RNN parameters were successfully retrieved from the RNN descriptor.

CUDNN STATUS BAD PARAM

At least one pointer passed to the function is NULL.

7.2.21. cudnnGetRNNDescriptor_v8()

```
cudnnStatus_t cudnnGetRNNDescriptor_v8(
  cudnnRNNDescriptor_t rnnDesc,
  cudnnRNNAlgo_t *algo,
  cudnnRNNMode_t *cellMode,
  cudnnRNNBiasMode t *biasMode,
```

```
cudnnDirectionMode_t *dirMode,
cudnnRNNInputMode_t *inputMode,
cudnnDataType_t *dataType,
cudnnDataType_t *mathPrec,
cudnnMathType_t *mathType,
int32_t *inputSize,
int32_t *hiddenSize,
int32_t *projSize,
int32_t *numLayers,
cudnnDropoutDescriptor_t *dropoutDesc,
uint32_t *auxFlags);
```

This function retrieves RNN network parameters that were configured by $\underline{\text{cudnnSetRNNDescriptor v8()}}$. The user can assign $\underline{\text{NULL}}$ to any pointer except $\underline{\text{rnnDesc}}$ when the retrieved value is not needed. The function does not check the validity of retrieved parameters.

Parameters

rnnDesc

Input. A previously created and initialized RNN descriptor.

algo

Output. Pointer to where RNN algorithm type should be stored.

cellMode

Output. Pointer to where RNN cell type should be saved.

biasMode

Output. Pointer to where RNN bias mode <u>cudnnRNNBiasMode</u> t should be saved.

dirMode

Output. Pointer to where RNN uni-directional/bi-directional mode should be saved.

inputMode

Output. Pointer to where the mode of the first RNN layer should be saved.

dataType

Output. Pointer to where the data type of RNN weights/biases should be stored.

mathPrec

Output. Pointer to where the math precision type should be stored.

mathType

Output. Pointer to where the preferred option for Tensor Cores are saved.

inputSize

Output. Pointer to where the RNN input vector size is stored.

hiddenSize

Output. Pointer to where the size of the hidden state should be stored (the same value is used in every RNN layer).

projSize

Output. Pointer to where the LSTM cell output size after the recurrent projection is stored.

numLayers

Output. Pointer to where the number of RNN layers should be stored.

dropoutDesc

Output. Pointer to where the handle to a previously configured dropout descriptor should be stored.

auxFlags

Output. Pointer to miscellaneous RNN options (flags) that do not require passing additional numerical values to configure.

Returns

CUDNN_STATUS_SUCCESS

RNN parameters were successfully retrieved from the RNN descriptor.

CUDNN STATUS BAD PARAM

An invalid input argument was found (rnnDesc was NULL).

```
CUDNN STATUS NOT INITIALIZED
```

The RNN descriptor was configured with the legacy <u>cudnnSetRNNDescriptor_v6()</u> call.

7.2.22. cudnnGetRNNForwardInferenceAlgorithmMaxCount

This function has been deprecated in cuDNN 8.0.

7.2.23. cudnnGetRNNLinLayerBiasParams()

This function has been deprecated in cuDNN 8.0. Use $\underline{\text{cudnnGetRNNWeightParams()}}$ instead of $\underline{\text{cudnnGetRNNLinLayerBiasParams()}}$.

```
cudnnStatus t cudnnGetRNNLinLayerBiasParams(
   cudnnHandle t
                                   handle,
   const cudnnRNNDescriptor t
                                   rnnDesc,
                                 pseudoLayer,
   const int
   const cudnnTensorDescriptor t
                                   xDesc,
                                  wDesc,
   const cudnnFilterDescriptor t
   const void
                                  ∗w,
   const int
                                   linLayerID,
   cudnnFilterDescriptor_t
                                   linLayerBiasDesc,
                                  **linLayerBias)
```

This function is used to obtain a pointer and a descriptor of every RNN bias column vector in each pseudo-layer within the recurrent network defined by rnnDesc and its input width specified in xDesc.



Note: The <u>cudnnGetRNNLinLayerBiasParams()</u> function was changed in cuDNN version 7.1.1 to match the behavior of <u>cudnnGetRNNLinLayerMatrixParams()</u>.

The <u>cudnnGetRNNLinLayerBiasParams()</u> function returns the RNN bias vector size in two dimensions: rows and columns.

Due to historical reasons, the minimum number of dimensions in the filter descriptor is three. In previous versions of the cuDNN library, the function returns the total number of vector elements in linLayerBiasDesc as follows:

```
filterDimA[0]=total_size,
filterDimA[1]=1,
filterDimA[2]=1
```

For more information, see the description of the <u>cudnnGetFilterNdDescriptor()</u> function.

In cuDNN 7.1.1, the format was changed to:

```
filterDimA[0]=1,
filterDimA[1]=rows,
filterDimA[2]=1 (number of columns)
```

In both cases, the format field of the filter descriptor should be ignored when retrieved by <u>cudnnGetFilterNdDescriptor()</u>.

The RNN implementation in cuDNN uses two bias vectors before the cell non-linear function. Note that the RNN implementation in cuDNN depends on the number of bias vectors before the cell non-linear function. Refer to the equations in the $\frac{\text{cudnnRNNMode_t}}{\text{cudnnRNNBiasMode_t}} \text{ description, for the enumerant type based on the value of } \\ \frac{\text{cudnnRNNBiasMode_t}}{\text{cudnnRNNBiasMode_t}} \text{ biasMode in rnnDesc. If nonexistent biases are referenced by } \\ \text{linLayerID, then this function sets linLayerBiasDesc} \text{ to a zeroed filter descriptor where:} \\$

```
filterDimA[0]=0,
filterDimA[1]=0, and
filterDimA[2]=2
```

and sets linLayerBias to NULL. Refer to the details for the function parameter linLayerID to determine the relevant values of linLayerID based on biasMode.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

rnnDesc

Input. A previously initialized RNN descriptor.

pseudoLayer

Input. The pseudo-layer to query. In uni-directional RNNs, a pseudo-layer is the same as a physical layer (pseudoLayer=0 is the RNN input layer, pseudoLayer=1 is the first hidden layer). In bi-directional RNNs, there are twice as many pseudo-layers in comparison to physical layers.

- pseudoLayer=0 refers to the forward part of the physical input layer
- pseudoLayer=1 refers to the backward part of the physical input layer
- pseudoLayer=2 is the forward part of the first hidden layer, and so on

xDesc

Input. A fully packed tensor descriptor describing the input to one recurrent iteration (to retrieve the RNN input width).

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

linLayerID

Input. Linear ID index of the weight matrix.

If cellMode in rnnDesc was set to CUDNN_RNN_RELU or CUDNN_RNN_TANH:

- Value 0 references the weight matrix used in conjunction with the input from the previous layer or input to the RNN model.
- Value 1 references the weight matrix used in conjunction with the hidden state from the previous time step or the initial hidden state.

If cellMode in rnnDesc was set to CUDNN_LSTM:

- ▶ Values 0, 1, 2, and 3 reference weight matrices used in conjunction with the input from the previous layer or input to the RNN model.
- ▶ Values 4, 5, 6, and 7 reference weight matrices used in conjunction with the hidden state from the previous time step or the initial hidden state.
- ▶ Value 8 corresponds to the projection matrix, if enabled.

Values and their LSTM gates:

- ▶ linLayerIDO and 4 correspond to the input gate.
- ▶ linLayerID1 and 5 correspond to the forget gate.
- ▶ linLayerID2 and 6 correspond to the new cell state calculations with a hyperbolic tangent.
- ▶ linLayerID3 and 7 correspond to the output gate.

If cellMode in rnnDesc was set to CUDNN GRU:

- Values 0, 1, and 2 reference weight matrices used in conjunction with the input from the previous layer or input to the RNN model.
- ▶ Values 3, 4, and 5 reference weight matrices used in conjunction with the hidden state from the previous time step or the initial hidden state.

Values and their GRU gates:

- ▶ linLayerIDO and 3 correspond to the reset gate.
- ▶ linLayerID1 and 4 references to the update gate.
- linLayerID2 and 5 correspond to the new hidden state calculations with a hyperbolic tangent.

linLayerBiasDesc

Output. Handle to a previously created filter descriptor.

linLayerBias

Output. Data pointer to GPU memory associated with the filter descriptor linLayerBiasDesc.

Returns

CUDNN STATUS SUCCESS

The query was successful.

```
CUDNN STATUS NOT SUPPORTED
```

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ▶ One of the following arguments is NULL: handle, rnnDesc, xDesc, wDesc, linLayerBiasDesc, linLayerBias.
- A data type mismatch was detected between rnnDesc and other descriptors.
- Minimum requirement for the w pointer alignment is not satisfied.
- The value of pseudoLayer or linLayerID is out of range.

CUDNN STATUS INVALID VALUE

Some elements of the linLayerBias vector are outside the w buffer boundaries as specified by the wDesc descriptor.

7.2.24. cudnnGetRNNLinLayerMatrixParams()

This function has been deprecated in cuDNN 8.0 . Use $\underline{\text{cudnnGetRNNWeightParams()}}$ instead of $\underline{\text{cudnnGetRNNLinLayerMatrixParams()}}$.

```
cudnnStatus_t cudnnGetRNNLinLayerMatrixParams(
cudnnHandle_t handle,
const cudnnRNNDescriptor_t rnnDesc,
const int pseudoLayer,
const cudnnTensorDescriptor_t xDesc,
const cudnnFilterDescriptor_t wDesc,
const void *w,
const int linLayerID,
cudnnFilterDescriptor_t linLayerMatDesc,
void **linLayerMat)
```

This function is used to obtain a pointer and a descriptor of every RNN weight matrix in each pseudo-layer within the recurrent network defined by rnnDesc and its input width specified in xDesc.



Note: The <u>cudnnGetRNNLinLayerMatrixParams()</u> function was enhanced in cuDNN version 7.1.1 without changing its prototype. Instead of reporting the total number of elements in each weight matrix in the <u>linLayerMatDesc</u> filter descriptor, the function returns the matrix size as two dimensions: rows and columns. Moreover, when a weight matrix does not exist, for example, due to <u>CUDNN_SKIP_INPUT</u> mode, the function returns <u>NULL</u> in <u>linLayerMat</u> and all fields of <u>linLayerMatDesc</u> are zero.

The <u>cudnnGetRNNLinLayerMatrixParams()</u> function returns the RNN matrix size in two dimensions: rows and columns. This allows the user to easily print and initialize RNN weight matrices. Elements in each weight matrix are arranged in the row-major order. Due to historical reasons, the minimum number of dimensions in the filter descriptor is three. In previous versions of the cuDNN library, the function returned the total number of weights in linLayerMatDesc as follows: $filterDimA[0]=total_size$, filterDimA[1]=1, filterDimA[2]=1 (see the description of the <u>cudnnGetFilterNdDescriptor()</u> function). In cuDNN 7.1.1, the format was changed to: filterDimA[0]=1, filterDimA[1]=rows, filterDimA[2]=columns. In both cases, the "format" field of the filter descriptor should be ignored when retrieved by <u>cudnnGetFilterNdDescriptor()</u>.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

rnnDesc

Input. A previously initialized RNN descriptor.

pseudoLayer

Input. The pseudo-layer to query. In uni-directional RNNs, a pseudo-layer is the same as a physical layer (pseudoLayer=0 is the RNN input layer, pseudoLayer=1 is the first hidden layer). In bi-directional RNNs, there are twice as many pseudo-layers in comparison to physical layers.

- pseudoLayer=0 refers to the forward part of the physical input layer
- pseudoLayer=1 refers to the backward part of the physical input layer
- pseudoLayer=2 is the forward part of the first hidden layer, and so on

xDesc

Input. A fully packed tensor descriptor describing the input to one recurrent iteration (to retrieve the RNN input width).

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

w

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

linLayerID

Input. The linear layer to obtain information about:

- ▶ If mode in rnnDesc was set to CUDNN RNN RELU or CUDNN RNN TANH:
 - Value O references the bias applied to the input from the previous layer (relevant if biasMode in rnnDesc is CUDNN_RNN_SINGLE_INP_BIAS or CUDNN_RNN_DOUBLE_BIAS).
 - ► Value 1 references the bias applied to the recurrent input (relevant if biasMode in rnnDesc is CUDNN_RNN_DOUBLE_BIAS or CUDNN RNN SINGLE REC BIAS).
 - ▶ If mode in rnnDesc was set to CUDNN_LSTM:
 - ► Values of 0, 1, 2 and 3 reference bias applied to the input from the previous layer (relevant if biasMode in rnnDesc is CUDNN_RNN_SINGLE_INP_BIAS or CUDNN RNN DOUBLE BIAS).
 - ► Values of 4, 5, 6 and 7 reference bias applied to the recurrent input (relevant if biasMode in rnnDesc is CUDNN_RNN_DOUBLE_BIAS or CUDNN RNN SINGLE REC BIAS).
 - Values and their associated gates:
 - Values 0 and 4 reference the input gate.
 - Values 1 and 5 reference the forget gate.
 - Values 2 and 6 reference the new memory gate.
 - Values 3 and 7 reference the output gate.
 - ▶ If mode in rnnDesc was set to CUDNN GRU:
 - ► Values of 0, 1 and 2 reference bias applied to the input from the previous layer (relevant if biasMode in rnnDesc is CUDNN_RNN_SINGLE_INP_BIAS or CUDNN RNN DOUBLE BIAS).
 - Values of 3, 4 and 5 reference bias applied to the recurrent input (relevant if biasMode in rnnDesc is CUDNN_RNN_DOUBLE_BIAS or CUDNN_RNN_SINGLE_REC_BIAS).
 - Values and their associated gates:
 - Values 0 and 3 reference the reset gate.
 - Values 1 and 4 reference the update gate.
 - Values 2 and 5 reference the new memory gate.

For more information on modes and bias modes, refer to <u>cudnnRNNMode_t</u>.

linLayerMatDesc

Output. Handle to a previously created filter descriptor. When the weight matrix does not exist, the returned filer descriptor has all fields set to zero.

linLayerMat

Output. Data pointer to GPU memory associated with the filter descriptor linLayerMatDesc. When the weight matrix does not exist, the returned pointer is NULL.

Returns

CUDNN_STATUS_SUCCESS

The guery was successful.

CUDNN_STATUS_NOT_SUPPORTED

The function does not support the provided configuration.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ▶ One of the following arguments is NULL: handle, rnnDesc, xDesc, wDesc, linLayerMatDesc, linLayerMat.
- A data type mismatch was detected between rnnDesc and other descriptors.
- ▶ Minimum requirement for the w pointer alignment is not satisfied.
- ► The value of pseudoLayer or linLayerID is out of range.

CUDNN STATUS INVALID VALUE

Some elements of the linLayerMat vector are outside the w buffer boundaries as specified by the wDesc descriptor.

7.2.25. cudnnGetRNNMatrixMathType()

This function has been deprecated in cuDNN 8.0. Use $\underline{\text{cudnnGetRNNDescriptor_v8()}}$ instead of $\underline{\text{cudnnGetRNNMatrixMathType()}}$.

```
cudnnStatus_t cudnnGetRNNMatrixMathType(
  cudnnRNNDescriptor_t rnnDesc,
  cudnnMathType_t *mType);
```

This function retrieves the preferred settings for NVIDIA Tensor Cores on NVIDIA Volta^{$^{\text{TM}}$} (SM 7.0) or higher GPUs. Refer to the <u>cudnnMathType</u> t description for more details.

Parameters

rnnDesc

Input. A previously created and initialized RNN descriptor.

mType

Output. Address where the preferred Tensor Core settings should be stored.

Returns

```
CUDNN STATUS SUCCESS
```

The requested RNN descriptor field was retrieved successfully.

```
CUDNN STATUS BAD PARAM
```

An invalid input argument was found (rnnDesc or mType was NULL).

7.2.26. cudnnGetRNNPaddingMode()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnGetRNNDescriptor_v8()</u> instead of cudnnGetRNNPaddingMode().

```
cudnnStatus_t cudnnGetRNNPaddingMode(
    cudnnRNNDescriptor_t rnnDesc,
    cudnnRNNPaddingMode t *paddingMode)
```

This function retrieves the RNN padding mode from the RNN descriptor.

Parameters

rnnDesc

Input/Output. A previously created RNN descriptor.

*paddingMode

Input. Pointer to the host memory where the RNN padding mode is saved.

Returns

```
CUDNN_STATUS_SUCCESS
```

The RNN padding mode parameter was retrieved successfully.

```
CUDNN STATUS BAD PARAM
```

Either the rnnDesc or *paddingMode is NULL.

7.2.27. cudnnGetRNNParamsSize()

This function has been deprecated in cuDNN 8.0. Use cudnnGetRNNWeightSpaceSize().

This function is used to query the amount of parameter space required to execute the RNN described by rnnDesc with input dimensions defined by xDesc.

Parameters

S

handle

Input. Handle to a previously created cuDNN library descriptor.

rnnDesc

Input. A previously initialized RNN descriptor.

xDesc

Input. A fully packed tensor descriptor describing the input to one recurrent iteration.

sizeInBytes

Output. Minimum amount of GPU memory needed as parameter space to be able to execute an RNN with the specified descriptor and input tensors.

dataType

Input. The data type of the parameters.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- ► The descriptor xDesc is invalid.
- ► The descriptor xDesc is not fully packed.
- The combination of dataType and tensor descriptor data type is invalid.

CUDNN STATUS NOT SUPPORTED

The combination of the RNN descriptor and tensor descriptors is not supported.

7.2.28. cudnnGetRNNProjectionLayers()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnGetRNNDescriptor_v8()</u> instead of <u>cudnnGetRNNProjectionLayers()</u>.

```
cudnnStatus_t cudnnGetRNNProjectionLayers(
    cudnnHandle_t handle,
    cudnnRNNDescriptor_t rnnDesc,
    int *recProjSize,
    int *outProjSize)
```

This function retrieves the current RNN projection parameters. By default, the projection feature is disabled so invoking this function will yield recProjSize equal to hiddenSize

and outProjSize set to zero. The <u>cudnnSetRNNProjectionLayers()</u> method enables the RNN projection.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

rnnDesc

Input. A previously created and initialized RNN descriptor.

recProjSize

Output. Pointer where the recurrent projection size should be stored.

outProjSize

Output. Pointer where the output projection size should be stored.

Returns

```
CUDNN STATUS SUCCESS
```

RNN projection parameters were retrieved successfully.

```
CUDNN STATUS BAD PARAM
```

A NULL pointer was passed to the function.

7.2.29. cudnnGetRNNTempSpaceSizes()

```
cudnnStatus_t cudnnGetRNNTempSpaceSizes(
  cudnnHandle_t handle,
  cudnnRNNDescriptor_t rnnDesc,
  cudnnForwardMode_t fMode,
     cudnnRNNDataDescriptor_t xDesc,
  size_t *workSpaceSize,
  size_t *reserveSpaceSize);
```

This function computes the work and reserve space buffer sizes based on the RNN network geometry stored in <code>rnnDesc</code>, designated usage (inference or training) defined by the <code>fMode</code> argument, and the current RNN data dimensions (<code>maxSeqLength</code>, <code>batchSize</code>) retrieved from <code>xDesc</code>. When RNN data dimensions change, the <code>cudnnGetRNNTempSpaceSizes()</code> must be called again because RNN temporary buffer sizes are not monotonic.

The user can assign <code>NULL</code> to <code>workSpaceSize</code> or <code>reserveSpaceSize</code> pointers when the corresponding value is not needed.

Parameters

handle

Input. The current cuDNN context handle.

rnnDesc

Input. A previously initialized RNN descriptor.

fMode

Input. Specifies whether temporary buffers are used in inference or training modes. The reserve-space buffer is not used during inference. Therefore, the returned size of the reserve space buffer will be zero when the fmode argument is CUDNN FWD MODE INFERENCE.

xDesc

Input. A single RNN data descriptor that specifies current RNN data dimensions: maxSeqLength and batchSize.

workSpaceSize

Output. Minimum amount of GPU memory in bytes needed as a workspace buffer. The workspace buffer is not used to pass intermediate results between APIs but as a temporary read/write buffer.

reserveSpaceSize

Output. Minimum amount of GPU memory in bytes needed as the reserve-space buffer. The reserve space buffer is used to pass intermediate results from cudnnRNNForward() to RNN BackwardData and BackwardWeights routines that compute first order derivatives with respect to RNN inputs or trainable weight and biases.

Returns

CUDNN STATUS SUCCESS

RNN temporary buffer sizes were computed successfully.

```
CUDNN STATUS BAD PARAM
```

An invalid input argument was detected.

```
CUDNN STATUS NOT SUPPORTED
```

An incompatible or unsupported combination of input arguments was detected.

7.2.30. cudnnGetRNNTrainingReserveSize()

This function has been deprecated in cuDNN 8.0. Use cudnnGetRNNTempSpaceSizes() instead of cudnnGetRNNTrainingReserveSize().

This function is used to query the amount of reserved space required for training the RNN described by rnnDesc with input dimensions defined by xDesc. The same reserved

space buffer must be passed to <u>cudnnRNNForwardTraining()</u>, <u>cudnnRNNBackwardData()</u>, and <u>cudnnRNNBackwardWeights()</u>. Each of these calls overwrites the contents of the reserved space, however it can safely be backed up and restored between calls if reuse of the memory is desired.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

rnnDesc

Input. A previously initialized RNN descriptor.

seqLength

Input. Number of iterations to unroll over. The value of this <code>seqLength</code> must not exceed the value that was used in the <code>cudnnGetRNNWorkspaceSize()</code> function for querying the workspace size required to execute the RNN.

xDesc

Input. An array of tensor descriptors describing the input to each recurrent iteration (one descriptor per iteration). The first dimension (batch size) of the tensors may decrease from element n to element n+1 but may not increase. Each tensor descriptor must have the same second dimension (vector length).

sizeInBytes

Output. Minimum amount of GPU memory needed as reserve space to be able to train an RNN with the specified descriptor and input tensors.

Returns

CUDNN_STATUS_SUCCESS

The guery was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- ▶ At least one of the descriptors in xDesc is invalid.
- ► The descriptors in xDesc have inconsistent second dimensions, strides or data types.
- ▶ The descriptors in xDesc have increasing first dimensions.
- ► The descriptors in xDesc are not fully packed.

CUDNN STATUS NOT SUPPORTED

The data types in tensors described by xDesc are not supported.

7.2.31. cudnnGetRNNWeightParams()

```
cudnnStatus_t cudnnGetRNNWeightParams(
    cudnnHandle_t handle,
    cudnnRNNDescriptor_t rnnDesc,
    int32_t pseudoLayer,
    size_t weightSpaceSize,
    const void *weightSpace,
    int32_t linLayerID,
        cudnnTensorDescriptor_t mDesc,
    void **mAddr,
        cudnnTensorDescriptor_t bDesc,
    void **bAddr);
```

This function is used to obtain the start address and shape of every RNN weight matrix and bias vector in each pseudo-layer within the recurrent network.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

rnnDesc

Input. A previously initialized RNN descriptor.

pseudoLayer

Input. The pseudo-layer to query. In uni-directional RNNs, a pseudo-layer is the same as a physical layer (pseudoLayer=0 is the RNN input layer, pseudoLayer=1 is the first hidden layer). In bi-directional RNNs, there are twice as many pseudo-layers in comparison to physical layers:

- pseudoLayer=0 refers to the forward direction sub-layer of the physical input layer
- pseudoLayer=1 refers to the backward direction sub-layer of the physical input layer
- pseudoLayer=2 is the forward direction sub-layer of the first hidden layer, and so on

weightSpaceSize

Input. Size of the weight space buffer in bytes.

weightSpace

Input. Pointer to the weight space buffer.

linLayerID

Input. Weight matrix or bias vector linear ID index.

If cellmode in rnnDesc was set to CUDNN RNN RELU or CUDNN RNN TANH:

Value 0 references the weight matrix or bias vector used in conjunction with the input from the previous layer or input to the RNN model. Value 1 references the weight matrix or bias vector used in conjunction with the hidden state from the previous time step or the initial hidden state.

If cellMode in rnnDesc was set to CUDNN LSTM:

- ▶ Values 0, 1, 2 and 3 reference weight matrices or bias vectors used in conjunction with the input from the previous layer or input to the RNN model.
- ▶ Values 4, 5, 6 and 7 reference weight matrices or bias vectors used in conjunction with the hidden state from the previous time step or the initial hidden state.
- Value 8 corresponds to the projection matrix, if enabled (there is no bias in this operation).

Values and their LSTM gates:

- ▶ linLayerIDO and 4 correspond to the input gate.
- ▶ linLayerID1 and 5 correspond to the forget gate.
- ▶ linLayerID2 and 6 correspond to the new cell state calculations with hyperbolic tangent.
- ▶ linLayerID3 and 7 correspond to the output gate.

If cellMode in rnnDesc was set to CUDNN GRU:

- Values 0, 1 and 2 reference weight matrices or bias vectors used in conjunction with the input from the previous layer or input to the RNN model.
- Values 3, 4 and 5 reference weight matrices or bias vectors used in conjunction with the hidden state from the previous time step or the initial hidden state.

Values and their GRU gates:

- ▶ linLayerIDO and 3 correspond to the reset gate.
- ▶ linLayerID1 and 4 reference to the update gate.
- ▶ linLayerID2 and 5 correspond to the new hidden state calculations with hyperbolic tangent.

For more information on modes and bias modes, refer to cudnnRNNMode_t.

mDesc

mAddr

Output. Pointer to the beginning of the weight matrix within the weight space buffer. When the weight matrix does not exist, the returned address is NULL.

bDesc

Output. Handle to a previously created tensor descriptor. The shape of the corresponding bias vector is returned in this descriptor in the following format: $dimA[3] = \{1, rows, 1\}$. The reported number of tensor dimensions is zero when the bias vector does not exist.

bAddr

Output. Pointer to the beginning of the bias vector within the weight space buffer. When the bias vector does not exist, the returned address is NULL.

Returns

CUDNN STATUS SUCCESS

The query was completed successfully.

```
CUDNN STATUS BAD PARAM
```

An invalid input argument was encountered. For example, the value of pseudoLayer is out of range or linLayerID is negative or larger than 8.

```
CUDNN_STATUS_INVALID_VALUE
```

Some weight/bias elements are outside the weight space buffer boundaries.

```
CUDNN_STATUS_NOT_INITIALIZED
```

The RNN descriptor was configured with the legacy <u>cudnnSetRNNDescriptor_v6()</u> call.

7.2.32. cudnnGetRNNWeightSpaceSize()

```
cudnnStatus_t cudnnGetRNNWeightSpaceSize(
  cudnnHandle_t handle,
  cudnnRNNDescriptor_t rnnDesc,
  size_t *weightSpaceSize);
```

This function reports the required size of the weight space buffer in bytes. The weight space buffer holds all RNN weight matrices and bias vectors.

Parameters

handle

Input. The current cuDNN context handle.

rnnDesc

Input. A previously initialized RNN descriptor.

weightSpaceSize

Output. Minimum size in bytes of GPU memory needed for all RNN trainable parameters.

Returns

CUDNN STATUS SUCCESS

The query was successful.

```
CUDNN_STATUS_BAD_PARAM
```

An invalid input argument was encountered. For example, any input argument was <code>NULL</code>.

```
CUDNN_STATUS_NOT_INITIALIZED
```

The RNN descriptor was configured with the legacy <u>cudnnSetRNNDescriptor_v6()</u> call.

7.2.33. cudnnGetRNNWorkspaceSize()

This function has been deprecated in cuDNN 8.0. Use cudnnGetRNNTempSpaceSizes().

This function is used to query the amount of work space required to execute the RNN described by rnnDesc with input dimensions defined by xDesc.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

rnnDesc

Input. A previously initialized RNN descriptor.

seqLength

Input. Number of iterations to unroll over. Workspace that is allocated, based on the size that this function provides, cannot be used for sequences longer than seqLength.

xDesc

Input. An array of tensor descriptors describing the input to each recurrent iteration (one descriptor per iteration). The first dimension (batch size) of the tensors may decrease from element n to element n+1 but may not increase. For example, if you have multiple time series in a batch, they can be different lengths. This dimension is the batch size for the particular iteration of the sequence, and so it should decrease when a sequence in the batch has been terminated.

Each tensor descriptor must have the same second dimension (vector length).

sizeInBytes

Output. Minimum amount of GPU memory needed as workspace to be able to execute an RNN with the specified descriptor and input tensors.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- ▶ At least one of the descriptors in xDesc is invalid.
- ► The descriptors in xDesc have inconsistent second dimensions, strides or data types.
- ▶ The descriptors in xDesc have increasing first dimensions.
- ► The descriptors in xDesc are not fully packed.

CUDNN STATUS NOT SUPPORTED

The data types in tensors described by xDesc are not supported.

7.2.34. cudnnGetSeqDataDescriptor()

```
cudnnStatus_t cudnnGetSeqDataDescriptor(
  const cudnnSeqDataDescriptor_t seqDataDesc,
  cudnnDataType_t *dataType,
  int *nbDims,
  int nbDimsRequested,
  int dimA[],
  cudnnSeqDataAxis_t axes[],
  size_t *seqLengthArraySize,
  size_t seqLengthSizeRequested,
  int seqLengthArray[],
  void *paddingFill);
```

This function retrieves settings from a previously created sequence data descriptor. The user can assign NULL to any pointer except <code>seqDataDesc</code> when the retrieved value is not needed. The <code>nbDimsRequested</code> argument applies to both <code>dimA[]</code> and <code>axes[]</code> arrays. A positive value of <code>nbDimsRequested</code> or <code>seqLengthSizeRequested</code> is ignored when the corresponding array, <code>dimA[]</code>, <code>axes[]</code>, or <code>seqLengthArray[]</code> is <code>NULL</code>.

The <u>cudnnGetSeqDataDescriptor()</u> function does not report the actual strides in the sequence data buffer. Those strides can be handy in computing the offset to any sequence data element. The user must precompute strides based on the <code>axes[]</code> and <code>dimA[]</code> arrays reported by the <u>cudnnGetSeqDataDescriptor()</u> function. Below is sample code that performs this task:

```
// Array holding sequence data strides.
size_t strA[CUDNN_SEQDATA_DIM_COUNT] = {0};

// Compute strides from dimension and order arrays.
size t stride = 1;
```

```
for (int i = nbDims - 1; i >= 0; i--) {
  int j = int(axes[i]);
  if (unsigned(j) < CUDNN_SEQDATA_DIM_COUNT-1 && strA[j] == 0) {
    strA[j] = stride;
    stride *= dimA[j];
} else {
    fprintf(stderr, "ERROR: invalid axes[%d]=%d\n\n", i, j);
    abort();
}
</pre>
```

Now, the strA[] array can be used to compute the index to any sequence data element, for example:

The above code assumes that all four indices (batch, beam, time, vect) are less than the corresponding value in the dimA[] array. The sample code also omits the strA[CUDNN_SEQDATA_VECT_DIM] stride because its value is always 1, meaning, elements of one vector occupy a contiguous block of memory.

Parameters

seqDataDesc

Input. Sequence data descriptor.

dataType

Output. Data type used in the sequence data buffer.

nbDims

Output. The number of active dimensions in the dimA[] and axes[] arrays.

nbDimsRequested

Input. The maximum number of consecutive elements that can be written to dimA[] and axes[] arrays starting from index zero. The recommended value for this argument is CUDNN SEQDATA DIM COUNT.

dimA[]

Output. Integer array holding sequence data dimensions.

axes[]

Output. Array of <u>cudnnSeqDataAxis_t</u> that defines the layout of sequence data in memory.

seqLengthArraySize

Output. The number of required elements in seqLengthArray[] to save all sequence lengths.

seqLengthSizeRequested

Input. The maximum number of consecutive elements that can be written to the seqLengthArray[] array starting from index zero.

seqLengthArray[]

Output. Integer array holding sequence lengths.

paddingFill

Output. Pointer to a storage location of dataType with the fill value that should be written to all padding vectors. Use NULL when an explicit initialization of output padding vectors was not requested.

Returns

```
CUDNN STATUS SUCCESS
```

Requested sequence data descriptor fields were retrieved successfully.

```
CUDNN STATUS BAD PARAM
```

An invalid input argument was found.

```
CUDNN STATUS INTERNAL ERROR
```

An inconsistent internal state was encountered.

7.2.35. cudnnMultiHeadAttnForward()

```
cudnnStatus t cudnnMultiHeadAttnForward(
cudnnHandle t handle,
const cudnnAttnDescriptor t attnDesc,
int currIdx,
const int loWinIdx[],
const int hiWinIdx[],
const int devSeqLengthsQO[],
const int devSeqLengthsKV[],
const cudnnSeqDataDescriptor t qDesc,
const void *queries,
const void *residuals,
const cudnnSeqDataDescriptor t kDesc,
const void *keys,
const cudnnSeqDataDescriptor t vDesc,
 const void *values,
 const cudnnSeqDataDescriptor t oDesc,
      void *out,
 size_t weightSizeInBytes,
 const void *weights,
 size t workSpaceSizeInBytes,
void *workSpace,
size t reserveSpaceSizeInBytes,
void *reserveSpace);
```

The <code>cudnnMultiHeadAttnForward()</code> function computes the forward responses of the multi-head attention layer. When <code>reserveSpaceSizeInBytes=0</code> and <code>reserveSpace=NULL</code>, the function operates in the inference mode in which backward (gradient) functions are not invoked, otherwise, the training mode is assumed. In the training mode, the reserve space is used to pass intermediate results from <code>cudnnMultiHeadAttnForward()</code> to <code>cudnnMultiHeadAttnBackwardData()</code> and from <code>cudnnMultiHeadAttnBackwardData()</code> to <code>cudnnMultiHeadAttnBackwardWeights()</code>.

In the inference mode, the $\operatorname{currIdx}$ specifies the time-step or sequence index of the embedding vectors to be processed. In this mode, the user can perform one iteration for time-step zero ($\operatorname{currIdx=0}$), then update Q, K, V vectors and the attention window, and execute the next step ($\operatorname{currIdx=1}$). The iterative process can be repeated for all time-steps.

When all Q time-steps are available (for example, in the training mode or in the inference mode on the encoder side in self-attention), the user can assign a negative value to

currIdx and the cudnnMultiHeadAttnForward() API will automatically sweep through all Q time-steps.

The lowinIdx[] and hiwinIdx[] host arrays specify the attention window size for each Q time-step. In a typical self-attention case, the user must include all previously visited embedding vectors but not the current or future vectors. In this situation, the user should set:

```
currIdx=0: loWinIdx[0]=0; hiWinIdx[0]=0; // initial time-step, no attention window currIdx=1: loWinIdx[1]=0; hiWinIdx[1]=1; // attention window spans one vector currIdx=2: loWinIdx[2]=0; hiWinIdx[2]=2; // attention window spans two vectors (...)
```

When curridx is negative in cudnnMultiHeadAttnForward(), the loWinIdx[] and hiWinIdx[] arrays must be fully initialized for all time-steps. When cudnnMultiHeadAttnForward() is invoked with curridx=0, curridx=1, curridx=2, etc., then the user can update loWinIdx[curridx] and hiWinIdx[curridx] elements only before invoking the forward response function. All other elements in the loWinIdx[] and hiWinIdx[] arrays will not be accessed. Any adaptive attention window scheme can be implemented that way.

Use the following settings when the attention window should be the maximum size, for example, in cross-attention:

```
currIdx=0: loWinIdx[0]=0; hiWinIdx[0]=maxSeqLenK;
currIdx=1: loWinIdx[1]=0; hiWinIdx[1]=maxSeqLenK;
currIdx=2: loWinIdx[2]=0; hiWinIdx[2]=maxSeqLenK;
(...)
```

The maxSeqLenk value above should be equal to or larger than dimA[CUDNN_SEQDATA_TIME_DIM] in the kDesc descriptor. A good choice is to use maxSeqLenk=INT MAX from limits.h.




Note: The actual length of any K sequence defined in seqLengthArray[] in cudnnSetSeqDataDescriptor() can be shorter than maxSeqLenK. The effective attention window span is computed based on seqLengthArray[] stored in the K sequence descriptor and indices held in loWinIdx[] and hiWinIdx[] arrays.

devSeqLengthsQo[] and devSeqLengthsKV[] are pointers to device (not host) arrays with Q, O, and K, V sequence lengths. Note that the same information is also passed in the corresponding descriptors of type cudnnSeqDataDescriptor t on the host side. The need for extra device arrays comes from the asynchronous nature of cuDNN calls and limited size of the constant memory dedicated to GPU kernel arguments. When the cudnnMultiHeadAttnForward () API returns, the sequence length arrays stored in the descriptors can be immediately modified for the next iteration. However, the GPU kernels launched by the forward call may not have started at this point. For this reason, copies of sequence arrays are needed on the device side to be accessed directly by GPU kernels. Those copies cannot be created inside the cudnnMultiHeadAttnForward () function for very large K, V inputs without the device memory allocation and CUDA stream synchronization.

To reduce the <code>cudnnMultiHeadAttnForward()</code> API overhead, <code>devSeqLengthsQO[]</code> and <code>devSeqLengthsKV[]</code> device arrays are not validated to contain the same settings as <code>seqLengthArray[]</code> in the sequence data descriptors.

Sequence lengths in the kDesc and vDesc descriptors should be the same. Similarly, sequence lengths in the qDesc and oDesc descriptors should match. The user can define six different data layouts in the qDesc, kDesc, vDesc and oDesc descriptors. Refer to the $\underline{\text{cudnnSetSeqDataDescriptor}}$ function for the discussion of those layouts. All multi-head attention API calls require that the same layout is used in all sequence data descriptors.

In the transformer model, the multi-head attention block is tightly coupled with the layer normalization and residual connections. <code>cudnnMultiHeadAttnForward()</code> does not encompass the layer normalization but it can be used to handle residual connections as depicted in the following figure.

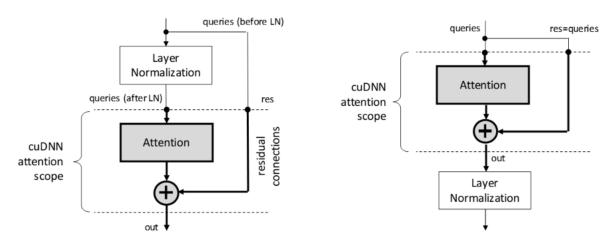

Queries and residuals share the same qDesc descriptor in cudnnMultiHeadAttnForward(). When residual connections are disabled, the residuals pointer should be NULL. When residual connections are enabled, the vector length in qDesc should match the vector length specified in the oDesc descriptor, so that a vector addition is feasible.

The queries, keys, and values pointers are not allowed to be NULL, even when K and V are the same inputs or Q, K, V are the same inputs.

Parameters

handle

Input. The current cuDNN context handle.

attnDesc

Input. A previously initialized attention descriptor.

currIdx

Input. Time-step in queries to process. When the $\mathtt{currIdx}$ argument is negative, all Q time-steps are processed. When $\mathtt{currIdx}$ is zero or positive, the forward response is computed for the selected time-step only. The latter input can be used in inference mode only, to process one time-step while updating the next attention window and Q, R, K, V inputs in-between calls.

loWinIdx[], hiWinIdx[]

Input. Two host integer arrays specifying the start and end indices of the attention window for each Q time-step. The start index in K, V sets is inclusive, and the end index is exclusive.

devSeqLengthsQ0[]

Input. Device array specifying sequence lengths of query, residual, and output sequence data.

devSeqLengthsKV[]

Input. Device array specifying sequence lengths of key and value input data.

qDesc

Input. Descriptor for the query and residual sequence data.

queries

Input. Pointer to gueries data in the device memory.

residuals

Input. Pointer to residual data in device memory. Set this argument to \mathtt{NULL} if no residual connections are required.

kDesc

Input. Descriptor for the keys sequence data.

keys

Input. Pointer to keys data in device memory.

vDesc

Input. Descriptor for the values sequence data.

values

Input. Pointer to values data in device memory.

oDesc

Input. Descriptor for the multi-head attention output sequence data.

out

Output. Pointer to device memory where the output response should be written.

weightSizeInBytes

Input. Size of the weight buffer in bytes where all multi-head attention trainable parameters are stored.

weights

Input. Pointer to the weight buffer in device memory.

workSpaceSizeInBytes

Input. Size of the work-space buffer in bytes used for temporary API storage.

workSpace

Input/Output. Pointer to the work-space buffer in device memory.

reserveSpaceSizeInBytes

Input. Size of the reserve-space buffer in bytes used for data exchange between forward and backward (gradient) API calls. This parameter should be zero in the inference mode and non-zero in the training mode.

reserveSpace

Input/Output. Pointer to the reserve-space buffer in device memory. This argument should be NULL in inference mode and non-NULL in the training mode.

Returns

CUDNN STATUS SUCCESS

No errors were detected while processing API input arguments and launching GPU kernels.

CUDNN STATUS BAD PARAM

An invalid or incompatible input argument was encountered. Some examples include:

- ▶ a required input pointer was NULL
- currIdx was out of bound
- the descriptor value for attention, query, key, value, and output were incompatible with one another

CUDNN STATUS EXECUTION FAILED

The process of launching a GPU kernel returned an error, or an earlier kernel did not complete successfully.

CUDNN_STATUS_INTERNAL_ERROR

An inconsistent internal state was encountered.

CUDNN STATUS NOT SUPPORTED

A requested option or a combination of input arguments is not supported.

CUDNN STATUS ALLOC FAILED

Insufficient amount of shared memory to launch a GPU kernel.


7.2.36. cudnnRNNForward()

```
cudnnStatus_t cudnnRNNForward(
    cudnnHandle_t handle,
    cudnnRNNDescriptor_t rnnDesc,
    cudnnForwardMode t fwdMode,
```

```
const int32 t devSeqLengths[],
cudnnRNNDataDescriptor t xDesc,
const void *x,
cudnnRNNDataDescriptor t yDesc,
void *y,
cudnnTensorDescriptor t hDesc,
const void *hx,
void *hy,
cudnnTensorDescriptor t cDesc,
const void *cx,
void *cy,
size_t weightSpaceSize,
const void *weightSpace,
size t workSpaceSize,
void *workSpace,
size t reserveSpaceSize,
void *reserveSpace);
```

This routine computes the forward response of the recurrent neural network described by rnnDesc with inputs in x, hx, cx, and weights/biases in the weightSpace buffer. RNN outputs are written to y, hy, and cy buffers. Locations of x, y, hx, cx, hy, and cy signals in the multi-layer RNN model are shown in the Figure below. Note that internal RNN signals between time-steps and between layers are not exposed to the user.

Figure 1. Locations of x, y, hx, cx, hy, and cy signals in the multi-layer RNN model.

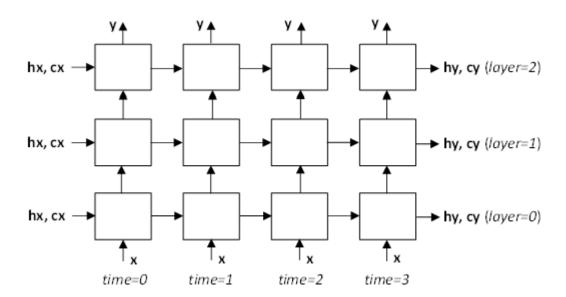

The next Figure depicts data flow when the RNN model is bi-directional. In this mode each RNN physical layer consists of two consecutive pseudo-layers, each with its own weights, biases, the initial hidden state hx, and for LSTM, also the initial cell state cx. Even pseudo-layers 0, 2, 4 process input vectors from left to right or in the forward (F) direction. Odd pseudo-layers 1, 3, 5 process input vectors from right to left or in the reverse (R) direction. Two successive pseudo-layers operate on the same input vectors, just in a different order. Pseudo-layers 0 and 1 access the original sequences stored in the x buffer. Outputs of F and R cells are concatenated so vectors fed to the next

two pseudo-layers have lengths of 2x hiddenSize or 2x projSize. Input GEMMs in subsequent pseudo-layers adjust vector lengths to 1x hiddenSize.

concat 仚↔ 17 hy, cy ◀ hx, cx (psedoLayer=5) hy, cy (psedoLayer=4) hx, cx ⇧ \Box ⇧ hy, cy 🗸 hx, cx (psedoLayer=3) R hx, cx hy, cy (psedoLayer=2) concat ⇧ hy, cy ∢ hx, cx (psedoLayer=1) hy, cy (psedoLayer=0) hx, cx X ⊏ time=1

Data flow when the RNN model is bi-directional. Figure 2.

When the fwdMode parameter is set to CUDNN FWD MODE TRAINING, the cudnnRNNForward() function stores intermediate data required to compute first order derivatives in the reserve space buffer. Work and reserve space buffer sizes should be computed by the cudnnGetRNNTempSpaceSizes() function with the same fwdMode setting as used in the cudnnRNNForward() call.

time=2

The same layout type must be specified in xDesc and yDesc descriptors. The same sequence lengths must be configured in xDesc, yDesc and in the device array devSeqLengths. The cudnnRNNForward() function does not verify that sequence lengths stored in devSeqLengths in GPU memory are the same as in xDesc and yDesc descriptors in CPU memory. Sequence length arrays from xDesc and yDesc descriptors are checked for consistency, however.

Parameters

handle

Input. The current cuDNN context handle.

time=0

rnnDesc

Input. A previously initialized RNN descriptor.

fwdMode

Input. Specifies inference or training mode (CUDNN FWD MODE INFERENCE and CUDNN FWD MODE TRAINING). In the training mode, additional data is stored in the reserve space buffer. This information is used in the backward pass to compute derivatives.

${\tt devSeqLengths}$

Input. A copy of seqLengthArray from xDesc or yDesc RNN data descriptor. The devSeqLengths array must be stored in GPU memory as it is accessed asynchronously by GPU kernels, possibly after the cudnnRNNForward() function exists. This argument cannot be NULL.

xDesc

Input. A previously initialized descriptor corresponding to the RNN model primary input. The dataType, layout, maxSeqLength, batchSize, and seqLengthArray must match that of yDesc. The parameter vectorSize must match the inputSize argument passed to the <u>cudnnSetRNNDescriptor_v8()</u> function.

x

Input. Data pointer to the GPU memory associated with the RNN data descriptor xDesc. The vectors are expected to be arranged in memory according to the layout specified by xDesc. The elements in the tensor (including padding vectors) must be densely packed.

yDesc

Input. A previously initialized RNN data descriptor. The dataType, layout, maxSeqLength, batchSize, and seqLengthArray must match that of xDesc. The parameter vectorSize depends on whether LSTM projection is enabled and whether the network is bidirectional. Specifically:

- For unidirectional models, the parameter <code>vectorSize</code> must match the <code>hiddenSize</code> argument passed to <code>cudnnSetRNNDescriptor_v8()</code>. If the LSTM projection is enabled, the <code>vectorSize</code> must be the same as the <code>projSize</code> argument passed to <code>cudnnSetRNNDescriptor_v8()</code>.
- For bidirectional models, if the RNN cellMode is CUDNN_LSTM and the projection feature is enabled, the parameter vectorSize must be 2x the projSize argument passed to <u>cudnnSetRNNDescriptor_v8()</u>. Otherwise, it should be 2x the hiddenSize value.

У

Output. Data pointer to the GPU memory associated with the RNN data descriptor yDesc. The vectors are expected to be laid out in memory according to the layout specified by yDesc. The elements in the tensor (including elements in the padding vector) must be densely packed, and no strides are supported.

hDesc

Input. A tensor descriptor describing the initial or final hidden state of RNN. Hidden state data are fully packed. The first dimension of the tensor depends on the dirMode argument passed to the <u>cudnnSetRNNDescriptor_v8()</u> function.

- If dirMode is CUDNN_UNIDIRECTIONAL, then the first dimension should match the numLayers argument passed to <u>cudnnSetRNNDescriptor_v8()</u>.
- If dirMode is CUDNN_BIDIRECTIONAL, then the first dimension should be double the numLayers argument passed to <u>cudnnSetRNNDescriptor_v8()</u>.

The second dimension must match the batchSize parameter described in xDesc. The third dimension depends on whether RNN mode is CUDNN_LSTM and whether the LSTM projection is enabled. Specifically:

- ▶ If RNN mode is CUDNN_LSTM and LSTM projection is enabled, the third dimension must match the projSize argument passed to the cudnnSetRNNProjectionLayers() call.
- Otherwise, the third dimension must match the hiddenSize argument passed to the cudnnSetRNNDescriptor v8() call used to initialize rnnDesc.

hx

Input. Pointer to the GPU buffer with the RNN initial hidden state. Data dimensions are described by the hDesc tensor descriptor. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

hy

Output. Pointer to the GPU buffer where the final RNN hidden state should be stored. Data dimensions are described by the hDesc tensor descriptor. If a NULL pointer is passed, the final hidden state of the network will not be saved.

cDesc

Input. For LSTM networks only. A tensor descriptor describing the initial or final cell state for LSTM networks only. Cell state data are fully packed. The first dimension of the tensor depends on the dirMode argument passed to the cudnnSetRNNDescriptor_v8() call.

- If dirMode is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument passed to <u>cudnnSetRNNDescriptor_v8()</u>.
- If dirMode is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument passed to <u>cudnnSetRNNDescriptor_v8()</u>.

The second tensor dimension must match the batchSize parameter in xDesc. The third dimension must match the hiddenSize argument passed to the cudnnSetRNNDescriptor_v8() call.

СX

Input. For LSTM networks only. Pointer to the GPU buffer with the initial LSTM state data. Data dimensions are described by the <code>cDesc</code> tensor descriptor. If a <code>NULL</code> pointer is passed, the initial cell state of the network will be initialized to zero.

су

Output. For LSTM networks only. Pointer to the GPU buffer where final LSTM state data should be stored. Data dimensions are described by the cDesc tensor descriptor. If a NULL pointer is passed, the final LSTM cell state will not be saved.

weightSpaceSize

Input. Specifies the size in bytes of the provided weight-space buffer.

weightSpace

Input. Address of the weight space buffer in GPU memory.

workSpaceSize

Input. Specifies the size in bytes of the provided workspace buffer.

workSpace

Input/Output. Address of the workspace buffer in GPU memory to store temporary data.

reserveSpaceSize

Input. Specifies the size in bytes of the reserve-space buffer.

reserveSpace

Input/Output. Address of the reserve-space buffer in GPU memory.

Returns

CUDNN STATUS SUCCESS

No errors were detected while processing API input arguments and launching GPU kernels.

CUDNN STATUS NOT SUPPORTED

At least one of the following conditions are met:

- variable sequence length input is passed while CUDNN_RNN_ALGO_PERSIST_STATIC or CUDNN RNN ALGO PERSIST DYNAMIC is specified
- CUDNN_RNN_ALGO_PERSIST_STATIC or CUDNN_RNN_ALGO_PERSIST_DYNAMIC is requested on pre-Pascal devices
- the 'double' floating point type is used for input/output and the CUDNN_RNN_ALGO_PERSIST_STATIC algo

CUDNN STATUS BAD PARAM

An invalid or incompatible input argument was encountered. For example:

- ▶ some input descriptors are NULL
- ▶ at least one of the settings in rnnDesc, xDesc, yDesc, hDesc, or cDesc descriptors is invalid

weightSpaceSize, workSpaceSize, or reserveSpaceSize is too small

CUDNN_STATUS_EXECUTION_FAILED

The process of launching a GPU kernel returned an error, or an earlier kernel did not complete successfully.

CUDNN_STATUS_ALLOC_FAILED

The function was unable to allocate CPU memory.

7.2.37. cudnnRNNForwardInference()

This function has been deprecated in cuDNN 8.0. Use $\underline{\text{cudnnRNNForward()}}$ instead of $\underline{\text{cudnnRNNForwardInference()}}$.

```
cudnnStatus t cudnnRNNForwardInference(
   cudnnHandle t
                                  handle,
   const cudnnRNNDescriptor t
                                 rnnDesc,
   const int
                                  segLength,
   const cudnnTensorDescriptor t *xDesc,
   const void
                                  *х.
   const cudnnTensorDescriptor t hxDesc,
                                  *hx,
   const void
   const cudnnTensorDescriptor t cxDesc,
   const void
                                  *cx,
   const cudnnFilterDescriptor t
                                  wDesc.
   const void
                                  ∗w,
                                 *yDesc,
   const cudnnTensorDescriptor t
                                  *y,
   const cudnnTensorDescriptor t hyDesc,
                                  *hy,
   const cudnnTensorDescriptor t
                                  cyDesc,
                                  *cy,
   void
   void
                                  *workspace,
   size t
                                workSpaceSizeInBytes)
```

This routine executes the recurrent neural network described by rnnDesc with inputs x, hx, and cx, weights w and outputs y, hy, and cy. workspace is required for intermediate storage. This function does not store intermediate data required for training; cudnnRNNForwardTraining() should be used for that purpose.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

seqLength

Input. Number of iterations to unroll over. The value of this <code>seqLength</code> must not exceed the value that was used in the <code>cudnnGetRNNWorkspaceSize()</code> function for querying the workspace size required to execute the RNN.

xDesc

Input. An array of <code>seqLength</code> fully packed tensor descriptors. Each descriptor in the array should have three dimensions that describe the input data format to one recurrent iteration (one descriptor per RNN time-step). The first dimension (batch size) of the tensors may decrease from iteration <code>n</code> to iteration <code>n+1</code> but may not increase. Each tensor descriptor must have the same second dimension (RNN input vector length, <code>inputSize</code>). The third dimension of each tensor should be 1. Input data are expected to be arranged in the column-major order so strides in <code>xDesc</code> should be set as follows:

strideA[0]=inputSize, strideA[1]=1, strideA[2]=1

X

Input. Data pointer to GPU memory associated with the array of tensor descriptors xDesc. The input vectors are expected to be packed contiguously with the first vector of iteration (time-step) n+1 following directly from the last vector of iteration n. In other words, input vectors for all RNN time-steps should be packed in the contiguous block of GPU memory with no gaps between the vectors.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

cxDesc

Input. A fully packed tensor descriptor describing the initial cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

CX

Input. Data pointer to GPU memory associated with the tensor descriptor <code>cxDesc</code>. If a <code>NULL</code> pointer is passed, the initial cell state of the network will be initialized to zero.

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

yDesc

Input. An array of fully packed tensor descriptors describing the output from each recurrent iteration (one descriptor per iteration). The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor n must match the first dimension of the tensor n in xDesc.

У

Output. Data pointer to GPU memory associated with the output tensor descriptor yDesc. The data are expected to be packed contiguously with the first element of iteration n+1 following directly from the last element of iteration n.

hyDesc

Input. A fully packed tensor descriptor describing the final hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hy

Output. Data pointer to GPU memory associated with the tensor descriptor hydesc. If a NULL pointer is passed, the final hidden state of the network will not be saved.

cyDesc

Input. A fully packed tensor descriptor describing the final cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

су

Output. Data pointer to GPU memory associated with the tensor descriptor cyDesc. If a NULL pointer is passed, the final cell state of the network will not be saved.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

Returns

CUDNN_STATUS_SUCCESS

The function launched successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- At least one of the descriptors hxDesc, cxDesc, wDesc, hyDesc, cyDesc or one of the descriptors in xDesc, yDesc is invalid.
- ► The descriptors in one of xDesc, hxDesc, cxDesc, wDesc, yDesc, hyDesc, cyDesc have incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.

CUDNN STATUS INVALID VALUE

<u>cudnnSetPersistentRNNPlan()</u> was not called prior to the current function when CUDNN RNN ALGO PERSIST DYNAMIC was selected in the RNN descriptor.

```
CUDNN_STATUS_EXECUTION_FAILED
```

The function failed to launch on the GPU.

```
CUDNN STATUS ALLOC FAILED
```

The function was unable to allocate memory.

7.2.38. cudnnRNNForwardInferenceEx()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnRNNForward()</u> instead of cudnnRNNForwardInferenceEx().

```
cudnnStatus t cudnnRNNForwardInferenceEx(
   const cudnnRNNDataDescriptor_t xDesc,
  const void
                                 *x,
   const cudnnTensorDescriptor t hxDesc,
   const void
                                 *hx,
   const cudnnTensorDescriptor t cxDesc,
   const. void
                                 *cx,
   const cudnnFilterDescriptor t wDesc,
   const void
                                 *w,
   const cudnnRNNDataDescriptor t yDesc,
   void
                                 *У,
   const cudnnTensorDescriptor t hyDesc,
   void
                                 *hy,
   const cudnnTensorDescriptor t cyDesc,
                                 *cy,
   const cudnnRNNDataDescriptor t kDesc,
   const void
                                 *keys,
   const cudnnRNNDataDescriptor t cDesc,
   void
                                 *cAttn.
   const cudnnRNNDataDescriptor t iDesc,
                                 *iAttn,
   void
   const cudnnRNNDataDescriptor t qDesc,
   void
                                 *queries,
                                *workSpace,
   void
                             workSpaceSizeInBytes)
   size t
```

This routine is the extended version of the <u>cudnnRNNForwardInference()</u> function. The <u>cudnnRNNForwardTrainingEx()</u> function allows the user to use an unpacked (padded) layout for input x and output y. In the unpacked layout, each sequence in the minibatch is considered to be of fixed length, specified by maxSeqLength in its corresponding RNNDataDescriptor. Each fixed-length sequence, for example, the nth sequence in the minibatch, is composed of a valid segment, specified by the seqLengthArray[n] in its corresponding RNNDataDescriptor, and a padding segment to make the combined sequence length equal to maxSeqLength.

With an unpacked layout, both sequence major (meaning, time major) and batch major are supported. For backward compatibility, the packed sequence major layout is supported. However, similar to the non-extended function <u>cudnnRNNForwardInference()</u>,

the sequences in the mini-batch need to be sorted in descending order according to length.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

xDesc

Input. A previously initialized RNN Data descriptor. The dataType, layout, maxSeqLength, batchSize, and seqLengthArray need to match that of yDesc.

x

Input. Data pointer to the GPU memory associated with the RNN data descriptor xDesc. The vectors are expected to be laid out in memory according to the layout specified by xDesc. The elements in the tensor (including elements in the padding vector) must be densely packed, and no strides are supported.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the <code>batchSize</code> parameter described in <code>xDesc</code>. The third dimension depends on whether RNN mode is <code>CUDNN_LSTM</code> and whether LSTM projection is enabled. Specifically:

- ▶ If RNN mode is CUDNN_LSTM and LSTM projection is enabled, the third dimension must match the recProjSize argument passed to cudnnSetRNNProjectionLayers() call used to set rnnDesc.
- Otherwise, the third dimension must match the hiddenSize argument used to initialize rnnDesc.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

cxDesc

Input. A fully packed tensor descriptor describing the initial cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the batchSize parameter in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc.

СX

Input. Data pointer to GPU memory associated with the tensor descriptor <code>cxDesc</code>. If a <code>NULL</code> pointer is passed, the initial cell state of the network will be initialized to zero.

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

w

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

yDesc

Input. A previously initialized RNN data descriptor. The dataType, layout, maxSeqLength, batchSize, and seqLengthArray must match that of dyDesc and dxDesc. The parameter vectorSize depends on whether RNN mode is CUDNN_LSTM and whether LSTM projection is enabled and whether the network is bidirectional. Specifically:

- For unidirectional network, if the RNN mode is CUDNN_LSTM and LSTM projection is enabled, the parameter vectorSize must match the recProjSize argument passed to <u>cudnnSetRNNProjectionLayers()</u> call used to set rnnDesc. If the network is bidirectional, then multiply the value by 2.
- ▶ Otherwise, for a unidirectional network, the parameter vectorSize must match the hiddenSize argument used to initialize rnnDesc. If the network is bidirectional, then multiply the value by 2.

У

Output. Data pointer to the GPU memory associated with the RNN data descriptor y Desc. The vectors are expected to be laid out in memory according to the layout specified by y Desc. The elements in the tensor (including elements in the padding vector) must be densely packed, and no strides are supported.

hyDesc

Input. A fully packed tensor descriptor describing the final hidden state of the RNN. The descriptor must be set exactly the same way as hxDesc.

hy

Output. Data pointer to GPU memory associated with the tensor descriptor hydesc. If a NULL pointer is passed, the final hidden state of the network will not be saved.

cyDesc

Input. A fully packed tensor descriptor describing the final cell state for LSTM networks. The descriptor must be set exactly the same way as <code>cxDesc</code>.

су

Output. Data pointer to GPU memory associated with the tensor descriptor cyDesc. If a NULL pointer is passed, the final cell state of the network will not be saved.

kDesc

Reserved. User may pass in NULL.

keys

Reserved. Users may pass in NULL.

cDesc

Reserved. Users may pass in NULL.

cAttn

Reserved. Users may pass in NULL.

iDesc

Reserved. Users may pass in NULL.

iAttn

Reserved. Users may pass in NULL.

qDesc

Reserved. Users may pass in NULL.

queries

Reserved. Users may pass in NULL.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN_STATUS_NOT_SUPPORTED

At least one of the following conditions are met:

- ► Variable sequence length input is passed in while CUDNN RNN ALGO PERSIST STATIC or CUDNN RNN ALGO PERSIST DYNAMIC is used.
- CUDNN_RNN_ALGO_PERSIST_STATIC or CUDNN_RNN_ALGO_PERSIST_DYNAMIC is used on pre-Pascal devices.
- ▶ Double input/output is used for CUDNN RNN ALGO PERSIST STATIC.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- At least one of the descriptors in xDesc, yDesc, hxDesc, cxDesc, wDesc, hyDesc, cyDesc is invalid, or has incorrect strides or dimensions.
- reserveSpaceSizeInBytes is too small.
- workSpaceSizeInBytes is too small.

CUDNN STATUS INVALID VALUE

<u>cudnnSetPersistentRNNPlan()</u> was not called prior to the current function when CUDNN RNN ALGO PERSIST DYNAMIC was selected in the RNN descriptor.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

```
CUDNN STATUS ALLOC FAILED
```

The function was unable to allocate memory.

7.2.39. cudnnRNNGetClip()

This function has been deprecated in cuDNN 8.0. Use $\underline{\text{cudnnRNNGetClip_v8()}}$ instead of $\underline{\text{cudnnRNNGetClip}}$ ().

Retrieves the current LSTM cell clipping parameters, and stores them in the arguments provided.

Parameters

*clipMode

Output. Pointer to the location where the retrieved clipMode is stored. The clipMode can be CUDNN_RNN_CLIP_NONE in which case no LSTM cell state clipping is being performed; or CUDNN_RNN_CLIP_MINMAX, in which case the cell state activation to other units are being clipped.

*lclip, *rclip

Output. Pointers to the location where the retrieved LSTM cell clipping range [lclip, rclip] is stored.

*clipNanOpt

Output. Pointer to the location where the retrieved clipNanOpt is stored.

Returns

```
CUDNN STATUS SUCCESS
```

The function launched successfully.

```
CUDNN STATUS BAD PARAM
```

If any of the pointer arguments provided are NULL.

7.2.40. cudnnRNNGetClip_v8()

```
cudnnStatus_t cudnnRNNGetClip_v8(
  cudnnRNNDescriptor_t rnnDesc,
  cudnnRNNClipMode_t *clipMode,
  cudnnNanPropagation_t *clipNanOpt,
  double *lclip,
  double *rclip);
```

Retrieves the current LSTM cell clipping parameters, and stores them in the arguments provided. The user can assign <code>NULL</code> to any pointer except <code>rnnDesc</code> when the retrieved value is not needed. The function does not check the validity of retrieved parameters.

Parameters

rnnDesc

Input. A previously initialized RNN descriptor.

clipMode

Output. Pointer to the location where the retrieved <u>cudnnRNNClipMode_t</u> value is stored. The <code>clipMode</code> can be <code>cudnn_Rnn_clip_none</code> in which case no LSTM cell state clipping is being performed; or <code>cudnn_Rnn_clip_minmax</code>, in which case the cell state activation to other units are being clipped.

clipNanOpt

Output. Pointer to the location where the retrieved <u>cudnnNanPropagation_t</u> value is stored.

lclip, rclip

Output. Pointers to the location where the retrieved LSTM cell clipping range [lclip, rclip] is stored.

Returns

CUDNN STATUS SUCCESS

LSTM clipping parameters were successfully retrieved from the RNN descriptor.

CUDNN_STATUS_BAD_PARAM

An invalid input argument was found (rnnDesc was NULL).

7.2.41. cudnnRNNSetClip()

This function has been deprecated in cuDNN 8.0. Use cudnnRNNSetClip_v8() instead of cudnnRNNSetClip ().

Sets the LSTM cell clipping mode. The LSTM clipping is disabled by default. When enabled, clipping is applied to all layers. This $\mathtt{cudnnRNNSetClip}()$ function may be called multiple times.

Parameters

clipMode

Input. Enables or disables the LSTM cell clipping. When clipMode is set to CUDNN_RNN_CLIP_NONE no LSTM cell state clipping is performed. When clipMode is CUDNN_RNN_CLIP_MINMAX the cell state activation to other units is clipped.

lclip, rclip

Input. The range [lclip, rclip] to which the LSTM cell clipping should be set.

clipNanOpt

Input. When set to CUDNN_PROPAGATE_NAN (see the description for <u>cudnnNanPropagation_t</u>), NaN is propagated from the LSTM cell, or it can be set to one of the clipping range boundary values, instead of propagating.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

```
CUDNN_STATUS_BAD_PARAM
```

Returns this value if lclip > rclip; or if either lclip or rclip is NaN.

7.2.42. cudnnRNNSetClip_v8()

```
cudnnStatus_t cudnnRNNSetClip_v8(
  cudnnRNNDescriptor_t rnnDesc,
  cudnnRNNClipMode_t clipMode,
  cudnnNanPropagation_t clipNanOpt,
  double lclip,
  double rclip);
```

Sets the LSTM cell clipping mode. The LSTM clipping is disabled by default. When enabled, clipping is applied to all layers. This <u>cudnnRNNSetClip()</u> function does not affect the work, reserve, and weight-space buffer sizes and may be called multiple times.

Parameters

rnnDesc

Input. A previously initialized RNN descriptor.

clipMode

Input. Enables or disables the LSTM cell clipping. When clipMode is set to CUDNN_RNN_CLIP_NONE no LSTM cell state clipping is performed. When clipMode is CUDNN_RNN_CLIP_MINMAX the cell state activation to other units is clipped.

clipNanOpt

Input. When set to CUDNN_PROPAGATE_NAN (see the description for <u>cudnnNanPropagation_t</u>), NaN is propagated from the LSTM cell, or it can be set to one of the clipping range boundary values, instead of propagating.

lclip, rclip

Input. The range [lclip, rclip] to which the LSTM cell clipping should be set.

Returns

CUDNN STATUS SUCCESS

The function completed successfully.

CUDNN_STATUS_BAD_PARAM

An invalid input argument was found, for example:

- rnnDesc Was NULL
- ▶ lclip > rclip

either lclip or rclip is NaN

CUDNN_STATUS_BAD_PARAM

The dimensions of the bias tensor refer to an amount of data that is incompatible with the output tensor dimensions or the dataType of the two tensor descriptors are different.

```
CUDNN STATUS EXECUTION FAILED
```

The function failed to launch on the GPU.

7.2.43. cudnnSetAttnDescriptor()

```
cudnnStatus t cudnnSetAttnDescriptor(
cudnnAttnDescriptor t attnDesc,
unsigned attnMode,
int nHeads,
double smScaler,
cudnnDataType t dataType,
cudnnDataType_t computePrec,
cudnnMathType_t mathType,
cudnnDropoutDescriptor_t attnDropoutDesc,
cudnnDropoutDescriptor_t postDropoutDesc,
int qSize,
int kSize,
int vSize,
 int qProjSize,
 int kProjSize,
int vProjSize,
 int oProjSize,
int qoMaxSeqLength,
 int kvMaxSeqLength,
 int maxBatchSize,
int maxBeamSize);
```

This function configures a multi-head attention descriptor that was previously created using the <u>cudnnCreateAttnDescriptor()</u> function. The function sets attention parameters that are necessary to compute internal buffer sizes, dimensions of weight and bias tensors, or to select optimized code paths.

Input sequence data descriptors in cudnnMultiHeadAttnForward(), cudnnMultiHeadAttnBackwardWeights() functions are checked against the configuration parameters stored in the attention descriptor. Some parameters must match exactly while maxBatchSize or qoMaxSeqLength establish upper limits for the corresponding dimensions.

The multi-head attention model can be described by the following equations:

$$\mathbf{h}_{i} = (\mathbf{W}_{V,i}\mathbf{V})$$
 softmax $\left(\text{smScaler}\left(\mathbf{K}^{\mathsf{T}}\mathbf{W}_{K,i}^{\mathsf{T}}\right)\left(\mathbf{W}_{Q,i}\mathbf{q}\right)\right)$, for $i = 0$... nHeads-1

MultiHeadAttn(
$$\mathbf{q}, \mathbf{K}, \mathbf{V}, \mathbf{W}_{Q}, \mathbf{W}_{K}, \mathbf{W}_{V}, \mathbf{W}_{O}$$
) =
$$\sum_{i=0}^{\text{nHeads-1}} \mathbf{W}_{O,i} \mathbf{h}_{i}$$

Where:

 \triangleright nHeads is the number of independent attention heads that evaluate \mathbf{h}_i vectors.

- ▶ **q** is a primary input, a single query column vector.
- **K**, **V** are two matrices of key and value column vectors.

For simplicity, the above equations are presented using a single embedding vector **q** but the API can handle multiple **q** candidates in the beam search scheme, process **q** vectors from multiple sequences bundled into a batch, or automatically iterate through all embedding vectors (time-steps) of a sequence. Thus, in general, **q**, **K**, **V** inputs are tensors with additional pieces of information such as the active length of each sequence or how unused padding vectors should be saved.

In some publications, $\mathbf{W}_{O,i}$ matrices are combined into one output projection matrix and \mathbf{h}_i vectors are merged explicitly into a single vector. This is an equivalent notation. In the library, $\mathbf{W}_{O,i}$ matrices are conceptually treated the same way as $\mathbf{W}_{Q,i}$, $\mathbf{W}_{K,i}$ or $\mathbf{W}_{V,i}$ input projection weights. See the description of the <u>cudnnGetMultiHeadAttnWeights()</u> function for more details.

Weight matrices $\mathbf{W}_{Q,i}$, $\mathbf{W}_{V,i}$ and $\mathbf{W}_{O,i}$ play similar roles, adjusting vector lengths in \mathbf{q} , \mathbf{K} , \mathbf{V} inputs and in the multi-head attention final output. The user can disable any or all projections by setting qProjSize, kProjSize, vProjSize or oProjSize arguments to zero.

Embedding vector sizes in \mathbf{q} , \mathbf{K} , \mathbf{V} and the vector lengths after projections need to be selected in such a way that matrix multiplications described above are feasible. Otherwise, <code>CUDNN_STATUS_BAD_PARAM</code> is returned by the <code>cudnnSetAttnDescriptor()</code> function. All four weight matrices are used when it is desirable to maintain rank deficiency of $\mathbf{W}_{KQj} = \mathbf{W}_{Kj}^T \mathbf{W}_{Qj}$ or $\mathbf{W}_{OVj} = \mathbf{W}_{Oj} \mathbf{W}_{Vj}$ matrices to eliminate one or more dimensions during linear transformations in each head. This is a form of feature extraction. In such cases, the projected sizes are smaller than the original vector lengths.

For each attention head, weight matrix sizes are defined as follows:

- **W**_{Oi} size [qProjSize x qSize], i = 0 .. nHeads-1
- ▶ \mathbf{W}_{Ki} size [kProjSize x kSize], i = 0 .. nHeads 1, kProjSize = qProjSize
- **W**_{Vi} size [vProjSize x vSize], i = 0 .. nHeads 1
- **W**_{Oi} size [oProjSize x (vProjSize > 0 ? vProjSize : vSize)], i = 0 .. nHeads-1

When the output projection is disabled (oProjSize = 0), the output vector length is nHeads * (vProjSize > 0 ? vProjSize : vSize), meaning, the output is a concatenation of all \mathbf{h}_i vectors. In the alternative interpretation, a concatenated matrix $\mathbf{W}_O = [\mathbf{W}_{O,0}, \mathbf{W}_{O,1}, \mathbf{W}_{O,2}, \dots]$ forms the identity matrix.

Softmax is a normalized, exponential vector function that takes and outputs vectors of the same size. The multi-head attention API utilizes softmax of the CUDNN SOFTMAX ACCURATE type to reduce the likelihood of the floating-point overflow.

The smscaler parameter is the softmax sharpening/smoothing coefficient. When smscaler=1.0, softmax uses the natural exponential function $\exp(x)$ or 2.7183*. When smscaler<1.0, for example smscaler=0.2, the function used by the softmax block will not grow as fast because $\exp(0.2^*x) \approx 1.2214^*$.

The smScaler parameter can be adjusted to process larger ranges of values fed to softmax. When the range is too large (or smScaler is not sufficiently small for the given

range), the output vector of the softmax block becomes categorical, meaning, one vector element is close to 1.0 and other outputs are zero or very close to zero. When this occurs, the Jacobian matrix of the softmax block is also close to zero so deltas are not back-propagated during training from output to input except through residual connections, if these connections are enabled. The user can set <code>smscaler</code> to any positive floating-point value or even zero. The <code>smscaler</code> parameter is not trainable.

The qoMaxSeqLength, kvMaxSeqLength, maxBatchSize, and maxBeamSize arguments declare the maximum sequence lengths, maximum batch size, and maximum beam size respectively, in the <u>cudnnSeqDataDescriptor_t</u> containers. The actual dimensions supplied to forward and backward (gradient) API functions should not exceed the max limits. The max arguments should be set carefully because too large values will result in excessive memory usage due to oversized work and reserve space buffers.

The attnMode argument is treated as a binary mask where various on/off options are set. These options can affect the internal buffer sizes, enforce certain argument checks, select optimized code execution paths, or enable attention variants that do not require additional numerical arguments. An example of such options is the inclusion of biases in input and output projections.

The attnDropoutDesc and postDropoutDesc arguments are descriptors that define two dropout layers active in the training mode. The first dropout operation defined by attnDropoutDesc, is applied directly to the softmax output. The second dropout operation, specified by postDropoutDesc, alters the multi-head attention output, just before the point where residual connections are added.



Note: The <code>cudnnSetAttnDescriptor()</code> function performs a shallow copy of <code>attnDropoutDesc</code> and <code>postDropoutDesc</code>, meaning, the addresses of both dropout descriptors are stored in the attention descriptor and not the entire structure. Therefore, the user should keep dropout descriptors during the entire life of the attention descriptor.

Parameters

attnDesc

Output. Attention descriptor to be configured.

attnMode

Input. Enables various attention options that do not require additional numerical values. See the table below for the list of supported flags. The user should assign a preferred set of bitwise OR-ed flags to this argument.

nHeads

Input. Number of attention heads.

smScaler

Input. Softmax smoothing (1.0 \geq smScaler \geq 0.0) or sharpening (smScaler \geq 1.0) coefficient. Negative values are not accepted.

dataType

Input. Data type used to represent attention inputs, attention weights and attention outputs.

computePrec

Input. Compute precision.

mathType

Input. NVIDIA Tensor Core settings.

attnDropoutDesc

Input. Descriptor of the dropout operation applied to the softmax output. See the table below for a list of unsupported features.

postDropoutDesc

Input. Descriptor of the dropout operation applied to the multi-head attention output, just before the point where residual connections are added. See the table below for a list of unsupported features.

qSize, kSize, vSize

Input. Q, K, V embedding vector lengths.

qProjSize, kProjSize, vProjSize

Input. **Q**, **K**, **V** embedding vector lengths after input projections. Use zero to disable the corresponding projection.

oProjSize

Input. The \mathbf{h}_i vector length after the output projection. Use zero to disable this projection.

qoMaxSeqLength

Input. Largest sequence length expected in sequence data descriptors related to **Q**, **O**, **dQ** and **dO** inputs and outputs.

kvMaxSeqLength

Input. Largest sequence length expected in sequence data descriptors related to \mathbf{K} , \mathbf{V} , \mathbf{dK} and \mathbf{dV} inputs and outputs.

maxBatchSize

Input. Largest batch size expected in any <u>cudnnSeqDataDescriptor_t</u> container.

maxBeamSize

Input. Largest beam size expected in any <u>cudnnSeqDataDescriptor_t</u> container.

Supported attnMode flags

CUDNN_ATTN_QUERYMAP_ALL_TO_ONE

Forward declaration of mapping between **Q** and **K**, **V** vectors when the beam size is greater than one in the **Q** input. Multiple **Q** vectors from the same beam bundle map to the same **K**, **V** vectors. This means that beam sizes in the **K**, **V** sets are equal to one.

CUDNN ATTN QUERYMAP ONE TO ONE

Forward declaration of mapping between **Q** and **K**, **V** vectors when the beam size is greater than one in the **Q** input. Multiple **Q** vectors from the same beam bundle map to different **K**, **V** vectors. This requires beam sizes in **K**, **V** sets to be the same as in the **Q** input.

CUDNN ATTN DISABLE PROJ BIASES

Use no biases in the attention input and output projections.

CUDNN ATTN ENABLE PROJ BIASES

Use extra biases in the attention input and output projections. In this case the projected $\overline{\mathbf{K}}$ vectors are computed as $\overline{\mathbf{K}}_i = \mathbf{W}_{K,i}\mathbf{K} + \mathbf{b}^* [1, 1, ..., 1]_{\kappa_n}$, where n is the number of columns in the \mathbf{K} matrix. In other words, the same column vector \mathbf{b} is added to all columns of \mathbf{K} after the weight matrix multiplication.

Supported combinations of dataType, computePrec, and mathType

Table 46. Supported combinations

dataType	computePrec	mathType
CUDNN_DATA_DOUBLE	CUDNN_DATA_DOUBLE	CUDNN_DEFAULT_MATH
CUDNN_DATA_FLOAT	CUDNN_DATA_FLOAT	CUDNN_DEFAULT_MATH, CUDNN_TENSOR_OP_MATH_ALLOW_
CUDNN_DATA_HALF	CUDNN_DATA_HALF, CUDNN_DATA_FLOAT	CUDNN_DEFAULT_MATH, CUDNN_TENSOR_OP_MATH,
		CUDNN_TENSOR_OP_MATH_ALLOW_

Unsupported features

1. The paddingFill argument in <u>cudnnSeqDataDescriptor_t</u> is currently ignored by all multi-head attention functions.

Returns

CUDNN STATUS SUCCESS

The attention descriptor was configured successfully.

CUDNN STATUS BAD PARAM

An invalid input argument was encountered. Some examples include:

- post projection Q and K sizes were not equal
- dataType, computePrec, or mathType were invalid
- one or more of the following arguments were either negative or zero: nHeads, qSize, kSize, vSize, qoMaxSeqLength, kvMaxSeqLength, maxBatchSize, maxBeamSize
- one or more of the following arguments were negative: qProjSize, kProjSize, vProjSize, smScaler

CUDNN STATUS NOT SUPPORTED

A requested option or a combination of input arguments is not supported.

7.2.44. cudnnSetPersistentRNNPlan()

This function has been deprecated in cuDNN 8.0.

This function sets the persistent RNN plan to be executed when using rnnDesc and CUDNN RNN ALGO PERSIST DYNAMIC algo.

Returns

CUDNN STATUS_SUCCESS

The plan was set successfully.

```
CUDNN STATUS BAD PARAM
```

The algo selected in rnnDesc is not CUDNN RNN ALGO PERSIST DYNAMIC.

7.2.45. cudnnSetRNNAlgorithmDescriptor()

This function has been deprecated in cuDNN 8.0.

7.2.46. cudnnSetRNNBiasMode()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnSetRNNDescriptor_v8()</u> instead of cudnnSetRNNBiasMode().

```
cudnnStatus_t cudnnSetRNNBiasMode(
  cudnnRNNDescriptor_t rnnDesc,
  cudnnRNNBiasMode_t biasMode)
```

The <code>cudnnSetRNNBiasMode()</code> function sets the number of bias vectors for a previously created and initialized RNN descriptor. This function should be called to enable the specified bias mode in an RNN. The default value of <code>biasMode</code> in <code>rnnDesc</code> after <code>cudnnCreateRNNDescriptor()</code> is <code>cudnn</code> RNN <code>DOUBLE BIAS</code>.

Parameters

rnnDesc

Input/Output. A previously created RNN descriptor.

biasMode

Input. Sets the number of bias vectors. For more information, refer to cudnnRNNBiasMode_t.

Returns

CUDNN STATUS BAD PARAM

Either the rnnDesc is NULL or biasMode has an invalid enumerant value.

```
CUDNN STATUS SUCCESS
```

The biasMode was set successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

Non-default bias mode (an enumerated type besides CUDNN_RNN_DOUBLE_BIAS) applied to an RNN algo other than CUDNN RNN ALGO STANDARD.

7.2.47. cudnnSetRNNDataDescriptor()

This function initializes a previously created RNN data descriptor object. This data structure is intended to support the unpacked (padded) layout for input and output of extended RNN inference and training functions. A packed (unpadded) layout is also supported for backward compatibility.

Parameters

RNNDataDesc

Input/Output. A previously created RNN descriptor. For more information, refer to <u>cudnnRNNDataDescriptor_t</u>.

dataType

Input. The datatype of the RNN data tensor. For more information, refer to <u>cudnnDataType_t</u>.

layout

Input. The memory layout of the RNN data tensor.

maxSeqLength

Input. The maximum sequence length within this RNN data tensor. In the unpacked (padded) layout, this should include the padding vectors in each sequence. In the packed (unpadded) layout, this should be equal to the greatest element in seqLengthArray.

batchSize

Input. The number of sequences within the mini-batch.

vectorSize

Input. The vector length (embedding size) of the input or output tensor at each timestep.

seqLengthArray

Input. An integer array with batchSize number of elements. Describes the length (number of time-steps) of each sequence. Each element in seqLengthArray must be greater than or equal to 0 but less than or equal to maxSeqLength. In the packed layout, the elements should be sorted in descending order, similar to the layout required by the non-extended RNN compute functions.

paddingFill

Input. A user-defined symbol for filling the padding position in RNN output. This is only effective when the descriptor is describing the RNN output, and the unpacked layout is specified. The symbol should be in the host memory, and is interpreted as the same data type as that of the RNN data tensor. If a \mathtt{NULL} pointer is passed in, then the padding position in the output will be undefined.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

CUDNN STATUS NOT SUPPORTED

dataType is not one of CUDNN DATA HALF, CUDNN DATA FLOAT Or CUDNN DATA DOUBLE.

CUDNN_STATUS_BAD_PARAM

Any one of these have occurred:

- ► RNNDataDesc is NULL.
- Any one of maxSeqLength, batchSize or vectorSize is less than or equal to zero.
- ▶ An element of seqLengthArray is less than zero or greater than maxSeqLength.

Layout is not one of CUDNN_RNN_DATA_LAYOUT_SEQ_MAJOR_UNPACKED, CUDNN_RNN_DATA_LAYOUT_SEQ_MAJOR_PACKED or CUDNN RNN DATA LAYOUT BATCH MAJOR UNPACKED.

CUDNN STATUS ALLOC FAILED

The allocation of internal array storage has failed.

7.2.48. cudnnSetRNNDescriptor_v6()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnSetRNNDescriptor_v8()</u> instead of <u>cudnnSetRNNDescriptor_v8()</u>.

This function initializes a previously created RNN descriptor object.



Note: Larger networks, for example, longer sequences or more layers, are expected to be more efficient than smaller networks.

Parameters

handle

Input. Handle to a previously created cuDNN library descriptor.

rnnDesc

Input/Output. A previously created RNN descriptor.

hiddenSize

Input. Size of the internal hidden state for each layer.

numLayers

Input. Number of stacked layers.

dropoutDesc

Input. Handle to a previously created and initialized dropout descriptor. Dropout will be applied between layers, for example, a single layer network will have no dropout applied.

inputMode

Input. Specifies the behavior at the input to the first layer

direction

Input. Specifies the recurrence pattern, for example, bidirectional.

mode

Input. Specifies the type of RNN to compute.

algo

Input. Specifies which RNN algorithm should be used to compute the results.

mathPrec

Input. Math precision. This parameter is used for controlling the math precision in RNN. The following applies:

- ► For the input/output in FP16, the parameter mathPrec can be CUDNN_DATA_HALF or CUDNN DATA FLOAT.
- ► For the input/output in FP32, the parameter mathPrec can only be CUDNN DATA FLOAT.
- For the input/output in FP64, double type, the parameter mathPrec can only be CUDNN DATA DOUBLE.

Returns

CUDNN STATUS SUCCESS

The object was set successfully.

CUDNN_STATUS_BAD_PARAM

Either at least one of the parameters hiddenSize or numLayers was zero or negative, one of inputMode, direction, mode, algo or dataType has an invalid enumerant value, dropoutDesc is an invalid dropout descriptor or rnnDesc has not been created correctly.

7.2.49. cudnnSetRNNDescriptor_v8()

```
cudnnStatus t cudnnSetRNNDescriptor v8(
cudnnRNNDescriptor t rnnDesc,
 cudnnRNNAlgo_t algo,
cudnnRNNMode t cellMode,
cudnnRNNBiasMode t biasMode,
cudnnDirectionMode t dirMode,
cudnnRNNInputMode t inputMode,
cudnnDataType_t dataType,
cudnnDataType_t mathPrec,
cudnnMathType t mathType,
int32 t inputSize,
int32 t hiddenSize,
int32_t projSize,
int32 t numLayers,
    cudnnDropoutDescriptor t dropoutDesc,
  uint32 t auxFlags);
```

This function initializes a previously created RNN descriptor object. The RNN descriptor configured by <code>cudnnSetRNNDescriptor_v8()</code> was enhanced to store all information needed to compute the total number of adjustable weights/biases in the RNN model.

Parameters

rnnDesc

Input. A previously initialized RNN descriptor.

algo

Input. RNN algo (CUDNN_RNN_ALGO_STANDARD, CUDNN_RNN_ALGO_PERSIST_STATIC, or CUDNN RNN ALGO PERSIST DYNAMIC).

cellMode

Input. Specifies the RNN cell type in the entire model (CUDNN_RNN_RELU, CUDNN_RNN_TANH, CUDNN_RNN_LSTM, CUDNN_RNN_GRU).

biasMode

Input. Sets the number of bias vectors (CUDNN_RNN_NO_BIAS, CUDNN_RNN_SINGLE_INP_BIAS, CUDNN_RNN_SINGLE_REC_BIAS, CUDNN_RNN_DOUBLE_BIAS). The two single bias settings are functionally the same for RELU, TANH and LSTM cell types. For differences in GRU cells, see the description of CUDNN_GRU in the cudnnRNNMode_t enumerated type.

dirMode

Input. Specifies the recurrence pattern: CUDNN_UNIDIRECTIONAL or CUDNN_BIDIRECTIONAL. In bidirectional RNNs, the hidden states passed between physical layers are concatenations of forward and backward hidden states.

inputMode

Input. Specifies how the input to the RNN model is processed by the first layer. When <code>inputMode</code> is <code>CUDNN_LINEAR_INPUT</code>, original input vectors of size <code>inputSize</code> are multiplied by the weight matrix to obtain vectors of <code>hiddenSize</code>. When <code>inputMode</code> is <code>CUDNN_SKIP_INPUT</code>, the original input vectors to the first layer are used as is without multiplying them by the weight matrix.

dataType

Input. Specifies data type for RNN weights/biases and input and output data.

mathPrec

Input. This parameter is used to control the compute math precision in the RNN model. The following applies:

- ► For the input/output in FP16, the parameter mathPrec can be CUDNN_DATA_HALF or CUDNN DATA FLOAT.
- ► For the input/output in FP32, the parameter mathPrec can only be CUDNN_DATA_FLOAT.

For the input/output in FP64, double type, the parameter mathPrec can only be CUDNN DATA DOUBLE.

mathType

Input. Sets the preferred option to use NVIDIA Tensor Cores accelerators on Volta (SM 7.0) or higher GPU-s).

- ▶ When dataType is CUDNN_DATA_HALF, the mathType parameter can be CUDNN_DEFAULT_MATH or CUDNN_TENSOR_OP_MATH. The ALLOW_CONVERSION setting is treated the same as CUDNN_TENSOR_OP_MATH for this data type.
- When dataType is CUDNN_DATA_FLOAT, the mathType parameter can be CUDNN_DEFAULT_MATH or CUDNN_TENSOR_OP_MATH_ALLOW_CONVERSION. When the latter settings are used, original weights and intermediate results will be down-converted to CUDNN_DATA_HALF before they are used in another recursive iteration.
- ▶ When dataType is CUDNN_DATA_DOUBLE, the mathType parameter can be CUDNN DEFAULT MATH.

This option has an advisory status meaning Tensor Cores may not be always utilized, for example, due to specific GEMM dimensions restrictions.

inputSize

Input. Size of the input vector in the RNN model. When the inputMode=CUDNN_SKIP_INPUT, the inputSize should match the hiddenSize value.

hiddenSize

Input. Size of the hidden state vector in the RNN model. The same hidden size is used in all RNN layers.

projSize

Input. The size of the LSTM cell output after the recurrent projection. This value should not be larger than <code>hiddenSize</code>. It is legal to set <code>projSize</code> equal to <code>hiddenSize</code>, however, in this case, the recurrent projection feature is disabled. The recurrent projection is an additional matrix multiplication in the LSTM cell to project hidden state vectors <code>h_t</code> into smaller vectors <code>r_t = W_rh_t</code>, where <code>W_r</code> is a rectangular matrix with <code>projSize</code> rows and <code>hiddenSize</code> columns. When the recurrent projection is enabled, the output of the LSTM cell (both to the next layer and unrolled in-time) is <code>r_t</code> instead of <code>h_t</code>. The recurrent projection can be enabled for LSTM cells and <code>CUDNN RNN ALGO STANDARD</code> only.

numLayers

Input. Number of stacked, physical layers in the deep RNN model. When dirMode= CUDNN_BIDIRECTIONAL, the physical layer consists of two pseudo-layers corresponding to forward and backward directions.

dropoutDesc

Input. Handle to a previously created and initialized dropout descriptor. Dropout operation will be applied between physical layers. A single layer network will have no dropout applied. Dropout is used in the training mode only.

auxFlags

Input. This argument is used to pass miscellaneous switches that do not require additional numerical values to configure the corresponding feature. In future cuDNN releases, this parameter will be used to extend the RNN functionality without adding new API functions (applicable options should be bitwise ORed). Currently, this parameter is used to enable or disable padded input/output (CUDNN_RNN_PADDED_IO_DISABLED, CUDNN_RNN_PADDED_IO_ENABLED). When the padded I/O is enabled, layouts CUDNN_RNN_DATA_LAYOUT_SEQ_MAJOR_UNPACKED and CUDNN_RNN_DATA_LAYOUT_BATCH_MAJOR_UNPACKED are permitted in RNN data descriptors.

Returns

CUDNN_STATUS_SUCCESS

The RNN descriptor was configured successfully.

```
CUDNN STATUS BAD PARAM
```

An invalid input argument was detected.

```
CUDNN STATUS NOT SUPPORTED
```

The dimensions of the bias tensor refer to an amount of data that is incompatible with the output tensor dimensions or the dataType of the two tensor descriptors are different.

```
CUDNN STATUS EXECUTION FAILED
```

An incompatible or unsupported combination of input arguments was detected.

7.2.50. cudnnSetRNNMatrixMathType()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnSetRNNDescriptor_v8()</u> instead of <u>cudnnSetRNNMatrixMathType()</u>.

```
cudnnStatus_t cudnnSetRNNMatrixMathType(
    cudnnRNNDescriptor_t rnnDesc,
    cudnnMathType_t mType)
```

This function sets the preferred option to use NVIDIA Tensor Cores accelerators on Volta GPUs (SM 7.0 or higher). When the <code>mtype</code> parameter is <code>cudnn_tensor_op_math</code>, inference and training RNN APIs will attempt use Tensor Cores when weights/biases are of type <code>cudnn_data_half</code> or <code>cudnn_data_float</code>. When RNN weights/biases are stored in the <code>cudnn_data_float</code> format, the original weights and intermediate results will be down-converted to <code>cudnn_data_half</code> before they are used in another recursive iteration.

Parameters

rnnDesc

Input. A previously created and initialized RNN descriptor.

mType

Input. A preferred compute option when performing RNN GEMMs (general matrix-matrix multiplications). This option has an advisory status meaning that Tensor Cores may not be utilized, for example, due to specific GEMM dimensions.

Returns

CUDNN STATUS SUCCESS

The preferred compute option for the RNN network was set successfully.

```
CUDNN_STATUS_BAD_PARAM
```

An invalid input parameter was detected.

7.2.51. cudnnSetRNNPaddingMode()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnSetRNNDescriptor_v8()</u> instead of <u>cudnnSetRNNPaddingMode()</u>.

```
cudnnStatus_t cudnnSetRNNPaddingMode(
    cudnnRNNDescriptor_t rnnDesc,
    cudnnRNNPaddingMode t paddingMode)
```

This function enables or disables the padded RNN input/output for a previously created and initialized RNN descriptor. This information is required before calling the cudnnGetRNNWorkspaceSize() and cudnnGetRNNTrainingReserveSize() functions, to determine whether additional workspace and training reserve space is needed. By default, the padded RNN input/output is not enabled.

Parameters

rnnDesc

Input/Output. A previously created RNN descriptor.

paddingMode

Input. Enables or disables the padded input/output. For more information, refer to <u>cudnnRNNPaddingMode</u> t.

Returns

CUDNN STATUS SUCCESS

The paddingMode was set successfully.

CUDNN STATUS BAD PARAM

Either the rnnDesc is NULL or paddingMode has an invalid enumerant value.

7.2.52. cudnnSetRNNProjectionLayers()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnSetRNNDescriptor_v8()</u> instead of <u>cudnnSetRNNProjectionLayers()</u>.

```
cudnnStatus_t cudnnSetRNNProjectionLayers(
    cudnnHandle_t handle,
    cudnnRNNDescriptor_t rnnDesc,
    int recProjSize,
    int outProjSize)
```

The <code>cudnnSetRNNProjectionLayers()</code> function should be called to enable the recurrent and/or output projection in a recursive neural network. The recurrent projection is an additional matrix multiplication in the LSTM cell to project hidden state vectors h_t into smaller vectors $r_t = W_r h_t$, where W_r is a rectangular matrix with <code>recProjSize</code> rows and <code>hiddenSize</code> columns. When the recurrent projection is enabled, the output of the LSTM cell (both to the next layer and unrolled in-time) is r_t instead of h_t . The dimensionality of i_t , f_t , o_t , and c_t vectors used in conjunction with non-linear functions remains the same as in the canonical LSTM cell. To make this possible, the shapes of matrices in the LSTM formulas (refer to <code>cudnnRNNMode t</code> type), such as W_i in hidden RNN layers or R_i in the entire network, become rectangular versus square in the canonical LSTM mode. Obviously, the result of $R_i^* W_r$ is a square matrix but it is rank deficient, reflecting the compression of LSTM output. The recurrent projection is typically employed when the number of independent (adjustable) weights in the RNN network with projection is smaller in comparison to canonical LSTM for the same <code>hiddenSize</code> value.

The recurrent projection can be enabled for LSTM cells and <code>CUDNN_RNN_ALGO_STANDARD</code> only. The <code>recProjSize</code> parameter should be smaller than the <code>hiddenSize</code> value. It is legal to set <code>recProjSize</code> equal to <code>hiddenSize</code> but in that case the recurrent projection feature is disabled.

The output projection is currently not implemented.

For more information on the recurrent and output RNN projections, refer to the paper by <u>Hasim Sak</u>, <u>et al</u>.: <u>Long Short-Term Memory Based Recurrent Neural Network Architectures For Large Vocabulary Speech Recognition</u>.

Parameters

handle

Input. Handle to a previously created library descriptor.

rnnDesc

Input. A previously created and initialized RNN descriptor.

recProjSize

Input. The size of the LSTM cell output after the recurrent projection. This value should not be larger than hiddenSize.

outProjSize

Input. This parameter should be zero.

Returns

CUDNN STATUS SUCCESS

RNN projection parameters were set successfully.

```
CUDNN_STATUS_BAD_PARAM
```

An invalid input argument was detected (for example, NULL handles, negative values for projection parameters).

```
CUDNN STATUS NOT SUPPORTED
```

Projection applied to RNN algo other than CUDNN_RNN_ALGO_STANDARD, cell type other than CUDNN LSTM, recProjSize larger than hiddenSize.

7.2.53. cudnnSetSeqDataDescriptor()

```
cudnnStatus_t cudnnSetSeqDataDescriptor(
  cudnnSeqDataDescriptor_t seqDataDesc,
        cudnnDataType_t dataType,
  int nbDims,
  const int dimA[],
  const cudnnSeqDataAxis_t axes[],
  size_t seqLengthArraySize,
  const int seqLengthArray[],
  void *paddingFill);
```

This function initializes a previously created sequence data descriptor object. In the most simplified view, this descriptor defines dimensions (dimA) and the data layout (axes) of a four-dimensional tensor. All four dimensions of the sequence data descriptor have unique identifiers that can be used to index the dimA[] array:

```
CUDNN_SEQDATA_TIME_DIM
CUDNN_SEQDATA_BATCH_DIM
CUDNN_SEQDATA_BEAM_DIM
CUDNN_SEQDATA_VECT_DIM
```

For example, to express information that vectors in our sequence data buffer are five elements long, we need to assign dima[CUDNN_SEQDATA_VECT_DIM]=5 in the dimA[] array.

The number of active dimensions in the dimA[] and axes[] arrays is defined by the nbDims argument. Currently, the value of this argument should be four. The actual size of the dimA[] and axes[] arrays should be declared using the CUDNN_SEQDATA_DIM_COUNT macro.

The <u>cudnnSeqDataDescriptor_t</u> container is treated as a collection of fixed length vectors that form sequences, similarly to words (vectors of characters) constructing sentences. The TIME dimension spans the sequence length. Different sequences are bundled together in a batch. A BATCH may be a group of individual sequences or beams. A BEAM is a cluster of alternative sequences or candidates. When thinking about the beam, consider a translation task from one language to another. You may want to keep around and experiment with several translated versions of the original sentence before selecting the best one. The number of candidates kept around is the BEAM size.

Every sequence can have a different length, even within the same beam, so vectors toward the end of the sequence can be just padding. The paddingFill argument specifies how the padding vectors should be written in output sequence data buffers. The paddingFill argument points to one value of type dataType that should be copied to all elements in padding vectors. Currently, the only supported value for paddingFill is NULL which means this option should be ignored. In this case, elements of the padding vectors in output buffers will have undefined values.

It is assumed that a non-empty sequence always starts from the time index zero. The <code>seqLengthArray[]</code> must specify all sequence lengths in the container so the total size of this array should be <code>dimA[CUDNN_SEQDATA_BATCH_DIM] * dimA[CUDNN_SEQDATA_BEAM_DIM]</code>. Each element of the <code>seqLengthArray[]</code> array should have a non-negative value, less than or equal to <code>dimA[CUDNN_SEQDATA_TIME_DIM</code>; the maximum sequence length. Elements in <code>seqLengthArray[]</code> are always arranged in the same batch-major order, meaning, when considering <code>BEAM</code> and <code>BATCH</code> dimensions, <code>BATCH</code> is the outer or the slower changing index when we traverse the array in ascending order of the addresses. Using a simple example, the <code>seqLengthArray[]</code> array should hold sequence lengths in the following order:


```
{batch_idx=0, beam_idx=0}
{batch_idx=0, beam_idx=1}
{batch_idx=1, beam_idx=0}
{batch_idx=1, beam_idx=1}
{batch_idx=2, beam_idx=0}
{batch_idx=2, beam_idx=1}
```

when dima[CUDNN_SEQDATA_BATCH_DIM] = 3 and dima[CUDNN_SEQDATA_BEAM_DIM] = 2.

Data stored in the <u>cudnnSeqDataDescriptor</u> t container must comply with the following constraints:

- ▶ All data is fully packed. There are no unused spaces or gaps between individual vector elements or consecutive vectors.
- ► The most inner dimension of the container is the vector. In other words, the first contiguous group of dimA[CUDNN_SEQDATA_VECT_DIM] elements belongs to the first vector, followed by elements of the second vector, and so on.

The <code>axes</code> argument in the <code>cudnnSetSeqDataDescriptor()</code> function is a bit more complicated. This array should have the same capacity as dimA[]. The <code>axes[]</code> array specifies the actual data layout in the GPU memory. In this function, the layout is described in the following way: as we move from one element of a vector to another in memory by incrementing the element pointer, what is the order of <code>VECT</code>, <code>TIME</code>, <code>BATCH</code>, and <code>BEAM</code> dimensions that we encounter. Let us assume that we want to define the following data layout:

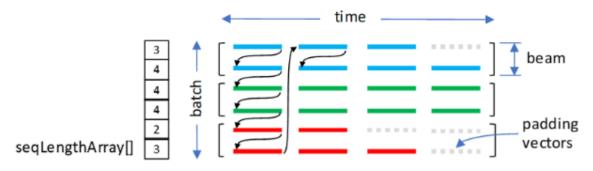

that corresponds to tensor dimensions:

```
int dimA[CUDNN_SEQDATA_DIM_COUNT];
dimA[CUDNN_SEQDATA_TIME_DIM] = 4;
dimA[CUDNN_SEQDATA_BATCH_DIM] = 3;
dimA[CUDNN_SEQDATA_BEAM_DIM] = 2;
dimA[CUDNN_SEQDATA_VECT_DIM] = 5;
```

Now, let's initialize the axes[] array. Note that the most inner dimension is described by the last active element of axes[]. There is only one valid configuration here as we always traverse a full vector first. Thus, we need to write CUDNN_SEQDATA_VECT_DIM in the last active element of axes[].

Now, let's work on the remaining three elements of <code>axes[]</code>. When we reach the end of the first vector, we jump to the next beam, therefore:

```
axes[2] = CUDNN_SEQDATA_BEAM_DIM;
```

When we approach the end of the second vector, we move to the next batch, therefore: axes[1] = CUDNN SEQDATA BATCH DIM;

```
The last (outermost) dimension is TIME:
```

```
axes[0] = CUDNN_SEQDATA_TIME_DIM;
```

The four values of the axes[] array fully describe the data layout depicted in the figure.

The sequence data descriptor allows the user to select 3! = 6 different data layouts or permutations of BEAM, BATCH and TIME dimensions. The multi-head attention API supports all six layouts.

Parameters

seqDataDesc

Output. Pointer to a previously created sequence data descriptor.

dataType

Input. Data type of the sequence data buffer (CUDNN_DATA_HALF, CUDNN_DATA_FLOAT or CUDNN_DATA_DOUBLE).

nbDims

Input. Must be 4. The number of active dimensions in dimA[] and axes[] arrays. Both arrays should be declared to contain at least CUDNN SEQDATA DIM COUNT elements.

dimA[]

Input. Integer array specifying sequence data dimensions. Use the cudnnSeqDataAxis t enumerated type to index all active dimA[] elements.

axes[]

Input. Array of $\underline{\text{cudnnSeqDataAxis}}$ that defines the layout of sequence data in memory. The first $\underline{\text{nbDims}}$ elements of $\underline{\text{axes}}[]$ should be initialized with the outermost dimension in $\underline{\text{axes}}[0]$ and the innermost dimension in $\underline{\text{axes}}[\underline{\text{nbDims}}-1]$.

seqLengthArraySize

Input. Number of elements in the sequence length array, seqLengthArray[].

seqLengthArray[]

Input. An integer array that defines all sequence lengths of the container.

paddingFill

Input. Must be NULL. Pointer to a value of dataType that is used to fill up output vectors beyond the valid length of each sequence or NULL to ignore this setting.

Returns

CUDNN STATUS SUCCESS

All input arguments were validated and the sequence data descriptor was successfully updated.

CUDNN STATUS BAD PARAM

An invalid input argument was found. Some examples include:

- ▶ seqDataDesc=NULL
- dateType was not a valid type of <u>cudnnDataType_t</u>
- ▶ nbDims was negative or zero
- seqLengthArraySize did not match the expected length
- some elements of seqLengthArray[] were invalid

CUDNN STATUS NOT SUPPORTED

An unsupported input argument was encountered. Some examples include:

- ▶ nbDims is not equal to 4
- paddingFill is not NULL

CUDNN STATUS ALLOC FAILED

Failed to allocate storage for the sequence data descriptor object.

Chapter 8. cudnn_adv_train.so Library

8.1. Data Type References

8.1.1. Enumeration Types

8.1.1.1. cudnnLossNormalizationMode_t

cudnnLossNormalizationMode_t is an enumerated type that controls the input normalization mode for a loss function. This type can be used with cudnnSetCTCLossDescriptorEx().

Values

CUDNN LOSS NORMALIZATION NONE

The input probs of the <u>cudnnCTCLoss()</u> function is expected to be the normalized probability, and the output gradients is the gradient of loss with respect to the unnormalized probability.

CUDNN_LOSS_NORMALIZATION_SOFTMAX

The input probs of the <u>cudnnCTCLoss()</u> function is expected to be the unnormalized activation from the previous layer, and the output gradients is the gradient with respect to the activation. Internally the probability is computed by softmax normalization.

8.1.1.2. cudnnWgradMode_t

cudnnWgradMode_t is an enumerated type that selects how buffers holding gradients of the loss function, computed with respect to trainable parameters, are updated. Currently, this type is used by the cudnnRNNBackwardWeights v8() functions only.

Values

CUDNN WGRAD MODE ADD

A weight gradient component corresponding to a new batch of inputs is added to previously evaluated weight gradients. Before using this mode, the buffer holding weight gradients should be initialized to zero. Alternatively, the first API call outputting to an uninitialized buffer should use the CUDNN WGRAD MODE SET option.

CUDNN WGRAD MODE SET

A weight gradient component, corresponding to a new batch of inputs, overwrites previously stored weight gradients in the output buffer.

8.2. API Functions

8.2.1. cudnnAdvTrainVersionCheck()

cudnnStatus t cudnnAdvTrainVersionCheck(void)

This function checks whether the version of the AdvTrain subset of the library is consistent with the other sub-libraries.

Returns

CUDNN STATUS SUCCESS

The version is consistent with other sub-libraries.

CUDNN_STATUS_VERSION MISMATCH

The version of AdvTrain is not consistent with other sub-libraries. Users should check the installation and make sure all sub-component versions are consistent.

8.2.2. cudnnCreateCTCLossDescriptor()

cudnnStatus_t cudnnCreateCTCLossDescriptor(
 cudnnCTCLossDescriptor t* ctcLossDesc)

This function creates a CTC loss function descriptor.

Parameters

ctcLossDesc

Output. CTC loss descriptor to be set. For more information, refer to <u>cudnnCTCLossDescriptor</u> t.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

```
CUDNN_STATUS_BAD_PARAM
```

CTC loss descriptor passed to the function is invalid.

```
CUDNN STATUS ALLOC FAILED
```

Memory allocation for this CTC loss descriptor failed.

8.2.3. cudnnCTCLoss()

```
cudnnStatus t cudnnCTCLoss(
   cudnnHandle t
                                         handle,
   const cudnnTensorDescriptor t
                                         probsDesc,
   const void
                                         *probs,
                                         hostLabels[],
   const int
   const int
const int
                                          hostLabelLengths[],
                                         hostInputLengths[],
   void
                                        *costs,
   const cudnnTensorDescriptor_t gradientsDesc,
const void *gradients,
                                        algo,
   cudnnCTCLossAlgo t
   const cudnnCTCLossDescriptor_t
                                         ctcLossDesc,
   void
                                         *workspace,
   size t
                                        *workSpaceSizeInBytes)
```

This function returns the CTC costs and gradients, given the probabilities and labels.



Note: This function can have an inconsistent interface depending on the cudnnLossNormalizationMode_t chosen (bound to the cudnnSetCTCLossDescriptor_t with cudnnSetCTCLossDescriptorEx()). For the cudnn_loss_normalization, the probs input is probability normalized by softmax, but the gradients output is with respect to the unnormalized activation. However, for cudnn_loss_normalization_softmax, the function has a consistent interface; all values are normalized by softmax.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to cudnnHandle t.

probsDesc

Input. Handle to the previously initialized probabilities tensor descriptor. For more information, refer to <u>cudnnTensorDescriptor_t</u>.

probs

Input. Pointer to a previously initialized probabilities tensor. These input probabilities are normalized by softmax.

hostLabels

Input. Pointer to a previously initialized labels list, in CPU memory.

hostLabelLengths

Input. Pointer to a previously initialized lengths list in CPU memory, to walk the above labels list.

${\tt hostInputLengths}$

Input. Pointer to a previously initialized list of the lengths of the timing steps in each batch, in CPU memory.

costs

Output. Pointer to the computed costs of CTC.

gradientsDesc

Input. Handle to a previously initialized gradient tensor descriptor.

gradients

Output. Pointer to the computed gradients of CTC. These computed gradient outputs are with respect to the unnormalized activation.

algo

Input. Enumerant that specifies the chosen CTC loss algorithm. For more information, refer to <u>cudnnCTCLossAlgo_t</u>.

ctcLossDesc

Input. Handle to the previously initialized CTC loss descriptor. For more information, refer to <u>cudnnCTCLossDescriptor_t</u>.

workspace

Input. Pointer to GPU memory of a workspace needed to be able to execute the specified algorithm.

sizeInBytes

Input. Amount of GPU memory needed as workspace to be able to execute the CTC loss computation with the specified algo.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ▶ The dimensions of probsDesc do not match the dimensions of gradientsDesc.
- ▶ The inputLengths do not agree with the first dimension of probsDesc.

- ► The workSpaceSizeInBytes is not sufficient.
- ► The labelLengths is greater than 255.

CUDNN STATUS NOT SUPPORTED

A compute or data type other than FLOAT was chosen, or an unknown algorithm type was chosen.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

8.2.4. cudnnCTCLoss v8()

```
cudnnStatus t cudnnCTCLoss v8(
    cudnnHandle t
                                              handle,
    cudnnCTCLossAlgo t
                                             algo,
   const cudnnCTCLossDescriptor_t ctcLossDesc,
const cudnnTensorDescriptor_t probsDesc,
const void *probs,
   const void const int
                                              labels[],
    const int
                                             labelLengths[],
    const int
                                              inputLengths[],
    void
                                             *costs,
    const cudnnTensorDescriptor_t
                                             gradientsDesc,
             void
                                             *gradients,
    const
                                              *workSpaceSizeInBytes,
    size t
    void
                                             *workspace)
```

This function returns the CTC costs and gradients, given the probabilities and labels. Many CTC API functions were updated in v8 with the $_v8$ suffix to support CUDA graphs. Label and input data is now passed in GPU memory, and $\underline{\text{cudnnCTCLossDescriptor_t}}$ should be set using $\underline{\text{cudnnSetCTCLossDescriptor_v8()}}$.



Note: This function can have an inconsistent interface depending on the cudnnLossNormalizationMode_t chosen (bound to the cudnnCTCLossDescriptor_t with cudnnSetCTCLossDescriptorEx()). For the <a href="mailto:cudnn_Loss_Normalization_Normalization_Normalization_Normalization_Normalization_Normalization] input is probability normalized by softmax, but the gradients output is with respect to the unnormalized activation. However, for cudnn_Loss_Normalization_Softmax, the function has a consistent interface; all values are normalized by softmax.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information, refer to <u>cudnnHandle_t</u>.

algo

Input. Enumerant that specifies the chosen CTC loss algorithm. For more information, refer to <u>cudnnCTCLossAlgo_t</u>.

ctcLossDesc

Input. Handle to the previously initialized CTC loss descriptor. To use this $_{v}$ 8 function, this descriptor must be set using $\underline{\text{cudnnSetCTCLossDescriptor_v8()}}$. For more information, refer to $\underline{\text{cudnnCTCLossDescriptor_t}}$.

probsDesc

Input. Handle to the previously initialized probabilities tensor descriptor. For more information, refer to <u>cudnnTensorDescriptor</u> t.

probs

Input. Pointer to a previously initialized probabilities tensor. These input probabilities are normalized by softmax.

labels

Input. Pointer to a previously initialized labels list, in GPU memory.

labelLengths

Input. Pointer to a previously initialized lengths list in GPU memory, to walk the above labels list.

inputLengths

Input. Pointer to a previously initialized list of the lengths of the timing steps in each batch, in GPU memory.

costs

Output. Pointer to the computed costs of CTC.

${\tt gradientsDesc}$

Input. Handle to a previously initialized gradient tensor descriptor.

gradients

Output. Pointer to the computed gradients of CTC. These computed gradient outputs are with respect to the unnormalized activation.

workspace

Input. Pointer to GPU memory of a workspace needed to be able to execute the specified algorithm.

sizeInBytes

Input. Amount of GPU memory needed as a workspace to be able to execute the CTC loss computation with the specified algo.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ▶ The dimensions of probsDesc do not match the dimensions of gradientsDesc.
- The inputLengths do not agree with the first dimension of probsDesc.
- ► The workSpaceSizeInBytes is not sufficient.
- ▶ The labelLengths is greater than 256.

CUDNN STATUS NOT SUPPORTED

A compute or data type other than FLOAT was chosen, or an unknown algorithm type was chosen.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

8.2.5. cudnnDestroyCTCLossDescriptor()

```
cudnnStatus_t cudnnDestroyCTCLossDescriptor(
    cudnnCTCLossDescriptor_t ctcLossDesc)
```

This function destroys a CTC loss function descriptor object.

Parameters

ctcLossDesc

Input. CTC loss function descriptor to be destroyed.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

8.2.6. cudnnFindRNNBackwardDataAlgorithmEx()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnFindRNNBackwardDataAlgorithmEx(
   cudnnHandle t
                                   handle,
   const cudnnRNNDescriptor t
                                   rnnDesc,
                                   seqLength,
   const int
   const cudnnTensorDescriptor t
                                    *yDesc,
   const void
                                    *y,
                                    *dyDesc,
   const cudnnTensorDescriptor t
                                    *dy,
   const void
   const cudnnTensorDescriptor t
                                    dhyDesc,
                                    *dhy,
   const void
   const cudnnTensorDescriptor t
                                    dcyDesc,
   const void
                                    *dcy,
   const cudnnFilterDescriptor t     wDesc,
   const void
   const cudnnTensorDescriptor t
                                    hxDesc,
   const void
```

```
const void
const cudnnTensorDescriptor_t
const void
                               *CX,
                               *dxDesc,
                               *dx,
void
const cudnnTensorDescriptor t dhxDesc,
                               *dhx,
const cudnnTensorDescriptor t dcxDesc,
void
                               *dcx,
                              findIntensity,
const float
const int
                              requestedAlgoCount,
                              *returnedAlgoCount,
cudnnAlgorithmPerformance_t *perfResults,
void *workspace,
                              workSpaceSizeInBytes,
size t
const void
                               *reserveSpace,
                         reserveSpaceSizeInBytes)
size t
```

This function attempts all available cuDNN algorithms for <u>cudnnRNNBackwardData()</u>, using user-allocated GPU memory. It outputs the parameters that influence the performance of the algorithm to a user-allocated array of <u>cudnnAlgorithmPerformance_t</u>. These parameter metrics are written in sorted fashion where the first element has the lowest compute time.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

seqLength

Input. Number of iterations to unroll over. The value of this <code>seqLength</code> must not exceed the value that was used in the <code>cudnnGetRNNWorkspaceSize()</code> function for querying the workspace size required to execute the RNN.

yDesc

Input. An array of fully packed tensor descriptors describing the output from each recurrent iteration (one descriptor per iteration). The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor $\tt n$ must match the first dimension of the tensor $\tt n$ in $\tt dyDesc.$

У

Input. Data pointer to GPU memory associated with the output tensor descriptor yDesc.

dyDesc

Input. An array of fully packed tensor descriptors describing the gradient at the output from each recurrent iteration (one descriptor per iteration). The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor n must match the second dimension of the tensor n in dxDesc.

dy

Input. Data pointer to GPU memory associated with the tensor descriptors in the array dyDesc.

dhyDesc

Input. A fully packed tensor descriptor describing the gradients at the final hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in dxDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

dhy

Input. Data pointer to GPU memory associated with the tensor descriptor dhyDesc. If a NULL pointer is passed, the gradients at the final hidden state of the network will be initialized to zero.

dcyDesc

Input. A fully packed tensor descriptor describing the gradients at the final cell state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in dxDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

dcy

Input. Data pointer to GPU memory associated with the tensor descriptor dcyDesc. If a NULL pointer is passed, the gradients at the final cell state of the network will be initialized to zero.

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in dxDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

cxDesc

Input. A fully packed tensor descriptor describing the initial cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in dxDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

СX

Input. Data pointer to GPU memory associated with the tensor descriptor cxDesc. If a NULL pointer is passed, the initial cell state of the network will be initialized to zero.

dxDesc

Input. An array of fully packed tensor descriptors describing the gradient at the input of each recurrent iteration (one descriptor per iteration). The first dimension (batch size) of the tensors may decrease from element n to element n+1 but may not increase. Each tensor descriptor must have the same second dimension (vector length).

dx

Output. Data pointer to GPU memory associated with the tensor descriptors in the array dxDesc.

dhxDesc

Input. A fully packed tensor descriptor describing the gradient at the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in dxDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

dhx

Output. Data pointer to GPU memory associated with the tensor descriptor dhxDesc. If a NULL pointer is passed, the gradient at the hidden input of the network will not be set.

dcxDesc

Input. A fully packed tensor descriptor describing the gradient at the initial cell state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in dxDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

dcx

Output. Data pointer to GPU memory associated with the tensor descriptor dexDesc. If a NULL pointer is passed, the gradient at the cell input of the network will not be set.

findIntensity

Input. This input was previously unused in versions prior to cuDNN 7.2.0. It is used in cuDNN 7.2.0 and later versions to control the overall runtime of the RNN find algorithms, by selecting the percentage of a large Cartesian product space to be searched.

- Setting findIntensity within the range (0,1.] will set a percentage of the entire RNN search space to search. When findIntensity is set to 1.0, a full search is performed over all RNN parameters.
- ▶ When findIntensity is set to 0.0f, a quick, minimal search is performed. This setting has the best runtime. However, in this case the parameters returned by this function will not correspond to the best performance of the algorithm; a longer search might discover better parameters. This option will execute up to three instances of the configured RNN problem. Runtime will vary proportionally to RNN problem size, as it will in the other cases, hence no guarantee of an explicit time bound can be given.
- Setting findIntensity within the range [-1.,0) sets a percentage of a reduced Cartesian product space to be searched. This reduced search space has been heuristically selected to have good performance. The setting of -1.0 represents a full search over this reduced search space.
- ▶ Values outside the range [-1,1] are truncated to the range [-1,1], and then interpreted as per the above.
- ▶ Setting findIntensity to 1.0 in cuDNN 7.2 and later versions is equivalent to the behavior of this function in versions prior to cuDNN 7.2.0.
- This function times the single RNN executions over large parameter spaces one execution per parameter combination. The times returned by this function are latencies.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

${\tt returnedAlgoCount}$

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

reserveSpace

Input/Output. Data pointer to GPU memory to be used as a reserve space for this call.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided reserveSpace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

```
CUDNN STATUS NOT SUPPORTED
```

The function does not support the provided configuration.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- At least one of the descriptors dhxDesc, wDesc, hxDesc, cxDesc, dcxDesc, dhyDesc, dcyDesc or one of the descriptors in yDesc, dxdesc, dydesc is invalid.
- The descriptors in one of yDesc, dxDesc, dyDesc, dhxDesc, wDesc, hxDesc, cxDesc, dcxDesc, dhyDesc, dcyDesc has incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.
- reserveSpaceSizeInBytes is too small.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

```
CUDNN STATUS ALLOC FAILED
```

The function was unable to allocate memory.

8.2.7. cudnnFindRNNBackwardWeightsAlgorithmEx()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnFindRNNBackwardWeightsAlgorithmEx(
  cudnnHandle t
                             handle,
   const cudnnRNNDescriptor t
                              rnnDesc,
                              seqLength,
  const int
  const cudnnTensorDescriptor t
                               *xDesc,
  const void
                                *x,
   *hx,
  const void
  const cudnnTensorDescriptor t
                               *yDesc,
                               *y,
  const void
   const float
                               findIntensity,
   const int
                               requestedAlgoCount,
```

This function attempts all available cuDNN algorithms for cudnnRNNBackwardWeights(), using user-allocated GPU memory. It outputs the parameters that influence the performance of the algorithm to a user-allocated array of cudnnAlgorithmPerformance_t. These parameter metrics are written in sorted fashion where the first element has the lowest compute time.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

seqLength

Input. Number of iterations to unroll over. The value of this <code>seqLength</code> must not exceed the value that was used in the <code>cudnnGetRNNWorkspaceSize()</code> function for querying the workspace size required to execute the RNN.

xDesc

Input. An array of fully packed tensor descriptors describing the input to each recurrent iteration (one descriptor per iteration). The first dimension (batch size) of the tensors may decrease from element n to element n+1 but may not increase. Each tensor descriptor must have the same second dimension (vector length).

x

Input. Data pointer to GPU memory associated with the tensor descriptors in the array <code>xDesc</code>.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

yDesc

Input. An array of fully packed tensor descriptors describing the output from each recurrent iteration (one descriptor per iteration). The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor $\tt n$ must match the first dimension of the tensor $\tt n$ in $\tt dyDesc.$

У

Input. Data pointer to GPU memory associated with the output tensor descriptor yDesc.

findIntensity

Input. This input was previously unused in versions prior to cuDNN 7.2.0. It is used in cuDNN 7.2.0 and later versions to control the overall runtime of the RNN find algorithms, by selecting the percentage of a large Cartesian product space to be searched.

- Setting findIntensity within the range (0,1.] will set a percentage of the entire RNN search space to search. When findIntensity is set to 1.0, a full search is performed over all RNN parameters.
- When findIntensity is set to 0.0f, a quick, minimal search is performed. This setting has the best runtime. However, in this case the parameters returned by this function will not correspond to the best performance of the algorithm; a longer search might discover better parameters. This option will execute up to three instances of the configured RNN problem. Runtime will vary proportionally to RNN problem size, as it will in the other cases, hence no guarantee of an explicit time bound can be given.
- Setting findIntensity within the range [-1.,0) sets a percentage of a reduced Cartesian product space to be searched. This reduced search space has been heuristically selected to have good performance. The setting of -1.0 represents a full search over this reduced search space.

- ▶ Values outside the range [-1,1] are truncated to the range [-1,1], and then interpreted as per the above.
- ▶ Setting findIntensity to 1.0 in cuDNN 7.2 and later versions is equivalent to the behavior of this function in versions prior to cuDNN 7.2.0.
- ► This function times the single RNN executions over large parameter spaces one execution per parameter combination. The times returned by this function are latencies.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

dwDesc

Input. Handle to a previously initialized filter descriptor describing the gradients of the weights for the RNN.

dw

Input/Output. Data pointer to GPU memory associated with the filter descriptor dwDesc.

reserveSpace

Input. Data pointer to GPU memory to be used as a reserve space for this call.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided reserveSpace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN_STATUS_NOT_SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- At least one of the descriptors hxDesc, dwDesc or one of the descriptors in xDesc, yDesc is invalid.
- ► The descriptors in one of xDesc, hxDesc, yDesc, dwDesc have incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.
- reserveSpaceSizeInBytes is too small.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

```
CUDNN_STATUS_ALLOC_FAILED
```

The function was unable to allocate memory.

8.2.8. cudnnFindRNNForwardTrainingAlgorithmEx()

This function has been deprecated in cuDNN 8.0.

```
cudnnStatus t cudnnFindRNNForwardTrainingAlgorithmEx(
   cudnnHandle t
                                  handle,
   const cudnnRNNDescriptor t
                                  rnnDesc
   const int
                                   seqLength,
   const cudnnTensorDescriptor t *xDesc,
   const void
                                  hxDesc,
   const cudnnTensorDescriptor t
                                  *hx,
   const void
   const cudnnTensorDescriptor t
                                   cxDesc,
                                  *cx,
   const void
   const cudnnFilterDescriptor t
                                  wDesc,
   const void
   const cudnnTensorDescriptor t *yDesc,
   const cudnnTensorDescriptor t hyDesc,
                                  *hy,
   const cudnnTensorDescriptor t cyDesc,
                                  *CY,
   void
                                  findIntensity,
   const float
   const int
                                 requestedAlgoCount,
                                  *returnedAlgoCount,
   int
   cudnnAlgorithmPerformance t *perfResults,
                                  *workspace,
   void
   size t
                                  workSpaceSizeInBytes,
   void
                                  *reserveSpace,
                                  reserveSpaceSizeInBytes)
   size t
```

This function attempts all available cuDNN algorithms for <u>cudnnRNNForwardTraining()</u>, using user-allocated GPU memory. It outputs the parameters that influence the performance of the algorithm to a user-allocated array of <u>cudnnAlgorithmPerformance_t</u>. These parameter metrics are written in sorted fashion where the first element has the lowest compute time.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

xDesc

Input. An array of fully packed tensor descriptors describing the input to each recurrent iteration (one descriptor per iteration). The first dimension (batch size) of the tensors may decrease from element n to element n+1 but may not increase. Each tensor descriptor must have the same second dimension (vector length).

seqLength

Input. Number of iterations to unroll over. The value of this <code>seqLength</code> must not exceed the value that was used in the <u>cudnnGetRNNWorkspaceSize()</u> function for querying the workspace size required to execute the RNN.

x

Input. Data pointer to GPU memory associated with the tensor descriptors in the array xDesc.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

cxDesc

Input. A fully packed tensor descriptor describing the initial cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

СX

Input. Data pointer to GPU memory associated with the tensor descriptor cxDesc. If a NULL pointer is passed, the initial cell state of the network will be initialized to zero.

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

yDesc

Input. An array of fully packed tensor descriptors describing the output from each recurrent iteration (one descriptor per iteration). The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor $\tt n$ must match the first dimension of the tensor $\tt n$ in xDesc.

У

Output. Data pointer to GPU memory associated with the output tensor descriptor yDesc.

hyDesc

Input. A fully packed tensor descriptor describing the final hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hy

Output. Data pointer to GPU memory associated with the tensor descriptor hydesc. If a NULL pointer is passed, the final hidden state of the network will not be saved.

cyDesc

Input. A fully packed tensor descriptor describing the final cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

су

Output. Data pointer to GPU memory associated with the tensor descriptor cyDesc. If a NULL pointer is passed, the final cell state of the network will not be saved.

findIntensity

Input. This input was previously unused in versions prior to cuDNN 7.2.0. It is used in cuDNN 7.2.0 and later versions to control the overall runtime of the RNN find algorithms, by selecting the percentage of a large Cartesian product space to be searched.

- Setting findIntensity within the range (0,1.] will set a percentage of the entire RNN search space to search. When findIntensity is set to 1.0, a full search is performed over all RNN parameters.
- When findIntensity is set to 0.0f, a quick, minimal search is performed. This setting has the best runtime. However, in this case the parameters returned by this function will not correspond to the best performance of the algorithm; a longer search might discover better parameters. This option will execute up to three instances of the configured RNN problem. Runtime will vary proportionally to RNN problem size, as it will in the other cases, hence no guarantee of an explicit time bound can be given.
- Setting findIntensity within the range [-1.,0) sets a percentage of a reduced Cartesian product space to be searched. This reduced search space has been heuristically selected to have good performance. The setting of -1.0 represents a full search over this reduced search space.

- ▶ Values outside the range [-1,1] are truncated to the range [-1,1], and then interpreted as per the above.
- ▶ Setting findIntensity to 1.0 in cuDNN 7.2 and later versions is equivalent to the behavior of this function in versions prior to cuDNN 7.2.0.
- ► This function times the single RNN executions over large parameter spaces one execution per parameter combination. The times returned by this function are latencies.

requestedAlgoCount

Input. The maximum number of elements to be stored in perfResults.

returnedAlgoCount

Output. The number of output elements stored in perfResults.

perfResults

Output. A user-allocated array to store performance metrics sorted ascending by compute time.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

reserveSpace

Input/Output. Data pointer to GPU memory to be used as a reserve space for this call.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided reserveSpace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- ▶ At least one of the descriptors hxDesc, cxDesc, wDesc, hyDesc, cyDesc or one of the descriptors in xDesc, yDesc is invalid.
- ► The descriptors in one of xDesc, hxDesc, cxDesc, wDesc, yDesc, hyDesc, cyDesc have incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.
- reserveSpaceSizeInBytes is too small.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

```
CUDNN STATUS ALLOC FAILED
```

The function was unable to allocate memory.

8.2.9. cudnnGetCTCLossDescriptor()

```
cudnnStatus_t cudnnGetCTCLossDescriptor(
    cudnnCTCLossDescriptor_t ctcLossDesc,
    cudnnDataType t* compType)
```

This function returns the configuration of the passed CTC loss function descriptor.

Parameters

ctcLossDesc

Input. CTC loss function descriptor passed, from which to retrieve the configuration.

compType

Output. Compute type associated with this CTC loss function descriptor.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

```
CUDNN STATUS BAD PARAM
```

Input ctcLossDesc descriptor passed is invalid.

8.2.10. cudnnGetCTCLossDescriptorEx()

```
cudnnStatus_t cudnnGetCTCLossDescriptorEx(
    cudnnCTCLossDescriptor_t ctcLossDesc,
    cudnnDataType_t *compType,
    cudnnLossNormalizationMode_t *normMode,
    cudnnNanPropagation_t *gradMode)
```

This function returns the configuration of the passed CTC loss function descriptor.

Parameters

ctcLossDesc

Input. CTC loss function descriptor passed, from which to retrieve the configuration.

compType

Output. Compute type associated with this CTC loss function descriptor.

normMode

Output. Input normalization type for this CTC loss function descriptor. For more information, see <u>cudnnLossNormalizationMode</u> t.

gradMode

Output. NaN propagation type for this CTC loss function descriptor.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

CUDNN STATUS BAD PARAM

Input ctcLossDesc descriptor passed is invalid.

8.2.11. cudnnGetCTCLossDescriptor_v8()

```
cudnnStatus_t cudnnGetCTCLossDescriptor_v8(
    cudnnCTCLossDescriptor_t ctcLossDesc,
    cudnnDataType_t *compType,
    cudnnLossNormalizationMode_t *normMode,
    cudnnNanPropagation_t *gradMode,
    int *maxLabelLength)
```

This function returns the configuration of the passed CTC loss function descriptor.

Parameters

ctcLossDesc

Input. CTC loss function descriptor passed, from which to retrieve the configuration.

compType

Output. Compute type associated with this CTC loss function descriptor.

normMode

Output. Input normalization type for this CTC loss function descriptor. For more information, see cudnnLossNormalizationMode_t.

gradMode

Output. NaN propagation type for this CTC loss function descriptor.

maxLabelLength

Output. The max label length for this CTC loss function descriptor.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

CUDNN STATUS BAD PARAM

Input ctcLossDesc descriptor passed is invalid.

8.2.12. cudnnGetCTCLossWorkspaceSize()

```
cudnnStatus_t cudnnGetCTCLossWorkspaceSize(
   cudnnHandle t
                                         handle,
   const cudnnTensorDescriptor t
                                          probsDesc,
   const cudnnTensorDescriptor t
                                         gradientsDesc,
                                         *labels,
   const int
   const int
                                         *labelLengths,
   const
            int
                                         *inputLengths,
   cudnnCTCLossAlgo t
                                        algo,
ctcLossDesc,
   const cudnnCTCLossDescriptor_t ctcLossDesc,
size t. *sizeInBytes)
  size t
```

This function returns the amount of GPU memory workspace the user needs to allocate to be able to call <u>cudnnCTCLoss()</u> with the specified algorithm. The workspace allocated will then be passed to the routine cudnnCTCLoss().

Parameters

handle

Input. Handle to a previously created cuDNN context.

probsDesc

Input. Handle to the previously initialized probabilities tensor descriptor.

gradientsDesc

Input. Handle to a previously initialized gradient tensor descriptor.

labels

Input. Pointer to a previously initialized labels list.

labelLengths

Input. Pointer to a previously initialized lengths list, to walk the above labels list.

inputLengths

Input. Pointer to a previously initialized list of the lengths of the timing steps in each batch.

algo

Input. Enumerant that specifies the chosen CTC loss algorithm

ctcLossDesc

Input. Handle to the previously initialized CTC loss descriptor.

sizeInBytes

Output. Amount of GPU memory needed as workspace to be able to execute the CTC loss computation with the specified algo.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ▶ The dimensions of probsDesc do not match the dimensions of gradientsDesc.
- The inputLengths do not agree with the first dimension of probsDesc.
- ► The workSpaceSizeInBytes is not sufficient.
- ► The labelLengths is greater than 256.

CUDNN STATUS NOT SUPPORTED

A compute or data type other than FLOAT was chosen, or an unknown algorithm type was chosen.

8.2.13. cudnnGetCTCLossWorkspaceSize_v8()

This function returns the amount of GPU memory workspace the user needs to allocate to be able to call <u>cudnnCTCLoss_v8()</u> with the specified algorithm. The workspace allocated will then be passed to the routine <u>cudnnCTCLoss_v8()</u>.

Parameters

handle

Input. Handle to a previously created cuDNN context.

algo

Input. Enumerant that specifies the chosen CTC loss algorithm.

ctcLossDesc

Input. Handle to the previously initialized CTC loss descriptor.

probsDesc

Input. Handle to the previously initialized probabilities tensor descriptor.

gradientsDesc

Input. Handle to a previously initialized gradient tensor descriptor.

sizeInBytes

Output. Amount of GPU memory needed as workspace to be able to execute the CTC loss computation with the specified algo.

Returns

CUDNN STATUS SUCCESS

The query was successful.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

▶ The dimensions of probsDesc do not match the dimensions of gradientsDesc.

CUDNN STATUS NOT SUPPORTED

A compute or data type other than FLOAT was chosen, or an unknown algorithm type was chosen.

8.2.14. cudnnGetRNNBackwardDataAlgorithmMaxCount()

This function has been deprecated in cuDNN 8.0.

8.2.15. cudnnGetRNNForwardTrainingAlgorithmMaxCount(

This function has been deprecated in cuDNN 8.0.

8.2.16. cudnnMultiHeadAttnBackwardData()

```
cudnnStatus_t cudnnMultiHeadAttnBackwardData(
cudnnHandle_t handle,
const cudnnAttnDescriptor t attnDesc,
const int loWinIdx[],
const int hiWinIdx[],
const int devSeqLengthsDQDO[],
const int devSeqLengthsDKDV[],
const cudnnSeqDataDescriptor t doDesc,
const void *dout,
const cudnnSeqDataDescriptor t dqDesc,
void *dqueries,
const void *queries,
const cudnnSeqDataDescriptor t dkDesc,
void *dkeys,
const void *keys,
const cudnnSeqDataDescriptor t dvDesc,
void *dvalues,
const void *values,
size t weightSizeInBytes,
const void *weights,
size t workSpaceSizeInBytes,
void *workSpace,
size_t reserveSpaceSizeInBytes,
void *reserveSpace);
```

This function computes exact, first-order derivatives of the multi-head attention block with respect to its inputs: Q, K, V. If y=F(x) is a vector-valued function that represents the multi-head attention layer and it takes some vector $w \in \mathbb{R}^n$ as an input (with all other parameters and inputs constant), and outputs vector $y \in \mathbb{R}^m$, then

cudnnMultiHeadAttnBackwardData() computes the result of $\left(\partial y_i/\partial x_j\right)^T \delta_{\text{out}}$ where δ_{out} is the m×1 gradient of the loss function with respect to multi-head attention outputs. The δ_{out} gradient is back propagated through prior layers of the deep learning model. $\partial y_i/\partial x_j$ is the m×n Jacobian matrix of F(x). The input is supplied via the dout argument and gradient results for Q, K, V are written to the dqueries, dkeys, and dvalues buffers.

The <code>cudnnMultiHeadAttnBackwardData()</code> function does not output partial derivatives for residual connections because this result is equal to δ_{out} . If the multi-head attention model enables residual connections sourced directly from Q, then the <code>dout</code> tensor needs to be added to <code>dqueries</code> to obtain the correct result of the latter. This operation is demonstrated in the <code>cuDNN</code> <code>multiHeadAttention</code> sample code.

The cudnnMultiHeadAttnBackwardData() function must be invoked after cudnnMultiHeadAttnForward(). The lowinIdx[], hiwinIdx[], queries, keys, values, weights, and reserveSpace arguments should be the same as in the cudnnMultiHeadAttnForward() call. devSeqLengthsDQDO[] and devSeqLengthsDKDV[] device arrays should contain the same start and end attention window indices as devSeqLengthsQO[] and devSeqLengthsKV[] arrays in the forward function invocation.



Note: cudnnMultiHeadAttnBackwardData() does not verify that sequence lengths
stored in devSeqLengthsDQDO[] and devSeqLengthsDKDV[] contain the same settings as
seqLengthArray[] in the corresponding sequence data descriptor.

Parameters

handle

Input. The current context handle.

attnDesc

Input. A previously initialized attention descriptor.

loWinIdx[], hiWinIdx[]

Input. Two host integer arrays specifying the start and end indices of the attention window for each Q time-step. The start index in K, V sets is inclusive, and the end index is exclusive.

devSeqLengthsDQDO[]

Input. Device array containing a copy of the sequence length array from the dqDesc or doDesc sequence data descriptor.

devSeqLengthsDKDV[]

Input. Device array containing a copy of the sequence length array from the dkDesc or dvDesc sequence data descriptor.

doDesc

Input. Descriptor for the δ_{out} gradients (vectors of partial derivatives of the loss function with respect to the multi-head attention outputs).

dout

Pointer to $\delta_{\rm out}$ gradient data in the device memory.

dqDesc

Input. Descriptor for queries and dqueries sequence data.

dqueries

Output. Device pointer to gradients of the loss function computed with respect to queries vectors.

queries

Input. Pointer to queries data in the device memory. This is the same input as in cudnnMultiHeadAttnForward().

dkDesc

Input. Descriptor for keys and dkeys sequence data.

dkeys

Output. Device pointer to gradients of the loss function computed with respect to keys vectors.

keys

Input. Pointer to keys data in the device memory. This is the same input as in cudnnMultiHeadAttnForward().

dvDesc

Input. Descriptor for values and dvalues sequence data.

dvalues

Output. Device pointer to gradients of the loss function computed with respect to values vectors.

values

Input. Pointer to values data in the device memory. This is the same input as in cudnnMultiHeadAttnForward().

weightSizeInBytes

Input. Size of the weight buffer in bytes where all multi-head attention trainable parameters are stored.

weights

Input. Address of the weight buffer in the device memory.

workSpaceSizeInBytes

Input. Size of the work-space buffer in bytes used for temporary API storage.

workSpace

Input/Output. Address of the work-space buffer in the device memory.

reserveSpaceSizeInBytes

Input. Size of the reserve-space buffer in bytes used for data exchange between forward and backward (gradient) API calls.

reserveSpace

Input/Output. Address to the reserve-space buffer in the device memory.

Returns

CUDNN STATUS SUCCESS

No errors were detected while processing API input arguments and launching GPU kernels.

```
CUDNN_STATUS_BAD PARAM
```

An invalid or incompatible input argument was encountered.

```
CUDNN_STATUS_EXECUTION_FAILED
```

The process of launching a GPU kernel returned an error, or an earlier kernel did not complete successfully.

```
CUDNN STATUS INTERNAL ERROR
```

An inconsistent internal state was encountered.

```
CUDNN STATUS NOT SUPPORTED
```

A requested option or a combination of input arguments is not supported.

```
CUDNN STATUS ALLOC FAILED
```

Insufficient amount of shared memory to launch a GPU kernel.

8.2.17. cudnnMultiHeadAttnBackwardWeights()

```
cudnnStatus_t cudnnMultiHeadAttnBackwardWeights(
 cudnnHandle_t handle,
 const cudnnAttnDescriptor t attnDesc,
cudnnWgradMode t addGrad,
const cudnnSeqDataDescriptor t qDesc,
const void *queries,
const cudnnSeqDataDescriptor t kDesc,
const void *keys,
 const cudnnSeqDataDescriptor t vDesc,
const void *values,
const cudnnSeqDataDescriptor t doDesc,
const void *dout,
size_t weightSizeInBytes,
const void *weights,
void *dweights,
size t workSpaceSizeInBytes,
void *workSpace,
size_t reserveSpaceSizeInBytes,
void *reserveSpace);
```

This function computes exact, first-order derivatives of the multi-head attention block with respect to its trainable parameters: projection weights and projection biases. If y=F(w) is a vector-valued function that represents the multi-head attention layer and it takes some vector $x \in \mathbb{R}^n$ of flatten weights or biases as an input (with all other parameters and inputs fixed), and outputs vector $y \in \mathbb{R}^m$, then cudnnMultiHeadAttnBackwardWeights() computes the result of $\left(\partial y_i / \partial x_j\right)^T \delta_{\text{out}}$ where δ_{out} is the m×1 gradient of the loss function with respect to multi-head attention outputs. The δ_{out} gradient is back propagated through prior layers of the deep learning

model. $\partial y_i/\partial x_j$ is the m×n Jacobian matrix of F(w). The δ_{out} input is supplied via the dout argument.

All gradient results with respect to weights and biases are written to the <code>dweights</code> buffer. The size and the organization of the <code>dweights</code> buffer is the same as the <code>weights</code> buffer that holds multi-head attention weights and biases. The cuDNN <code>multiHeadAttention</code> sample code demonstrates how to access those weights.

Gradient of the loss function with respect to weights or biases is typically computed over multiple batches. In such a case, partial results computed for each batch should be summed together. The addGrad argument specifies if the gradients from the current batch should be added to previously computed results or the dweights buffer should be overwritten with the new results.

The <code>cudnnMultiHeadAttnBackwardWeights()</code> function should be invoked after <code>cudnnMultiHeadAttnBackwardData()</code>. The <code>queries</code>, <code>keys</code>, <code>values</code>, <code>weights</code>, and <code>reserveSpace</code> arguments should be the same as in <code>cudnnMultiHeadAttnBackwardData()</code> calls. The <code>dout</code> argument should be the same as in <code>cudnnMultiHeadAttnBackwardData()</code>.

Parameters

handle

Input. The current context handle.

attnDesc

Input. A previously initialized attention descriptor.

addGrad

Input. Weight gradient output mode.

qDesc

Input. Descriptor for the query sequence data.

queries

Input. Pointer to gueries sequence data in the device memory.

kDesc

Input. Descriptor for the keys sequence data.

keys

Input. Pointer to keys sequence data in the device memory.

vDesc

Input. Descriptor for the values sequence data.

values

Input. Pointer to values sequence data in the device memory.

doDesc

Input. Descriptor for the δ_{out} gradients (vectors of partial derivatives of the loss function with respect to the multi-head attention outputs).

dout

Input. Pointer to δ_{out} gradient data in the device memory.

weightSizeInBytes

Input. Size of the weights and dweights buffers in bytes.

weights

Input. Address of the weight buffer in the device memory.

dweights

Output. Address of the weight gradient buffer in the device memory.

workSpaceSizeInBytes

Input. Size of the work-space buffer in bytes used for temporary API storage.

workSpace

Input/Output. Address of the work-space buffer in the device memory.

reserveSpaceSizeInBytes

Input. Size of the reserve-space buffer in bytes used for data exchange between forward and backward (gradient) API calls.

reserveSpace

Input/Output. Address to the reserve-space buffer in the device memory.

Returns

CUDNN_STATUS_SUCCESS

No errors were detected while processing API input arguments and launching GPU kernels.

CUDNN_STATUS_BAD_PARAM

An invalid or incompatible input argument was encountered.

CUDNN STATUS EXECUTION FAILED

The process of launching a GPU kernel returned an error, or an earlier kernel did not complete successfully.

CUDNN STATUS INTERNAL ERROR

An inconsistent internal state was encountered.

CUDNN_STATUS_NOT_SUPPORTED

A requested option or a combination of input arguments is not supported.

8.2.18. cudnnRNNBackwardData()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnRNNBackwardData_v8()</u> instead of <u>cudnnRNNBackwardData</u>().

```
cudnnStatus t cudnnRNNBackwardData(
   cudnnHandle t
                                   handle,
   const cudnnRNNDescriptor_t
                                   rnnDesc.
   const int
                                   seqLength,
   const cudnnTensorDescriptor t *yDesc,
   const void
                                   *У,
   const cudnnTensorDescriptor t *dyDesc,
                                   *dy,
   const void
   const cudnnTensorDescriptor t
                                  dhyDesc,
                                  *dhy,
   const void
                                   dcyDesc,
   const cudnnTensorDescriptor t
   const void
                                   *dcy,
   const cudnnFilterDescriptor t
                                   wDesc,
                                   *w,
   const void
   const cudnnTensorDescriptor t hxDesc,
                                   *hx,
   const void
   const cudnnTensorDescriptor t
                                  cxDesc,
                                   *cx,
   const void
   const cudnnTensorDescriptor t *dxDesc,
                                  *dx,
   const cudnnTensorDescriptor t dhxDesc,
   void
                                   *dhx,
   const cudnnTensorDescriptor t dcxDesc,
                                  *dcx,
   void
   void
                                  *workspace,
   size t
                                  workSpaceSizeInBytes,
   const void
                                   *reserveSpace,
   size t
                                 reserveSpaceSizeInBytes)
```

This routine executes the recurrent neural network described by rnnDesc with output gradients dy, dhy, and dhc, weights w and input gradients dx, dhx, and dcx. workspace is required for intermediate storage. The data in reserveSpace must have previously been generated by <u>cudnnRNNForwardTraining()</u>. The same reserveSpace data must be used for future calls to cudnnRNNBackwardWeights() if they execute on the same input data.

Parameters

handle

Input. Handle to a previously created cuDNN context. For more information , see cudnnHandle t.

rnnDesc

Input. A previously initialized RNN descriptor. For more information, refer to <u>cudnnRNNDescriptor_t</u>.

seqLength

Input. Number of iterations to unroll over. The value of this seqLength must not exceed the value that was used in the <u>cudnnGetRNNWorkspaceSize()</u> function for querying the workspace size required to execute the RNN.

yDesc

Input. An array of fully packed tensor descriptors describing the output from each recurrent iteration (one descriptor per iteration). For more information, refer to cudnnTensorDescriptor_t. The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor n must match the first dimension of the tensor n in ${\tt dyDesc.}$

У

Input. Data pointer to GPU memory associated with the output tensor descriptor yDesc.

dyDesc

Input. An array of fully packed tensor descriptors describing the gradient at the output from each recurrent iteration (one descriptor per iteration). The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor n must match the first dimension of the tensor n in dxDesc.

dy

Input. Data pointer to GPU memory associated with the tensor descriptors in the array dyDesc.

dhyDesc

Input. A fully packed tensor descriptor describing the gradients at the final hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

dhy

Input. Data pointer to GPU memory associated with the tensor descriptor dhyDesc. If a NULL pointer is passed, the gradients at the final hidden state of the network will be initialized to zero.

dcyDesc

Input. A fully packed tensor descriptor describing the gradients at the final cell state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

dcy

Input. Data pointer to GPU memory associated with the tensor descriptor deyDesc. If a NULL pointer is passed, the gradients at the final cell state of the network will be initialized to zero.

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN. For more information, refer to cudnnFilterDescriptor t.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the second dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

cxDesc

Input. A fully packed tensor descriptor describing the initial cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the second dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

CX

Input. Data pointer to GPU memory associated with the tensor descriptor <code>cxDesc</code>. If a <code>NULL</code> pointer is passed, the initial cell state of the network will be initialized to zero.

dxDesc

Input. An array of fully packed tensor descriptors describing the gradient at the input of each recurrent iteration (one descriptor per iteration). The first dimension (batch size) of the tensors may decrease from element n to element n+1 but may not increase. Each tensor descriptor must have the same second dimension (vector length).

dx

Output. Data pointer to GPU memory associated with the tensor descriptors in the array dxDesc.

dhxDesc

Input. A fully packed tensor descriptor describing the gradient at the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

dhx

Output. Data pointer to GPU memory associated with the tensor descriptor dhxDesc. If a NULL pointer is passed, the gradient at the hidden input of the network will not be set.

dcxDesc

Input. A fully packed tensor descriptor describing the gradient at the initial cell state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

dcx

Output. Data pointer to GPU memory associated with the tensor descriptor dexDesc. If a NULL pointer is passed, the gradient at the cell input of the network will not be set.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

reserveSpace

Input/Output. Data pointer to GPU memory to be used as a reserve space for this call.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided reserveSpace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- At least one of the descriptors dhxDesc, wDesc, hxDesc, cxDesc, dcxDesc, dhyDesc, dcyDesc or one of the descriptors in yDesc, dxdesc, dydesc is invalid.
- The descriptors in one of yDesc, dxDesc, dyDesc, dhxDesc, wDesc, hxDesc, cxDesc, dcxDesc, dhyDesc, dcyDesc has incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.
- reserveSpaceSizeInBytes is too small.

CUDNN STATUS INVALID VALUE

<u>cudnnSetPersistentRNNPlan()</u> was not called prior to the current function when CUDNN RNN ALGO PERSIST DYNAMIC was selected in the RNN descriptor.

CUDNN STATUS MAPPING ERROR

A GPU/CUDA resource, such as a texture object, shared memory, or zero-copy memory is not available in the required size or there is a mismatch between the user resource and cuDNN internal resources. A resource mismatch may occur, for example, when calling <code>cudnnSetStream()</code>. There could be a mismatch between the user provided CUDA stream and the internal CUDA events instantiated in the cuDNN handle when <code>cudnnCreate()</code> was invoked.

This error status may not be correctable when it is related to texture dimensions, shared memory size, or zero-copy memory availability. If <code>CUDNN_STATUS_MAPPING_ERROR</code> is returned by <code>cudnnSetStream()</code>, then it is typically correctable, however, it means that the cuDNN handle was created on one GPU and the user stream passed to this function is associated with another GPU.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

CUDNN_STATUS_ALLOC_FAILED

The function was unable to allocate memory.

8.2.19. cudnnRNNBackwardData_v8()


```
cudnnStatus_t cudnnRNNBackwardData_v8(
    cudnnHandle_t handle,
    cudnnRNNDescriptor_t rnnDesc,
    const int32_t devSeqLengths[],
    cudnnRNNDataDescriptor_t yDesc,
    const void *y,
    const void *dy,
    cudnnRNNDataDescriptor_t xDesc,
    void *dx,
    cudnnTensorDescriptor_t hDesc,
    const void *hx,
    const void *dhy,
    void *dhy,
```

```
cudnnTensorDescriptor_t cDesc,
  const void *cx,
  const void *dcy,
  void *dcx,
  size_t weightSpaceSize,
  const void *weightSpace,
  size_t workSpaceSize,
  void *workSpace,
  size_t reserveSpaceSize,
  void *reserveSpaceOi;
```

This function computes exact, first-order derivatives of the RNN model with respect to its inputs: x, hx and for the LSTM cell typealsocx. If o = [y, hy, cy] = F(x, hx, cx) = F(z) is a vector-valued function that represents the entire RNN model and it takes vectors x(for all time-steps) and vectors hx, cx (for all layers) as inputs, concatenated into $z \in \mathbb{R}^n$ (network weights and biases are assumed constant), and outputs vectors y, hy, cy concatenated into a vector $o \in \mathbb{R}^m$, then cudnnRNNBackwardData_v8 () computes the result of $\left(\frac{\partial o_i}{\partial z_j}\right)^T \delta_{\text{out}}$ where δ_{out} is the m×1gradient of the loss function with respect to all RNN outputs. The δ_{out} gradient is back propagated through prior layers of the deep learning model, starting from the model output. $\frac{\partial o_i}{\partial z_j}$ is the m×n Jacobian matrix of F(z). The δ_{out} input is supplied via the dy, dhy, and dcy arguments and gradient results $\left(\frac{\partial o_i}{\partial z_j}\right)^T \delta_{\text{out}}$ are written to the dx, dhx, and dcx buffers.

Locations of x, y, hx, cx, hy, cy, dx, dy, dhx, dcx, dhy, and dcy signals a multi-layer RNN model are shown in the Figure below. Note that internal RNN signals (between timesteps and between layers) are not exposed by the <code>cudnnRNNBackwardData v8()</code> function.

Figure 3. Locations of x, y, hx, cx, hy, cy, dx, dy, dhx, dcx, dhy, and dcy signals a multi-layer RNN model.

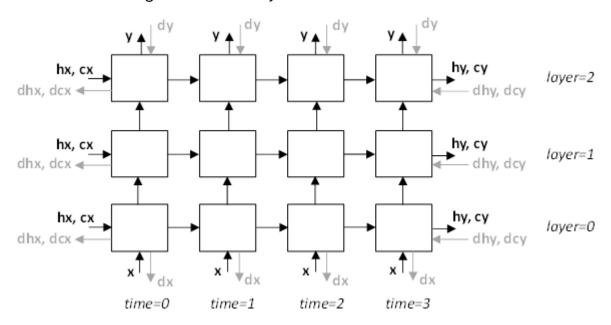

Memory addresses to the primary RNN output y, the initial hidden state hx, and the initial cell state cx (for LSTM only) should point to the same data as in the preceding cudnnRNNForward() call. The dy and dx pointers cannot be NULL.

The <code>cudnnRNNBackwardData_v8()</code> function accepts any combination of <code>dhy</code>, <code>dhx</code>, <code>dcy</code>, <code>dcx</code> buffer addresses being <code>NULL</code>. When <code>dhy</code> or <code>dcy</code> are <code>NULL</code>, it is assumed that those inputs are zero. When <code>dhx</code> or <code>dcx</code> pointers are <code>NULL</code> then the corresponding results are not written by <code>cudnnRNNBackwardData v8()</code>.

When all hx, dhy, dhx pointers are NULL, then the corresponding tensor descriptor hDesc can be NULL too. The same rule applies to the cx, dcy, dcx pointers and the cDesc tensor descriptor.

The cudnnRNNBackwardData_v8 () function allows the user to use padded layouts for inputs y, dy, and output dx. In padded or unpacked layouts (CUDNN_RNN_DATA_LAYOUT_SEQ_MAJOR_UNPACKED, CUDNN_RNN_DATA_LAYOUT_BATCH_MAJOR_UNPACKED) each sequence of vectors in a mini-batch has a fixed length defined by the maxSeqLength argument in the cudnnSetRNNDataDescriptor() function. The term "unpacked" refers here to the presence of padding vectors, and not unused address ranges between contiguous vectors.

Each padded, fixed-length sequence starts from a segment of valid vectors. The valid vector count is stored in seqLengthArray passed to $\underline{cudnnSetRNNDataDescriptor()}$, such that 0 < seqLengthArray[i] <= maxSeqLength for all sequences in a mini-batch, i.e., for <math>i=0..batchSize-1. The remaining padding vectors make the combined sequence length equal to maxSeqLength. Both sequence-major and batch-major padded layouts are supported.

In addition, a packed sequence-major layout:

CUDNN_RNN_DATA_LAYOUT_SEQ_MAJOR_PACKED can be selected by the user. In the latter layout, sequences of vectors in a mini-batch are sorted in the descending order according to the sequence lengths. First, all vectors for time step zero are stored. They are followed by vectors for time step one, and so on. This layout uses no padding vectors.

The same layout type must be specified in xDesc and yDesc descriptors.

Two host arrays named <code>seqLengthArray</code> in <code>xDesc</code> and <code>yDesc</code> RNN data descriptors must be the same. In addition, a copy of <code>seqLengthArray</code> in the device memory must be passed via the <code>devSeqLengths</code> argument. This array is supplied directly to GPU kernels. The <code>cudnnRNNBackwardData_v8()</code> function does not verify that sequence lengths stored in <code>devSeqLengths</code> in GPU memory are the same as in <code>xDesc</code> and <code>yDesc</code> descriptors in CPU memory. Sequence length arrays from <code>xDesc</code> and <code>yDesc</code> descriptors are checked for consistency, however.

The cudnnRNNBackwardData_v8() function must be called after cudnnRNNForward(). The cudnnRNNForward() function should be invoked with the fwdMode argument of type cudnnRNNForward() set to CUDNN_FWD_MODE_TRAINING.

Parameters

handle

Input. The current cuDNN context handle.

rnnDesc

Input. A previously initialized RNN descriptor.

devSeqLengths

Input. A copy of seqLengthArray from xDesc or yDesc RNN data descriptors. The devSeqLengths array must be stored in GPU memory as it is accessed asynchronously by GPU kernels, possibly after the $cudnnRNNBackwardData_v8()$ function exists. This argument cannot be NULL.

yDesc

Input. A previously initialized descriptor corresponding to the RNN model primary output. The dataType, layout, maxSeqLength, batchSize, and seqLengthArray need to match that of xDesc.

y, dy

Input. Data pointers to GPU buffers holding the RNN model primary output and gradient deltas (gradient of the loss function with respect to y). The y output should be produced by the preceding <u>cudnnRNNForward()</u> call. The y and dy vectors are expected to be laid out in memory according to the layout specified by yDesc. The elements in the tensor (including elements in padding vectors) must be densely packed. The y and dy arguments cannot be NULL.

xDesc

Input. A previously initialized RNN data descriptor corresponding to the gradient of the loss function with respect to the RNN primary model input. The dataType, layout, maxSeqLength, batchSize, and seqLengthArray must match that of yDesc. The parameter vectorSize must match the inputSize argument passed to the cudnnSetRNNDescriptor_v8() function.

dx

Output. Data pointer to GPU memory where back-propagated gradients of the loss function with respect to the RNN primary input x should be stored. The vectors are expected to be arranged in memory according to the layout specified by xDesc. The elements in the tensor (including padding vectors) must be densely packed. This argument cannot be NULL.

hDesc

Input. A tensor descriptor describing the initial RNN hidden state hx and gradients of the loss function with respect to the initial of the final hidden state. Hidden state data and the corresponding gradients are fully packed. The first dimension of the tensor depends on the dirMode argument passed to the <u>cudnnSetRNNDescriptor_v8()</u> function.

If dirMode is CUDNN_UNIDIRECTIONAL, then the first dimension should match the numLayers argument passed to <u>cudnnSetRNNDescriptor v8()</u>.

If dirMode is CUDNN_BIDIRECTIONAL, then the first dimension should be double the numLayers argument passed to <u>cudnnSetRNNDescriptor_v8()</u>.

The second dimension must match the batchSize parameter described in xDesc. The third dimension depends on whether RNN mode is CUDNN_LSTM and whether the LSTM projection is enabled. Specifically:

- ▶ If RNN mode is CUDNN_LSTM and LSTM projection is enabled, the third dimension must match the projsize argument passed to the <u>cudnnSetRNNDescriptor_v8()</u> call.
- ▶ Otherwise, the third dimension must match the hiddenSize argument passed to the cudnnSetRNNDescriptor_v8() call used to initialize rnnDesc.

hx, dhy

Input. Addresses of GPU buffers with the RNN initial hidden state hx and gradient deltas dhy. Data dimensions are described by the hDesc tensor descriptor. If a NULL pointer is passed in hx or dhy arguments, the corresponding buffer is assumed to contain all zeros.

dhx

Output. Pointer to the GPU buffer where first-order derivatives corresponding to initial hidden state variables should be stored. Data dimensions are described by the hDesc tensor descriptor. If a NULL pointer is assigned to dhx, the back-propagated derivatives are not saved.

cDesc

Input. For LSTM networks only. A tensor descriptor describing the initial cell state cx and gradients of the loss function with respect to the initial of the final cell state. Cell state data are fully packed. The first dimension of the tensor depends on the dirMode argument passed to the <u>cudnnSetRNNDescriptor v8()</u> call.

- If dirMode is CUDNN_UNIDIRECTIONAL, then the first dimension should match the numLayers argument passed to <u>cudnnSetRNNDescriptor_v8()</u>.
- If dirMode is CUDNN_BIDIRECTIONAL, then the first dimension should be double the numLayers argument passed to <u>cudnnSetRNNDescriptor v8()</u>.

The second tensor dimension must match the <code>batchSize</code> parameter in <code>xDesc</code>. The third dimension must match the <code>hiddenSize</code> argument passed to the <code>cudnnSetRNNDescriptor_v8()</code> call.

cx, dcy

Input. For LSTM networks only. Addresses of GPU buffers with the initial LSTM state data and gradient deltas dcy. Data dimensions are described by the cDesc tensor descriptor. If a NULL pointer is passed in cx or dcy arguments, the corresponding buffer is assumed to contain all zeros.

dcx

Output. For LSTM networks only. Pointer to the GPU buffer where first-order derivatives corresponding to initial LSTM state variables should be stored. Data dimensions are described by the <code>cDesc</code> tensor descriptor. If a <code>NULL</code> pointer is assigned to <code>dcx</code>, the back-propagated derivatives are not saved.

weightSpaceSize

Input. Specifies the size in bytes of the provided weight-space buffer.

weightSpace

Input. Address of the weight space buffer in GPU memory.

workSpaceSize

Input. Specifies the size in bytes of the provided workspace buffer.

workSpace

Input/Output. Address of the workspace buffer in GPU memory to store temporary data.

reserveSpaceSize

Input. Specifies the size in bytes of the reserve-space buffer.

reserveSpace

Input/Output. Address of the reserve-space buffer in GPU memory.

Returns

CUDNN STATUS SUCCESS

No errors were detected while processing API input arguments and launching GPU kernels.

CUDNN_STATUS_NOT_SUPPORTED

At least one of the following conditions are met:

- variable sequence length input is passed while CUDNN_RNN_ALGO_PERSIST_STATIC or CUDNN_RNN_ALGO_PERSIST_DYNAMIC is specified
- CUDNN_RNN_ALGO_PERSIST_STATIC or CUDNN_RNN_ALGO_PERSIST_DYNAMIC is requested on pre-Pascal devices
- the 'double' floating point type is used for input/output and the CUDNN_RNN_ALGO_PERSIST_STATIC algo

CUDNN STATUS BAD PARAM

An invalid or incompatible input argument was encountered. For example:

- some input descriptors are NULL
- settings in rnnDesc, xDesc, yDesc, hDesc, or cDesc descriptors are invalid

weightSpaceSize, workSpaceSize, Or reserveSpaceSize is too small

CUDNN_STATUS_MAPPING_ERROR

A GPU/CUDA resource, such as a texture object, shared memory, or zero-copy memory is not available in the required size or there is a mismatch between the user resource and cuDNN internal resources. A resource mismatch may occur, for example, when calling <code>cudnnSetStream()</code>. There could be a mismatch between the user provided CUDA stream and the internal CUDA events instantiated in the cuDNN handle when <code>cudnnCreate()</code> was invoked.

This error status may not be correctable when it is related to texture dimensions, shared memory size, or zero-copy memory availability. If <code>CUDNN_STATUS_MAPPING_ERROR</code> is returned by <code>cudnnSetStream()</code>, then it is typically correctable, however, it means that the cuDNN handle was created on one GPU and the user stream passed to this function is associated with another GPU.

CUDNN STATUS EXECUTION FAILED

The process of launching a GPU kernel returned an error, or an earlier kernel did not complete successfully.

CUDNN STATUS ALLOC FAILED

The function was unable to allocate CPU memory.

8.2.20. cudnnRNNBackwardDataEx()

This function has been deprecated in cuDNN 8.0. Use cudnnRNNBackwardData_v8 instead of cudnnRNNBackwardData_v8

```
cudnnStatus t cudnnRNNBackwardDataEx(
   cudnnHandle t
                                  handle,
   const cudnnRNNDescriptor t
                                  rnnDesc,
  const cudnnRNNDescriptor_t vDesc,
  const void
                                  *y,
  const cudnnRNNDataDescriptor t
                                 dyDesc,
   const void
                                  *dy,
   const cudnnRNNDataDescriptor t
                                  dcDesc,
                                  *dcAttn,
   const void
  const cudnnTensorDescriptor t
                                 dhyDesc,
                                  *dhy,
  const void
                                 dcyDesc,
   const cudnnTensorDescriptor t
   const void
                                  *dcy,
   const cudnnFilterDescriptor t
                                 wDesc.
  const void
                                  *w,
   const cudnnTensorDescriptor t
                                 hxDesc,
   const void
                                  *hx,
   const cudnnTensorDescriptor t
                                  cxDesc,
   const void
                                  *CX,
   *dx,
   const cudnnTensorDescriptor t
                                  dhxDesc.
   void
                                  *dhx,
                                 dcxDesc,
   const cudnnTensorDescriptor t
                                  *dcx,
   const cudnnRNNDataDescriptor t
                                  dkDesc,
                                  *dkeys,
```

```
void*workSpace,size_tworkSpaceSizeInBytes,void*reserveSpace,size_treserveSpaceSizeInBytes)
```

This routine is the extended version of the function $\underline{\text{cudnnRNNBackwardData()}}$. This function $\underline{\text{cudnnRNNBackwardDataEx ()}}$ allows the user to use an unpacked (padded) layout for input $\underline{\text{y}}$ and output $\underline{\text{dx}}$.

In the unpacked layout, each sequence in the mini-batch is considered to be of fixed length, specified by maxSeqLength in its corresponding RNNDataDescriptor. Each fixed-length sequence, for example, the nth sequence in the mini-batch, is composed of a valid segment specified by the seqLengthArray[n] in its corresponding RNNDataDescriptor; and a padding segment to make the combined sequence length equal to maxSeqLength.

With the unpacked layout, both sequence major (meaning, time major) and batch major are supported. For backward compatibility, the packed sequence major layout is supported. However, similar to the non-extended function cudnnRNNBackwardData(), the sequences in the mini-batch need to be sorted in descending order according to length.

Parameters

handle

Input. Handle to a previously created This function is deprecated starting in cuDNN 8.0.0. context.

rnnDesc

Input. A previously initialized RNN descriptor.

yDesc

Input. A previously initialized RNN data descriptor. Must match or be the exact same descriptor previously passed into cudnnRNNForwardTrainingEx().

У

Input. Data pointer to the GPU memory associated with the RNN data descriptor yDesc. The vectors are expected to be laid out in memory according to the layout specified by yDesc. The elements in the tensor (including elements in the padding vector) must be densely packed, and no strides are supported. Must contain the exact same data previously produced by cudnnRNNForwardTrainingEx().

dyDesc

Input. A previously initialized RNN data descriptor. The dataType, layout, maxSeqLength, batchSize, vectorSize, and seqLengthArray need to match the yDesc previously passed to $\underline{\text{cudnnRNNForwardTrainingEx()}}$.

dy

Input. Data pointer to the GPU memory associated with the RNN data descriptor dyDesc. The vectors are expected to be laid out in memory according to the layout

specified by dyDesc. The elements in the tensor (including elements in the padding vector) must be densely packed, and no strides are supported.

dhyDesc

Input. A fully packed tensor descriptor describing the gradients at the final hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc. Additionally:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the batchSize parameter in xDesc. The third dimension depends on whether the RNN mode is CUDNN_LSTM and whether LSTM projection is enabled. Additionally:

- If the RNN mode is CUDNN_LSTM and LSTM projection is enabled, the third dimension must match the recProjSize argument passed to cudnnSetRNNProjectionLayers() call used to set rnnDesc.
- ▶ Otherwise, the third dimension must match the hiddenSize argument used to initialize rnnDesc.

dhy

Input. Data pointer to GPU memory associated with the tensor descriptor dhyDesc. If a NULL pointer is passed, the gradients at the final hidden state of the network will be initialized to zero.

dcyDesc

Input. A fully packed tensor descriptor describing the gradients at the final cell state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc. Additionally:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

dcy

Input. Data pointer to GPU memory associated with the tensor descriptor dcyDesc. If a NULL pointer is passed, the gradients at the final cell state of the network will be initialized to zero.

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. Must match or be the exact same descriptor previously passed into cudnnRNNForwardTrainingEx().

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero. Must contain the exact same data previously passed into $\underline{cudnnRNNForwardTrainingEx()}$, or be \underline{NULL} if \underline{NULL} was previously passed to $\underline{cudnnRNNForwardTrainingEx()}$.

cxDesc

Input. A fully packed tensor descriptor describing the initial cell state for LSTM networks. Must match or be the exact same descriptor previously passed into <u>cudnnRNNForwardTrainingEx()</u>.

CX

Input. Data pointer to GPU memory associated with the tensor descriptor cxDesc. If a <code>NULL</code> pointer is passed, the initial cell state of the network will be initialized to zero. Must contain the exact same data previously passed into cudnnRNNForwardTrainingEx(), or be <code>NULL</code> if <code>NULL</code> was previously passed to cudnnRNNForwardTrainingEx().

dxDesc

Input. A previously initialized RNN data descriptor. The dataType, layout, maxSeqLength, batchSize, vectorSize and seqLengthArray need to match that of xDesc previously passed to cudnnRNNForwardTrainingEx().

dx

Output. Data pointer to the GPU memory associated with the RNN data descriptor dxDesc. The vectors are expected to be laid out in memory according to the layout specified by dxDesc. The elements in the tensor (including elements in the padding vector) must be densely packed, and no strides are supported.

dhxDesc

Input. A fully packed tensor descriptor describing the gradient at the initial hidden state of the RNN. The descriptor must be set exactly the same way as dhyDesc.

dhx

Output. Data pointer to GPU memory associated with the tensor descriptor dhxDesc. If a NULL pointer is passed, the gradient at the hidden input of the network will not be set.

dcxDesc

Input. A fully packed tensor descriptor describing the gradient at the initial cell state of the RNN. The descriptor must be set exactly the same way as dcyDesc.

dcx

Output. Data pointer to GPU memory associated with the tensor descriptor dexDesc. If a NULL pointer is passed, the gradient at the cell input of the network will not be set.

dkDesc

Reserved. Users may pass in NULL.

dkeys

Reserved. Users may pass in NULL.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

reserveSpace

Input/Output. Data pointer to GPU memory to be used as a reserve space for this call.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided reserveSpace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN STATUS NOT SUPPORTED

At least one of the following conditions are met:

- ► Variable sequence length input is passed in while

 CUDNN RNN ALGO PERSIST STATIC or CUDNN RNN ALGO PERSIST DYNAMIC is used.
- CUDNN_RNN_ALGO_PERSIST_STATIC or CUDNN_RNN_ALGO_PERSIST_DYNAMIC is used on pre-Pascal devices.
- ▶ Double input/output is used for CUDNN RNN ALGO PERSIST STATIC.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- At least one of the descriptors yDesc, dxdesc, dydesc, dhxDesc, wDesc, hxDesc, cxDesc, dcxDesc, dcyDesc, dcyDesc is invalid or has incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.
- reserveSpaceSizeInBytes is too small.

CUDNN STATUS INVALID VALUE

<u>cudnnSetPersistentRNNPlan()</u> was not called prior to the current function when CUDNN RNN ALGO PERSIST DYNAMIC was selected in the RNN descriptor.

CUDNN STATUS MAPPING ERROR

A GPU/CUDA resource, such as a texture object, shared memory, or zero-copy memory is not available in the required size or there is a mismatch between the user resource and cuDNN internal resources. A resource mismatch may occur, for example, when calling <code>cudnnSetStream()</code>. There could be a mismatch between the user provided CUDA stream and the internal CUDA events instantiated in the cuDNN handle when <code>cudnnCreate()</code> was invoked.

This error status may not be correctable when it is related to texture dimensions, shared memory size, or zero-copy memory availability. If <code>CUDNN_STATUS_MAPPING_ERROR</code> is returned by <code>cudnnSetStream()</code>, then it is typically correctable, however, it means that the cuDNN handle was created on one GPU and the user stream passed to this function is associated with another GPU.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

CUDNN STATUS ALLOC FAILED

The function was unable to allocate memory.

8.2.21. cudnnRNNBackwardWeights()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnRNNBackwardWeights_v8()</u> instead of <u>cudnnRNNBackwardWeights</u>().

```
cudnnStatus t cudnnRNNBackwardWeights(
                                 handle,
   cudnnHandle t
                                 rnnDesc
   const cudnnRNNDescriptor t
                                  seqLength,
   const int
   const cudnnTensorDescriptor t *xDesc,
   const void
  const cudnnTensorDescriptor t hxDesc,
                                 *hx,
   const void
   const cudnnTensorDescriptor t *yDesc,
   const void
                                *workspace,
   const void
   size t
                                 workSpaceSizeInBytes,
   const cudnnFilterDescriptor t dwDesc,
                                  *dw,
                                *reserveSpace,
   const void
  size t
                                reserveSpaceSizeInBytes)
```

This routine accumulates weight gradients dw from the recurrent neural network described by rnnDesc with inputs x, hx and outputs y. The mode of operation in this case is additive, the weight gradients calculated will be added to those already existing in dw. workspace is required for intermediate storage. The data in reserveSpace must have previously been generated by <u>cudnnRNNBackwardData()</u>.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

seqLength

Input. Number of iterations to unroll over. The value of this seqLength must not exceed the value that was used in the $\underline{cudnnGetRNNWorkspaceSize()}$ function for querying the workspace size required to execute the RNN.

xDesc

Input. An array of fully packed tensor descriptors describing the input to each recurrent iteration (one descriptor per iteration). The first dimension (batch size) of the tensors may decrease from element n to element n+1 but may not increase. Each tensor descriptor must have the same second dimension (vector length).

x

 ${\it Input}.$ Data pointer to GPU memory associated with the tensor descriptors in the array ${\it xDesc}.$

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

yDesc

Input. An array of fully packed tensor descriptors describing the output from each recurrent iteration (one descriptor per iteration). The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor $\tt n$ must match the first dimension of the tensor $\tt n$ in $\tt dyDesc.$

v

Input. Data pointer to GPU memory associated with the output tensor descriptor yDesc.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

dwDesc

Input. Handle to a previously initialized filter descriptor describing the gradients of the weights for the RNN.

dw

 ${\it Input/Output}.$ Data pointer to GPU memory associated with the filter descriptor ${\it dwDesc}.$

reserveSpace

Input. Data pointer to GPU memory to be used as a reserve space for this call.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided reserveSpace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- At least one of the descriptors hxDesc, dwDesc or one of the descriptors in xDesc, yDesc is invalid.
- ► The descriptors in one of xDesc, hxDesc, yDesc, dwDesc have incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.
- reserveSpaceSizeInBytes is too small.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

```
CUDNN STATUS ALLOC FAILED
```

The function was unable to allocate memory.

8.2.22. cudnnRNNBackwardWeights_v8()

```
cudnnStatus_t cudnnRNNBackwardWeights_v8(
    cudnnHandle_t handle,
    cudnnRNNDescriptor_t rnnDesc,
    cudnnWgradMode_t addGrad,
    const int32_t devSeqLengths[],
    cudnnRNNDataDescriptor_t xDesc,
    const void *x,
    cudnnTensorDescriptor_t hDesc,
    const void *hx,
    cudnnRNNDataDescriptor_t yDesc,
    const void *y,
    size_t weightSpaceSize,
    void *dweightSpace,
    size_t workSpaceSize,
    void *workSpace,
    size_t reserveSpaceSize,
    void *reserveSpaceSize,
    void *reserveSpace);
```

This function computes exact, first-order derivatives of the RNN model with respect to all trainable parameters: weights and biases. If o = [y, hy, cy] = F(w) is a vector-valued function that represents the multi-layer RNN model and it takes some vector $w \in \mathbb{R}^n$ of "flatten" weights or biases as input (with all other data inputs constant), and outputs vector $o \in \mathbb{R}^m$, then <code>cudnnRNNBackwardWeights_v8()</code> computes the result of $\left(\partial o_i/\partial w_j\right)^T \delta_{\text{out}}$ where δ_{out} is the m×lgradient of the loss function with respect to all RNN outputs. The δ_{out} gradient is back propagated through prior layers of the deep learning model, starting from the model output. $\partial o_i/\partial w_j$ is the m×n Jacobian matrix of F(w). The δ_{out} input is supplied via the dy, dhy, and dcy arguments in the <code>cudnnRNNBackwardData v8()</code> function.

All gradient results $(\partial o_i/\partial w_j)^T \delta_{\text{out}}$ with respect to weights and biases are written to the dweightSpace buffer. The size and the organization of the dweightSpace buffer is the same as the weightSpace buffer that holds RNN weights and biases.

Gradient of the loss function with respect to weights and biases is typically computed over multiple mini-batches. In such a case, partial results computed for each

mini-batch should be aggregated. The <code>addGrad</code> argument specifies if gradients from the current mini-batch should be added to previously computed results (<code>CUDNN_WGRAD_MODE_ADD</code>) or the <code>dweightSpace</code> buffer should be overwritten with the new results (<code>CUDNN_WGRAD_MODE_SET</code>). Currently, the <code>cudnnRNNBackwardWeights_v8()</code> function supports the <code>CUDNN_WGRAD_MODE_ADD</code> mode only so the <code>dweightSpace</code> buffer should be zeroed by the user before invoking the routine for the first time.

The same sequence lengths must be specified in the xDesc descriptor and in the device array devSeqLengths. The cudnnRNNBackwardWeights_v8() function should be invoked after cudnnRNNBackwardData().

Parameters

handle

Input. The current cuDNN context handle.

rnnDesc

Input. A previously initialized RNN descriptor.

addGrad

Input. Weight gradient output mode. For more details, see the description of the <u>cudnnWgradMode_t</u> enumerated type. Currently, only the <u>cudnn_Wgrad_Mode_add_Mode_a</u>

devSeqLengths

Input. A copy of seqLengthArray from the xDesc RNN data descriptor. The devSeqLengths array must be stored in GPU memory as it is accessed asynchronously by GPU kernels, possibly after the $cudnnRNNBackwardWeights_v8()$ function exists.

xDesc

Input. A previously initialized descriptor corresponding to the RNN model input data. This is the same RNN data descriptor as used in the preceding <u>cudnnRNNForward()</u> and <u>cudnnRNNBackwardData_v8()</u> calls.

x

Input. Pointer to the GPU buffer with the primary RNN input. The same buffer address \times should be provided in prior <u>cudnnRNNForward()</u> and <u>cudnnRNNBackwardData_v8()</u> calls.

hDesc

Input. A tensor descriptor describing the initial RNN hidden state. Hidden state data are fully packed. This is the same tensor descriptor as used in prior <u>cudnnRNNForward()</u> and <u>cudnnRNNBackwardData_v8()</u> calls.

hx

Input. Pointer to the GPU buffer with the RNN initial hidden state. The same buffer address hx should be provided in prior $\underline{cudnnRNNForward()}$ and $\underline{cudnnRNNBackwardData_v8()}$ calls.

yDesc

Input. A previously initialized descriptor corresponding to the RNN model output data. This is the same RNN data descriptor as used in prior <u>cudnnRNNForward()</u> and cudnnRNNBackwardData_v8() calls.

У

Output. Pointer to the GPU buffer with the primary RNN output as generated by the prior $\underline{\text{cudnnRNNForward()}}$ call. Data in the \underline{y} buffer are described by the $\underline{y} \underline{\text{Desc}}$ descriptor. Elements in the \underline{y} tensor (including elements in padding vectors) must be densely packed.

weightSpaceSize

Input. Specifies the size in bytes of the provided weight-space buffer.

dweightSpace

Output. Address of the weight space buffer in GPU memory.

workSpaceSize

Input. Specifies the size in bytes of the provided workspace buffer.

workSpace

Input/Output. Address of the workspace buffer in GPU memory to store temporary data.

reserveSpaceSize

Input. Specifies the size in bytes of the reserve-space buffer.

reserveSpace

Input/Output. Address of the reserve-space buffer in GPU memory.

Returns

CUDNN STATUS SUCCESS

No errors were detected while processing API input arguments and launching GPU kernels.

CUDNN STATUS NOT SUPPORTED

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

An invalid or incompatible input argument was encountered. For example:

- ▶ some input descriptors are NULL
- settings in rnnDesc, xDesc, yDesc, or hDesc descriptors are invalid
- weightSpaceSize, workSpaceSize, or reserveSpaceSize values are too small
- the addGrad argument is not equal to CUDNN WGRAD MODE ADD

CUDNN STATUS EXECUTION FAILED

The process of launching a GPU kernel returned an error, or an earlier kernel did not complete successfully.

```
CUDNN STATUS ALLOC FAILED
```

The function was unable to allocate CPU memory.

8.2.23. cudnnRNNBackwardWeightsEx()

This function has been deprecated in cuDNN 8.0. Use <u>cudnnRNNBackwardWeights_v8()</u> instead of <u>cudnnRNNBackwardWeightsEX()</u>.

```
cudnnStatus t cudnnRNNBackwardWeightsEx(
   cudnnHandle_t handle,
const cudnnRNNDescriptor_t rnnDesc,
   const cudnnRNNDataDescriptor_t xDesc,
                                     *x,
   const void
   const cudnnTensorDescriptor_t hxDesc,
   const void
                                     *hx,
   const cudnnRNNDataDescriptor_t yDesc,
                                    *y,
*workSpace,
   const void
                                     workSpaceSizeInBytes,
   size t
   const cudnnFilterDescriptor_t dwDesc,
   void
                                     *dw,
                                     *reserveSpace,
   void
                                    reserveSpaceSizeInBytes)
   size t
```

This routine is the extended version of the function $\underline{\text{cudnnRNNBackwardWeights()}}$. This function $\underline{\text{cudnnRNNBackwardWeightsEx()}}$ allows the user to use an unpacked (padded) layout for input $\underline{\text{x}}$ and output $\underline{\text{dw}}$.

In the unpacked layout, each sequence in the mini-batch is considered to be of fixed length, specified by maxSeqLength in its corresponding RNNDataDescriptor. Each fixed-length sequence, for example, the nth sequence in the mini-batch, is composed of a valid segment specified by the seqLengthArray[n] in its corresponding RNNDataDescriptor; and a padding segment to make the combined sequence length equal to maxSeqLength.

With the unpacked layout, both sequence major (meaning, time major) and batch major are supported. For backward compatibility, the packed sequence major layout is supported. However, similar to the non-extended function cudnnRNNBackwardWeights(), the sequences in the mini-batch need to be sorted in descending order according to length.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

xDesc

Input. A previously initialized RNN data descriptor. Must match or be the exact same descriptor previously passed into cudnnRNNForwardTrainingEx().

x

Input. Data pointer to GPU memory associated with the tensor descriptors in the array xDesc. Must contain the exact same data previously passed into cudnnRNNForwardTrainingEx().

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. Must match or be the exact same descriptor previously passed into cudnnRNNForwardTrainingEx().

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero. Must contain the exact same data previously passed into $\underline{cudnnRNNForwardTrainingEx()}$, or be NULL if NULL was previously passed to $\underline{cudnnRNNForwardTrainingEx()}$.

yDesc

Input. A previously initialized RNN data descriptor. Must match or be the exact same descriptor previously passed into cudnnRNNForwardTrainingEx().

У

Input. Data pointer to GPU memory associated with the output tensor descriptor yDesc. Must contain the exact same data previously produced by $\underline{cudnnRNNForwardTrainingEx()}$.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

dwDesc

Input. Handle to a previously initialized filter descriptor describing the gradients of the weights for the RNN.

dw

Input/Output. Data pointer to GPU memory associated with the filter descriptor dwDesc.

reserveSpace

Input. Data pointer to GPU memory to be used as a reserve space for this call.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided reserveSpace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

```
CUDNN_STATUS_NOT_SUPPORTED
```

The function does not support the provided configuration.

CUDNN STATUS BAD PARAM

At least one of the following conditions are met:

- The descriptor rnnDesc is invalid.
- At least one of the descriptors xDesc, yDesc, hxDesc, dwDesc is invalid, or has incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.
- reserveSpaceSizeInBytes is too small.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

```
CUDNN_STATUS_ALLOC_FAILED
```

The function was unable to allocate memory.

8.2.24. cudnnRNNForwardTraining()

This function is deprecated starting in cuDNN 8.0.0.

Use <u>cudnnRNNForward()</u> instead of cudnnRNNForwardTraining().

```
cudnnStatus t cudnnRNNForwardTraining(
   cudnnHandle t
                                    handle,
   const cudnnRNNDescriptor t
                                    rnnDesc,
   const int
                                    seqLength,
   const cudnnTensorDescriptor t *xDesc,
   const void
                                   *x,
   const cudnnTensorDescriptor t
                                   hxDesc,
                                   *hx,
   const void
   const cudnnTensorDescriptor t
                                    cxDesc,
   const void
                                   *CX,
   const cudnnFilterDescriptor t
                                   wDesc,
                                   *w,
   const void
   const cudnnTensorDescriptor t
                                   *yDesc,
                                   hyDesc,
   const cudnnTensorDescriptor t
                                   *hy,
   void
   const cudnnTensorDescriptor t
                                   cyDesc,
                                   *cy,
   void
   void
                                   *workspace,
                                   workSpaceSizeInBytes,
   size t
   void
                                   *reserveSpace,
   size t
                                   reserveSpaceSizeInBytes)
```

This routine executes the recurrent neural network described by rnnDesc with inputs x, hx, and cx, weights w and outputs y, hy, and cy. workspace is required for intermediate storage. reserveSpace stores data required for training. The same reserveSpace data must be used for future calls to cudnnRNNBackwardData() and cudnnRNNBackwardWeights() if these execute on the same input data.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

seqLength

Input. Number of iterations to unroll over. The value of this seqLength must not exceed the value that was used in the cudnnGetRNNWorkspaceSize() function for querying the workspace size required to execute the RNN.

xDesc

Input. An array of seqLength fully packed tensor descriptors. Each descriptor in the array should have three dimensions that describe the input data format to one recurrent iteration (one descriptor per RNN time-step). The first dimension (batch size) of the tensors may decrease from iteration element n to iteration element n+1 but may not increase. Each tensor descriptor must have the same second dimension (RNN input vector length, inputsize). The third dimension of each tensor should be 1. Input vectors are expected to be arranged in the column-major order so strides in xDesc should be set as follows:

strideA[0]=inputSize, strideA[1]=1, strideA[2]=1

x

Input. Data pointer to GPU memory associated with the array of tensor descriptors xDesc. The input vectors are expected to be packed contiguously with the first vector of iterations (time-step) n+1 following directly the last vector of iteration n. In other words, input vectors for all RNN time-steps should be packed in the contiguous block of GPU memory with no gaps between the vectors.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

cxDesc

Input. A fully packed tensor descriptor describing the initial cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

CX

Input. Data pointer to GPU memory associated with the tensor descriptor cxDesc. If a NULL pointer is passed, the initial cell state of the network will be initialized to zero.

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

w

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

yDesc

Input. An array of fully packed tensor descriptors describing the output from each recurrent iteration (one descriptor per iteration). The second dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- If direction is CUDNN_UNIDIRECTIONAL the second dimension should match the hiddenSize argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the second dimension should match double the hiddenSize argument.

The first dimension of the tensor n must match the first dimension of the tensor n in xDesc.

У

Output. Data pointer to GPU memory associated with the output tensor descriptor yDesc.

hyDesc

Input. A fully packed tensor descriptor describing the final hidden state of the RNN. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

hy

Output. Data pointer to GPU memory associated with the tensor descriptor hydesc. If a NULL pointer is passed, the final hidden state of the network will not be saved.

cyDesc

Input. A fully packed tensor descriptor describing the final cell state for LSTM networks. The first dimension of the tensor depends on the direction argument used to initialize rnnDesc:

- ▶ If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

су

Output. Data pointer to GPU memory associated with the tensor descriptor cyDesc. If a NULL pointer is passed, the final cell state of the network will not be saved.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

reserveSpace

Input/Output. Data pointer to GPU memory to be used as a reserve space for this call.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided reserveSpace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- ► At least one of the descriptors hxDesc, cxDesc, wDesc, hyDesc, cyDesc or one of the descriptors in xDesc, yDesc is invalid.
- ► The descriptors in one of xDesc, hxDesc, cxDesc, wDesc, yDesc, hyDesc, cyDesc have incorrect strides or dimensions.
- workSpaceSizeInBytes is too small.
- reserveSpaceSizeInBytes is too small.

CUDNN STATUS INVALID VALUE

<u>cudnnSetPersistentRNNPlan()</u> was not called prior to the current function when CUDNN_RNN_ALGO_PERSIST_DYNAMIC was selected in the RNN descriptor.

CUDNN STATUS EXECUTION FAILED

The function failed to launch on the GPU.

CUDNN STATUS ALLOC FAILED

The function was unable to allocate memory.

8.2.25. cudnnRNNForwardTrainingEx()

This function has been deprecated starting in cuDNN 8.0. Use $\underline{\text{cudnnRNNForward()}}$ instead of $\underline{\text{cudnnRNNForwardTrainingEx()}}$.

```
cudnnStatus t cudnnRNNForwardTrainingEx(
   cudnnHandle_t
                                        handle,
   const cudnnRNNDescriptor t
                                        rnnDesc.
   const cudnnRNNDataDescriptor t
                                       xDesc,
   const void
                                        *x,
   const cudnnTensorDescriptor t
                                       hxDesc,
   const void
                                        *hx,
   const cudnnTensorDescriptor t
                                        cxDesc,
   const void
                                        *cx,
   const cudnnFilterDescriptor t
                                        wDesc.
   const void
                                        *w,
   const cudnnRNNDataDescriptor t
                                        yDesc,
                                        *y,
```

```
const cudnnTensorDescriptor t
                                     hyDesc,
void
                                     *hy,
const cudnnTensorDescriptor t
                                     cyDesc,
void
                                      *cy,
const cudnnRNNDataDescriptor t
                                    kDesc.
const void
                                     *keys,
const cudnnRNNDataDescriptor t
                                     cDesc,
                                      *cAttn,
const cudnnRNNDataDescriptor t
                                     iDesc,
                                     *iAttn,
void
const cudnnRNNDataDescriptor t
                                     qDesc,
void
                                     *queries,
void
                                     *workSpace,
                                     workSpaceSizeInBytes,
size t
void
                                      *reserveSpace,
                                     reserveSpaceSizeInBytes);
size t
```

This routine is the extended version of the $\underline{\text{cudnnRNNForwardTraining()}}$ function. The $\underline{\text{cudnnRNNForwardTrainingEx}}$ () allows the user to use unpacked (padded) layout for input x and output y.

In the unpacked layout, each sequence in the mini-batch is considered to be of fixed length, specified by maxSeqLength in its corresponding RNNDataDescriptor. Each fixed-length sequence, for example, the nth sequence in the mini-batch, is composed of a valid segment specified by the seqLengthArray[n] in its corresponding RNNDataDescriptor; and a padding segment to make the combined sequence length equal to maxSeqLength.

With the unpacked layout, both sequence major (meaning, time major) and batch major are supported. For backward compatibility, the packed sequence major layout is supported. However, similar to the non-extended function cudnnRNNForwardTraining(), the sequences in the mini-batch need to be sorted in descending order according to length.

Parameters

handle

Input. Handle to a previously created cuDNN context.

rnnDesc

Input. A previously initialized RNN descriptor.

xDesc

Input. A previously initialized RNN Data descriptor. The dataType, layout, maxSeqLength, batchSize, and seqLengthArray need to match that of yDesc.

x

Input. Data pointer to the GPU memory associated with the RNN data descriptor xDesc. The input vectors are expected to be laid out in memory according to the layout specified by xDesc. The elements in the tensor (including elements in the padding vector) must be densely packed, and no strides are supported.

hxDesc

Input. A fully packed tensor descriptor describing the initial hidden state of the RNN.

The first dimension of the tensor depends on the direction argument used to initialize rnnDesc. Moreover:

- If direction is CUDNN_UNIDIRECTIONAL then the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL then the first dimension should match double the numLayers argument.

The second dimension must match the batchSize parameter in xDesc. The third dimension depends on whether RNN mode is CUDNN_LSTM and whether LSTM projection is enabled. Additionally:

- ▶ If RNN mode is CUDNN_LSTM and LSTM projection is enabled, the third dimension must match the recProjSize argument passed to cudnnSetRNNProjectionLayers() call used to set rnnDesc.
- ▶ Otherwise, the third dimension must match the hiddenSize argument used to initialize rnnDesc.

hx

Input. Data pointer to GPU memory associated with the tensor descriptor hxDesc. If a NULL pointer is passed, the initial hidden state of the network will be initialized to zero.

cxDesc

Input. A fully packed tensor descriptor describing the initial cell state for LSTM networks.

The first dimension of the tensor depends on the direction argument used to initialize rnnDesc. Additionally:

- If direction is CUDNN_UNIDIRECTIONAL the first dimension should match the numLayers argument.
- ▶ If direction is CUDNN_BIDIRECTIONAL the first dimension should match double the numLayers argument.

The second dimension must match the first dimension of the tensors described in xDesc. The third dimension must match the hiddenSize argument used to initialize rnnDesc. The tensor must be fully packed.

СX

Input. Data pointer to GPU memory associated with the tensor descriptor cxDesc. If a NULL pointer is passed, the initial cell state of the network will be initialized to zero.

wDesc

Input. Handle to a previously initialized filter descriptor describing the weights for the RNN.

W

Input. Data pointer to GPU memory associated with the filter descriptor wDesc.

yDesc

Input. A previously initialized RNN data descriptor. The dataType, layout, maxSeqLength, batchSize, and seqLengthArray need to match that of dyDesc and dxDesc. The parameter vectorSize depends on whether the RNN mode is CUDNN_LSTM and whether LSTM projection is enabled and whether the network is bidirectional. Specifically:

- For a unidirectional network, if the RNN mode is CUDNN_LSTM and LSTM projection is enabled, the parameter vectorSize must match the recProjSize argument passed to <u>cudnnSetRNNProjectionLayers()</u> call used to set rnnDesc. If the network is bidirectional, then multiply the value by 2.
- ▶ Otherwise, for unidirectional network, the parameter vectorSize must match the hiddenSize argument used to initialize rnnDesc. If the network is bidirectional, then multiply the value by 2.

У

Output. Data pointer to GPU memory associated with the RNN data descriptor yDesc. The input vectors are expected to be laid out in memory according to the layout specified by yDesc. The elements in the tensor (including elements in the padding vector) must be densely packed, and no strides are supported.

hyDesc

Input. A fully packed tensor descriptor describing the final hidden state of the RNN. The descriptor must be set exactly the same as hxDesc.

hy

Output. Data pointer to GPU memory associated with the tensor descriptor hydesc. If a NULL pointer is passed, the final hidden state of the network will not be saved.

cyDesc

Input. A fully packed tensor descriptor describing the final cell state for LSTM networks. The descriptor must be set exactly the same as <code>cxDesc</code>.

су

Output. Data pointer to GPU memory associated with the tensor descriptor cyDesc. If a NULL pointer is passed, the final cell state of the network will not be saved.

kDesc

Reserved. Users may pass in NULL.

keys

Reserved. Users may pass in NULL.

cDesc

Reserved. Users may pass in NULL.

cAttn

Reserved. Users may pass in NULL.

iDesc

Reserved. Users may pass in NULL.

iAttn

Reserved. Users may pass in NULL.

qDesc

Reserved. Users may pass in NULL.

queries

Reserved. Users may pass in NULL.

workspace

Input. Data pointer to GPU memory to be used as a workspace for this call.

workSpaceSizeInBytes

Input. Specifies the size in bytes of the provided workspace.

reserveSpace

Input/Output. Data pointer to GPU memory to be used as a reserve space for this call.

reserveSpaceSizeInBytes

Input. Specifies the size in bytes of the provided reserveSpace.

Returns

CUDNN STATUS SUCCESS

The function launched successfully.

CUDNN STATUS NOT SUPPORTED

At least one of the following conditions are met:

- Variable sequence length input is passed in while

 CUDNN RNN ALGO PERSIST STATIC Or CUDNN RNN ALGO PERSIST DYNAMIC is used.
- CUDNN_RNN_ALGO_PERSIST_STATIC or CUDNN_RNN_ALGO_PERSIST_DYNAMIC is used on pre-Pascal devices.
- ▶ Double input/output is used for CUDNN RNN ALGO PERSIST STATIC.

CUDNN_STATUS_BAD_PARAM

At least one of the following conditions are met:

- ► The descriptor rnnDesc is invalid.
- At least one of the descriptors xDesc, yDesc, hxDesc, cxDesc, wDesc, hyDesc, and cyDesc is invalid, or have incorrect strides or dimensions.

- workSpaceSizeInBytes is too small.
- reserveSpaceSizeInBytes is too small.

CUDNN_STATUS_INVALID_VALUE

<u>cudnnSetPersistentRNNPlan()</u> was not called prior to the current function when CUDNN_RNN_ALGO_PERSIST_DYNAMIC was selected in the RNN descriptor.

```
CUDNN_STATUS_EXECUTION_FAILED
```

The function failed to launch on the GPU.

```
CUDNN STATUS ALLOC FAILED
```

The function was unable to allocate memory.

8.2.26. cudnnSetCTCLossDescriptor()

```
cudnnStatus_t cudnnSetCTCLossDescriptor(
    cudnnCTCLossDescriptor_t ctcLossDesc,
    cudnnDataType_t compType)
```

This function sets a CTC loss function descriptor. See also the extended version <u>cudnnSetCTCLossDescriptorEx()</u> to set the input normalization mode.

When the extended version <u>cudnnSetCTCLossDescriptorEx()</u> is used with normMode set to CUDNN_LOSS_NORMALIZATION_NONE and the gradMode set to CUDNN_NOT_PROPAGATE_NAN, then it is the same as the current function cudnnSetCTCLossDescriptor(), meaning:

```
cudnnSetCtcLossDescriptor(*) = cudnnSetCtcLossDescriptorEx(*,
normMode=CUDNN_LOSS_NORMALIZATION_NONE, gradMode=CUDNN_NOT_PROPAGATE_NAN)
```

Parameters

ctcLossDesc

Output. CTC loss descriptor to be set.

compType

Input. Compute type for this CTC loss function.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

```
CUDNN STATUS BAD PARAM
```

At least one of the input parameters passed is invalid.

8.2.27. cudnnSetCTCLossDescriptorEx()

```
cudnnStatus_t cudnnSetCTCLossDescriptorEx(
    cudnnCTCLossDescriptor_t ctcLossDesc,
    cudnnDataType_t compType,
    cudnnLossNormalizationMode_t normMode,
```

```
cudnnNanPropagation t gradMode)
```

This function is an extension of $\underline{\text{cudnnSetCTCLossDescriptor()}}$. This function provides an additional interface $\underline{\text{normMode}}$ to set the input normalization mode for the CTC loss function, and $\underline{\text{gradMode}}$ to control the NaN propagation type.

When this function <code>cudnnSetCTCLossDescriptorEx()</code> is used with <code>normMode set to CUDNN_LOSS_NORMALIZATION_NONE</code> and the <code>gradMode set to CUDNN_NOT_PROPAGATE_NAN</code>, then it is the same as <code>cudnnSetCTCLossDescriptor()</code>, meaning:

```
cudnnSetCtcLossDescriptor(*) = cudnnSetCtcLossDescriptorEx(*,
    normMode=CUDNN_LOSS_NORMALIZATION_NONE, gradMode=CUDNN_NOT_PROPAGATE_NAN)
```

Parameters

ctcLossDesc

Output. CTC loss descriptor to be set.

compType

Input. Compute type for this CTC loss function.

normMode

Input. Input normalization type for this CTC loss function. For more information, refer to cudnnLossNormalizationMode t.

gradMode

Input. NaN propagation type for this CTC loss function. For $\tt L$ the sequence length, $\tt R$ the number of repeated letters in the sequence, and $\tt T$ the length of sequential data, the following applies: when a sample with $\tt L+R > \tt T$ is encountered during the gradient calculation, if $\tt gradMode$ is set to $\tt CUDNN_PROPAGATE_NAN$ (refer to $\tt cudnnNanPropagation_t$), then the CTC loss function does not write to the gradient buffer for that sample. Instead, the current values, even not finite, are retained. If $\tt gradMode$ is set to $\tt CUDNN_NOT_PROPAGATE_NAN$, then the gradient for that sample is set to zero. This guarantees a finite gradient.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

```
CUDNN_STATUS_BAD_PARAM
```

At least one of the input parameters passed is invalid.

8.2.28. cudnnSetCTCLossDescriptor_v8()

```
cudnnStatus_t cudnnSetCTCLossDescriptorEx(
    cudnnCTCLossDescriptor_t ctcLossDesc,
    cudnnDataType_t compType,
    cudnnLossNormalizationMode_t normMode,
    cudnnNanPropagation_t gradMode,
    int maxLabelLength)
```

Many CTC API functions are updated in cuDNN version 8.0.0 to support CUDA graphs. In order to do so, a new parameter is needed, <code>maxLabelLength</code>. Now that label and input data are assumed to be in GPU memory, this information is not otherwise readily available.

Parameters

ctcLossDesc

Output. CTC loss descriptor to be set.

compType

Input. Compute type for this CTC loss function.

normMode

Input. Input normalization type for this CTC loss function. For more information, refer to cudnnLossNormalizationMode_t.

gradMode

Input. NaN propagation type for this CTC loss function. For $\tt L$ the sequence length, $\tt R$ the number of repeated letters in the sequence, and $\tt T$ the length of sequential data, the following applies: when a sample with $\tt L+R > T$ is encountered during the gradient calculation, if $\tt gradMode$ is set to $\tt CUDNN_PROPAGATE_NAN$ (refer to $\tt cudnnNanPropagation_t$), then the CTC loss function does not write to the gradient buffer for that sample. Instead, the current values, even not finite, are retained. If $\tt gradMode$ is set to $\tt CUDNN_NOT_PROPAGATE_NAN$, then the gradient for that sample is set to zero. This guarantees a finite gradient.

maxLabelLength

Input. The maximum label length from the labels data.

Returns

CUDNN STATUS SUCCESS

The function returned successfully.

CUDNN_STATUS_BAD_PARAM

At least one of input parameters passed is invalid.

Chapter 9. cuDNN Backend API

This chapter documents the current implemented behavior of the <code>cudnnBackend*</code> API introduced in cuDNN version 8.x. Users specify the computational case, set up an execution plan for it, and execute the computation via numerous descriptors. The typical use pattern for a descriptor with attributes consists of the following sequence of API calls:

- 1. <u>cudnnBackendCreateDescriptor()</u> creates a descriptor of a specified type.
- 2. <u>cudnnBackendSetAttribute()</u> sets the values of a settable attribute for the descriptor. All required attributes must be set before the next step.
- 3. cudnnBackendFinalize() finalizes the descriptor.
- 4. <u>cudnnBackendGetAttribute()</u> gets the values of an attribute from a finalized descriptor.

The enumeration type <u>cudnnBackendDescriptorType_t</u> enumerates the list of valid cuDNN backend descriptor types. The enumeration type <u>cudnnBackendAttributeName_t</u> enumerates the list of valid attributes. Each descriptor type in <u>cudnnBackendDescriptorType_t</u> has a disjoint subset of valid attribute values of <u>cudnnBackendAttributeName_t</u>. The full description of each descriptor type and their attributes are specified in the Backend Descriptor Types section.

9.1. Data Type References

9.1.1. Enumeration Types

9.1.1.1. cudnnBackendAttributeName_t

cudnnBackendAttributeName_t is an enumerated type that indicates the backend descriptor attributes that can be set or get using <u>cudnnBackendSetAttribute()</u> and <u>cudnnBackendGetAttribute()</u> functions. The backend descriptor to which an attribute belongs is identified by the prefix of the attribute name.

```
CUDNN_ATTR_POINTWISE_ELU_ALPHA = 6,

CUDNN_ATTR_POINTWISE_SOFTPLUS_BETA = 7,

CUDNN_ATTR_POINTWISE_SWISH_BETA = 8,

CUDNN_ATTR_POINTWISE_AYIS = 9
                                                                            = 9,
CUDNN ATTR POINTWISE AXIS
CUDNN ATTR CONVOLUTION COMP TYPE
CUDNN ATTR CONVOLUTION CONV MODE = 101,
CUDNN ATTR CONVOLUTION DILATIONS = 102,
CUDNN ATTR CONVOLUTION FILTER STRIDES = 103,
CUDNN ATTR CONVOLUTION POST PADDINGS = 104,
CUDNN ATTR CONVOLUTION PRE PADDINGS = 105,
CUDNN ATTR CONVOLUTION SPATIAL DIMS = 106,
CUDNN ATTR ENGINEHEUR MODE
CUDNN ATTR ENGINEHEUR OPERATION GRAPH = 201,
CUDNN ATTR ENGINEHEUR RESULTS = 202,
CUDNN_ATTR_ENGINECFG_ENGINE = 300,
CUDNN_ATTR_ENGINECFG_INTERMEDIATE_INFO = 301, CUDNN_ATTR_ENGINECFG_KNOB_CHOICES = 302,
CUDNN ATTR EXECUTION PLAN HANDLE
                                                                                               = 400,
CUDNN ATTR EXECUTION PLAN ENGINE CONFIG = 401,
CUDNN ATTR EXECUTION PLAN WORKSPACE SIZE = 402,
CUDNN ATTR EXECUTION PLAN COMPUTED INTERMEDIATE UIDS = 403,
CUDNN ATTR EXECUTION PLAN RUN ONLY INTERMEDIATE UIDS = 404,
CUDNN_ATTR_INTERMEDIATE_INFO_UNIQUE_ID = 500,
CUDNN_ATTR_INTERMEDIATE_INFO_SIZE = 501,
CUDNN_ATTR_INTERMEDIATE_INFO_DEPENDENT_DATA_UIDS = 502,
CUDNN_ATTR_INTERMEDIATE_INFO_DEPENDENT_ATTRIBUTES = 503,
CUDNN ATTR KNOB CHOICE KNOB TYPE = 600,
CUDNN ATTR KNOB CHOICE KNOB VALUE = 601,
CUDNN_ATTR_OPERATION_CONVOLUTION_FORWARD_ALPHA = 700,
CUDNN_ATTR_OPERATION_CONVOLUTION_FORWARD_BETA = 701,
CUDNN_ATTR_OPERATION_CONVOLUTION_FORWARD_CONV_DESC = 702,
CUDNN ATTR OPERATION CONVOLUTION FORWARD W = 703, CUDNN ATTR OPERATION CONVOLUTION FORWARD X = 704,
CUDNN_ATTR_OPERATION_CONVOLUTION_FORWARD_Y
CUDNN ATTR OPERATION CONVOLUTION FORWARD Y = 705,
CUDNN ATTR OPERATION CONVOLUTION BWD DATA ALPHA = 706,
CUDNN ATTR OPERATION CONVOLUTION BWD DATA BETA = 707,
CUDNN ATTR OPERATION CONVOLUTION BWD DATA CONV DESC = 708,
CUDNN ATTR OPERATION CONVOLUTION BWD DATA W = 709,
CUDNN ATTR OPERATION CONVOLUTION BWD DATA DX = 710,
CUDNN ATTR OPERATION CONVOLUTION BWD DATA DY = 711,
CUDNN ATTR OPERATION CONVOLUTION BWD DATA DY = 711,
                                                                                                = 705,
CUDNN ATTR OPERATION CONVOLUTION BWD FILTER ALPHA = 712, CUDNN ATTR OPERATION CONVOLUTION BWD FILTER BETA = 713,
CUDNN ATTR OPERATION CONVOLUTION BWD FILTER CONV DESC = 714, CUDNN ATTR OPERATION CONVOLUTION BWD FILTER DW = 715, CUDNN ATTR OPERATION CONVOLUTION BWD FILTER X = 716,
CUDNN ATTR OPERATION CONVOLUTION BWD FILTER DY CUDNN ATTR OPERATION POINTWISE PW DESCRIPTOR
                                                                                             = 717,
= 750,
= 751,
CUDNN ATTR OPERATION POINTWISE XDESC
CUDNN ATTR OPERATION POINTWISE BDESC
                                                                                                = 752,
CUDNN_ATTR_OPERATION_POINTWISE_YDESC
                                                                                                = 753,
                                                                                                = 754,
CUDNN_ATTR_OPERATION_POINTWISE_ALPHA1
CUDNN_ATTR_OPERATION_POINTWISE_ALPHA2
CUDNN_ATTR_OPERATION_POINTWISE_DXDESC
CUDNN_ATTR_OPERATION_POINTWISE_DYDESC
CUDNN_ATTR_OPERATION_POINTWISE_TDESC
                                                                                                = 755,
= 756,
                                                                                           = 756,
= 757,
                                                                                                = 758,
CUDNN_ATTR_OPERATION_GENSTATS_MODE = 770,
CUDNN_ATTR_OPERATION_GENSTATS_MATH_PREC = 771,
CUDNN_ATTR_OPERATION_GENSTATS_XDESC = 772,
                                                                                               = 773,
CUDNN ATTR OPERATION GENSTATS SUMDESC
```

```
CUDNN ATTR OPERATION GENSTATS SQSUMDESC = 774,
                                                                           = 781,
CUDNN ATTR OPERATION BN FINALIZE STATS MODE
CUDNN ATTR OPERATION BN FINALIZE MATH PREC
CUDNN ATTR OPERATION BN FINALIZE Y SUM DESC
CUDNN ATTR OPERATION BN FINALIZE Y SQ SUM DESC
CUDNN ATTR OPERATION BN FINALIZE SCALE DESC
CUDNN ATTR OPERATION BN FINALIZE MATH PREC
                                                                            = 782,
                                                                            = 783,
                                                                             = 784,
CUDNN ATTR OPERATION BN FINALIZE BIAS DESC = 785,
CUDNN ATTR OPERATION BN FINALIZE PREV RUNNING MEAN DESC = 786,
CUDNN ATTR OPERATION BN FINALIZE PREV RUNNING VAR DESC = 787,
CUDNN ATTR OPERATION BN FINALIZE UPDATED RUNNING MEAN DESC = 788,
CUDNN_ATTR_OPERATION_BN_FINALIZE_UPDATED_RUNNING_VAR_DESC = 789,
CUDNN ATTR OPERATION BN FINALIZE SAVED MEAN DESC = 790,
CUDNN ATTR OPERATION BN FINALIZE SAVED INV STD DESC = 791,
CUDNN ATTR OPERATION BN FINALIZE SAVED INV STD DESC
CUDNN ATTR OPERATION BN FINALIZE EQ SCALE DESC
CUDNN ATTR OPERATION BN FINALIZE EQ BIAS DESC
                                                                            = 792,
                                                                            = 793,
CUDNN_ATTR_OPERATION_BN_FINALIZE_ACCUM_COUNT_DESC
CUDNN_ATTR_OPERATION_BN_FINALIZE_EPSILON_DESC
                                                                           = 794,
                                                                             = 795,
CUDNN_ATTR_OPERATION_BN_FINALIZE_EXP AVERATE FACTOR DESC = 796,
CUDNN_ATTR_OPERATIONGRAPH_HANDLE
CUDNN_ATTR_OPERATIONGRAPH_OPS
                                                           = 801,
CUDNN ATTR OPERATIONGRAPH ENGINE GLOBAL COUNT = 802,
                                                 = 900,
CUDNN ATTR TENSOR BYTE ALIGNMENT
CUDNN_ATTR_TENSOR_DATA_TYPE
                                                 = 901,
CUDNN ATTR TENSOR DIMENSIONS
                                                  = 902,
CUDNN_ATTR_TENSOR_DIMENSIONS = 902,

CUDNN_ATTR_TENSOR_STRIDES = 903,

CUDNN_ATTR_TENSOR_VECTOR_COUNT = 904,

CUDNN_ATTR_TENSOR_VECTORIZED_DIMENSION = 905,
CUDNN ATTR TENSOR VECTORIZED DIMENSION = 905,

CUDNN ATTR TENSOR UNIQUE ID = 906,

CUDNN ATTR TENSOR IS VIRTUAL = 907,

CUDNN ATTR TENSOR IS BY VALUE = 908,
                                                  = 909,
CUDNN ATTR TENSOR REORDERING MODE
CUDNN ATTR VARIANT PACK UNIQUE IDS = 1000,
CUDNN ATTR VARIANT PACK DATA POINTERS = 1001,
CUDNN_ATTR_VARIANT_PACK_INTERMEDIATES = 1002,
CUDNN ATTR VARIANT PACK WORKSPACE
CUDNN ATTR LAYOUT INFO TENSOR UID = 1100,
CUDNN_ATTR_LAYOUT_INFO_TYPES = 1101,
CUDNN_ATTR_KNOB_INFO_TYPE
                                             = 1200.
CUDNN ATTR KNOB INFO MAXIMUM VALUE = 1201,
CUDNN ATTR KNOB INFO MINIMUM VALUE = 1202,
CUDNN_ATTR_KNOB_INFO_STRIDE
CUDNN_ATTR_ENGINE_OPERATION_GRAPH = 1300,
CUDNN_ATTR_ENGINE_GLOBAL_INDEX = 1301,
CUDNN_ATTR_ENGINE_KNOB_INFO = 1302,
CUDNN ATTR ENGINE NUMERICAL NOTE = 1303,
CUDNN ATTR ENGINE LAYOUT INFO = 1304,
CUDNN_ATTR_ENGINE_BEHAVIOR_NOTE = 1305,
CUDNN_ATTR_MATMUL_COMP_TYPE
                                          = 1500,
CUDNN ATTR OPERATION MATMUL ADESC
                                                                              = 1520,
CUDNN ATTR OPERATION MATMUL BDESC
                                                                               = 1521,
CUDNN_ATTR_OPERATION_MATMUL_CDESC
                                                                               = 1522,
CUDNN ATTR OPERATION MATMUL DESC
                                                                              = 1523,
CUDNN ATTR OPERATION MATMUL IRREGULARLY STRIDED BATCH COUNT = 1524,
CUDNN ATTR REDUCTION OPERATOR = 1600,
CUDNN_ATTR_REDUCTION_COMP_TYPE = 1601,
CUDNN ATTR OPERATION REDUCTION XDESC = 1610,
```

```
CUDNN ATTR OPERATION REDUCTION YDESC = 1611,
CUDNN ATTR OPERATION REDUCTION DESC = 1612,
CUDNN ATTR OPERATION BN BWD WEIGHTS MATH PREC
                                                           = 1620,
CUDNN ATTR OPERATION BN BWD WEIGHTS MEAN DESC = 1621, CUDNN ATTR OPERATION BN BWD WEIGHTS INVSTD DESC = 1622,
CUDNN ATTR OPERATION BN BWD WEIGHTS BN SCALE DESC
                                                           = 1623,
CUDNN ATTR OPERATION BN BWD WEIGHTS X DESC = 1624, CUDNN ATTR OPERATION BN BWD WEIGHTS DY DESC = 1625,
CUDNN ATTR OPERATION BN BWD WEIGHTS DBN SCALE DESC
                                                          = 1626,
CUDNN ATTR OPERATION BN BWD WEIGHTS DBN BIAS DESC = 1627,
CUDNN ATTR OPERATION BN BWD WEIGHTS EQ DY SCALE DESC = 1628,
CUDNN_ATTR_OPERATION_BN_BWD_WEIGHTS_EQ_X_SCALE_DESC = 1629,
CUDNN ATTR OPERATION BN BWD WEIGHTS EQ BIAS
CUDNN ATTR RESAMPLE MODE
                                       = 1700,
CUDNN ATTR RESAMPLE MODE = 1700,
CUDNN ATTR RESAMPLE COMP TYPE = 1701,
CUDNN ATTR RESAMPLE SPATIAL DIMS = 1702,
CUDNN ATTR RESAMPLE POST PADDINGS = 1703,
CUDNN ATTR RESAMPLE PRE PADDINGS = 1704,
CUDNN ATTR RESAMPLE STRIDES
                                       = 1705,
CUDNN_ATTR_RESAMPLE WINDOW DIMS = 1706,
CUDNN_ATTR_RESAMPLE_NAN_PROPAGATION = 1707,
CUDNN ATTR RESAMPLE PADDING MODE = 1708,
CUDNN ATTR OPERATION RESAMPLE FWD XDESC
                                              = 1710,
CUDNN ATTR OPERATION RESAMPLE FWD YDESC = 1711,
CUDNN_ATTR_OPERATION_RESAMPLE_FWD_IDXDESC = 1712,
CUDNN_ATTR_OPERATION_RESAMPLE_FWD_ALPHA = 1713,
CUDNN_ATTR_OPERATION_RESAMPLE_FWD_BETA = 1714,
CUDNN_ATTR_OPERATION_RESAMPLE_FWD_DESC = 1716,
CUDNN_ATTR_OPERATION_RESAMPLE_BWD_DXDESC = 1720,
CUDNN_ATTR_OPERATION_RESAMPLE_BWD_DYDESC = 1721,
CUDNN ATTR OPERATION RESAMPLE BWD IDXDESC = 1722,
CUDNN ATTR OPERATION RESAMPLE BWD ALPHA = 1723,
CUDNN ATTR OPERATION RESAMPLE BWD BETA = 1724,
CUDNN ATTR OPERATION RESAMPLE BWD DESC = 1725,
CUDNN ATTR OPERATION CONCAT AXIS
                                               = 1800,
CUDNN_ATTR_OPERATION_CONCAT_INPUT_DESCS = 1801,
CUDNN ATTR OPERATION CONCAT INPLACE INDEX = 1802,
CUDNN_ATTR_OPERATION_CONCAT_OUTPUT_DESC = 1803,
CUDNN ATTR OPERATION SIGNAL MODE
CUDNN ATTR OPERATION SIGNAL FLAGDESC = 1901,
CUDNN_ATTR_OPERATION_SIGNAL_VALUE = 1902,
                                         = 1903,
CUDNN ATTR OPERATION SIGNAL XDESC
                                         = 1904,
CUDNN ATTR OPERATION SIGNAL YDESC
                                                             = 2000.
CUDNN ATTR OPERATION NORM FWD MODE
CUDNN ATTR OPERATION NORM FWD PHASE
                                                             = 2001,
CUDNN_ATTR_OPERATION_NORM_FWD_XDESC
                                                              = 2002,
CUDNN_ATTR_OPERATION_NORM_FWD_MEAN_DESC
                                                             = 2003,
= 2004,
CUDNN ATTR OPERATION NORM FWD INV VARIANCE DESC
CUDNN ATTR OPERATION NORM FWD SCALE DESC
                                                              = 2005,
CUDNN ATTR OPERATION NORM FWD BIAS DESC
CUDNN ATTR OPERATION NORM FWD EPSILON DESC
                                                             = 2007,
CUDNN ATTR OPERATION NORM FWD EXP AVG FACTOR DESC
                                                              = 2008,
CUDNN_ATTR_OPERATION_NORM_FWD_INPUT_RUNNING_MEAN_DESC = 2009, CUDNN_ATTR_OPERATION_NORM_FWD_INPUT_RUNNING_VAR_DESC = 2010,
CUDNN ATTR OPERATION NORM FWD OUTPUT RUNNING MEAN DESC = 2011,
CUDNN ATTR OPERATION NORM FWD OUTPUT RUNNING VAR DESC = 2012,
CUDNN ATTR OPERATION NORM FWD YDESC
                                                              = 2013,
CUDNN_ATTR_OPERATION_NORM_FWD_PEER_STAT_DESCS
                                                               = 2014,
CUDNN_ATTR_OPERATION_NORM_BWD_MODE = 2100,
```

```
CUDNN ATTR OPERATION NORM BWD XDESC = 2101,
CUDNN ATTR OPERATION NORM BWD MEAN DESC = 2102,
CUDNN ATTR OPERATION NORM BWD INV VARIANCE DESC = 2103,
CUDNN ATTR OPERATION NORM BWD DYDESC = 2104,
CUDNN ATTR OPERATION NORM BWD SCALE DESC = 2105,
CUDNN ATTR OPERATION NORM BWD EPSILON DESC = 2106,
CUDNN ATTR OPERATION NORM BWD DSCALE DESC = 2107,
CUDNN ATTR OPERATION NORM BWD DBIAS DESC = 2108,
CUDNN ATTR OPERATION NORM BWD DDIAS DESC = 2109,
CUDNN ATTR OPERATION NORM BWD DXDESC = 2109,
CUDNN ATTR OPERATION NORM BWD PEER STAT DESCS = 2110,
} cudnnBackendAttributeName t;
```

9.1.1.2. cudnnBackendAttributeType t

```
typedef enum {
    CUDNN TYPE HANDLE = 0,
    CUDNN TYPE DATA TYPE,
    CUDNN TYPE BOOLEAN,
    CUDNN TYPE INT64,
    CUDNN_TYPE_FLOAT, CUDNN_TYPE_DOUBLE,
    CUDNN TYPE VOID PTR,
    CUDNN TYPE CONVOLUTION MODE,
    CUDNN TYPE HEUR MODE,
    CUDNN_TYPE_KNOB_TYPE,
    CUDNN_TYPE_NAN_PROPOGATION, CUDNN_TYPE_NUMERICAL_NOTE,
    CUDNN TYPE LAYOUT TYPE,
    CUDNN TYPE ATTRIB NAME,
    CUDNN_TYPE_POINTWISE_MODE,
    CUDNN_TYPE_BACKEND_DESCRIPTOR, CUDNN_TYPE_GENSTATS_MODE,
    CUDNN TYPE BN FINALIZE STATS MODE,
    CUDNN TYPE REDUCTION OPERATOR TYPE,
    CUDNN_TYPE_BEHAVIOR_NOTE,
    CUDNN TYPE TENSOR REORDERING MODE, CUDNN TYPE RESAMPLE MODE,
    CUDNN TYPE PADDING MODE,
    CUDNN TYPE INT32,
    CUDNN TYPE CHAR,
    CUDNN_TYPE_SIGNAL_MODE, CUDNN_TYPE_FRACTION,
    CUDNN TYPE NORM MODE,
    CUDNN TYPE NORM FWD PHASE,
} cudnnBackendAttributeType t;
```

The enumeration type <code>cudnnBackendAttributeType_t</code> specifies the data type of an attribute of a cuDNN backend descriptor. It is used to specify the type of data pointed to by the <code>void *arrayOfElements</code> argument of <code>cudnnBackendSetAttribute()</code> and <code>cudnnBackendGetAttribute()</code>.

Table 47. The Attribute Types of cudnnBackendAttributeType_t.

cudnnBackendAttributeType_t	Attribute type
CUDNN_TYPE_HANDLE	<u>cudnnHandle_t</u>
CUDNN_TYPE_DATA_TYPE	<u>cudnnDataType_t</u>
CUDNN_TYPE_BOOLEAN	bool
CUDNN_TYPE_INT64	int64_t
CUDNN_TYPE_FLOAT	float

cudnnBackendAttributeType_t	Attribute type
CUDNN_TYPE_DOUBLE	double
CUDNN_TYPE_VOID_PTR	void *
CUDNN_TYPE_CONVOLUTION_MODE	<u>cudnnConvolutionMode_t</u>
CUDNN_TYPE_HEUR_MODE	<u>cudnnBackendHeurMode</u> t
CUDNN_TYPE_KNOB_TYPE	<pre>cudnnBackendKnobType_t</pre>
CUDNN_TYPE_NAN_PROPOGATION	cudnnNanPropagation_t
CUDNN_TYPE_NUMERICAL_NOTE	cudnnBackendNumericalNote_t
CUDNN_TYPE_LAYOUT_TYPE	<u>cudnnBackendLayoutType_t</u>
CUDNN_TYPE_ATTRIB_NAME	<u>cudnnBackendAttributeName_t</u>
CUDNN_TYPE_POINTWISE_MODE	<u>cudnnPointwiseMode_t</u>
CUDNN_TYPE_BACKEND_DESCRIPTOR	<u>cudnnBackendDescriptor_t</u>
CUDNN_TYPE_GENSTATS_MODE	cudnnGenStatsMode_t
CUDNN_TYPE_BN_FINALIZE_STATS_MODE	<u>cudnnBnFinalizeStatsMode_t</u>
CUDNN_TYPE_REDUCTION_OPERATOR_TYPE	<u>cudnnReduceTensorOp_t</u>
CUDNN_TYPE_BEHAVIOR_NOTE	<u>cudnnBackendBehaviorNote_t</u>
CUDNN_TYPE_TENSOR_REORDERING_MODE	<u>cudnnBackendTensorReordering_t</u>
CUDNN_TYPE_RESAMPLE_MODE	<u>cudnnResampleMode_t</u>
CUDNN_TYPE_PADDING_MODE	<u>cudnnPaddingMode_t</u>
CUDNN_TYPE_INT32	int32_t
CUDNN_TYPE_CHAR	char
CUDNN_TYPE_SIGNAL_MODE	cudnnSignalMode_t
CUDNN_TYPE_FRACTION	<u>cudnnFraction_t</u>
CUDNN_TYPE_NORM_MODE	<u>cudnnBackendNormMode_t</u>
CUDNN_TYPE_NORM_FWD_PHASE	<u>cudnnBackendNormFwdPhase_t</u>

9.1.1.3. cudnnBackendBehaviorNote_t

cudnnBackendBehaviorNote_t is an enumerated type that indicates queryable behavior notes of an engine. Users can query for an array of behavior notes from an CUDNN_BACKEND_ENGINE_DESC using the <u>cudnnBackendGetAttribute()</u> function.

9.1.1.4. cudnnBackendDescriptorType_t

cudnnBackendDescriptor_t is an enumerated type that indicates the type of backend descriptors. Users create a backend descriptor of a particular type by passing a value from this enumerate to the cudnnBackendCreateDescriptor() function.

```
typedef enum {
   CUDNN_BACKEND_POINTWISE_DESCRIPTOR = 0,
```

```
CUDNN BACKEND CONVOLUTION DESCRIPTOR,
     CUDNN_BACKEND_ENGINE_DESCRIPTOR,
    CUDNN_BACKEND_ENGINECFG_DESCRIPTOR, CUDNN_BACKEND_ENGINEHEUR_DESCRIPTOR,
    CUDNN BACKEND EXECUTION PLAN DESCRIPTOR,
     CUDNN BACKEND INTERMEDIATE INFO DESCRIPTOR,
    CUDNN_BACKEND_KNOB_CHOICE_DESCRIPTOR,
    CUDNN_BACKEND_KNOB_INFO_DESCRIPTOR,
CUDNN_BACKEND_LAYOUT_INFO_DESCRIPTOR,
    CUDNN BACKEND OPERATION CONVOLUTION FORWARD DESCRIPTOR,
     CUDNN BACKEND OPERATION CONVOLUTION BACKWARD FILTER DESCRIPTOR,
     CUDNN BACKEND OPERATION CONVOLUTION BACKWARD DATA DESCRIPTOR,
    CUDNN_BACKEND_OPERATION_POINTWISE_DESCRIPTOR, CUDNN_BACKEND_OPERATION_GEN_STATS_DESCRIPTOR, CUDNN_BACKEND_OPERATIONGRAPH_DESCRIPTOR,
     CUDNN BACKEND VARIANT PACK DESCRIPTOR,
     CUDNN BACKEND TENSOR DESCRIPTOR,
    CUDNN_BACKEND_MATMUL_DESCRIPTOR,
    CUDNN_BACKEND_OPERATION_MATMUL_DESCRIPTOR,
CUDNN_BACKEND_OPERATION_BN_FINALIZE_STATISTICS_DESCRIPTOR,
     CUDNN BACKEND REDUCTION DESCRIPTOR,
     CUDNN BACKEND OPERATION REDUCTION DESCRIPTOR,
     CUDNN_BACKEND_OPERATION_BN_BWD_WEIGHTS_DESCRIPTOR,
    CUDNN_BACKEND_RESAMPLE_DESCRIPTOR,
CUDNN_BACKEND_OPERATION_RESAMPLE_FWD_DESCRIPTOR,
    CUDNN BACKEND OPERATION RESAMPLE BWD DESCRIPTOR,
     CUDNN BACKEND OPERATION CONCAT DESCRIPTOR,
     CUDNN_BACKEND_OPERATION_SIGNAL_DESCRIPTOR,
    CUDNN_BACKEND_OPERATION_NORM_FORWARD_DESCRIPTOR, CUDNN_BACKEND_OPERATION_NORM_BACKWARD_DESCRIPTOR,
} cudnnBackendDescriptorType t;
```

9.1.1.5. cudnnBackendHeurMode_t

cudnnBackendHeurMode_t is an enumerated type that indicates the operation mode of a CUDNN_BACKEND_ENGINE_HEUR_DESCRIPTOR.

```
typedef enum {
   CUDNN_HEUR_MODE_INSTANT = 0,
   CUDNN_HEUR_MODE_B = 1,
   CUDNN_HEUR_MODE_FALLBACK = 2,
   CUDNN_HEUR_MODE_A = 3
}
```

Values

CUDNN HEUR MODE A & CUDNN HEUR MODE INSTANT

CUDNN_HEUR_MODE_A provides the exact same functionality as CUDNN_HEUR_MODE_INSTANT. The purpose of this renaming is to better match the naming of CUDNN_HEUR_MODE_B. Consider the use of CUDNN_HEUR_MODE_INSTANT as deprecated; instead, use CUDNN_HEUR_MODE_A.

CUDNN_HEUR_MODE_A utilizes a decision tree heuristic which provides optimal inference time on the CPU in comparison to CUDNN HEUR MODE B.

CUDNN_HEUR_MODE_B

Can utilize the neural net based heuristics to improve generalization performance compared to <code>CUDNN_HEUR_MODE_INSTANT</code>. In cases where the neural net is utilized, inference time on the CPU will be increased by 10-100x compared to

CUDNN_HEUR_MODE_INSTANT. These neural net heuristics are not supported for any of the following cases:

- 3-D convolutions
- Grouped convolutions (groupCount larger than 1)
- Dilated convolutions (any dilation for any spatial dimension larger than 1)

Further, the neural net is only enabled on x86 platforms when cuDNN is run on an A100 GPU. In cases where the neural net is not supported, <code>cudnn_heur_mode_b</code> will also fall back to <code>cudnn_heur_mode_instant</code>. <code>cudnn_heur_mode_b</code> will fall back to <code>cudnn_heur_mode_instant</code> in cases where the overhead of <code>cudnn_heur_mode_b</code> is projected to reduce overall network performance.

CUDNN HEUR MODE FALLBACK

This heuristic mode is intended to be used for finding fallback options which provide functional support (without any expectation of providing optimal GPU performance).

9.1.1.6. cudnnBackendKnobType t

cudnnBackendKnobType_t is an enumerated type that indicates the type of performance knobs. Performance knobs are runtime settings to an engine that will affect its performance. Users can query for an array of performance knobs and their valid value range from a CUDNN_BACKEND_ENGINE_DESCRIPTOR using the cudnnBackendGetAttribute() function. Users can set the choice for each knob using the cudnnBackendSetAttribute() function with a CUDNN_BACKEND_KNOB_CHOICE_DESCRIPTOR descriptor.

```
CUDNN KNOB_TYPE_SPLIT_K = 0,
CUDNN KNOB_TYPE_SNIZZE = 1,
CUDNN_KNOB_TYPE_TILE_SIZE = 2,
CUDNN_KNOB_TYPE_USE_TEX = 3,
CUDNN_KNOB_TYPE_EDGE = 4,
CUDNN_KNOB_TYPE_EDGE = 4,
CUDNN_KNOB_TYPE_LOGA = 6,
CUDNN_KNOB_TYPE_LOGA = 6,
CUDNN_KNOB_TYPE_LOGB = 7,
CUDNN_KNOB_TYPE_LOGB = 7,
CUDNN_KNOB_TYPE_LOGB = 7,
CUDNN_KNOB_TYPE_SPLIT_H = 9,
CUDNN_KNOB_TYPE_SPLIT_H = 9,
CUDNN_KNOB_TYPE_SPLIT_K = 10,
CUDNN_KNOB_TYPE_SPLIT_K = 11,
CUDNN_KNOB_TYPE_SPLIT_K BUF = 12,
CUDNN_KNOB_TYPE_SPLIT_K BUF = 12,
CUDNN_KNOB_TYPE_STAGES = 14,
CUDNN_KNOB_TYPE_STAGES = 14,
CUDNN_KNOB_TYPE_STAGES = 14,
CUDNN_KNOB_TYPE_SPLIT_K MODE = 15,
CUDNN_KNOB_TYPE_SPLIT_K SIC = 17,
CUDNN_KNOB_TYPE_SPLIT_K SIC = 17,
CUDNN_KNOB_TYPE_SPLIT_K SIC = 17,
CUDNN_KNOB_TYPE_SPLIT_K SIC = 18,
CUDNN_KNOB_TYPE_SPLIT_K SIC = 19,
CUDNN_KNOB_TYPE_SPLIT_K SIC = 19,
CUDNN_KNOB_TYPE_SPLIT_K SIC = 20,
CUDNN_KNOB_TYPE_SPLIT_K SIC = 21,
CUDNN_KNOB_TYPE_SPLIT_K = 22,
CUDNN_KNOB_TYPE_SPLIT_K = 21,
CUDNN_KNOB_TYPE_SPLIT_K = 22,
CUDNN_KNOB_TYPE_LOGC = 22,
CUDNN_KNOB_TYPE_LOGC = 22,
CUDNN_KNOB_TYPE_LOGC = 22,
CUDNN_KNOB_TYPE_KERNEL_CFG = 24,
CUDNN_KNOB_TYPE_WORKSPACE = 25,
CUDNN_KNOB_TYPE_WORKSPACE = 25,
CUDNN_KNOB_TYPE_WORKSPACE = 25,
CUDNN_KNOB_TYPE_COUNTS = 26,
}
CUDNN_KNOB_TYPE_COUNTS = 26,
}
```

9.1.1.7. cudnnBackendLayoutType_t

cudnnBackendLayoutType_t is an enumerated type that indicates queryable layout requirements of an engine. Users can query for layout requirements from a CUDNN_BACKEND_ENGINE_DESC descriptor using the <u>cudnnBackendGetAttribute()</u> function.

```
typedef enum {
    CUDNN_LAYOUT_TYPE_PREFERRED_NCHW = 0,
    CUDNN_LAYOUT_TYPE_PREFERRED_NHWC = 1,
    CUDNN_LAYOUT_TYPE_PREFERRED_PAD4CK = 2,
    CUDNN_LAYOUT_TYPE_PREFERRED_PAD8CK = 3,
    CUDNN_LAYOUT_TYPE_COUNT = 4,
} cudnnBackendLayoutType t;
```

9.1.1.8. cudnnBackendNormFwdPhase t

cudnnBackendNormFwdPhase_t is an enumerated type used to distinguish the inference and training phase of the normalization forward operation.

```
typedef enum {
    CUDNN_NORM_FWD_INFERENCE = 0,
    CUDNN_NORM_FWD_TRAINING = 1,
} cudnnBackendNormFwdPhase t;
```

9.1.1.9. cudnnBackendNormMode_t

cudnnBackendNormMode_t is an enumerated type to indicate the normalization mode in the backend normalization forward and normalization backward operations.

```
typedef enum {
    CUDNN_LAYER_NORM = 0,
    CUDNN_INSTANCE_NORM = 1,
    CUDNN_BATCH_NORM = 2,
    CUDNN_GROUP_NORM = 3,
} cudnnBackendNormMode t;
```

9.1.1.10. cudnnBackendNumericalNote_t

cudnnBackendNumericalNot_t is an enumerated type that indicates queryable numerical properties of an engine. Users can query for an array of numerical notes from an CUDNN BACKEND ENGINE DESC using the cudnnBackendGetAttribute() function.

```
typedef enum {
    CUDNN_NUMERICAL_NOTE_TENSOR_CORE = 0,
    CUDNN_NUMERICAL_NOTE_DOWN_CONVERT_INPUTS,
    CUDNN_NUMERICAL_NOTE_REDUCED_PRECISION_REDUCTION,
    CUDNN_NUMERICAL_NOTE_FFT,
    CUDNN_NUMERICAL_NOTE_MONDETERMINISTIC,
    CUDNN_NUMERICAL_NOTE_WINOGRAD,
    CUDNN_NUMERICAL_NOTE_TYPE_COUNT
    CUDNN_NUMERICAL_NOTE_WINOGRAD_TILE_4x4,
    CUDNN_NUMERICAL_NOTE_WINOGRAD_TILE_6x6,
    CUDNN_NUMERICAL_NOTE_WINOGRAD_TILE_13x13,
    CUDNN_NUMERICAL_NOTE_TYPE_COUNT,
} cudnnBackendNumericalNote_t;
```

9.1.1.11. cudnnBackendTensorReordering t

cudnnBackendTensorReordering_t is an enumerated type that indicates tensor reordering as a property of the tensor descriptor. Users can get and set this property in a CUDNN_BACKEND_TENSOR_DESCRIPTOR via <u>cudnnBackendSetAttribute()</u> and cudnnBackendGetAttribute() functions.

```
typedef enum {
    CUDNN_TENSOR_REORDERING_NONE = 0,
    CUDNN_TENSOR_REORDERING_INT8x32 = 1,
} cudnnBackendTensorReordering_t;
```

9.1.1.12. cudnnBnFinalizeStatsMode t

cudnnBnFinalizeStatsMode_t is an enumerated type that exposes the different mathematical operation modes that converts batchnorm statistics and the trained scale and bias to the equivalent scale and bias to be applied in the next normalization stage for inference and training use cases.

```
typedef enum {
    CUDNN_BN_FINALIZE_STATISTICS_TRAINING = 0,
    CUDNN_BN_FINALIZE_STATISTICS_INFERENCE = 1,
} cudnnBnFinalizeStatsMode t;
```

Table 48.

BN Statistics Mode	Description
CUDNN_BN_FINALIZE_STATISTICS_TRAINING	Computes the equivalent scale and bias from ySum, ySqSum and learned scale, bias.
	Optionally, update running statistics and generate saved stats for interoperability with cudnnBatchNormalizationBackward(), cudnnBatchNormalizationBackwardEx(), Or cudnnNormalizationBackward().
CUDNN_BN_FINALIZE_STATISTICS_INFERENCE	Computes the equivalent scale and bias from the learned running statistics and the learned scale, bias.

9.1.1.13. cudnnGenStatsMode_t

cudnnGenStatsMode_t is an enumerated type to indicate the statistics mode in the backend statistics generation operation.

Values

CUDNN_GENSTATS_SUM_SQSUM

In this mode, the sum and sum of squares of the input tensor along the specified dimensions are computed and written out. The reduction dimensions currently supported are limited per channel, however additional support may be added upon request.

9.1.1.14. cudnnPaddingMode t

<code>cudnnPaddingMode_t</code> is an enumerated type to indicate the padding mode in the backend resample operations.

```
typedef enum {
    CUDNN_ZERO_PAD = 0,
    CUDNN_NEG_INF_PAD = 1,
    CUDNN_EDGE_VAL_PAD = 2,
} cudnnPaddingMode_t;
```

9.1.1.15. cudnnPointwiseMode t

<code>cudnnPointwiseMode_t</code> is an enumerated type to indicate the intended pointwise math operation in the backend pointwise operation descriptor.

Values

CUDNN POINTWISE ADD

In this mode, a pointwise addition between two tensors is computed.

CUDNN_POINTWISE_ADD_SQUARE

In this mode, a pointwise addition between the first tensor and the square of the second tensor is computed.

CUDNN POINTWISE DIV

In this mode, a pointwise true division of the first tensor by second tensor is computed.

CUDNN POINTWISE MAX

In this mode, a pointwise maximum is taken between two tensors.

CUDNN POINTWISE MIN

In this mode, a pointwise minimum is taken between two tensors.

CUDNN POINTWISE MOD

In this mode, a pointwise floating-point remainder of the first tensor's division by the second tensor is computed.

CUDNN POINTWISE MUL

In this mode, a pointwise multiplication between two tensors is computed.

CUDNN POINTWISE POW

In this mode, a pointwise value from the first tensor to the power of the second tensor is computed.

CUDNN POINTWISE SUB

In this mode, a pointwise subtraction between two tensors is computed.

CUDNN POINTWISE ABS

In this mode, a pointwise absolute value of the input tensor is computed.

CUDNN POINTWISE CEIL

In this mode, a pointwise ceiling of the input tensor is computed.

CUDNN POINTWISE COS

In this mode, a pointwise trigonometric cosine of the input tensor is computed.

CUDNN POINTWISE EXP

In this mode, a pointwise exponential of the input tensor is computed.

CUDNN POINTWISE FLOOR

In this mode, a pointwise floor of the input tensor is computed.

CUDNN POINTWISE LOG

In this mode, a pointwise natural logarithm of the input tensor is computed.

CUDNN POINTWISE NEG

In this mode, a pointwise numerical negative of the input tensor is computed.

CUDNN POINTWISE RSQRT

In this mode, a pointwise reciprocal of the square root of the input tensor is computed.

CUDNN POINTWISE SIN

In this mode, a pointwise trigonometric sine of the input tensor is computed.

CUDNN POINTWISE SQRT

In this mode, a pointwise square root of the input tensor is computed.

CUDNN POINTWISE TAN

In this mode, a pointwise trigonometric tangent of the input tensor is computed.

CUDNN POINTWISE ERF

In this mode, a pointwise Error Function is computed.

CUDNN POINTWISE IDENTITY

In this mode, no computation is performed. As with other pointwise modes, this mode provides implicit conversions by specifying the data type of the input tensor as one type, and the data type of the output tensor as another.

CUDNN POINTWISE RELU FWD

In this mode, a pointwise rectified linear activation function of the input tensor is computed.

CUDNN POINTWISE TANH FWD

In this mode, a pointwise tanh activation function of the input tensor is computed.

CUDNN POINTWISE SIGMOID FWD

In this mode, a pointwise sigmoid activation function of the input tensor is computed.

CUDNN POINTWISE ELU FWD

In this mode, a pointwise Exponential Linear Unit activation function of the input tensor is computed.

CUDNN POINTWISE GELU FWD

In this mode, a pointwise Gaussian Error Linear Unit activation function of the input tensor is computed.

CUDNN POINTWISE SOFTPLUS FWD

In this mode, a pointwise softplus activation function of the input tensor is computed.

CUDNN POINTWISE SWISH FWD

In this mode, a pointwise swish activation function of the input tensor is computed.

CUDNN POINTWISE GELU APPROX TANH FWD

In this mode, a pointwise tanh approximation of the Gaussian Error Linear Unit activation function of the input tensor is computed. The tanh GELU approximation is computed as $0.5x\left(1+\tanh\left[\sqrt{2/\pi}\left(x+0.044715x^3\right)\right]\right)$

For more information, refer to the GAUSSIAN ERROR LINEAR UNIT (GELUS) paper.

CUDNN POINTWISE RELU BWD

In this mode, a pointwise first derivative of rectified linear activation of the input tensor is computed.

CUDNN POINTWISE TANH BWD

In this mode, a pointwise first derivative of tanh activation of the input tensor is computed.

CUDNN POINTWISE SIGMOID BWD

In this mode, a pointwise first derivative of sigmoid activation of the input tensor is computed.

CUDNN POINTWISE ELU BWD

In this mode, a pointwise first derivative of Exponential Linear Unit activation of the input tensor is computed.

CUDNN POINTWISE GELU BWD

In this mode, a pointwise first derivative of Gaussian Error Linear Unit activation of the input tensor is computed.

CUDNN POINTWISE SOFTPLUS BWD

In this mode, a pointwise first derivative of softplus activation of the input tensor is computed.

CUDNN_POINTWISE_SWISH_BWD

In this mode, a pointwise first derivative of swish activation of the input tensor is computed.

CUDNN POINTWISE GELU APPROX TANH BWD

In this mode, a pointwise first derivative of the tanh approximation of the Gaussian Error Linear Unit activation of the input tensor is computed. This is computed as

0.5 (1+tanh (b (x+cx³)) + bxsech² (b (cx³+x))(3cx²+1)) dy where b is $\sqrt{\frac{2}{\pi}}$ and c is 0.044715.

CUDNN POINTWISE CMP EQ

In this mode, a pointwise truth value of the first tensor equal to the second tensor is computed.

CUDNN POINTWISE CMP NEQ

In this mode, a pointwise truth value of the first tensor not equal to the second tensor is computed.

CUDNN POINTWISE CMP GT

In this mode, a pointwise truth value of the first tensor greater than the second tensor is computed.

CUDNN POINTWISE CMP GE

In this mode, a pointwise truth value of the first tensor greater than equal to the second tensor is computed.

CUDNN POINTWISE CMP LT

In this mode, a pointwise truth value of the first tensor less than the second tensor is computed.

CUDNN POINTWISE CMP LE

In this mode, a pointwise truth value of the first tensor less than equal to the second tensor is computed.

CUDNN POINTWISE LOGICAL AND

In this mode, a pointwise truth value of the first tensor logical AND second tensor is computed.

CUDNN POINTWISE LOGICAL OR

In this mode, a pointwise truth value of the first tensor logical OR second tensor is computed.

CUDNN POINTWISE LOGICAL NOT

In this mode, a pointwise truth value of input tensor's logical NOT is computed.

CUDNN POINTWISE GEN INDEX

In this mode, a pointwise index value of the input tensor is generated along a given axis.

CUDNN POINTWISE BINARY SELECT

In this mode, a pointwise value is selected amongst two input tensors based on a given predicate tensor.

9.1.1.16. cudnnResampleMode_t

 ${\tt cudnnResampleMode_t} \ is \ an \ enumerated \ type \ to \ indicate \ the \ resample \ mode \ in \ the \ backend \ resample \ operations.$

```
typedef enum {
    CUDNN_RESAMPLE_NEAREST = 0,
    CUDNN_RESAMPLE_BILINEAR = 1,
    CUDNN_RESAMPLE_AVGPOOL = 2,
    CUDNN_RESAMPLE_MAXPOOL = 3,
} cudnnResampleMode t;
```

9.1.1.17. cudnnSignalMode t

cudnnSignalMode_t is an enumerated type to indicate the signaling mode in the backend signal operation.

```
typedef enum {
    CUDNN_SIGNAL_SET = 0,
    CUDNN_SIGNAL_WAIT = 1,
} cudnnSignalMode_t;
```

Values

CUDNN SIGNAL SET

In this mode, the flag variable is updated with the provided signal value atomically.

CUDNN SIGNAL WAIT

In this mode, the operation blocks until the flag variable keeps comparing equal to the provided signal value.

9.1.1.18. cudnnFraction t

cudnnFraction_t is a structure that allows a user to define int64_t fractions.

```
typedef struct cudnnFractionStruct {
   int64_t numerator;
   int64_t denominator;
} cudnnFraction_t;
```

9.1.2. Data Types Found In cudnn backend.h

9.1.2.1. cudnnBackendDescriptor_t

cudnnBackendDescriptor_t is a typedef void pointer to one of many opaque descriptor structures. The type of structure that it points to is determined by the argument when allocating the memory for the opaque structure using <u>cudnnBackendCreateDescriptor()</u>.

Attributes of a descriptor can be set using <u>cudnnBackendSetAttribute()</u>. After all required attributes of a descriptor are set, the descriptor can be finalized by <u>cudnnBackendFinalize()</u>. From a finalized descriptor, one can query its queryable attributes using <u>cudnnBackendGetAttribute()</u>. Finally, the memory allocated for a descriptor can be freed using <u>cudnnBackendDestroyDescriptor()</u>.

9.2. API Functions

9.2.1. cudnnBackendCreateDescriptor()

cudnnStatus_t cudnnBackendCreateDescriptor(cudnnBackendDescriptorType_t
descriptorType, cudnnBackendDescriptor_t *descriptor)

This function allocates memory:

- ▶ in the descriptor for a given descriptor type
- at the location pointed by the descriptor



Note: The cudnnBackendDescriptor t is a pointer to void *.

Parameters

descriptorType

Input. One among the enumerated <u>cudnnBackendDescriptorType_t</u>.

descriptor

Input. Pointer to an instance of <u>cudnnBackendDescriptor_t</u> to be created.

Returns

CUDNN STATUS SUCCESS

The creation was successful.

CUDNN_STATUS_NOT_SUPPORTED

Creating a descriptor of a given type is not supported.

CUDNN_STATUS_ALLOC_FAILED

The memory allocation failed.

Additional return values depend on the arguments used as explained in the <u>cuDNN</u> Backend API.

9.2.2. cudnnBackendDestroyDescriptor()

cudnnStatus_t cudnnBackendDestroyDescriptor(cudnnBackendDescriptor_tdescriptor)

This function destroys instances of <u>cudnnBackendDescriptor_t</u> that were previously created using <u>cudnnBackendCreateDescriptor()</u>.

Parameters

descriptor

Input. Instance of <u>cudnnBackendDescriptor</u> <u>t</u> previously created by <u>cudnnBackendCreateDescriptor()</u>.

Returns

CUDNN STATUS SUCCESS

The memory was destroyed successfully.

CUDNN_STATUS_ALLOC_FAILED

The destruction of memory failed.

Undefined Behavior

The descriptor was altered between the Create and Destroy Descriptor.

Undefined

The value pointed by the descriptor will be Undefined after the memory is free and done.

Additional return values depend on the arguments used as explained in the <u>cuDNN</u> Backend API.

9.2.3. cudnnBackendExecute()

cudnnStatus_ cudnnBackendExecute(cudnnHandle_t handle, cudnnBackendDescriptor_t
 executionPlan, cudnnBackendDescriptor t varianPack)

This function executes:

- ▶ the given Engine Configuration Plan on the VariantPack
- the finalized ExecutionPlan on the data

The data and the working space are encapsulated in the VariantPack.

Parameters

executionPlan

Input. Pointer to the cuDNN handle to be destroyed.

variantPack

Input. Pointer to the finalized VariantPack consisting of:

- Data pointer for each non-virtual pointer of the operation set in the execution plan.
- Pointer to user-allocated workspace in global memory at least as large as the size queried from CUDNN_BACKEND_.

Returns

CUDNN STATUS SUCCESS

The ExecutionPlan was executed successfully.

CUDNN STATUS BAD PARAM

An incorrect or inconsistent value is encountered. Some examples:

A required data pointer is invalid.

CUDNN_STATUS_INTERNAL ERROR

Some internal errors were encountered.

CUDNN STATUS EXECUTION FAILED

An error was encountered executing the plan with the variant pack.

Additional return values depend on the arguments used as explained in the <u>cuDNN</u> Backend API.

9.2.4. cudnnBackendFinalize()

cudnnStatus_t cudnnbBackendFinalize(cudnnBackendDescriptor descriptor)

This function finalizes the memory pointed to by the <code>descriptor</code>. The type of finalization is done depending on the <code>descriptorType</code> argument with which the <code>descriptor</code> was created using <code>cudnnBackendCreateDescriptor()</code> or initialized using <code>cudnnBackendInitialize()</code>.

cudnnBackendFinalize() also checks all the attributes set between the create/ initialization and finalize phase. If successful, cudnnBackendFinalize() returns CUDNN_STATUS_SUCCESS and the finalized state of the descriptor is set to true. In this state, setting attributes using <u>cudnnBackendSetAttribute()</u> is not allowed. Getting attributes using <u>cudnnBackendGetAttribute()</u> is only allowed when the finalized state of the descriptor is true.

Parameters

descriptor

Input. Instance of cudnnBackendDescriptor_t to finalize.

Returns

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

```
CUDNN_STATUS_BAD_PARAM
```

Invalid descriptor attribute values or combination thereof is encountered.

```
CUDNN STATUS NOT SUPPORTED
```

Descriptor attribute values or combinations therefore not supported by the current version of cuDNN are encountered.

```
CUDNN STATUS INTERNAL ERROR
```

Some internal errors are encountered.

Additional return values depend on the arguments used as explained in the <u>cuDNN</u> Backend API.

9.2.5. cudnnBackendGetAttribute()

```
cudnnStatus_t cudnnBackendGetAttribute(
    cudnnBackendDescriptor_t descriptor,
    cudnnBackendAttributeName_t attributeName,
    cudnnBackendAttributeType_t attributeType,
    int64_t requestedElementCount,
    int64_t *elementCount,
    void *arrayOfElements);
```

This function retrieves the value(s) of an attribute of a descriptor. attributeName is the name of the attribute whose value is requested. The attributeType is the type of attribute. requestsedElementCount is the number of elements to be potentially retrieved. The number of elements for the requested attribute is stored in elementCount. The retrieved values are stored in arrayOfElements. When the attribute is expected to have a single value, arrayOfElements can be pointer to the output value. This function will return CUDNN_STATUS_NOT_INTIALIZED if the descriptor was already successfully finalized.

Parameters

descriptor

Input. Instance of <u>cudnnBackendDescriptor_t</u> whose attribute the user wants to retrieve.

attributeName

Input. The name of the attribute being get from the on the descriptor.

attributeType

Input. The type of attribute.

requestedElementCount

Input. Number of elements to output to arrayOfElements.

elementCount

Input. Output pointer for the number of elements the descriptor attribute has. Note that <code>cudnnBackendGetAttribute()</code> will only write the least of this and <code>requestedElementCount</code> elements to <code>arrayOfElements</code>.

arrayOfElements

Input. Array of elements of the datatype of the attributeType. The datatype of the attributeType is listed in the mapping table of <u>cudnnBackendAttributeType</u> <u>t</u>.

Returns

CUDNN_STATUS_SUCCESS

The attributeName was given to the descriptor successfully.

CUDNN STATUS BAD PARAM

One or more invalid or inconsistent argument values were encountered. Some examples:

- attributeName is not a valid attribute for the descriptor.
- ▶ attributeType is not one of the valid types for the attribute.

CUDNN STATUS NOT INITIALIZED

The descriptor has not been successfully finalized using <u>cudnnBackendFinalize()</u>.

Additional return values depend on the arguments used as explained in the <u>cuDNN</u> Backend API.

9.2.6. cudnnBackendInitialize()

cudnnStatus_t cudnnBackendInitialize(cudnnBackendDescriptor_t descriptor, cudnnBackendDescriptorType_t descriptorType, size_t sizeInBytes) This function repurposes a pre-allocated memory pointed to by a descriptor of size sizeInByte to a backend descriptor of type descriptorType. The finalized state of the descriptor is set to false.

Parameters

descriptor

Input. Instance of <u>cudnnBackendDescriptor_t</u> to be initialized.

descriptorType

Input. Enumerated value for the type of cuDNN backend descriptor.

sizeInBytes

Input. Size of memory pointed to by descriptor.

Returns

```
CUDNN STATUS SUCCESS
```

The memory was initialized successfully.

```
CUDNN_STATUS_BAD_PARAM
```

An invalid or inconsistent argument value is encountered. For example:

- descriptor is a nullptr
- sizeInBytes is less than the size required by the descriptor type

Additional return values depend on the arguments used as explained in the <u>cuDNN</u> Backend API.

9.2.7. cudnnBackendSetAttribute()

```
cudnnStatus_t cudnnBackendSetAttribute(
    cudnnBackendDescriptor_t descriptor,
    cudnnBackendAttributeName_t attributeName,
    cudnnBackendAttributeType_t attributeType,
    int64_t elementCount,
    void *arrayOfElements);
```

This function sets an attribute of a descriptor to value(s) provided as a pointer. descriptor is the descriptor to be set. attributeName is the name of the attribute to be set. attributeType is the type of attribute. The value to which the attribute is set, is pointed by the arrayOfElements. The number of elements is given by elementCount. This function will return CUDNN_STATUS_NOT_INTIALIZED if the descriptor is already successfully finalized using cudnnBackendFinalize().

Parameters

descriptor

Input. Instance of cudnnBackendDescriptor_t whose attribute is being set.

attributeName

Input. The name of the attribute being set on the descriptor.

attributeType

Input. The type of attribute.

elementCount

Input. Number of elements being set.

arrayOfElements

Input. The starting location for an array from where to read the values from. The elements of the array are expected to be of the datatype of the attributeType. The datatype of the attributeType is listed in the mapping table of cudnnBackendAttributeType_t.

Returns

CUDNN_STATUS_SUCCESS

The attributeName was set to the descriptor.

CUDNN STATUS NOT INITIALIZED

The backend descriptor pointed to by the descriptor is already in the finalized state.

CUDNN STATUS BAD PARAM

The function is called with arguments that correspond to invalid values. Some possible causes are:

- ▶ attributeName is not a settable attribute of descriptor
- ▶ attributeType is incorrect for this attributeName.
- ▶ elemCount value is unexpected.
- ▶ arrayOfElements contains values invalid for the attributeType.

CUDNN STATUS NOT SUPPORTED

The value(s) to which the attributes are being set is not supported by the current version of cuDNN.

Additional return values depend on the arguments used as explained in the <u>cuDNN</u> Backend API.

9.3. Backend Descriptor Types

This section enumerates all valid attributes of various descriptors.

9.3.1. CUDNN_BACKEND_CONVOLUTION_DESCRIPTOR

Created with

cudnnBackendCreateDescriptor(CUDNN_BACKEND_CONVOLUTION_DESCRIPTOR, &desc); the cuDNN backend convolution descriptor specifies the parameters for a convolution operator for both forward and backward propagation: compute data type, convolution mode, filter dilation and stride, and padding on both sides.

Attributes

Attributes of a cuDNN backend convolution descriptor are values of enumeration type cudnnBackendAttributeName_t with prefix CUDNN_ATTR_CONVOLUTION_:

CUDNN_ATTR_CONVOLUTION_COMP_TYPE

The compute type of the convolution operator.

- ► CUDNN TYPE DATA TYPE; one element.
- Required attribute.

CUDNN_ATTR_CONVOLUTION_CONV_MODE

Convolution or cross-correlation mode.

- ► CUDNN TYPE CONVOLUTION MODE; one element.
- Required attribute.

CUDNN ATTR CONVOLUTION DILATIONS

Filter dilation.

- CUDNN TYPE INT64; one or more, but at most CUDNN MAX DIMS elements.
- Required attribute.

CUDNN ATTR CONVOLUTION FILTER STRIDES

Filter stride.

- CUDNN TYPE INT64; one or more, but at most CUDNN MAX DIMS elements.
- Required attribute.

CUDNN ATTR CONVOLUTION PRE PADDINGS

Padding at the beginning of each spatial dimension.

- ▶ CUDNN TYPE INT64; one or more, but at most CUDNN MAX DIMS elements.
- Required attribute.

CUDNN_ATTR_CONVOLUTION_POST_PADDINGS

Padding at the end of each spatial dimension.

CUDNN TYPE INT64; one or more, but at most CUDNN MAX DIMS elements.

Required attribute.

CUDNN ATTR CONVOLUTION SPATIAL DIMS

The number of spatial dimensions in the convolution.

- ► CUDNN TYPE INT64, one element.
- Required attribute.

Finalization

<u>cudnnBackendFinalize()</u> with a <u>cudnn_Backend_convolution_descriptor</u> can have the following return values:

CUDNN STATUS BAD PARAM

An elemCount argument for setting CUDNN_ATTR_CONVOLUTION_DILATIONS, CUDNN_ATTR_CONVOLUTION_FILTER_STRIDES, CUDNN_ATTR_CONVOLUTION_PRE_PADDINGS, and CUDNN_ATTR_CONVOLUTION_POST_PADDINGS is not equal to the value set for CUDNN ATTR CONVOLUTION SPATIAL DIMS.

CUDNN_STATUS_SUCCESS

The descriptor was finalized successfully.

9.3.2. CUDNN BACKEND ENGINE DESCRIPTOR

Created with descriptor type value CUDNN_BACKEND_ENGINE_DESCRIPTOR, cuDNN backend engine descriptor describes an engine to compute an operation graph. An engine is a grouping of kernels with similar compute and numerical attributes.

Attributes

Attributes of a cuDNN backend convolution descriptor are values of enumeration type cudnnBackendAttributeName_t with prefix CUDNN_ATTR_ENGINE_:

CUDNN ATTR ENGINE OPERATION GRAPH

The operation graph to compute.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND OPERATIONGRAPH DESCRIPTOR.
- Required attribute.

CUDNN ATTR ENGINE GLOBAL INDEX

The index for the engine.

- ► CUDNN_TYPE_INT64; one element.
- Valid values are between 0 and CUDNN_ATTR_OPERATIONGRAPH_ENGINE_GLOBAL_COUNT-1.
- Required attribute.

CUDNN ATTR ENGINE KNOB INFO

The descriptors of performance knobs of the engine.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND KNOB INFO DESCRIPTOR.
- Read-only attribute.

CUDNN ATTR ENGINE NUMERICAL NOTE

The numerical attributes of the engine.

- ► CUDNN TYPE NUMERICAL NOTE; zero or more elements.
- Read-only attribute.

CUDNN_ATTR_ENGINE_LAYOUT_INFO

The preferred tensor layouts of the engine.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND LAYOUT INFO DESCRIPTOR.
- Read-only attribute.

Finalization

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

CUDNN STATUS NOT SUPPORTED

The descriptor attribute set is not supported by the current version of cuDNN. Some examples include:

▶ The value of CUDNN ATTR ENGINE GLOBAL INDEX is not in a valid range.

CUDNN STATUS BAD PARAM

The descriptor attribute set is inconsistent or in an unexpected state. Some examples include:

The operation graph descriptor set is not already finalized.

9.3.3. CUDNN BACKEND ENGINECEG DESCRIPTOR

Created with cudnnBackendCreateDescriptor(CUDNN_BACKEND_ENGINECFG_DESCRIPTOR, &desc); the cuDNN backend engine configuration descriptor consists of an engine descriptor and an array of knob choice descriptors. Users can query from engine config information about intermediates: computational intermediate results that can be reused between executions.

Attributes

CUDNN ATTR ENGINECFG ENGINE

The backend engine.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR: one element, a backend descriptor of type CUDNN BACKEND ENGINE DESCRIPTOR.
- Required attribute.

CUDNN ATTR ENGINECFG KNOB CHOICES

The engine tuning knobs and choices.

CUDNN_TYPE_BACKEND_DESCRIPTOR: zero or more elements, backend descriptors of type CUDNN BACKEND KNOB CHOICE DESCRIPTOR.

CUDNN ATTR ENGINECFG INTERMEDIATE INFO

Information of the computational intermediate of this engine config.

- CUDNN_TYPE_BACKEND_DESCRIPTOR: one element, a backend descriptor of type CUDNN BACKEND INTERMEDIATE INFO DESCRIPTOR.
- Read-only attribute.
- Currently unsupported. Placeholder for future implementation.

Finalization

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

CUDNN STATUS NOT SUPPORTED

The descriptor attribute set is not supported by the current version of cuDNN. Some examples include:

The value knob.

9.3.4. CUDNN BACKEND ENGINEHEUR DESCRIPTOR

Created with

cudnnBackendCreateDescriptor(CUDNN_BACKEND_ENGINEHEUR_DESCRIPTOR, &desc); the cuDNN backend engine heuristics descriptor allows users to obtain for an operation graph engine configuration descriptors ranked by performance according to cuDNN's heuristics.

Attributes

CUDNN ATTR ENGINEHEUR OPERATION GRAPH

The operation graph for which heuristics result in a query.

CUDNN TYPE BACKEND DESCRIPTOR

One element.

Required attribute.

CUDNN_ATTR_ENGINEHEUR_MODE

The heuristic mode to query the result.

- ► CUDNN TYPE HEUR MODE; one element.
- Required attribute.

CUDNN_ATTR_ENGINEHEUR_RESULTS

The result of the heuristics query.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; zero or more elements of descriptor type CUDNN_BACKEND_ENGINECFG_DESCRIPTOR.
- Get-only attribute.

Finalization

Return values of cudnnBackendFinalize (desc) where desc is a cuDNN backend engine heuristics descriptor:

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.5. CUDNN_BACKEND_EXECUTION_PLAN_DESCRIPTOR

Created with

<code>cudnnBackendCreateDescriptor(CUDNN_BACKEND_EXECUTION_PLAN_DESCRIPTOR, &desc); the cuDNN backend execution plan descriptor allows the user to specify an execution plan, consists of a cuDNN handle, an engine configuration, and optionally an array of intermediates to compute.</code>

Attributes

CUDNN ATTR EXECUTION PLAN HANDLE

A cuDNN handle.

- ► CUDNN TYPE HANDLE; one element.
- Required attribute.

CUDNN ATTR EXECUTION PLAN ENGINE CONFIG

An engine configuration to execute.

- ► CUDNN BACKEND ENGINECFG DESCRIPTOR; one element.
- Required attribute.

CUDNN ATTR EXECUTION PLAN RUN ONLY INTERMEDIATE UIDS

Unique identifiers of intermediates to compute.

- ► CUDNN TYPE INT64; zero or more elements.
- Optional attribute. If set, the execution plan will only compute the specified intermediate and not any of the output tensors on the operation graph in the engine configuration.

CUDNN_ATTR_EXECUTION_PLAN_COMPUTED_INTERMEDIATE_UIDS

Unique identifiers of precomputed intermediates.

- ► CUDNN TYPE INT64; zero or more elements.
- Optional attribute. If set, the plan will expect and use pointers for each intermediate in the variant pack descriptor during execution.
- Not supported currently: placeholder for future implementation.

CUDNN ATTR EXECUTION PLAN WORKSPACE SIZE

The size of the workspace buffer required to execute this plan.

- ► CUDNN TYPE INT64; one element.
- Read-only attribute.

CUDNN ATTR EXECUTION PLAN JSON REPRESENTATION

The JSON representation of the serialized execution plan. Serialization and deserialization can be done by getting and setting this attribute, respectively.

CUDNN_TYPE_CHAR; many elements, the same amount as the size of a nullterminated string of the json representation of the execution plan.

Finalization

Return values of cudnnBackendFinalize (desc) where desc is a cuDNN backend execution plan descriptor:

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.6. CUDNN BACKEND INTERMEDIATE INFO DESCRIPTOR

Created with

cudnnBackendCreateDescriptor (CUDNN_BACKEND_INTERMEDIATE_INFO_DESCRIPTOR, &desc); the cuDNN backend intermediate descriptor is a read-only descriptor that contains information about an execution intermediate. An execution intermediate is some intermediate computation for an engine config in device memory that can be reused between plan execution to amortize the kernel. Each intermediate is identified by a unique ID. Users can query for the device memory size of the intermediate. An intermediate can depend on the data of one or more tensors identified by the tensor UIDs or one more attribute of the operation graph.

This is a read-only descriptor. Users cannot set the descriptor attributes or finalize the descriptor. User query for a finalized descriptor from an engine config descriptor.

Attributes

CUDNN ATTR INTERMEDIATE INFO UNIQUE ID

A unique identifier of the intermediate.

- ► CUDNN TYPE INT64; one element.
- Read-only attribute.

CUDNN ATTR INTERMEDIATE INFO SIZE

The required device memory size for the intermediate.

- ► CUDNN TYPE INT64; one element.
- Read-only attribute.

CUDNN_ATTR_INTERMEDIATE_INFO_DEPENDENT_DATA_UIDS

UID of tensors on which the intermediate depends.

- ► CUDNN TYPE INT64; zero or more elements.
- Read-only attribute.

CUDNN ATTR INTERMEDIATE INFO DEPENDENT ATTRIBUTES

Placeholder for future implementation.

Finalization

User does not finalize this descriptor. <code>cudnnBackendFinalize(desc)</code> with a backend intermediate descriptor returns <code>cudnn</code> <code>status</code> <code>not</code> <code>supported</code>.

9.3.7. CUDNN BACKEND KNOB CHOICE DESCRIPTOR

Created with

cudnnBackendCreateDescriptor(CUDNN_BACKEND_KNOB_CHOICE_DESCRIPTOR, &desc); the cuDNN backend knob choice descriptor consists of the type of knobs to be set and the value to which the knob is set.

Attributes

CUDNN_ATTR_KNOB_CHOICE_KNOB_TYPE

The type of knobs to be set.

- ► CUDNN TYPE KNOB TYPE: one element.
- Required attribute.

CUDNN ATTR KNOB CHOICE KNOB VALUE

- CUDNN TYPE INT64: one element.
- Required attribute.

Finalization

Return values of cudnnBackendFinalize (desc) where desc is a cuDNN backend knob choice descriptor:

CUDNN STATUS SUCCESS

The knob choice descriptor was finalized successfully.

9.3.8. CUDNN BACKEND KNOB INFO DESCRIPTOR

Created with <code>cudnnBackendCreateDescriptor(CUDNN_BACKEND_INFO_DESCRIPTOR, &desc)</code>; the cuDNN backend knob info descriptor consists of the type and valid value range of an engine performance knob. Valid value range is given in terms of minimum, maximum, and stride of valid values. This is a purely informative descriptor type. Setting descriptor attributes is not supported. User obtains an array of finalized descriptors, one for each knob type, from a finalized backend descriptor.

Attributes

CUDNN ATTR KNOB INFO TYPE

The type of the performance knob.

- ► CUDNN TYPE KNOB TYPE: one element.
- Read-only attribute.

CUDNN ATTR KNOB INFO MAXIMUM VALUE

The smallest valid value choice value for this knob.

- ► CUDNN TYPE INT64: one element.
- Read-only attribute.

CUDNN ATTR KNOB INFO MINIMUM VALUE

The largest valid choice value for this knob.

- ► CUDNN TYPE INT64: one element.
- Read-only attribute.

CUDNN_ATTR_KNOB_INFO_STRIDE

The stride of valid choice values for this knob.

- ► CUDNN TYPE INT64: one element.
- Read-only attribute.

Finalization

This descriptor is read-only; it is retrieved and finalized from a cuDNN backend engine configuration descriptor. Users cannot set or finalize.

9.3.9. CUDNN BACKEND LAYOUT INFO DESCRIPTOR

Created with descriptor type value CUDNN_BACKEND_LAYOUT_INFO_DESCRIPTOR, cuDNN backend layout info descriptor provides information on the preferred layout for a tensor.

Attributes

CUDNN ATTR LAYOUT INFO TENSOR UID

The UID of the tensor.

- ► CUDNN TYPE INT64; one element.
- Read-only attribute.

CUDNN ATTR LAYOUT INFO TYPES

The preferred layout of the tensor.

- ▶ CUDNN TYPE LAYOUT TYPE: zero or more element <u>cudnnBackendLayoutType_t</u>.
- Read-only attribute.

Finalization

This descriptor is read-only; it is retrieved and finalized from a cuDNN backend engine configuration descriptor. Users cannot set its attribute or finalize it.

9.3.10. CUDNN BACKEND MATMUL DESCRIPTOR

Created with cudnnBackendCreateDescriptor(CUDNN_BACKEND_MATMUL_DESCRIPTOR, &desc); the cuDNN backend matmul descriptor specifies any metadata needed for the matmul operation.

Attributes

CUDNN ATTR MATMUL COMP TYPE

The compute precision used for the matmul operation.

- ► CUDNN TYPE DATA TYPE; one element.
- Required attribute.

Finalization

Return values of cudnnBackendFinalize(desc) where desc is a cuDNN backend matmul descriptor:

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.11. CUDNN_BACKEND_OPERATION_CONCAT_DESCRIPTOR

Created with

cudnnBackendCreateDescriptor(CUDNN_BACKEND_OPERATION_CONCAT_DESCRIPTOR, &desc); the cuDNN backend concatenation operation descriptor specifies an operation node for concatenating a given vector of tensors along a given concatenation axis.

This operation also supports an in-place mode, where one of the input tensors is already assumed to be at the correct location in the output tensor, that is, they share the same device buffer.

Attributes

Attributes of a cuDNN backend concat operation descriptor are values of enumeration type cudnn_attr_operation_concat: cudnn_attr_operation_concat axis

The dimension which tensors are being concatenated over.

- ► Type: CUDNN TYPE INT64
- Required attribute.

CUDNN ATTR OPERATION CONCAT INPUT DESCS

A vector of input tensor descriptors, which are concatenated in the same order as provided in this vector.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one or more elements of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN_ATTR_OPERATION_CONCAT_INPLACE_INDEX

The index of input tensor in the vector of input tensor descriptors that is already present in-place in the output tensor.

- ► Type: CUDNN TYPE INT64
- Optional attribute.

CUDNN ATTR OPERATION CONCAT OUTPUT DESC

The output tensor descriptor for the result from concatenation of input tensors.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

Finalization

<u>cudnnBackendFinalize()</u> with a <u>cudnn_Backend_operation_concat_descriptor()</u> can have the following return values:

CUDNN STATUS BAD PARAM

Invalid or inconsistent attribute values are encountered. Some possible causes:

- ► The tensors involved in the operation should have the same shape in all dimensions except the dimension that they are being concatenated over.
- ► The output tensor shape in the concatenating dimension should equal the sum of tensor shape of all input tensors in that same dimension.
- Concatenation axis should be a valid tensor dimension.
- If provided, the in-place input tensor index should be a valid index in the vector of input tensor descriptors.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.12. CUDNN_BACKEND_OPERATION_CONVOLUTION_BACKWARD

Created with

cudnnBackendCreateDescriptor (CUDNN_BACKEND_OPERATION_CONVOLUTION_BACKWARD_DATA_DESCRIPTO &desc); the cuDNN backend convolution backward data operation descriptor specifies an operation node for convolution backward data to compute the gradient of input data dx with filter tensor w and gradient of response dy with output α scaling and residue add with β scaling. That is, the equation dx = $\alpha(w^*dy) + \beta dx$, where * denotes the convolution backward data operator.

Attributes

Attributes of a cuDNN backend convolution descriptor are values of enumeration type cudnnBackendAttributeName_t with prefix cudnn_attr_operation_convolution_bwd_data:

CUDNN ATTR OPERATION CONVOLUTION BWD DATA ALPHA

The alpha value.

- ► CUDNN TYPE FLOAT **or** CUDNN TYPE DOUBLE; **one or more elements**.
- Required attribute.

CUDNN ATTR OPERATION CONVOLUTION BWD DATA BETA

The beta value.

- ▶ CUDNN TYPE FLOAT **or** CUDNN TYPE DOUBLE; **one or more elements**.
- Required attribute.

CUDNN ATTR OPERATION CONVOLUTION BWD DATA CONV DESC

The convolution operator descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND CONVOLUTION DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION CONVOLUTION BWD DATA W

The convolution filter tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION CONVOLUTION BWD DATA DX

The image gradient tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION CONVOLUTION BWD DATA DY

The response gradient tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

Finalization

In finalizing the convolution operation, the tensor dimensions of the tensor DX, W, and DY are bound based on the same interpretations as the X, W, and Y tensor dimensions described in the $\underline{CUDNN_BACKEND_OPERATION_CONVOLUTION_FORWARD_DESCRIPTOR}$ section.

cudnnBackendFinalize() with a

CUDNN_BACKEND_OPERATION_CONVOLUTION_BACKWARD_DATA_DESCRIPTOR() can have the following return values:

CUDNN STATUS BAD PARAM

Invalid or inconsistent attribute values are encountered. Some possible cause:

► The DX, W, and DY tensors do not constitute a valid convolution operation under the convolution operator.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.13. CUDNN_BACKEND_OPERATION_CONVOLUTION_BACKWARD

Created with

cudnnBackendCreateDescriptor (CUDNN_BACKEND_OPERATION_CONVOLUTION_BACKWARD_FILTER_DESCRIP &desc); the cuDNN backend convolution backward filter operation descriptor specifies an operation node for convolution backward filter to compute the gradient of filter dw with image tensor x and gradient of response dy with output α scaling and residue add with β scaling. That is, the equation: dw = $\alpha(x^*\text{dy}) + \beta \text{dw}$, where * denotes the convolution backward filter operator.

Attributes

Attributes of a cuDNN backend convolution descriptor are values of enumeration type cudnn_attr_operation_convolution_bwd_filter:

CUDNN_ATTR_OPERATION_CONVOLUTION_BWD_FILTER_ALPHA

The alpha value.

- ► CUDNN TYPE FLOAT **or** CUDNN TYPE DOUBLE; **one or more elements**.
- Required attribute. Required to be set before finalization.

CUDNN_ATTR_OPERATION_CONVOLUTION_BWD_FILTER_BETA

The beta value.

- ► CUDNN TYPE FLOAT **or** CUDNN TYPE DOUBLE; **one or more elements**.
- Required attribute. Required to be set before finalization.

CUDNN ATTR OPERATION CONVOLUTION BWD FILTER CONV DESC

The convolution operator descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND CONVOLUTION DESCRIPTOR.
- Required attribute. Required to be set before finalization.

CUDNN_ATTR_OPERATION_CONVOLUTION_BWD_FILTER_DW

The convolution filter tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN_BACKEND_TENSOR_DESCRIPTOR.
- Required attribute. Required to be set before finalization.

CUDNN ATTR OPERATION CONVOLUTION BWD FILTER X

The image gradient tensor descriptor.

CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR. Required attribute. Required to be set before finalization.

CUDNN_ATTR_OPERATION_CONVOLUTION_BWD_FILTER_DY

The response gradient tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute. Required to be set before finalization.

Finalization

In finalizing the convolution operation, the tensor dimensions of the tensor x, dw, and dw are bound based on the same interpretations as the dw, dw, and dw tensor dimensions described in the CUDNN_BACKEND_OPERATION_CONVOLUTION_FORWARD_DESCRIPTOR section.

cudnnBackendFinalize() with a

CUDNN_BACKEND_OPERATION_CONVOLUTION_BACKWARD_FILTER_DESCRIPTOR() can have the following return values:

CUDNN STATUS BAD PARAM

Invalid or inconsistent attribute values are encountered. Some possible cause:

► The x, DW, and DY tensors do not constitute a valid convolution operation under the convolution operator.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.14. CUDNN_BACKEND_OPERATION_CONVOLUTION_FORWARD

Created with

cudnnBackendCreateDescriptor (CUDNN_BACKEND_OPERATION_CONVOLUTION_FORWARD_DESCRIPTOR, &desc); the cuDNN backend convolution forward operation descriptor specifies an operation node for forward convolution to compute the response tensor y of image tensor x convoluted with filter tensor y with output scaling y and residual add with y scaling. That is, the equation $y = \alpha(w^*x) + \beta y$, where * is the convolution operator in the forward direction.

Attributes

Attributes of a cuDNN backend convolution descriptor are values of enumeration type cudnnBackendAttributeName_t with prefix <a h

CUDNN_ATTR_OPERATION_CONVOLUTION_FORWARD_ALPHA

The alpha value.

CUDNN TYPE FLOAT or CUDNN TYPE DOUBLE; one or more elements.

Required to be set before finalization.

CUDNN ATTR OPERATION CONVOLUTION FORWARD BETA

The beta value.

- ► CUDNN TYPE FLOAT **or** CUDNN TYPE DOUBLE; **one or more elements**.
- Required attribute.

CUDNN ATTR OPERATION CONVOLUTION FORWARD CONV DESC

The convolution operator descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN_BACKEND_CONVOLUTION_DESCRIPTOR.
- Required attribute.

CUDNN_ATTR_OPERATION_CONVOLUTION_FORWARD_W

The convolution filter tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION CONVOLUTION FORWARD X

The image tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN_ATTR_OPERATION_CONVOLUTION_FORWARD_Y

The response tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR CONVOLUTION SPATIAL DIMS

The number of spatial dimensions in the convolution.

- ► CUDNN_TYPE INT64, one element.
- Required attribute.

Finalization

In finalizing the convolution operation, the tensor dimensions of the tensor x, w, and y are bound based on the following interpretations:

The CUDNN_ATTR_CONVOLUTION_SPATIAL_DIMS attribute of CUDNN_ATTR_OPERATION_CONVOLUTION_FORWARD_CONV_DESC is the number of spatial dimension of the convolution. The number of dimensions for tensor x, w, and y must be larger than the number of spatial dimensions by 2 or 3 depending on how users choose to specify the convolution tensors.

If the number of tensor dimension is the number of spatial dimensions plus 2:

- ▶ x tensor dimension and stride arrays are [N, GC, ...]
- ▶ w tensor dimension and stride arrays are [KG, C, ...]
- ▶ Y tensor dimension and stride arrays are [N, GK, ...]

where the ellipsis ... are shorthand for spatial dimensions of each tensor, g is the number of convolution groups, and g and g are the number of input and output feature maps per group. In this interpretation, it is assumed that the memory layout for each group is packed. g cudnnBackendFinalize() asserts the tensors dimensions and strides are consistent with this interpretation or it returns g cudnN_STATUS_BAD_PARAM.

If the number of tensor dimension is the number of spatial dimensions plus 3:

- ▶ x tensor dimension and stride arrays are [N, G, C, ...]
- ▶ w tensor dimension and stride arrays are [G, K, C, ...]
- Y tensor dimension and stride arrays are [N, G, K, ...]

where the ellipsis ... are shorthand for spatial dimensions of each tensor, g is the number of convolution groups, and g and g are the number of input and output feature maps per group. In this interpretation, users can specify an unpacked group stride. g cudnnBackendFinalize() asserts the tensors dimensions and strides are consistent with this interpretation or it returns g cudnn g status g and g param.

<u>cudnnBackendFinalize()</u> with a

CUDNN_BACKEND_OPERATION_CONVOLUTION_FORWARD_DESCRIPTOR can have the following return values:

CUDNN STATUS BAD PARAM

Invalid or inconsistent attribute values are encountered. Some possible cause:

► The x, w, and y tensors do not constitute a valid convolution operation under the convolution operator.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.15. CUDNN BACKEND OPERATION_GEN_STATS_DESCRIPTOR

Represents an operation that will generate per-channel statistics. The specific statistics that will be generated depends on the <code>CUDNN_ATTR_OPERATION_GENSTATS_MODE</code> attribute in the descriptor. Currently, only <code>CUDNN_GENSTATS_SUM_SQSUM</code> supported for the <code>CUDNN_ATTR_OPERATION_GENSTATS_MODE</code>. It will generate the sum and quadratic sum

of per-channel elements of the input tensor x. The output dimension should be all 1 except the c dimension. Also, the c dimension of outputs should equal the c dimension of the input. This opaque struct can be created with <code>cudnnBackendCreateDescriptor()</code> (CUDNN BACKEND OPERATION GEN STATS DESCRIPTOR).

Attributes

CUDNN ATTR OPERATION GENSTATS MODE

Sets the CUDNN TYPE GENSTATS MODE of the operation. This attribute is required.

CUDNN ATTR OPERATION GENSTATS MATH PREC

The math precision of the computation. This attribute is required.

CUDNN ATTR OPERATION GENSTATS XDESC

Sets the descriptor for the input tensor x. This attribute is required.

CUDNN ATTR OPERATION GENSTATS SUMDESC

Sets the descriptor for the output tensor sum. This attribute is required.

CUDNN ATTR OPERATION GENSTATS SQSUMDESC

Sets the descriptor for the output tensor quadraticsum. This attribute is required.

Finalization

In the finalization stage, the attributes are cross checked to make sure there are no conflicts. The status below may be returned:

CUDNN_STATUS_BAD_PARAM

Invalid or inconsistent attribute values are encountered. Some possible causes are:

- The number of dimensions do not match between the input and output tensors.
- The input/output tensor dimensions do not agree with the above description.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.16. CUDNN BACKEND OPERATION MATMUL DESCRIPTOR

Created with

cudnnBackendCreateDescriptor(CUDNN_BACKEND_OPERATION_MATMUL_DESCRIPTOR, &desc); the cuDNN backend matmul operation descriptor specifies an operation node for matmul to compute the matrix product C by multiplying matrix A and matrix B, as shown in the following equation: C = AB

When using the matmul operation, the matrices are expected to be rank-3 tensors and have the following dimension requirements.

Table 49. matmul operation dimension requirements

Case	Matrix A	Matrix B	Matrix C
Single matmul	1 x M x K	1 x K x N	1 x M x N
Batch matmul	BxMxK	BxKxN	BxMxN
Broadcast A	1 x M x K	BxKxN	
Broadcast B	BxMxK	1 x K x N	

where:

- B indicates the batch size
- M is the number of rows of the matrix A
- ► K is the number or columns of the input matrix A (which is the same as the number of rows as the input matrix B)
- N is the number of columns of the input matrix B

If either the batch size of matrix A or B is set to 1, this indicates that the matrix will be broadcasted in the batch matmul. The resulting output matrix C will be a tensor of B \times M \times N.

The addressing of the matrix elements from a given tensor can be specified using strides in the tensor descriptor. The strides represent the spacing between elements for each tensor dimension. Considering a matrix tensor A (B x M x N) with strides [BS, MS, NS], it indicates that the actual matrix element A[x, y, z] is found at (A_base_address + x * BS + y * MS + z * NS) from the linear memory space allocated for tensor A. With our current support, the innermost dimension must be packed, which requires either MS=1 or NS=1. Otherwise, there are no other technical constraints with regard to how the strides can be specified in a tensor descriptor as it should follow the aforementioned addressing formula and the strides as specified by the user.

This representation provides support for some common usages, such as leading dimension and matrix transpose as we will explain through the following examples.

- The most basic case is a fully packed row-major batch matrix, without any consideration of leading dimension or transpose. In this case, BS = M*N, MS = N and NS = 1.
- 2. Matrix transpose can be achieved by exchanging the inner and outer dimensions using strides. Namely:
 - a). To specify a non-transposed matrix: BS = M*N, MS = N and NS = 1.
 - b). To specify matrix transpose: BS = M*N, MS = 1 and NS = M.
- 3. Leading dimension, a widely used concept in BLAS-like APIs, describes the inner dimension of the 2D array memory allocation (as opposed to the conceptual matrix dimension). It resembles the stride in a way that it defines the spacing between elements in the outer dimension. The most typical use cases where it shows difference from the matrix inner dimension is when the matrix is only part of the data in the allocated memory, addressing submatrices, or addressing matrices from an aligned memory allocation. Therefore, the leading dimension LDA in a column-major matrix A must satisfy LDA >= M, whereas in a row-major matrix A, it must satisfy

LDA >= N. To transition from the leading dimension concept to using strides, this entails MS >= N and NS = 1 or MS = 1 and NS >= M. Keep in mind that, while these are some practical use cases, these inequalities do not impose technical constraints with respect to an acceptable specification of the strides.

Other commonly used GEMM features, such as alpha/beta output blending, can also be achieved using this matmul operation along with other pointwise operations.

Attributes

The commonly used GEMM operation can also be achieved using this matmul operation along with other pointwise operations for output blending.

Attributes of a cuDNN backend matmul descriptor are values of enumeration type cudnn_attr_operation_matmul. CUDNN ATTR OPERATION MATMUL ADESC

The matrix A descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN_ATTR_OPERATION_MATMUL_BDESC

The matrix B descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION MATMUL CDESC

The matrix C descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION MATMUL IRREGULARLY STRIDED BATCH COUNT

Number of matmul operations to perform in the batch on matrix. Default = 1.

- ► CUDNN TYPE INT64; one element.
- Default value is 1.

CUDNN_ATTR_OPERATION_MATMUL_DESC

The matmul operation descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND MATMUL DESCRIPTOR.
- Required attribute.

Finalization

In the finalization of the matmul operation, the tensor dimensions of the matrices A, B and C will be checked to ensure that they satisfy the requirements of matrix multiplication:

<u>cudnnBackendFinalize()</u> with a <u>cudnn_backend_operation_matmul_descriptor</u> can have the following return values:

CUDNN STATUS NOT SUPPORTED

An unsupported attribute value was encountered. Some possible cause:

If not all of the matrices A, B and C are rank-3 tensors.

CUDNN STATUS BAD PARAM

Invalid or inconsistent attribute values are encountered. Some possible causes:

- ► The CUDNN_ATTR_OPERATION_MATMUL_IRREGULARLY_STRIDED_BATCH_COUNT specified is a negative value.
- ► The CUDNN_ATTR_OPERATION_MATMUL_IRREGULARLY_STRIDED_BATCH_COUNT and one or more of the batch sizes of the matrices A, B and C are not equal to one. That is to say there is a conflict where both irregularly and regularly strided batched matrix multiplication are specified, which is not a valid use case.
- ► The dimensions of the matrices A, B and C do not satisfy the requirements of matrix multiplication.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.17. CUDNN_BACKEND_OPERATION_NORM_BACKWARD_DESCRI

Created with

cudnnBackendCreateDescriptor(CUDNN_BACKEND_OPERATION_NORM_BACKWARD_DESCRIPTOR, &desc), the cuDNN backend normalization backward operation specifies a node for a backward normalization that takes as input the gradient tensor dy and outputs the gradient tensor dx and weight gradients dscale and dbias. The normalization mode is set using the CUDNN ATTR OPERATION NORM BWD MODE attribute.



Note: In cuDNN 8.5, support for this operation is limited to an experimental multi-GPU batch norm backend mode, with a set of functional constraints (refer to the <u>cuDNN</u> <u>Release Notes</u> notes for more details). It will be extended to support different modes in a future release.

Attributes

CUDNN ATTR OPERATION NORM BWD MODE

Chooses the normalization mode for the norm backward operation.

- ► CUDNN_TYPE_NORM MODE; one element.
- Required attribute.

CUDNN ATTR OPERATION NORM BWD XDESC

Input tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN_ATTR_OPERATION_NORM_BWD_MEAN_DESC

Saved mean input tensor descriptor for reusing the mean computed during the forward computation of the training phase.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

CUDNN_ATTR_OPERATION_NORM_BWD_INV_VARIANCE_DESC

Saved inverse variance input tensor descriptor for reusing the mean computed during the forward computation of the training phase.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

CUDNN ATTR OPERATION NORM BWD DYDESC

Gradient tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

CUDNN ATTR OPERATION NORM BWD DYDESC

Gradient tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN_ATTR_OPERATION_NORM_BWD_SCALE_DESC

Normalization scale descriptor. Note that the bias descriptor is not necessary for the backward pass.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION NORM BWD EPSILON DESC

Scalar input tensor descriptor for the epsilon value. The epsilon values are needed only if the saved mean and variances are not passed as inputs to the operation.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

CUDNN ATTR OPERATION NORM BWD DSCALE DESC

Scale gradient tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN_BACKEND_TENSOR_DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION NORM BWD DBIAS DESC

Bias gradient tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION NORM BWD DXDESC

Input gradient tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN_BACKEND_TENSOR_DESCRIPTOR.
- Required attribute.

CUDNN_ATTR_OPERATION_NORM_BWD_PEER_STAT_DESCS

Vector of tensor descriptors for the communication buffers used in multi-GPU normalization. Typically, one buffer is provided for every GPU in the node. This is an optional attribute only used for multi-GPU tensor stats reduction.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one or more elements of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

Finalization

In the finalization stage, the attributes are checked to ensure there are no conflicts.

CUDNN STATUS BAD PARAM

Invalid or inconsistent attribute values are encountered. Some possible causes are:

- ► The tensor dimensions of the gradient tensors dY, dX, and input tensor X, do not match.
- ▶ The channel count C for the mean, scale, and inv_variance tensors do not match.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.18. CUDNN_BACKEND_OPERATION_NORM_FORWARD_DESCRIP

Created with

cudnnBackendCreateDescriptor (CUDNN_BACKEND_OPERATION_NORM_FORWARD_DESCRIPTOR, &desc), the cuDNN backend normalization forward operation specifies a node for a forward normalization that takes as input a tensor X and produces a normalized output Y with the normalization mode set by the CUDNN_ATTR_OPERATION_NORM_FWD_MODE attribute. The operation supports optional running stats computation and allows for storing the computed means and variances for reuse in the backwards calculation depending on the setting of the CUDNN_ATTR_OPERATION_NORM_FWD_PHASE attribute.



Note: In cuDNN 8.5, support for this operation is limited to an experimental multi-GPU batch norm backend mode, with a set of functional constraints (refer to the <u>cuDNN</u> <u>Release Notes</u> notes for more details). It will be extended to support different modes in a future release.

Attributes

CUDNN ATTR OPERATION NORM FWD MODE

Chooses the normalization mode for the norm forward operation.

- CUDNN TYPE NORM MODE; one element.
- Required attribute.

CUDNN ATTR OPERATION NORM FWD PHASE

Selects the training or inference phase for the norm forward operation.

- ► CUDNN TYPE NORM FWD PHASE; one element.
- Required attribute.

CUDNN ATTR OPERATION NORM FWD XDESC

Input tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION NORM FWD MEAN DESC

Estimated mean input tensor descriptor for the inference phase and the computed mean output tensor descriptor for the training phase.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

CUDNN ATTR OPERATION NORM FWD INV VARIANCE DESC

Estimated inverse variance input tensor descriptor for the inference phase and the computed inverse variance output tensor descriptor for the training phase.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

CUDNN ATTR OPERATION NORM FWD SCALE DESC

Normalization scale input tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION NORM FWD BIAS DESC

Normalization bias input tensor descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION NORM FWD EPSILON DESC

Scalar input tensor descriptor for the epsilon value used in normalization calculation.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN_ATTR_OPERATION_NORM_FWD_EXP_AVG_FACTOR_DESC

Scalar input tensor descriptor for the exponential average factor value used in running stats computation.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN_BACKEND_TENSOR_DESCRIPTOR.
- Optional attribute.

CUDNN ATTR OPERATION NORM FWD INPUT RUNNING MEAN DESC

Input running mean tensor descriptor for the running stats computation in the training phase.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN_BACKEND_TENSOR_DESCRIPTOR.
- Optional attribute.

CUDNN ATTR_OPERATION_NORM_FWD_INPUT_RUNNING_VAR_DESC

Input running variance tensor descriptor for the running stats computation in the training phase.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

CUDNN ATTR OPERATION NORM FWD OUTPUT RUNNING MEAN DESC

Output running mean tensor descriptor for the running stats computation in the training phase.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

CUDNN ATTR OPERATION NORM FWD OUTPUT RUNNING VAR DESC

Output running variance tensor descriptor for the running stats computation in the training phase.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

CUDNN ATTR OPERATION NORM FWD YDESC

Tensor descriptor for the output of the normalization operation.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION NORM FWD PEER STAT DESCS

Vector of tensor descriptors for the communication buffers used in multi-GPU normalization. Typically, one buffer is provided for every GPU in the node. This is an optional attribute only used for multi-GPU tensor stats reduction.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one or more elements of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

Finalization

In the finalization stage, the attributes are checked to ensure there are no conflicts.

CUDNN_STATUS_BAD_PARAM

Invalid or inconsistent attribute values are encountered. Some possible causes are:

- The output tensor dimensions do not match the input tensor dimensions.
- ► The channel count C for the mean, scale, bias, and inv_variance tensors do not match.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.19. CUDNN_BACKEND_OPERATION_POINTWISE_DESCRIPTOR

Represents a pointwise operation that implements the equation

Y = op(alpha1 * X) or Y = op(alpha1 * X), alpha2 * B) depending on the operation type. The actual type of operation represented by op() above depends on the $CUDNN_ATTR_OPERATION_POINTWISE_PW_DESCRIPTOR$ attribute in the descriptor. This operation descriptor supports operations with single-input single-output.

For a list of supported operations, refer to the cudnnPointwiseMode_t section.

For dual-input pointwise operations, broadcasting is assumed when a tensor dimension in one of the tensors is 1 while the other tensors corresponding dimension is not 1.

For three-input single-output pointwise operations, we do not support broadcasting in any tensor.

This opaque struct can be created with cudnnBackendCreateDescriptor() (CUDNN BACKEND OPERATION POINTWISE DESCRIPTOR).

Attributes

CUDNN ATTR OPERATION POINTWISE PW DESCRIPTOR

Sets the descriptor containing the mathematical settings of the pointwise operation. This attribute is required.

CUDNN ATTR OPERATION POINTWISE XDESC

Sets the descriptor for the input tensor *X*. This attribute is required.

CUDNN ATTR OPERATION POINTWISE BDESC

If the operation requires 2 inputs, such as add or multiply, this attribute sets the second input tensor β . If the operation requires only 1 input, this field is not used and should not be set.

CUDNN ATTR OPERATION POINTWISE YDESC

Sets the descriptor for the output tensor *Y*. This attribute is required.

CUDNN ATTR OPERATION POINTWISE TDESC

Sets the descriptor for the tensor T. This attribute is required for <code>CUDNN_ATTR_POINTWISE_MODE</code> set to <code>CUDNN_POINTWISE_BINARY_SELECT</code> and acts as the mask based on which the selection is done. It is used to store which values are masked by the ReLU function when executing a <code>CUDNN_POINTWISE_RELU_FWD</code>. In the backward pass, <code>CUDNN_POINTWISE_RELU_BWD</code> requires this tensor to do the correct computation.

CUDNN ATTR OPERATION POINTWISE ALPHA1

Sets the scalar alpha I value in the equation. Can be in float or half. This attribute is optional, if not set, the default value is 1.0.

CUDNN ATTR OPERATION POINTWISE ALPHA2

If the operation requires 2 inputs, such as add or multiply, this attribute sets the scalar alpha2 value in the equation. Can be in float or half. This attribute is optional, if not set, the default value is 1.0. If the operation requires only 1 input, this field is not used and should not be set.

Finalization

In the finalization stage, the attributes are cross checked to make sure there are no conflicts. The status below may be returned:

CUDNN STATUS BAD PARAM

Invalid or inconsistent attribute values are encountered. Some possible causes are:

- The number of dimensions do not match between the input and output tensors.
- The input/output tensor dimensions do not agree with the above described automatic broadcasting rules.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.20. CUDNN BACKEND OPERATION REDUCTION DESCRIPTOR

The cuDNN backend reduction operation descriptor represents an operation node that implements reducing values of an input tensor x in one or more dimensions to get an output tensor y. The math operation and compute data type used for reducing tensor values is specified via CUDNN ATTR OPERATION REDUCTION DESC.

This operation descriptor can be created with

The output tensor y should be the size as that of input tensor x, except dimension(s) where its size is 1.

Attributes

Attributes of a cuDNN backend reduction descriptor are values of enumeration type cudnnBackendAttributeName_t with prefix CUDNN_ATTR_OPERATION_REDUCTION_: CUDNN ATTR OPERATION REDUCTION XDESC

The matrix x descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN_ATTR_OPERATION_REDUCTION_YDESC

The matrix y descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION REDUCTION DESC

The reduction operation descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR one element of descriptor type CUDNN BACKEND REDUCTION DESCRIPTOR.
- Required attribute.

Finalization

In the finalization of the reduction operation, the dimensions of tensors x and Y are checked to ensure that they satisfy the requirements of the reduction operation.

<u>cudnnBackendFinalize()</u> with a <u>cudnn_Backend_operation_reduction_descriptor</u> can have the following return values:

CUDNN_STATUS_BAD_PARAM

Invalid or inconsistent attribute values are encountered. Some possible causes:

► The dimensions of the tensors x and y do not satisfy the requirements of the reduction operation.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.21. CUDNN_BACKEND_OPERATION_RESAMPLE_BWD_DESCRIP

Created with

cudnnBackendCreateDescriptor (CUDNN_BACKEND_OPERATION_RESAMPLE_BWD_DESCRIPTOR, &desc); the cuDNN backend resample backward operation descriptor specifies an operation node for backward resampling to compute the input tensor gradient dx from output tensor gradient dy with forward resampling done according to CUDNN ATTR RESAMPLE MODE with output scaling α and residual add with β scaling.



Note: As of cuDNN 8.3.2, this descriptor is not functional. It's reserved for future use.

Attributes

CUDNN ATTR OPERATION RESAMPLE BWD DESC

Resample operation descriptor (CUDNN_BACKEND_RESAMPLE_DESCRIPTOR) instance containing metadata about the operation.

CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN_BACKEND_RESAMPLE_DESCRIPTOR. Required attribute.

CUDNN ATTR OPERATION RESAMPLE BWD DXDESC

Input tensor gradient descriptor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION RESAMPLE BWD DYDESC

Output tensor gradient descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION RESAMPLE BWD IDXDESC

Tensor containing maxpool or nearest neighbor resampling indices to be used in backprop.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION RESAMPLE BWD ALPHA

Sets the alpha parameter used in blending.

- ► CUDNN TYPE DOUBLE or CUDNN TYPE FLOAT; one element.
- ► This attribute is optional, if not set, the default value is 1.0.

CUDNN ATTR OPERATION RESAMPLE BWD BETA

Sets the beta parameter used in blending.

- ▶ CUDNN TYPE DOUBLE or CUDNN TYPE FLOAT; one element.
- This attribute is optional, if not set, the default value is 0.0.

Finalization

In the finalization stage, the attributes are cross checked to make sure there are no conflicts. The status below may be returned:

CUDNN_STATUS_BAD_PARAM

Invalid or inconsistent attribute values are encountered. Some possible causes are:

- The output shape calculated based on the padding and strides does not match the given output tensor dimensions.
- ► The shape of the DXDESC and IDXDESC (if given) don't match.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.22. CUDNN_BACKEND_OPERATION_RESAMPLE_FWD_DESCRIP

Created with

cudnnBackendCreateDescriptor (CUDNN_BACKEND_OPERATION_RESAMPLE_FWD_DESCRIPTOR, &desc); the cuDNN backend resample forward operation descriptor specifies an operation node for forward resampling to compute the output tensor y of image tensor x resampled according to <code>CUDNN_ATTR_RESAMPLE_MODE</code> with output scaling α and residual add with β scaling.

Attributes

CUDNN_ATTR_OPERATION_RESAMPLE_FWD_DESC

Resample operation descriptor (CUDNN_BACKEND_RESAMPLE_DESCRIPTOR) instance containing metadata about the operation.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND RESAMPLE DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION RESAMPLE FWD XDESC

Input tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION RESAMPLE FWD YDESC

Output tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN_BACKEND_TENSOR_DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION RESAMPLE FWD IDXDESC

Tensor containing maxpool or nearest neighbor resampling indices to be used in backprop.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN_BACKEND_TENSOR_DESCRIPTOR.
- Optional attribute for training use cases.
- As of cuDNN 8.3.2. this attribute is not functional. It's reserved for future use.

CUDNN ATTR OPERATION RESAMPLE FWD ALPHA

Sets the alpha parameter used in blending.

- ► CUDNN TYPE DOUBLE or CUDNN TYPE FLOAT; one element.
- This attribute is optional, if not set, the default value is 1.0.

CUDNN_ATTR_OPERATION_RESAMPLE FWD BETA

Sets the beta parameter used in blending.

- ► CUDNN TYPE DOUBLE **or** CUDNN TYPE FLOAT; **one element**.
- This attribute is optional, if not set, the default value is 0.0.

Finalization

In the finalization stage, the attributes are cross checked to make sure there are no conflicts. The status below may be returned:

CUDNN STATUS BAD PARAM

Invalid or inconsistent attribute values are encountered. Some possible causes are:

- The output shape calculated based on the padding and strides does not match the given output tensor dimensions.
- ► The shape of the XDESC and IDXDESC (if given) don't match.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.23. CUDNN_BACKEND_OPERATION_SIGNAL_DESCRIPTOR

Created with

 ${\tt cudnnBackendCreateDescriptor} \ ({\tt CUDNN_BACKEND_OPERATION_SIGNAL_DESCRIPTOR}, \\ {\tt \&desc)}; the cuDNN backend signal operation descriptor specifies an operation node for updating or waiting on a flag variable. Signaling operations can be used to communicate between cuDNN operation graphs, even with operation graphs in another GPU.$

This operation, to connect to other nodes in the graph, also has a pass-through input tensor, which is not operated on and is just passed along to the output tensor. This mandatory pass-through input tensor helps in determining the predecessor node after which the signal operation should be executed. The optional output tensor helps in determining the successor node before which the signal execution should have completed. It is also guaranteed that for a non-virtual tensor as the output tensor, all writes for the tensor will have taken place before the signal value is updated by the operation.

Attributes

CUDNN ATTR OPERATION SIGNAL MODE

The signaling mode to use.

- CUDNN TYPE SIGNAL MODE;
- Required attribute.

CUDNN ATTR OPERATION SIGNAL FLAGDESC

Flag tensor descriptor.

CUDNN_ATTR_OPERATION_RESAMPLE_FWD_YDESC

Output tensor descriptor.

- ► CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION SIGNAL VALUE

The scalar value to compare or update the flag variable with.

- ► CUDNN TYPE INT64
- Required attribute.

CUDNN_ATTR_OPERATION_SIGNAL_XDESC

A pass-through input tensor to enable connecting this signal operation to other nodes in the graph.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Required attribute.

CUDNN ATTR OPERATION SIGNAL YDESC

The output tensor for the pass-through input tensor.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one element of descriptor type CUDNN BACKEND TENSOR DESCRIPTOR.
- Optional attribute.

Finalization

In the finalization stage, the attributes are cross checked to make sure there are no conflicts. The status below may be returned:

CUDNN STATUS BAD PARAM

Invalid or inconsistent attribute values are encountered.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.24. CUDNN BACKEND OPERATIONGRAPH_DESCRIPTOR

Created with descriptor type value CUDNN_BACKEND_OPERATIONGRAPH_DESCRIPTOR, cuDNN backend operation graph descriptor describes an operation graph, a small network of one or more operations connected by virtual tensors. Operation graph defines users' computation case or mathematical expression that they wish to compute.

Attributes

Attributes of a cuDNN backend convolution descriptor are values of enumeration type cudnnBackendAttributeName_t with prefix CUDNN ATTR OPERATIONGRAPH:

CUDNN ATTR OPERATIONGRAPH HANDLE

A cuDNN handle.

- ► CUDNN TYPE HANDLE; one element.
- Required attribute.

CUDNN_ATTR_OPERATIONGRAPH_OPS

Operation nodes to form the operation graph.

- CUDNN_TYPE_BACKEND_DESCRIPTOR; one or more elements of descriptor type CUDNN BACKEND OPERATION * DESCRIPTOR().
- Required attribute.

CUDNN ATTR OPERATIONGRAPH ENGINE GLOBAL COUNT

The number of engines to support the operation graph.

- ► CUDNN TYPE INT64; one element.
- Read-only attribute.

CUDNN ATTR OPERATIONGRAPH ENGINE SUPPORTED COUNT

The number of engines that support the operation graph.

- ► CUDNN TYPE INT64; one element.
- Read-only attribute; placeholder only: currently not supported.

Finalization

CUDNN STATUS BAD PARAM

An invalid attribute value was encountered. For example:

- ▶ One of the backend descriptors in CUDNN_ATTR_OPERATIONGRAPH_OPS is not finalized.
- The value cudnn attr operationgraph handle is not a valid cuDNN handle.

CUDNN STATUS NOT SUPPORTED

An unsupported attribute value was encountered. For example:

► The combination of operations of attribute CUDNN_ATTR_OPERATIONGRAPH_OPS is not supported.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.25. CUDNN_BACKEND_POINTWISE_DESCRIPTOR

Created with cudnnBackendCreateDescriptor(CUDNN_BACKEND_POINTWISE_DESCRIPTOR, &desc); the cuDNN backend pointwise descriptor specifies the parameters for a pointwise operator like mode, math precision, nan propagation etc.

Attributes

Attributes of a cuDNN backend convolution descriptor are values of enumeration type cudnnBackendAttributeName_t with prefix CUDNN_ATTR_POINTWISE_:

CUDNN ATTR POINTWISE MODE

Mode of the pointwise operation.

- ► CUDNN_TYPE_POINTWISE_MODE; one element.
- Required attribute.

CUDNN ATTR POINTWISE MATH PREC

The math precision of the computation.

- ► CUDNN TYPE DATA TYPE; one element.
- Required attribute.

CUDNN ATTR POINTWISE NAN PROPAGATION

Specifies a method by which to propagate NaNs.

- ► CUDNN TYPE NAN PROPOGATION; one element.
- Required only for comparison based pointwise modes, like ReLU.
- Current support only includes enum value CUDNN PROPAGATE NAN.
- ▶ Default Value: CUDNN NOT PROPAGATE NAN.

CUDNN ATTR POINTWISE RELU LOWER CLIP

Sets the lower clip value for Relu. If (value < lower_clip) value = lower_clip +
lower clip slope * (value - lower clip);</pre>

- ► CUDNN_TYPE_DOUBLE / CUDNN_TYPE_FLOAT; one element.
- ► Default Value: 0.0f.

CUDNN ATTR POINTWISE RELU UPPER CLIP

Sets the upper clip value for Relu. If (value > upper clip) value = upper clip;

- ► CUDNN TYPE DOUBLE / CUDNN TYPE FLOAT; one element.
- ▶ Default Value: Numeric limit max.

CUDNN ATTR POINTWISE RELU LOWER CLIP SLOPE

Sets the lower clip slope value for Relu. If (value < lower_clip) value =
lower_clip + lower_clip_slope * (value - lower_clip);</pre>

- ► CUDNN TYPE DOUBLE / CUDNN TYPE FLOAT; one element.
- Default Value: 0.0f.

CUDNN ATTR POINTWISE ELU ALPHA

Sets the alpha value for elu. If (value < 0.0) value = alpha * (e^value - 1.0);

- ▶ CUDNN TYPE DOUBLE / CUDNN TYPE FLOAT; one element.
- Default Value: 1.0f.

CUDNN ATTR POINTWISE SOFTPLUS BETA

Sets the beta value for softplus. value = log (1 + e^(beta * value)) / beta

- ► CUDNN_TYPE_DOUBLE / CUDNN_TYPE_FLOAT; one element.
- Default Value: 1.0f

CUDNN ATTR POINTWISE SWISH BETA

Sets the beta value for swish. value = value / (1 + e^(-beta * value))

- ► CUDNN TYPE DOUBLE / CUDNN TYPE FLOAT; one element.
- ▶ Default Value: 1.0f.

CUDNN_ATTR_POINTWISE_AXIS

Sets the axis value for GEN INDEX. The index will be generated for this axis.

- ► CUDNN TYPE INT64; one element.
- ▶ Default Value: -1.
- ► Needs to lie between [0,input_dim_size-1]. For example, if your input has dimensions [N,C,H,W], the axis can be set to anything in [0,3].

Finalization

<u>cudnnBackendFinalize()</u> with a <u>cudnn_Backend_Pointwise_Descriptor</u> can have the following return values:

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.26. CUDNN BACKEND REDUCTION_DESCRIPTOR

Created with cudnnBackendCreateDescriptor(CUDNN_BACKEND_REDUCTION_DESCRIPTOR, &desc); the cuDNN backend reduction descriptor specifies any metadata, including the math operation and compute data type, needed for the reduction operation.

Attributes

CUDNN ATTR REDUCTION OPERATOR

The math operation used for the reduction operation.

- ▶ CUDNN TYPE REDUCTION OPERATOR TYPE; one element.
- Required attribute.

CUDNN ATTR REDUCTION COMP TYPE

The compute precision used for the reduction operation.

- CUDNN TYPE DATA TYPE; one element.
- Required attribute.

Finalization

Return values of cudnnBackendFinalize(desc) where desc is CUDNN_BACKEND_REDUCTION_DESCRIPTOR are:

```
CUDNN STATUS NOT SUPPORTED
```

An unsupported attribute value was encountered. Some possible causes are:

CUDNN_ATTR_REDUCTION_OPERATOR is not set to either of CUDNN_REDUCE_TENSOR_ADD, CUDNN_REDUCE_TENSOR_MUL, CUDNN_REDUCE_TENSOR_MIN, CUDNN_REDUCE_TENSOR_MAX

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.27. CUDNN BACKEND RESAMPLE DESCRIPTOR

Created with cudnnBackendCreateDescriptor(CUDNN_BACKEND_RESAMPLE_DESCRIPTOR, &desc); the cuDNN backend resample descriptor specifies the parameters for a resample operator (upsampling or downsampling) for both forward and backward propagation: compute data type, resampling mode, filter dimensions and stride, number of spatial dimensions to resample and the padding on both ends of the tensor.

Attributes

CUDNN ATTR RESAMPLE MODE

Specifies mode of resampling, for example, average pool, nearest-neighbor, etc.

- ► CUDNN TYPE RESAMPLE MODE; one element.
- ▶ Default value is CUDNN RESAMPLE NEAREST.

CUDNN ATTR RESAMPLE COMP TYPE

Compute data type for the resampling operator.

- ► CUDNN TYPE DATA TYPE; one element.
- ▶ Default value is CUDNN DATA FLOAT.

CUDNN ATTR RESAMPLE NAN PROPAGATION

Specifies a method by which to propagate NaNs.

- ▶ CUDNN TYPE NAN PROPAGATION; one element.
- ▶ Default value is CUDNN_NOT_PROPAGATE_NAN.

CUDNN_ATTR_RESAMPLE_SPATIAL_DIMS

Specifies the number of spatial dimensions to perform the resampling over.

- ► CUDNN TYPE INT64; one element.
- Required attribute.

CUDNN ATTR RESAMPLE PADDING MODE

Specifies which values to use for padding.

- ► CUDNN TYPE PADDING MODE; one element.
- ▶ Default value is CUDNN ZERO PAD.

CUDNN_ATTR_RESAMPLE_STRIDES

Stride in each dimension for the kernel/filter.

- ▶ CUDNN TYPE INT64 **or** CUDNN TYPE FRACTION; **at most** CUDNN MAX DIMS 2.
- Required attribute.

CUDNN_ATTR_RESAMPLE_PRE_PADDINGS

Padding added to the beginning of the input tensor in each dimension.

- ► CUDNN TYPE INT64 **or** CUDNN TYPE FRACTION; at most CUDNN MAX DIMS 2.
- Required attribute.

CUDNN_ATTR_RESAMPLE_POST_PADDINGS

Padding added to the end of the input tensor in each dimension.

- ► CUDNN TYPE INT64 **or** CUDNN TYPE FRACTION; **at most** CUDNN MAX DIMS 2.
- Required attribute.

CUDNN_ATTR_RESAMPLE_WINDOW_DIMS

Spatial dimensions of filter.

▶ CUDNN TYPE INT64 or CUDNN TYPE FRACTION; at most CUDNN MAX DIMS - 2.

Required attribute.

Finalization

The return values for cudnnBackendFinalize() when called with a cudnn_Backend_Resample_descriptor is:

CUDNN STATUS NOT SUPPORTED

An unsupported attribute value was encountered. Some possible causes are:

- ► An elemCount argument for setting CUDNN_ATTR_RESAMPLE_WINDOW_DIMS, CUDNN_ATTR_RESAMPLE_STRIDES, CUDNN_ATTR_RESAMPLE_PRE_PADDINGS, and CUDNN_ATTR_RESAMPLE_POST_PADDINGS is not equal to the value set for CUDNN ATTR RESAMPLE SPATIAL DIMS.
- CUDNN_ATTR_RESAMPLE_MODE is set to CUDNN_RESAMPLE_BILINEAR orCUDNN_RESAMPLE_NEARESTAND any of the CUDNN_ATTR_RESAMPLE_WINDOW_DIMS is not set to 2.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.28. CUDNN BACKEND TENSOR DESCRIPTOR

Created with <code>cudnnBackendCreateDescriptor(CUDNN_BACKEND_TENSOR_DESCRIPTOR, &desc)</code>; the cuDNN backend tensor allows users to specify the memory storage of a generic tensor. A tensor is identified by a unique identifier and described by its data type, its data byte-alignment requirements, and the extents and strides of its dimensions. Optionally, a tensor element can be vector in one of its dimensions. A tensor can also be set to be virtual when it is an intermediate variable in a computation graph and not mapped to physical global memory storage.

Attributes

Attributes of a cuDNN backend tensor descriptors are values of enumeration type cudnnBackendAttributeName_t with prefix CUDNN_ATTR_TENSOR_:

CUDNN ATTR TENSOR UNIQUE ID

An integer that uniquely identifies the tensor.

- ► CUDNN TYPE INT64; one element.
- Required attribute.

CUDNN ATTR TENSOR DATA TYPE

Data type of tensor.

- ► CUDNN TYPE DATA TYPE; one element.
- Required attribute.

CUDNN ATTR TENSOR BYTE ALIGNMENT

Byte alignment of pointers for this tensor.

- ► CUDNN TYPE INT64; one element.
- Required attribute.

CUDNN ATTR TENSOR DIMENSIONS

Tensor dimensions.

- ► CUDNN TYPE INT64; at most CUDNN MAX DIMS elements.
- Required attribute.

CUDNN ATTR TENSOR STRIDES

Tensor strides.

- ► CUDNN TYPE INT64; at most CUDNN MAX DIMS elements.
- Required attribute.

CUDNN ATTR TENSOR VECTOR COUNT

Size of vectorization.

- ► CUDNN TYPE INT64; one element.
- Default value: 1

CUDNN_ATTR_TENSOR_VECTORIZED_DIMENSION

Index of the vectorized dimension.

- ► CUDNN TYPE INT64; one element.
- ▶ Required to be set before finalization if CUDNN_ATTR_TENSOR_VECTOR_COUNT is set to a value different than its default; otherwise it's ignored.

CUDNN_ATTR_TENSOR_IS_VIRTUAL

Indicates whether the tensor is virtual. A virtual tensor is an intermediate tensor in the operation graph that exists in transient and not read from or written to in global device memory.

- CUDNN TYPE BOOL; one element.
- Default value: false

Finalization

<u>cudnnBackendFinalize()</u> with a <u>cudnn_Backend_convolution_descriptor</u> can have the following return values:

CUDNN_STATUS_BAD_PARAM

An invalid attribute value was encountered. For example:

- Any of the tensor dimensions or strides is not positive.
- The value of the tensor alignment attribute is not divisible by the size of the data type.

CUDNN_STATUS_NOT_SUPPORTED

An unsupported attribute value was encountered. For example:

- ► The data type attribute is CUDNN_DATA_INT8x4, CUDNN_DATA_UINT8x4, or CUDNN DATA INT8x32.
- ► The data type attribute is CUDNN_DATA_INT8 and CUDNN_ATTR_TENSOR_VECTOR_COUNT value is not 1, 4, or 32.

CUDNN STATUS SUCCESS

The descriptor was finalized successfully.

9.3.29. CUDNN_BACKEND_VARIANT_PACK_DESCRIPTOR

Created with

cudnnBackendCreateDescriptor(CUDNN_BACKEND_VARIANT_PACK_DESCRIPTOR, &desc); the cuDNN backend variant pack plan allows users to set up pointers to device buffers to various non-virtual tensors, identified by unique identifiers, of the operation graph, workspace, and computation intermediates.

Attributes

CUDNN ATTR VARIANT PACK UNIQUE IDS

A unique identifier of tensor for each data pointer.

- CUDNN TYPE INT64; zero of more elements.
- Required attribute.

CUDNN ATTR VARIANT PACK DATA POINTERS

Tensor data device pointers.

- ► CUDNN TYPE VOID PTR; zero or more elements.
- Required attribute.

CUDNN_ATTR_VARIANT_PACK_INTERMEDIATES

Intermediate device pointers.

- ► CUDNN_TYPE_VOID PTR; zero or more elements.
- Setting attribute unsupported. Placeholder for support to be added in a future version.

CUDNN ATTR VARIANT PACK WORKSPACE

Workspace to device pointer.

- ► CUDNN TYPE VOID PTR; one element.
- Required attribute.

Finalization

The return values for <u>cudnnBackendFinalize()</u> when called with a cuDNN backend variant pack descriptor is:

```
CUDNN STATUS SUCCESS
```

The descriptor was finalized successfully.

9.4. Use Cases

This section describes some typical use cases of the cuDNN backend convolution API; for example, setting up a simple operation graph, setting up an engine config for that operation graph, and finally setting up an execution plan and executing it with data pointers set in a variant pack descriptor.

9.4.1. Setting Up An Operation Graph For A Grouped Convolution

This use case creates an operation graph with a single grouped 3D convolution forward operation. It starts by setting up the input and output tensors, binding them to a convolution forward operation, and finally setting up an operation graph with a single node.

1. Create tensor descriptors.

```
cudnnBackendDescriptor t xDesc;
cudnnBackendCreateDescriptor(CUDNN_BACKEND_TENSOR_DESCRIPTOR, &xDesc);
cudnnDataType_t dtype = CUDNN DATA FLOAT;
cudnnBackendSetAttribute(xDesc, CUDNN ATTR TENSOR DATA TYPE,
                          CUDNN TYPE DATA TYPE, 1, &dtype);
int64 t xDim[] = {n, g, c, d, h, w};
int64 t xStr[] = {g * c * d * h * w, c *d *h *w, d *h *w, h *w, w, 1};
int64 t xUi = 'x';
int64 t alignment = 4;
cudnnBackendSetAttribute(xDesc, CUDNN ATTR TENSOR DIMENSIONS,
                          CUDNN TYPE INT64, 6, xDim);
cudnnBackendSetAttribute(xDesc, CUDNN ATTR TENSOR STRIDES,
                          CUDNN TYPE \overline{\text{NT}}64, \overline{6}, xStr);
cudnnBackendSetAttribute(xDesc, CUDNN ATTR TENSOR UNIQUE ID,
                          CUDNN TYPE INT64, 1, &xUi);
cudnnBackendSetAttribute(xDesc, CUDNN_ATTR_TENSOR_BYTE_ALIGNMENT,
                          CUDNN TYPE INT64, 1, &alignment);
cudnnBackendFinalize(xDesc);
```

2. Repeat the above step for the convolution filter and output tensor descriptor. The six filter tensor dimensions are [g, k, c, t, r, s] and the six output

tensor dimensions are [n, g, k, o, p, q], respectively. Below, when finalizing a convolution operator to which the tensors are bound, dimension consistency is checked, meaning all n, g, c, k values shared among the three tensors are required to be the same. Otherwise, CUDNN STATUS BAD PARAM status is returned.

For backward compatibility with how tensors are specified in cudnnTensorDescriptor_t and used in convolution API, it is also possible to specify a 5D tensor with the following dimension:

```
    image: [n, g*c, d, h, w]
    filter: [g*k, c, t, r, s]
    response: [n, g*k, o, p, q]
```

In this format, a similar consistency check is performed when finalizing a convolution operator descriptor to which the tensors are bound.

3. Create, set, and finalize a convolution operator descriptor.

```
cudnnBackendDescriptor t cDesc;
int64 t nbDims = 3;
cudnnDataType_t compType = CUDNN_DATA_FLOAT;
cudnnConvolutionMode t mode = CUDNN CONVOLUTION;
int64_t pad[] = \{0, \overline{0}, 0\};
int64 t filterStr[] = {1, 1, 1};
int64 t dilation[] = {1, 1, 1};
cudnnBackendCreateDescriptor(CUDNN BACKEND CONVOLUTION DESCRIPTOR, &cDesc);
cudnnBackendSetAttribute(cDesc, CUDNN ATTR CONVOLUTION SPATIAL DIMS,
                         CUDNN TYPE INT64, 1, &nbDims);
cudnnBackendSetAttribute(cDesc, CUDNN ATTR CONVOLUTION COMP TYPE,
                         CUDNN TYPE DATA TYPE, 1, &compType);
cudnnBackendSetAttribute(cDesc, CUDNN ATTR CONVOLUTION CONV MODE,
                         CUDNN TYPE CONVOLUTION MODE, 1, &mode);
cudnnBackendSetAttribute(cDesc, CUDNN ATTR CONVOLUTION PRE PADDINGS,
                         CUDNN TYPE INT64, nbDims, pad);
cudnnBackendSetAttribute(cDesc, CUDNN ATTR CONVOLUTION POST PADDINGS,
                         CUDNN TYPE INT64, nbDims, pad);
cudnnBackendSetAttribute(cDesc, CUDNN ATTR CONVOLUTION DILATIONS,
                         CUDNN TYPE INT64, nbDims, dilation);
cudnnBackendSetAttribute(cDesc, CUDNN ATTR CONVOLUTION FILTER STRIDES,
                         CUDNN TYPE INT64, nbDims, filterStr);
cudnnBackendFinalize(cDesc);
```

4. Create, set, and finalize a convolution forward operation descriptor.

5. Create, set, and finalize an operation graph descriptor.

9.4.2. Setting Up An Engine Configuration

This use case describes the steps with which users can set up an engine config from a previously finalized operation graph. This is an example in which users would like to use the engine with <code>CUDNN_ATTR_ENGINE_GLOBAL_INDEX 0</code> for this operation graph and does not set any performance knobs.

1. Create, set, and finalize an engine descriptor.

The user can query a finalized engine descriptor with <u>cudnnBackendGetAttribute()</u> API call for its attributes, including the performance knobs that it has. For simplicity, this use case skips this step and assumes the user is setting up an engine config descriptor below without making any changes to performance knobs.

2. Create, set, and finalize an engine config descriptor.

9.4.3. Setting Up And Executing A Plan

This use case describes the steps with which users set up an execution plan with a previously finalized engine config descriptor, set up the data pointer variant pack, and finally execute the plan.

1. Create, set, and finalize an execution plan descriptor. Obtain workspace size to allocate.

```
cudnnBackendDescriptor_t plan;
cudnnBackendCreateDescriptor(CUDNN_BACKEND_EXECUTION_PLAN_DESCRIPTOR, &plan);
cudnnBackendSetAttribute(plan, CUDNN_ATTR_EXECUTION_PLAN_ENGINE_CONFIG,
```

2. Create, set and finalize a variant pack descriptor.

3. Execute the plan with a variant pack.

```
cudnnBackendExecute(handle, plan, varpack);
```

Notice

This document is provided for information purposes only and shall not be regarded as a warranty of a certain functionality, condition, or quality of a product. NVIDIA Corporation ("NVIDIA") makes no representations or warranties, expressed or implied, as to the accuracy or completeness of the information contained in this document and assumes no responsibility for any errors contained herein. NVIDIA shall have no liability for the consequences or use of such information or for any infringement of patents or other rights of third parties that may result from its use. This document is not a commitment to develop, release, or deliver any Material (defined below), code, or functionality.

NVIDIA reserves the right to make corrections, modifications, enhancements, improvements, and any other changes to this document, at any time without notice

Customer should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

NVIDIA products are sold subject to the NVIDIA standard terms and conditions of sale supplied at the time of order acknowledgement, unless otherwise agreed in an individual sales agreement signed by authorized representatives of NVIDIA and customer ("Terms of Sale"). NVIDIA hereby expressly objects to applying any customer general terms and conditions with regards to the purchase of the NVIDIA product referenced in this document. No contractual obligations are formed either directly or indirectly by this document.

NVIDIA products are not designed, authorized, or warranted to be suitable for use in medical, military, aircraft, space, or life support equipment, nor in applications where failure or malfunction of the NVIDIA product can reasonably be expected to result in personal injury, death, or property or environmental damage. NVIDIA accepts no liability for inclusion and/or use of NVIDIA products in such equipment or applications and therefore such inclusion and/or use is at customer's own risk.

NVIDIA makes no representation or warranty that products based on this document will be suitable for any specified use. Testing of all parameters of each product is not necessarily performed by NVIDIA. It is customer's sole responsibility to evaluate and determine the applicability of any information contained in this document, ensure the product is suitable and fit for the application planned by customer, and perform the necessary testing for the application in order to avoid a default of the application or the product. Weaknesses in customer's product designs may affect the quality and reliability of the NVIDIA product and may result in additional or different conditions and/or requirements beyond those contained in this document. NVIDIA accepts no liability related to any default, damage, costs, or problem which may be based on or attributable to: (i) the use of the NVIDIA product in any manner that is contrary to this document or (ii) customer product designs.

No license, either expressed or implied, is granted under any NVIDIA patent right, copyright, or other NVIDIA intellectual property right under this document. Information published by NVIDIA regarding third-party products or services does not constitute a license from NVIDIA to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property rights of the third party, or a license from NVIDIA under the patents or other intellectual property rights of NVIDIA.

Reproduction of information in this document is permissible only if approved in advance by NVIDIA in writing, reproduced without alteration and in full compliance with all applicable export laws and regulations, and accompanied by all associated conditions, limitations, and notices.

THIS DOCUMENT AND ALL NVIDIA DESIGN SPECIFICATIONS, REFERENCE BOARDS, FILES, DRAWINGS, DIAGNOSTICS, LISTS, AND OTHER DOCUMENTS (TOGETHER AND SEPARATELY, "MATERIALS") ARE BEING PROVIDED "AS IS." NVIDIA MAKES NO WARRANTIES, EXPRESSED, IMPLIED, STATUTORY, OR OTHERWISE WITH RESPECT TO THE MATERIALS, AND EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF NONINFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL NVIDIA BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF NVIDIA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Notwithstanding any damages that customer might incur for any reason whatsoever, NVIDIA's aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms of Sale for the product.

Arm

Arm, AMBA and Arm Powered are registered trademarks of Arm Limited. Cortex, MPCore and Mali are trademarks of Arm Limited. "Arm" is used to represent Arm Holdings plc; its operating company Arm Limited; and the regional subsidiaries Arm Inc.; Arm KK; Arm Korea Limited.; Arm Taiwan Limited; Arm France SAS; Arm Consulting (Shanghai) Co. Ltd.; Arm Germany GmbH; Arm Embedded Technologies Pvt. Ltd.; Arm Norway, AS and Arm Sweden AB.

HDMI

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Blackberry/QNX

Copyright © 2020 BlackBerry Limited. All rights reserved.

Trademarks, including but not limited to BLACKBERRY, EMBLEM Design, QNX, AVIAGE, MOMENTICS, NEUTRINO and QNX CAR are the trademarks or registered trademarks of BlackBerry Limited, used under license, and the exclusive rights to such trademarks are expressly reserved.

Google

Android, Android TV, Google Play and the Google Play logo are trademarks of Google, Inc.



Trademarks

NVIDIA, the NVIDIA logo, and BlueField, CUDA, DALI, DRIVE, Hopper, JetPack, Jetson AGX Xavier, Jetson Nano, Maxwell, NGC, Nsight, Orin, Pascal, Quadro, Tegra, TensorRT, Triton, Turing and Volta are trademarks and/or registered trademarks of NVIDIA Corporation in the United States and other countries. Other company and product names may be trademarks of the respective companies with which they are associated.

Copyright

 $^{\hbox{\scriptsize @}}$ 2017-2024 NVIDIA Corporation & affiliates. All rights reserved.

