



# GRID VIRTUAL GPU

DU-06920-001 | April 2016

**User Guide**



## DOCUMENT CHANGE HISTORY

DU-06920-001

Version	Date	Authors	Description of Change
0.3	7/1/2013	AC	Initial release for vGPU private beta
0.9	9/1/2013	AC	Updated for vGPU Tech Preview.
0.95	11/8/2013	AC	vGPU Tech Preview R2
1.0	12/13/2013	AC	vGPU 1.0 RTM
1.1	3/31/2014	AC	vGPU 1.1 RTM
1.15	7/1/2014	AC	vGPU 1.2 Tech Preview
1.2	9/30/2014	AC	vGPU 1.2 RTM
1.4	5/11/2015	Avi	vGPU 1.4 RTM
1.45	7/10/2015	Avi	vGPU 1.4 RTM R2
2.0	9/1/2015	AC	vGPU 2.0
3.0	4/4/2016	PD	vGPU 3.0

<b>Chapter 1. Introduction</b>	<b>1</b>
1.1 Architecture	1
1.2 Supported GPUs	3
1.2.1 Virtual GPU types	3
1.2.2 Homogeneous virtual GPUs	5
1.3 Guest OS Support	6
1.3.1 Windows	6
1.3.2 Linux	6
1.4 Features	6
<b>Chapter 2. Getting Started</b>	<b>7</b>
2.1 Citrix XenServer	7
2.1.1 Prerequisites	7
2.1.2 Installing Citrix XenServer and XenCenter	8
2.1.3 Installing the NVIDIA Virtual GPU Manager for XenServer	8
2.1.4 Configuring a VM with Virtual GPU	12
2.1.5 Changing the Mode of a Tesla M60 or M6 GPU	13
2.1.6 Booting the VM and Installing Drivers	13
2.1.7 Applying a vGPU license	15
2.1.8 Removing a VM's vGPU configuration	15
2.2 VMware vSphere	17
2.2.1 Prerequisites	17
2.2.2 Installing VMware vSphere	17
2.2.3 Installing the NVIDIA Virtual GPU Manager for vSphere	17
2.2.4 Configuring a VM with Virtual GPU	20
2.2.5 Changing the Mode of a Tesla M60 or M6 GPU	21
2.2.6 Booting the VM and Installing Drivers	22
2.2.7 Applying a vGPU license	23
2.2.8 Removing a VM's vGPU configuration	23
2.2.9 Modifying GPU assignment for vGPU-Enabled VMs	23
2.3 vGPU Licensing on Windows	24
<b>Chapter 3. Using vGPU on Linux</b>	<b>25</b>
3.1 Installing vGPU drivers	25
3.1.1 Prerequisites	25
3.1.2 Running the driver installer	26
3.2 vGPU Licensing on Linux	28
<b>Chapter 4. Performance monitoring</b>	<b>30</b>
4.1 Using nvidia-smi	30
4.2 Using Citrix XenCenter	32
<b>Chapter 5. XenServer vGPU Management</b>	<b>33</b>
5.1 Management objects for GPUs	33
5.1.1 pgpu	33
5.1.2 vgpu-type	35
5.1.3 gpu-group	36
5.1.4 vgpu	37
5.2 Creating a vGPU using xe	37

5.3	Controlling vGPU allocation .....	38
5.3.1	GPU allocation policy.....	38
5.3.2	Determining the physical GPU that a virtual GPU is resident on.....	39
5.3.3	Controlling the vGPU types enabled on specific physical GPUs .....	40
5.3.4	Creating vGPUs on specific physical GPUs.....	42
5.4	Cloning vGPU-enabled VMs .....	44
5.5	Using GPU pass-through.....	44
<b>Chapter 6.</b>	<b>XenServer Performance Tuning.....</b>	<b>47</b>
6.1	XenServer tools .....	47
6.2	Using remote graphics .....	47
6.2.1	Disabling console VGA .....	48
6.4	Allocation strategies .....	49
6.4.1	NUMA considerations .....	49
6.4.2	Maximizing performance .....	50
<b>Chapter 7.</b>	<b>Troubleshooting .....</b>	<b>51</b>
7.1	Known issues .....	51
7.2	Troubleshooting steps .....	51
7.2.1	Verify the NVIDIA kernel driver is loaded .....	51
7.2.2	Verify that nvidia-smi works .....	52
7.2.3	NVIDIA kernel driver output .....	52
7.2.4	GRID Virtual GPU Manager messages.....	52
7.3	Filing a bug report .....	54
7.3.1	nvidia-bug-report.sh .....	54
7.3.2	XenServer status report .....	54
<b>Appendix A.</b>	<b>XenServer Basics .....</b>	<b>56</b>
A.1	Opening a dom0 shell.....	56
A.1.1	Accessing the dom0 shell via XenCenter .....	56
A.1.2	Accessing the dom0 shell using ssh .....	57
A.2	Copying files to dom0.....	57
A.2.1	Copying files using scp .....	57
A.2.2	Copying files via a CIFS-mounted filesystem .....	58
A.3	Determining a VM's UUID .....	58
A.3.1	Using xe vm-list .....	59
A.3.2	Using XenCenter .....	59
A.4	Using more than two vCPUs with Windows client VMs .....	60
A.5	Pinning VMs to a specific CPU socket and cores.....	60
A.6	Changing dom0 vCPUs and pinning .....	62
A.7	Determining GPU locality .....	63

## LIST OF FIGURES

Figure 1 GRID vGPU System Architecture .....	2
Figure 2 GRID vGPU Internal Architecture.....	2
Figure 3 Example vGPU configurations on GRID K2.....	5
Figure 4 GRID vGPU Manager supplemental pack selected in XenCenter .....	10
Figure 5 Successful installation of GRID vGPU Manager supplemental pack.....	11
Figure 6 Using XenCenter to configure a VM with a vGPU .....	13
Figure 7 NVIDIA driver installation in the guest VM.....	14
Figure 8 Verifying NVIDIA driver operation using NVIDIA Control Panel .....	15
Figure 9 Using XenCenter to remove a vGPU configuration from a VM.....	16
Figure 10 VM settings for vGPU .....	21
Figure 11 Verifying NVIDIA driver operation using NVIDIA Control Panel.....	22
Figure 12 NVIDIA Linux driver installer .....	26
Figure 13 Update xorg.conf settings .....	27
Figure 14 Verifying operation with nvidia-settings.....	28
Figure 15 Sample gridd.conf for GRID vGPU .....	29
Figure 16 Using XenCenter to monitor GPU performance .....	32
Figure 17 Physical GPU display in XenCenter.....	34
Figure 18 Modifying GPU placement policy in XenCenter .....	39
Figure 19 Editing a GPU's enabled vGPU types using XenCenter .....	41
Figure 20 Using a custom GPU group within XenCenter .....	43
Figure 21 Cloning a VM using XenCenter .....	44
Figure 22 Using XenCenter to configure a passthrough GPU.....	45
Figure 23 A NUMA server platform .....	49
Figure 24 Including NVIDIA logs in server status report.....	55
Figure 25 Connecting to the dom0 shell via XenCenter .....	57
Figure 26 Using XenCenter to determine a VM's UUID .....	60

## LIST OF TABLES

Table 1 GRID K1 and K2 Virtual GPU types .....	3
Table 2 Tesla M60 and M6 Virtual GPU types .....	4
Table 3 Virtual GPUs supporting Linux .....	6
Table 4 Virtual GPUs supporting Linux .....	25

# Chapter 1. INTRODUCTION

NVIDIA GRID™ vGPU™ enables multiple virtual machines (VMs) to have simultaneous, direct access to a single physical GPU, using the same NVIDIA graphics drivers that are deployed on non-virtualized Operating Systems. By doing this, GRID vGPU provides VMs with unparalleled graphics performance and application compatibility, together with the cost-effectiveness and scalability brought about by sharing a GPU among multiple workloads.

This chapter introduces the architecture and features of vGPU. Chapter 2 provides a step-by-step guide to getting started with vGPU on Citrix XenServer and VMware ESXi. Chapter 3 describes using vGPU with Linux VMs. Chapters 4 and 5 cover vGPU management and performance optimization on XenServer, and Chapter 6 provides guidance on troubleshooting.

## 1.1 ARCHITECTURE

GRID vGPU's high-level architecture is illustrated in Figure 1. Under the control of NVIDIA's GRID Virtual GPU Manager running under the hypervisor, GRID physical GPUs are capable of supporting multiple virtual GPU devices (vGPUs) that can be assigned directly to guest VMs.

Guest VMs use GRID virtual GPUs in the same manner as a physical GPU that has been passed through by the hypervisor: an NVIDIA driver loaded in the guest VM provides direct access to the GPU for performance-critical fast paths, and a paravirtualized interface to the GRID Virtual GPU Manager is used for non-performant management operations.

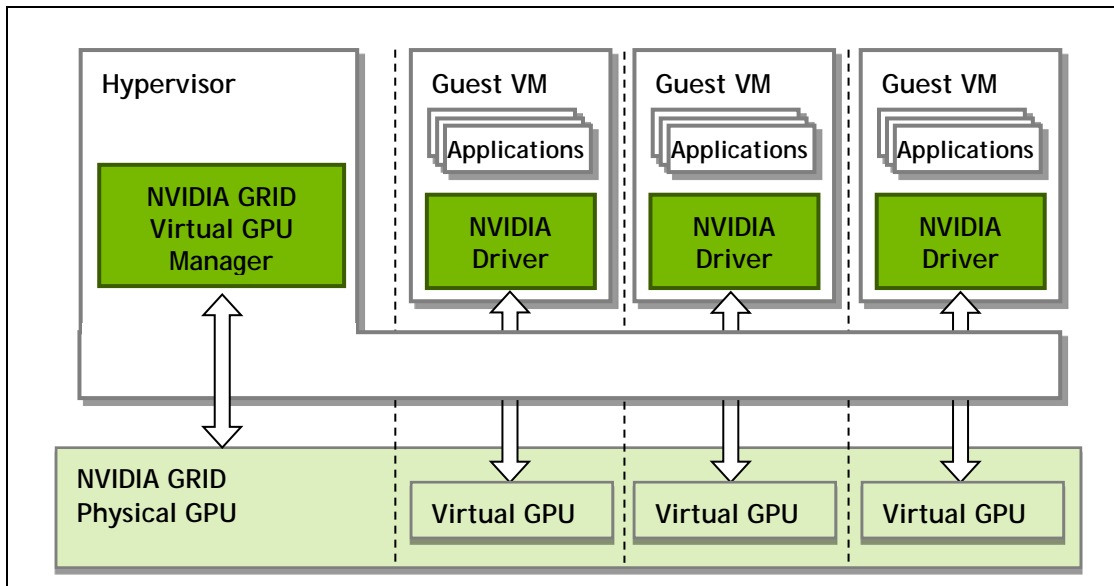


Figure 1 GRID vGPU System Architecture

GRID vGPUs are analogous to conventional GPUs, having a fixed amount of GPU framebuffer, and one or more virtual display outputs or “heads”. The vGPU’s framebuffer is allocated out of the physical GPU’s framebuffer at the time the vGPU is created, and the vGPU retains exclusive use of that framebuffer until it is destroyed.

All vGPUs resident on a physical GPU share access to the GPU’s engines including the graphics (3D), video decode, and video encode engines.

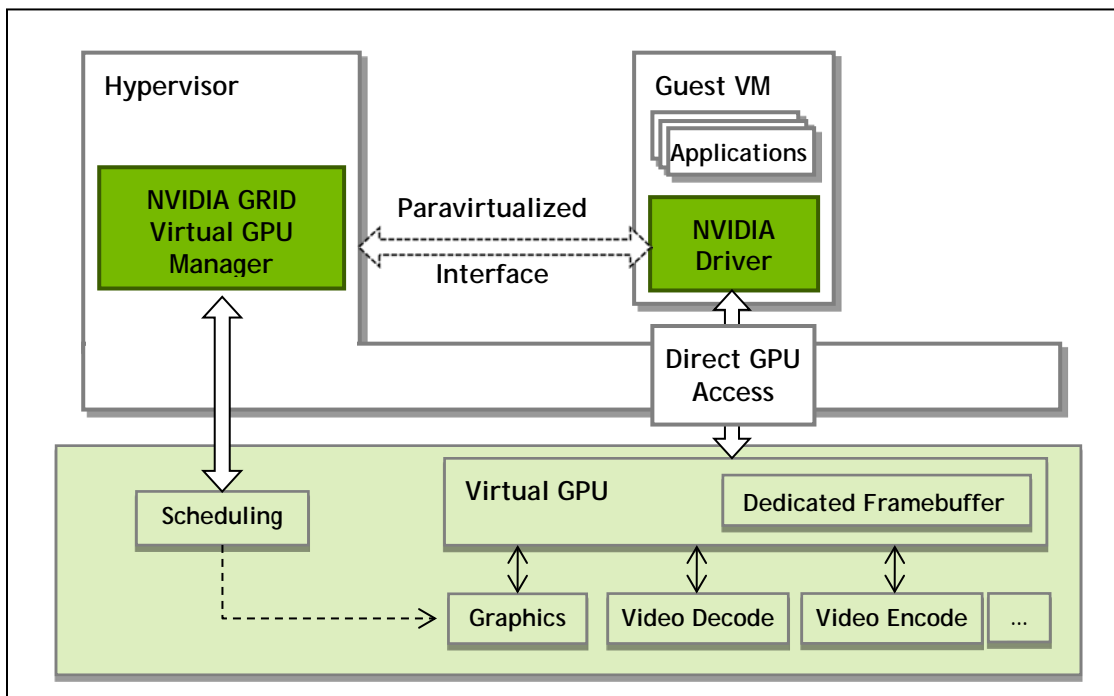


Figure 2 GRID vGPU Internal Architecture



## 1.2 SUPPORTED GPUS

GRID vGPU is supported on NVIDIA GRID K1, K2, and is available as a licensed feature on Tesla M60, M6. Refer to the release notes for a list of recommended server platforms to use with GRID GPUs.

### 1.2.1 Virtual GPU types

GRID K1, K2, and Tesla M60 each implement multiple physical GPUs; K2 and M60 have 2 GPUs onboard; GRID K1 has 4 GPUs. Tesla M6 implements a single physical GPU.

Each physical GPU can support several different types of virtual GPU. Virtual GPU types have a fixed amount of framebuffer, number of supported display heads and maximum resolutions, and are targeted at different classes of workload

The virtual GPU types supported by GRID GPUs are defined in Table 1 and Table 2.

Due to their differing resource requirements, the maximum number of vGPUs that can be created simultaneously on a physical GPU varies according to the vGPU type. For example, a GRID K2 physical GPU can support up to 4 K240Q vGPUs on each of its two physical GPUs, for a total of 8 vGPUs, but only 2 K260Qs vGPUs, for a total of 4 vGPUs.

Card	Physical GPUs	GRID Virtual GPU	Intended Use Case	Frame Buffer (Mbytes)	Virtual Display Heads	Max Resolution per Display Head	Maximum vGPUs	
							Per GPU	Per Board
GRID K1	4	K180Q	Power User	4096	4	2560x1600	1	4
		K160Q	Power User	2048	4	2560x1600	2	8
		K140Q	Power User	1024	2	2560x1600	4	16
		K120Q	Power User	512	2	2560x1600	8	32
		K100	Knowledge Worker	256	2	1920x1200	8	32
GRID K2	2	K280Q	Designer	4096	4	2560x1600	1	2
		K260Q	Power User, Designer	2048	4	2560x1600	2	4
		K240Q	Power User, Designer	1024	2	2560x1600	4	8
		K220Q	Power User, Designer	512	2	2560x1600	8	16
		K200	Knowledge Worker	256	2	1920x1200	8	16

Table 1 GRID K1 and K2 Virtual GPU types

Card	Physical GPUs	GRID Virtual GPU	Intended Use Case	Frame Buffer (Mbytes)	Virtual Display Heads	Max Resolution per Display Head	Maximum vGPUs	
							Per GPU	Per Board
Tesla M60	2	M60-8Q	Designer	8192	4	4096x2160	1	2
		M60-4Q	Designer	4096	4	4096x2160	2	4
		M60-2Q	Designer	2048	4	4096x2160	4	8
		M60-1Q	Power User, Designer	1024	2	4096x2160	8	16
		M60-0Q	Power User, Designer	512	2	2560x1600	16	32
		M60-1B	Power User	1024	4	2560x1600	8	16
		M60-0B	Power User	512	2	2560x1600	16	32
		M60-8A	Virtual Application User	8192	1	1280x1024	1	2
		M60-4A	Virtual Application User	4096	1	1280x1024	2	4
		M60-2A	Virtual Application User	2048	1	1280x1024	4	8
M60-1A	Virtual Application User	1024	1	1280x1024	8	16		
Tesla M6	1	M6-8Q	Designer	8192	4	4096x2160	1	1
		M6-4Q	Designer	4096	4	4096x2160	2	2
		M6-2Q	Designer	2048	4	4096x2160	4	4
		M6-1Q	Power User, Designer	1024	2	4096x2160	8	8
		M6-0Q	Power User, Designer	512	2	2560x1600	16	16
		M6-1B	Power User	1024	4	2560x1600	8	8
		M6-0B	Power User	512	2	2560x1600	16	16
		M6-8A	Virtual Application User	8192	1	1280x1024	1	1
		M6-4A	Virtual Application User	4096	1	1280x1024	2	2
		M6-2A	Virtual Application User	2048	1	1280x1024	4	4
M6-1A	Virtual Application User	1024	1	1280x1024	8	8		

Table 2 Tesla M60 and M6 Virtual GPU types



**Note:** GRID vGPU is a licensed feature on Tesla M6/M60. A software license is required to use full vGPU features within the guest VM. For more details, see sections 2.3, 3.2, and the GRID Licensing User Guide.

Virtualized applications are rendered in an off-screen buffer. Therefore, the maximum resolution for the A series of GRID vGPUs is independent of the maximum resolution of the display head.

## 1.2.2 Homogeneous virtual GPUs

This release of GRID vGPU supports homogeneous virtual GPUs: at any given time, the virtual GPUs resident on a single physical GPU must be all of the same type. However, this restriction doesn't extend across physical GPUs on the same card. Each physical GPU on a K1 or K2 may host different types of virtual GPU at the same time.

For example, a GRID K2 card has two physical GPUs, and can support five types of virtual GPU; GRID K200, K220Q, K240Q, K260Q, and K280Q. Figure 3 shows some example virtual GPU configurations on K2:

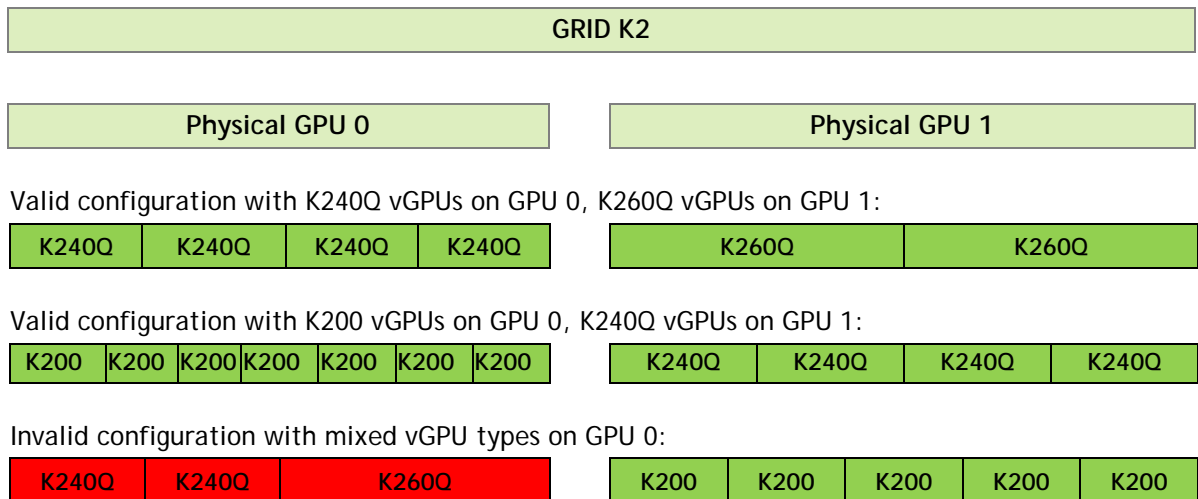


Figure 3 Example vGPU configurations on GRID K2

## 1.3 GUEST OS SUPPORT

This release of GRID vGPU includes support for the following guest VM operating systems. Refer to the driver release notes for further information on supported configurations:

### 1.3.1 Windows

- ▶ Windows 7 (32/64-bit)
- ▶ Windows 8 (32/64-bit), Windows 8.1 (32/64-bit)
- ▶ Windows 10 (32/64-bit)
- ▶ Windows Server 2008 R2
- ▶ Windows Server 2012 R2

### 1.3.2 Linux

64-bit Linux guest VMs are supported on the following virtual GPU types:

Tesla M60	M60-8Q	Tesla M6	M6-8Q
	M60-4Q		M6-4Q
	M60-2Q		M6-2Q
	M60-1Q		M6-1Q
	M60-0Q		M6-0Q

Table 3 Virtual GPUs supporting Linux

## 1.4 FEATURES

This release of GRID vGPU includes support for:

- ▶ DirectX 12, Direct2D, and DirectX Video Acceleration (DXVA)
- ▶ OpenGL 4.5.
- ▶ NVIDIA GRID SDK (remote graphics acceleration).

CUDA and OpenCL are supported on these virtual GPUs:

- ▶ GRID M60-8Q, M6-8Q

# Chapter 2. GETTING STARTED

This chapter provides a step-by-step guide to booting a Windows VM on Citrix XenServer and VMware vSphere with NVIDIA Virtual GPU.

## 2.1 CITRIX XENSERVER

These setup steps assume familiarity with the XenServer skills covered in Appendix A.

### 2.1.1 Prerequisites

Before proceeding, ensure that you have these prerequisites:

- ▶ NVIDIA GRID K1,K2, or Tesla M6, M60 cards.
- ▶ A server platform capable of hosting XenServer and the NVIDIA GRID or Tesla cards. Refer to the release notes for a list of recommended servers.
- ▶ The NVIDIA GRID vGPU software package for Citrix XenServer, consisting of the GRID Virtual GPU Manager for XenServer, and NVIDIA GRID vGPU drivers for Windows, 32- and 64-bit.
- ▶ Citrix XenServer 6.2 SP1 with applicable hotfixes, or later, obtainable from Citrix.
- ▶ An installed Windows VM to be enabled with vGPU.

To run Citrix XenDesktop with virtual machines running NVIDIA Virtual GPU, you will also need:

- ▶ Citrix XenDesktop 7.1 or later, obtainable from Citrix.



Note: Earlier versions of Citrix XenServer and XenDesktop are not supported for use with NVIDIA Virtual GPU.

Review the release notes and known issues for GRID Virtual GPU before proceeding with installation.

## 2.1.2 Installing Citrix XenServer and XenCenter

Install Citrix XenServer and any applicable patches, following Citrix's installation instructions. Install the Citrix XenCenter management GUI on a PC.

## 2.1.3 Installing the NVIDIA Virtual GPU Manager for XenServer

The NVIDIA Virtual GPU Manager runs in XenServer's dom0. It is provided as a RPM file for XenServer 6.2 SP1 and as a Supplemental Pack for XenServer 6.5 SP1.



**Note:** there are separate Virtual GPU Manager files for different versions of XenServer. Consult the release notes for guidance on which package to use for each version of XenServer.

### 2.1.3.1 RPM package installation

The RPM file must be copied to XenServer's dom0 prior to installation (see A.2, Copying files to dom0). Use the `rpm` command to install the package:

```
[root@xenserver ~]# rpm -iv NVIDIA-vGPU-xenserver-6.2-361.40.i386.rpm
Preparing packages for installation...
NVIDIA-vGPU-xenserver-6.2-361.40
[root@xenserver ~]#
```

Reboot the XenServer platform:

```
[root@xenserver ~]# shutdown -r now

Broadcast message from root (pts/1) (Fri Dec 6 14:24:11 2013):

The system is going down for reboot NOW!
[root@xenserver ~]#
```


### 2.1.3.2 Update RPM package

If an existing GRID Virtual GPU Manager is already installed on the system and you wish to upgrade, follow these steps:

- ▶ Shut down any VMs that are using GRID vGPU.

- Install the new package using the `-U` option to the `rpm` command, to upgrade from the previously installed package:

```
[root@xenserver ~]# rpm -Uv NVIDIA-vGPU-xenserver-6.2-361.40.i386.rpm
Preparing packages for installation...
NVIDIA-vGPU-xenserver-6.2-361.40
[root@xenserver ~]#
```

 **Note:** You can query the version of the current GRID package using the `rpm -q` command:

```
[root@xenserver ~]# rpm -q NVIDIA-vGPU-xenserver
NVIDIA-vGPU-xenserver-6.2-361.40
[root@xenserver ~]#
```

If an existing NVIDIA GRID package is already installed and you don't select the upgrade (`-U`) option when installing a newer GRID package, the `rpm` command will return many conflict errors.

```
Preparing packages for installation...
```

```
file /usr/bin/nvidia-smi from install of NVIDIA-vGPU-xenserver-6.2-361.40.i386 conflicts with file from package NVIDIA-vGPU-xenserver-6.2-331.59.i386
```

```
file /usr/lib/libnvidia-ml.so from install of NVIDIA-vGPU-xenserver-6.2-361.40.i386 conflicts with file from package NVIDIA-vGPU-xenserver-6.2-331.59.i386
```

```
...
```

Reboot the XenServer platform:

```
[root@xenserver ~]# shutdown -r now

Broadcast message from root (pts/1) (Fri Dec 6 14:24:11 2013):

The system is going down for reboot NOW!
[root@xenserver ~]#
```



**Note:** GRID Virtual GPU Manager and Guest VM drivers must be matched from the same release. After updating vGPU Manager, guest VMs will boot with vGPU disabled until their guest vGPU driver is updated to match the vGPU Manager version. Consult the release notes for further details.

### 2.1.3.3 Supplemental Pack installation / update

XenCenter can be used to install / update Supplemental Packs on XenServer hosts. The NVIDIA GRID Virtual GPU Manager supplemental pack is provided as an ISO.

**Note:** NVIDIA GRID Virtual GPU Manager supplemental pack installation / update is supported from XenServer 6.5 SP1 and XenCenter version 6.5 (build 6.5.2.2477) onwards.

- ▶ Select **Install Update...** from the **Tools** menu
- ▶ Click **Next** after going through the instructions on the **Before You Start** section
- ▶ Click **Add** on the **Select Update** section and open NVIDIA's XenServer Supplemental Pack ISO

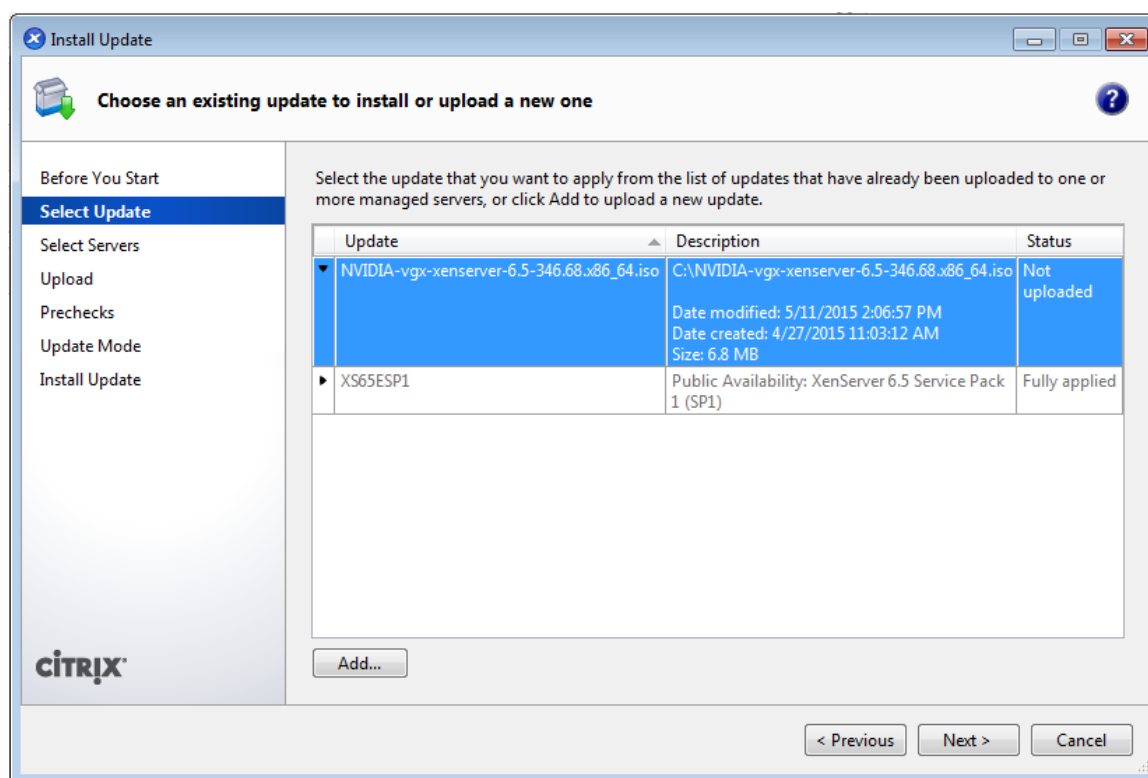


Figure 4 GRID vGPU Manager supplemental pack selected in XenCenter

- ▶ Click **Next** on the **Select Update** section
- ▶ In the **Select Servers** section select all the XenServer hosts on which the Supplemental Pack should be installed on and click **Next**
- ▶ Click **Next** on the **Upload** section once the Supplemental Pack has been uploaded to all the XenServer hosts



- ▶ Click Next on the Prechecks section
- ▶ Click Install Update on the Update Mode section
- ▶ Click Finish on the Install Update section

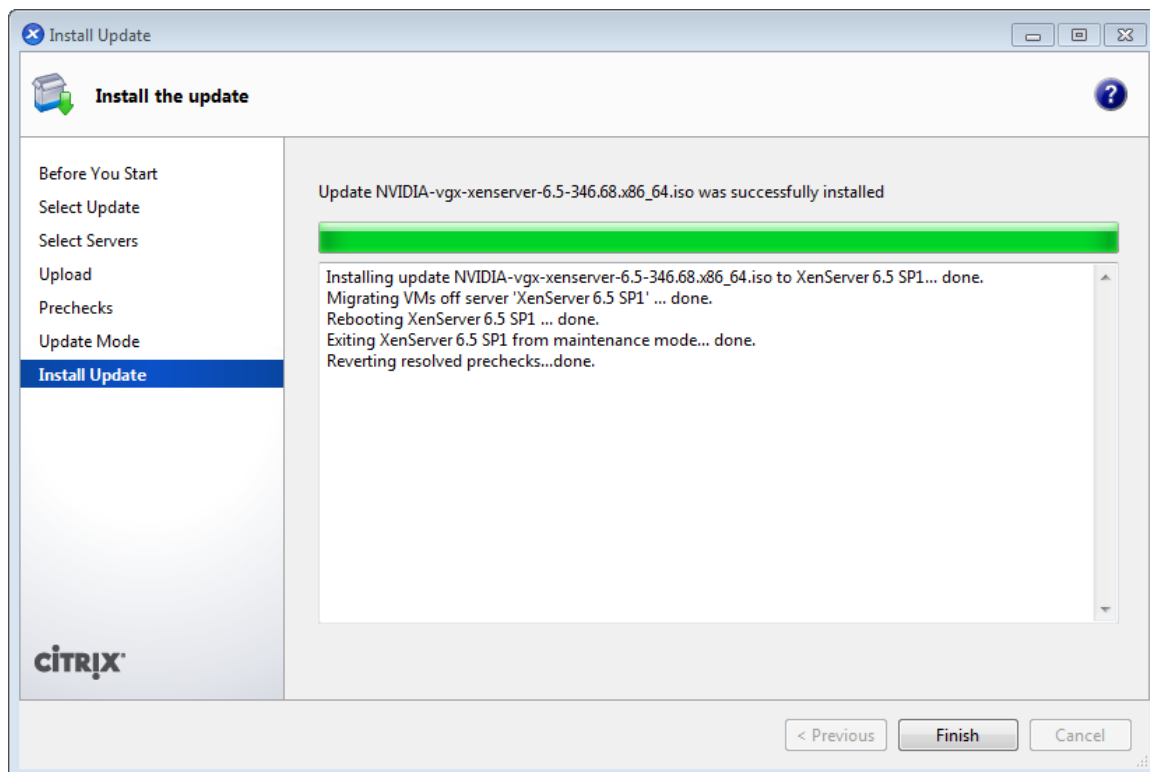


Figure 5 Successful installation of GRID vGPU Manager supplemental pack

### 2.1.3.4 Verifying installation

After the XenServer platform has rebooted, verify that the GRID package installed and loaded correctly by checking for the NVIDIA kernel driver in the list of kernel loaded modules.

```
[root@xenserver ~]# lsmod | grep nvidia
nvidia                9522927  0
i2c_core              20294    2  nvidia,i2c_i801
[root@xenserver ~]#
```

Verify that the NVIDIA kernel driver can successfully communicate with the GRID physical GPUs in your system by running the `nvidia-smi` command, which should produce a listing of the GPUs in your platform:

```
[root@xenserver ~]# nvidia-smi
```

```

Mon Nov 10 18:46:50 2014
+-----+
| NVIDIA-SMI 361.40      Driver Version: 361.40      |
+-----+-----+
| GPU  Name                | Bus-Id      Disp. | Volatile Uncorr. ECC |
| Fan  Temp  Perf  Pwr:Usage/Cap | Memory-Usage | GPU-Util  Compute M. |
+-----+-----+-----+-----+-----+-----+
|  0  GRID K1              | 0000:04:00.0  Off |          0%          |
| N/A  27C   P0    13W / 31W | 0%  9MB / 4095MB |          0%          |
+-----+-----+-----+-----+-----+
|  1  GRID K1              | 0000:05:00.0  Off |          0%          |
| N/A  25C   P0    13W / 31W | 0%  9MB / 4095MB |          0%          |
+-----+-----+-----+-----+-----+
|  2  GRID K1              | 0000:06:00.0  Off |          0%          |
| N/A  21C   P0    13W / 31W | 0%  9MB / 4095MB |          0%          |
+-----+-----+-----+-----+-----+
|  3  GRID K1              | 0000:07:00.0  Off |          0%          |
| N/A  23C   P0    13W / 31W | 0%  9MB / 4095MB |          0%          |
+-----+-----+-----+-----+-----+
|  4  GRID K1              | 0000:86:00.0  Off |          0%          |
| N/A  24C   P0    13W / 31W | 0%  9MB / 4095MB |          0%          |
+-----+-----+-----+-----+-----+
|  5  GRID K1              | 0000:87:00.0  Off |          0%          |
| N/A  24C   P0    13W / 31W | 0%  9MB / 4095MB |          0%          |
+-----+-----+-----+-----+-----+
|  6  GRID K1              | 0000:88:00.0  Off |          0%          |
| N/A  25C   P0    13W / 31W | 0%  9MB / 4095MB |          0%          |
+-----+-----+-----+-----+-----+
|  7  GRID K1              | 0000:89:00.0  Off |          0%          |
| N/A  25C   P0    12W / 31W | 0%  9MB / 4095MB |          0%          |
+-----+-----+-----+-----+-----+

+-----+-----+-----+-----+-----+-----+
| Compute processes:                GPU Memory |
| GPU      PID  Process name          Usage      |
+-----+-----+-----+-----+-----+-----+
| No running compute processes found |
+-----+-----+-----+-----+-----+

[root@xenserver ~]#

```

The `nvidia-smi` command is described in more detail in section 4.1.

If `nvidia-smi` fails to run or doesn't produce the expected output for all the NVIDIA GPUs in your system, see Chapter 6 for troubleshooting steps.

## 2.1.4 Configuring a VM with Virtual GPU

XenServer supports configuration and management of virtual GPUs using XenCenter, or the `xe` command line tool that is run in a XenServer dom0 shell. Basic configuration using XenCenter is described in the following sections. Command line management using `xe` is described in Chapter 6.

To configure a VM to use virtual GPU, first ensure the VM is powered off, then right-click on the VM in XenCenter, select "Properties" to open the VM's properties, and

select the “GPU” property. The available GPU types are listed in the GPU type dropdown:

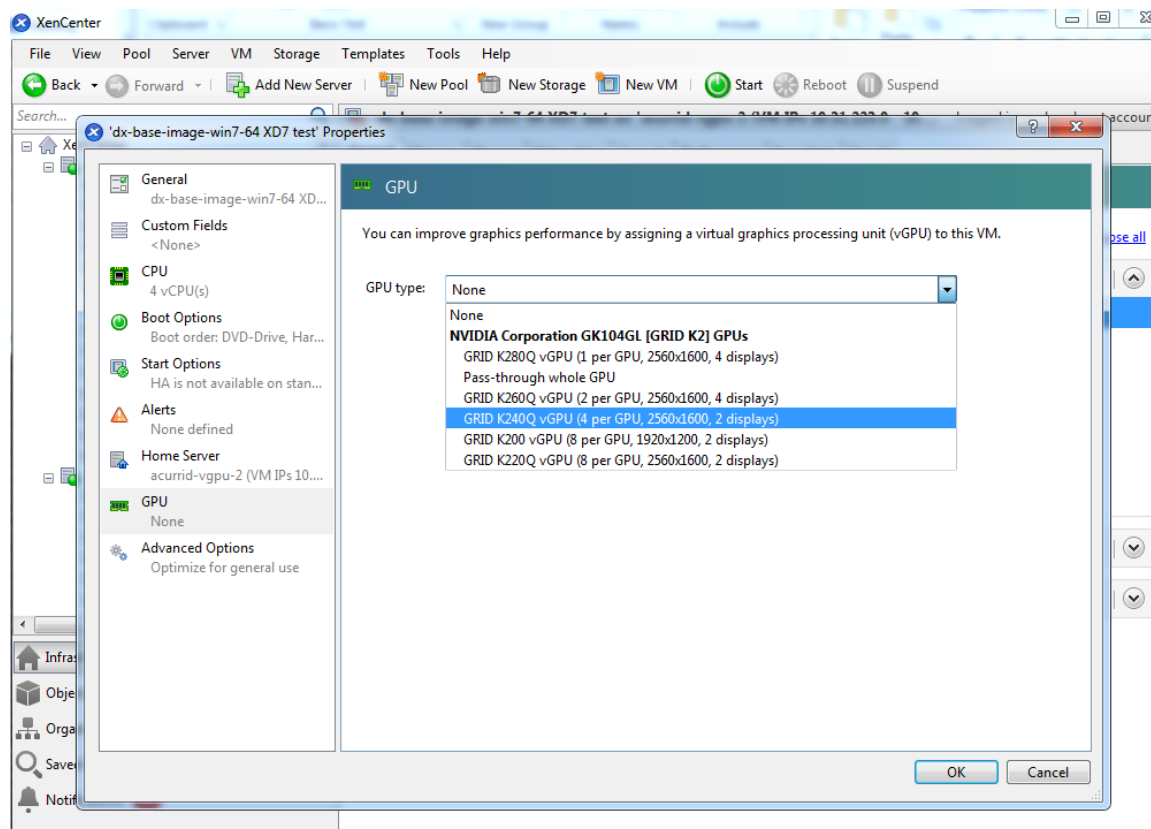


Figure 6 Using XenCenter to configure a VM with a vGPU

## 2.1.5 Changing the Mode of a Tesla M60 or M6 GPU

Tesla M60 GPUs and M6 GPUs support compute mode and graphics mode. GRID vGPU requires that the Tesla M60 GPUs and M6 GPUs operate in graphics mode. However, by default, these GPUs are supplied in compute mode.

If you are using a Tesla M6 or M60 GPU, you must change the mode of GPU to graphics mode. To change the mode of a GPU, use the `gpumodeswitch` tool as explained in [gpumodeswitch User Guide](#).

## 2.1.6 Booting the VM and Installing Drivers

Once you have configured a VM with a vGPU, start the VM, either from XenCenter or by using `xe vm-start` in a `dom0` shell.

Viewing the VM’s console in XenCenter, the VM should boot to a standard Windows desktop in VGA mode at 800x600 resolution. The Windows screen resolution control panel may be used to increase the resolution to other standard resolutions, but to fully

enable vGPU operation, as for a physical NVIDIA GPU, the NVIDIA driver must be installed.

- ▶ Copy the 32- or 64-bit NVIDIA Windows driver package to the guest VM and execute it to unpack and run the driver installer:

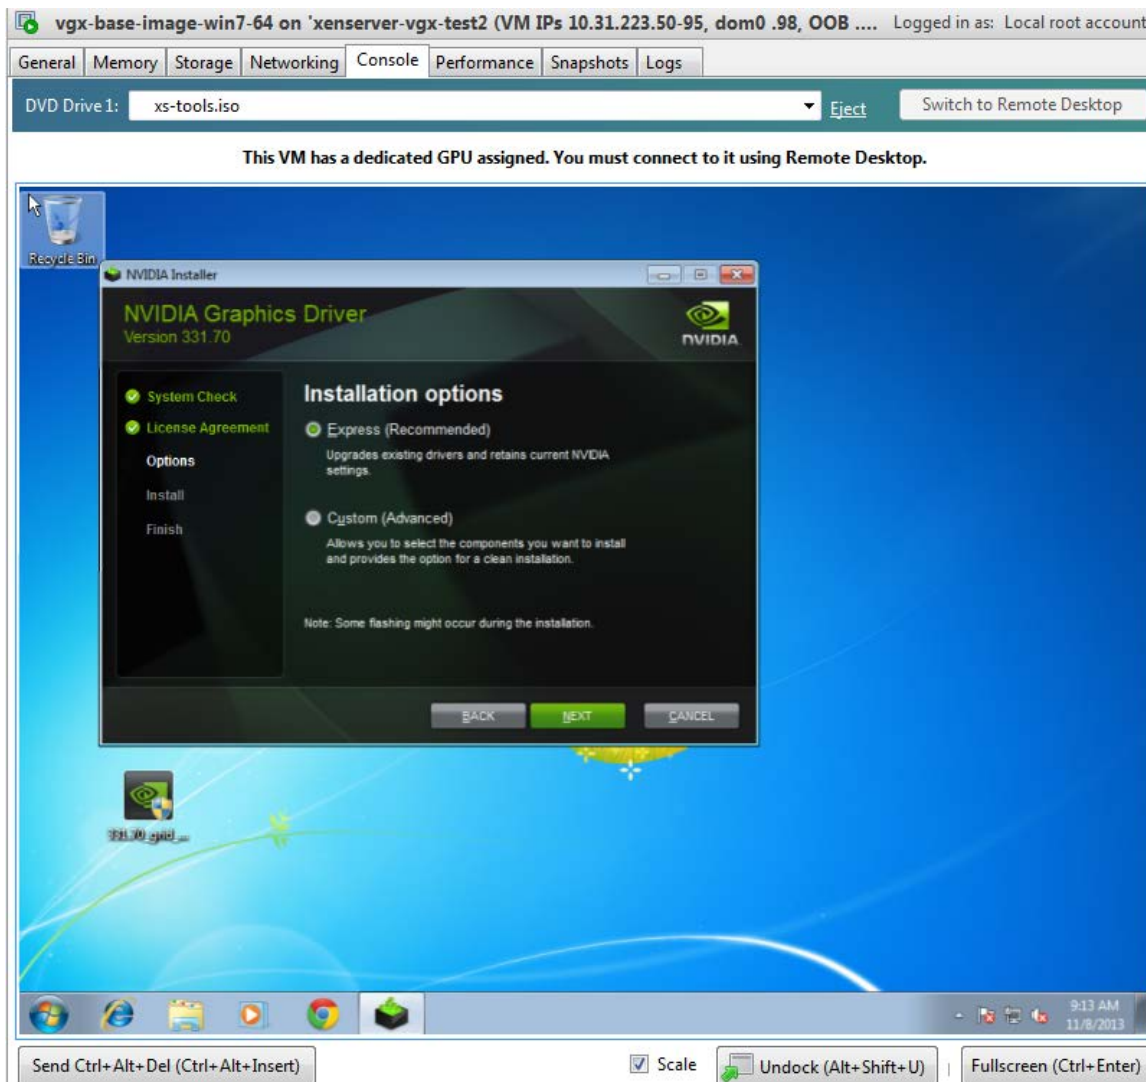


Figure 7 NVIDIA driver installation in the guest VM

- ▶ Click through the license agreement
- ▶ Select Express Installation
- ▶ Once driver installation completes, the installer may prompt you to restart the platform. Select Restart Now to reboot the VM, or exit the installer and reboot the VM when ready.

Once the VM restarts, it will boot to a Windows desktop. Verify that the NVIDIA driver is running by right-clicking on the desktop. The NVIDIA Control Panel will be listed in the menu; select it to open the control panel. Selecting “System Information” in the

NVIDIA control panel will report the Virtual GPU that the VM is using, its capabilities, and the NVIDIA driver version that is loaded.

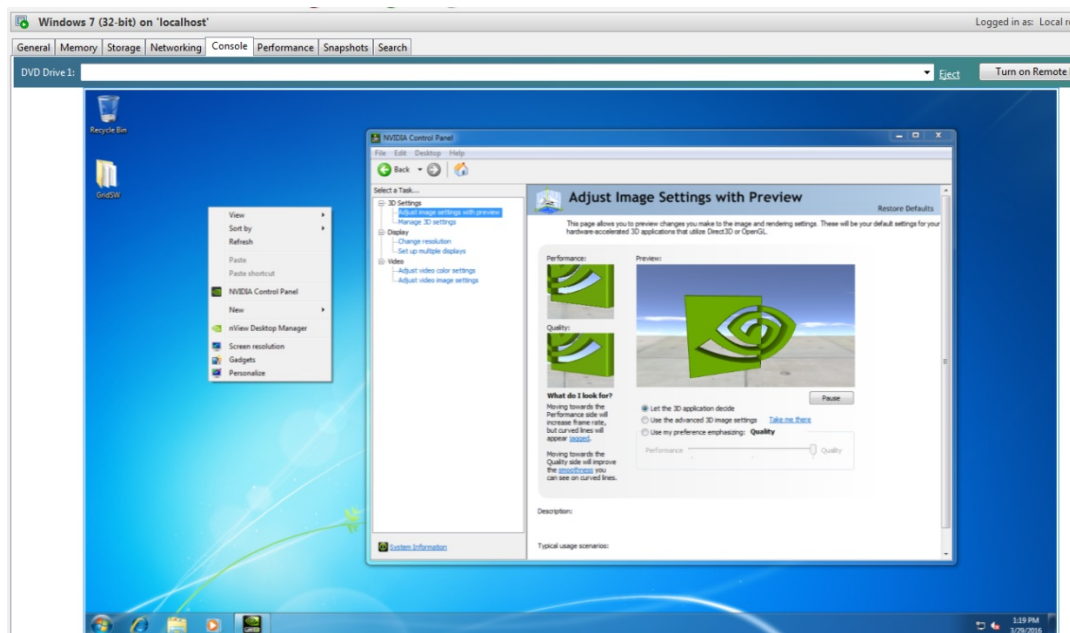


Figure 8 Verifying NVIDIA driver operation using NVIDIA Control Panel

This completes the process of setting up a single VM to use GRID vGPU. The VM is now capable of running the full range of DirectX and OpenGL graphics applications.

## 2.1.7 Applying a vGPU license

GRID vGPU is a licensed feature on Tesla M6, M60. When booted on these GPUs, a vGPU runs at full capability even without a license. However, until a license is acquired, users are warned each time a vGPU tries and fails to obtain a license. You may optionally configure a license server to provide licenses to a vGPU. See section 2.3 for details on how to configure licensing on Windows.

## 2.1.8 Removing a VM's vGPU configuration

To remove a virtual GPU assignment from a VM, such that it no longer uses a virtual GPU, set the GPU type to 'None' in the VM's GPU Properties, as shown in Figure 9.

Alternatively, use `vgpu-destroy` to delete the virtual GPU object associated with the VM. To discover the vGPU object UUID associated with a given VM, use `vgpu-list`:

```
[root@xenserver ~]# xe vgpu-list vm-uuid=e71afda4-53f4-3a1b-6c92-a364a7f619c2
uuid ( RO)                : c1c7c43d-4c99-af76-5051-119f1c2b4188
vm-uuid ( RO)             : e71afda4-53f4-3a1b-6c92-a364a7f619c2
gpu-group-uuid ( RO)      : d53526a9-3656-5c88-890b-5b24144c3d96
```

```
[root@xenserver ~]# xe vgpu-destroy uuid=c1c7c43d-4c99-af76-5051-119f1c2b4188
[root@xenserver ~]#
```

**Note:** the VM must be in the powered-off state in order for its vGPU configuration to be modified or removed.

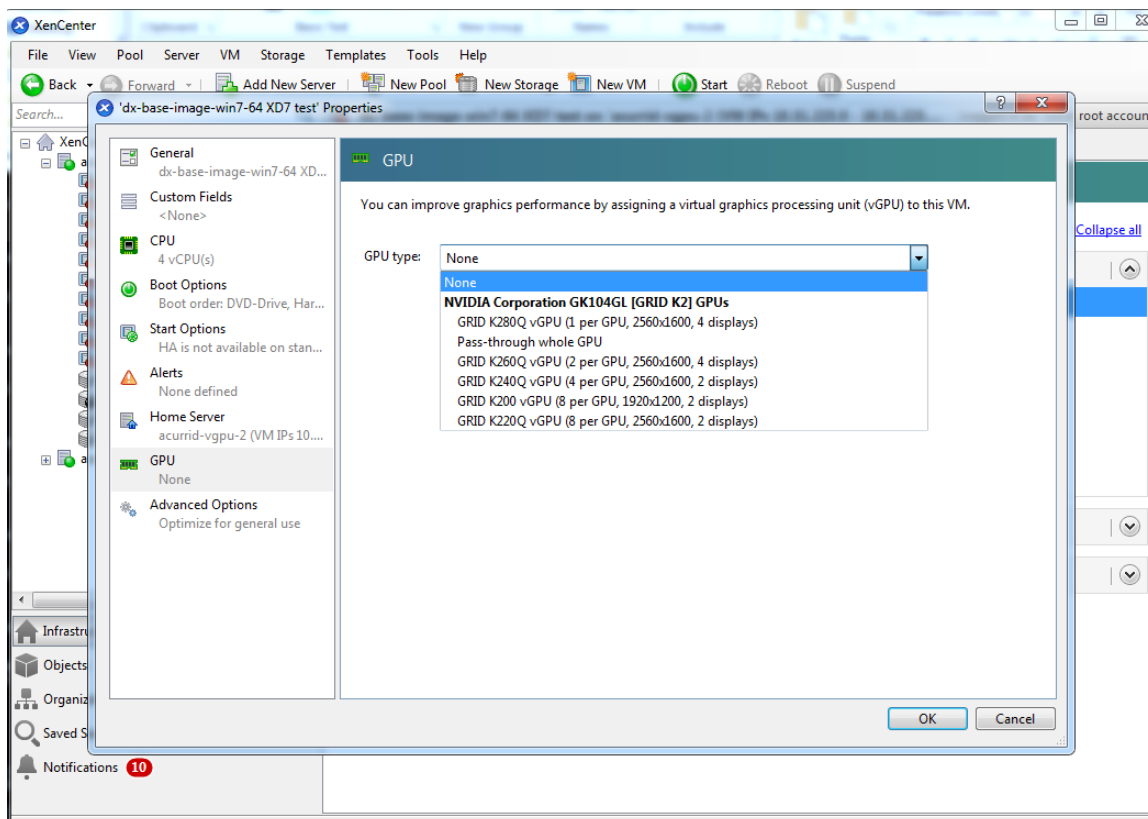


Figure 9 Using XenCenter to remove a vGPU configuration from a VM

## 2.2 VMWARE VSPHERE

### 2.2.1 Prerequisites

Before proceeding, ensure that you have these prerequisites:

- ▶ NVIDIA GRID K1,K2, or Tesla M60, M6 cards.
- ▶ A server platform capable of hosting VMware vSphere Hypervisor (ESXi) and the NVIDIA GRID or Tesla cards. Refer to the release notes for a list of recommended servers.
- ▶ The NVIDIA GRID vGPU software package for VMware vSphere, consisting of the GRID Virtual GPU Manager for ESXi, and NVIDIA GRID vGPU drivers for Windows, 32- and 64-bit.
- ▶ VMware vSphere 2015 or later, obtainable from VMware.
- ▶ An installed Windows VM to be enabled with vGPU.

To run VMware Horizon with virtual machines running NVIDIA Virtual GPU, you will also need:

- ▶ VMware Horizon 6.1 or later, obtainable from VMware.



**Note:** Earlier versions of VMware vSphere and Horizon are not supported for use with NVIDIA Virtual GPU.

Review the release notes and known issues for GRID Virtual GPU before proceeding with installation.

### 2.2.2 Installing VMware vSphere

Install VMware vSphere Hypervisor (ESXi), following VMware's installation instructions. Install VMware vCenter Server, following VMware's installation instructions.

### 2.2.3 Installing the NVIDIA Virtual GPU Manager for vSphere

The NVIDIA Virtual GPU Manager runs on ESXi host. It is provided as a VIB file, which must be copied to the ESXi host and then installed.

#### 2.2.3.1 Package installation

To install the vGPU Manager VIB you need to access the ESXi host via the ESXi Shell or SSH. Refer to VMware's documentation on how to enable ESXi Shell or SSH for an ESXi host.



**Note:** Before proceeding with the vGPU Manager installation make sure that all VMs are powered off and the ESXi host is placed in maintenance mode. Refer to VMware's documentation on how to place an ESXi host in maintenance mode.

Use the `esxcli` command to install the vGPU Manager package:

```
[root@esxi:~] esxcli software vib install -v /NVIDIA-vGPU-
VMware_ESXi_6.0_Host_Driver_361.40-10EM.600.0.0.2159203.vib
Installation Result
  Message: Operation finished successfully.
  Reboot Required: false
  VIBs Installed: NVIDIA_bootbank_NVIDIA-vGPU-
VMware_ESXi_6.0_Host_Driver_361.40-10EM.600.0.0.2159203
  VIBs Removed:
  VIBs Skipped:
```

Reboot the ESXi host and remove it from maintenance mode.



**Note:** GRID Virtual GPU Manager and Guest VM drivers must be matched from the same release. After updating vGPU Manager, guest VMs will boot with vGPU disabled until their guest vGPU driver is updated to match the vGPU Manager version. Consult the release notes for further details.

### 2.2.3.2 Update package

Update the vGPU Manager VIB package if you want to install a new version of GRID Virtual GPU Manager on a system where an existing version is already installed.

To update the vGPU Manager VIB you need to access the ESXi host via the ESXi Shell or SSH. Refer to VMware's documentation on how to enable ESXi Shell or SSH for an ESXi host.



**Note:** Before proceeding with the vGPU Manager update, make sure that all VMs are powered off and the ESXi host is placed in maintenance mode. Refer to VMware's documentation on how to place an ESXi host in maintenance mode.

Use the `esxcli` command to update the vGPU Manager package:

```
[root@esxi:~] esxcli software vib update -v /NVIDIA-vGPU-
VMware_ESXi_6.0_Host_Driver_361.40-10EM.600.0.0.2159203.vib
Installation Result
  Message: Operation finished successfully.
  Reboot Required: false
  VIBs Installed: NVIDIA_bootbank_NVIDIA-vGPU-
VMware_ESXi_6.0_Host_Driver_361.40-10EM.600.0.0.2159203
```



```
VIBs Removed: NVIDIA_bootbank_NVIDIA-vGPU-
VMware_ESXi_6.0_Host_Driver_352.70-10EM.600.0.0.2494585
VIBs Skipped:
```

Reboot the ESXi host and remove it from maintenance mode.

**!** **Note:** GRID Virtual GPU Manager and Guest VM drivers must be matched from the same release. After updating vGPU Manager, guest VMs will boot with vGPU disabled until their guest vGPU driver is updated to match the vGPU Manager version. Consult the release notes for further details.

### 2.2.3.3 Verifying installation

After the ESXi host has rebooted, verify that the GRID package installed and loaded correctly by checking for the NVIDIA kernel driver in the list of kernel loaded modules.

```
[root@esxi:~] vmkload_mod -l | grep nvidia
nvidia                5      8420
```

If the `nvidia` driver is not listed in the output, check `dmesg` for any load-time errors reported by the driver.

Verify that the NVIDIA kernel driver can successfully communicate with the GRID physical GPUs in your system by running the `nvidia-smi` command, which should produce a listing of the GPUs in your platform:

```
[root@esxi:~] nvidia-smi
Tue Mar 10 17:56:22 2015
+-----+
| NVIDIA-SMI 361.40      Driver Version: 361.40      |
+-----+-----+
| GPU  Name            Persistence-M| Bus-Id        Disp.A | Volatile Uncorr. ECC |
| Fan  Temp   Perf    Pwr:Usage/Cap|      Memory-Usage | GPU-Util  Compute M. |
|====+=====+====+=====+=====+=====+=====+=====+
|   0  GRID K2              On      | 0000:04:00.0   Off  |           Off        |
| N/A   27C    P8     27W / 117W |  11MiB / 4095MiB |    0%      Default   |
+-----+-----+-----+-----+-----+-----+
|   1  GRID K2              On      | 0000:05:00.0   Off  |           Off        |
| N/A   27C    P8     27W / 117W |  10MiB / 4095MiB |    0%      Default   |
+-----+-----+-----+-----+-----+-----+
|   2  GRID K2              On      | 0000:08:00.0   Off  |           Off        |
| N/A   32C    P8     27W / 117W |  10MiB / 4095MiB |    0%      Default   |
+-----+-----+-----+-----+-----+-----+
|   3  GRID K2              On      | 0000:09:00.0   Off  |           Off        |
| N/A   32C    P8     27W / 117W |  10MiB / 4095MiB |    0%      Default   |
+-----+-----+-----+-----+-----+-----+
|   4  GRID K2              On      | 0000:86:00.0   Off  |           Off        |
| N/A   24C    P8     27W / 117W |  10MiB / 4095MiB |    0%      Default   |
+-----+-----+-----+-----+-----+-----+
```

```

+-----+
| Processes:                                     GPU Memory |
| GPU      PID  Type  Process name                               Usage         |
|=====|
| No running processes found                   |
+-----+

```

The `nvidia-smi` command is described in more detail in section 4.1.

If `nvidia-smi` fails to report the expected output for all the NVIDIA GPUs in your system, see Chapter 7 for troubleshooting steps.

## 2.2.4 Configuring a VM with Virtual GPU



**Note:** VMware vSphere does not support VM console in vSphere Web Client for VMs configured with vGPU. Make sure that you have installed an alternate means of accessing the VM (such as VMware Horizon or a VNC server) before you configure vGPU.

VM console in vSphere Web Client will become active again once the vGPU parameters are removed from the VM's configuration.

To configure vGPU for a VM:

- ▶ Select `Edit Settings` after right-clicking on the VM in the vCenter Web UI
- ▶ Select the `Virtual Hardware` tab
- ▶ In the `New device selection`, select `Shared PCI Device` and hit `Add`

This should auto-populate `NVIDIA GRID vGPU` in the PCI device field, as shown in Figure 10. In the GPU Profile dropdown menu, select the type of vGPU you wish to configure.

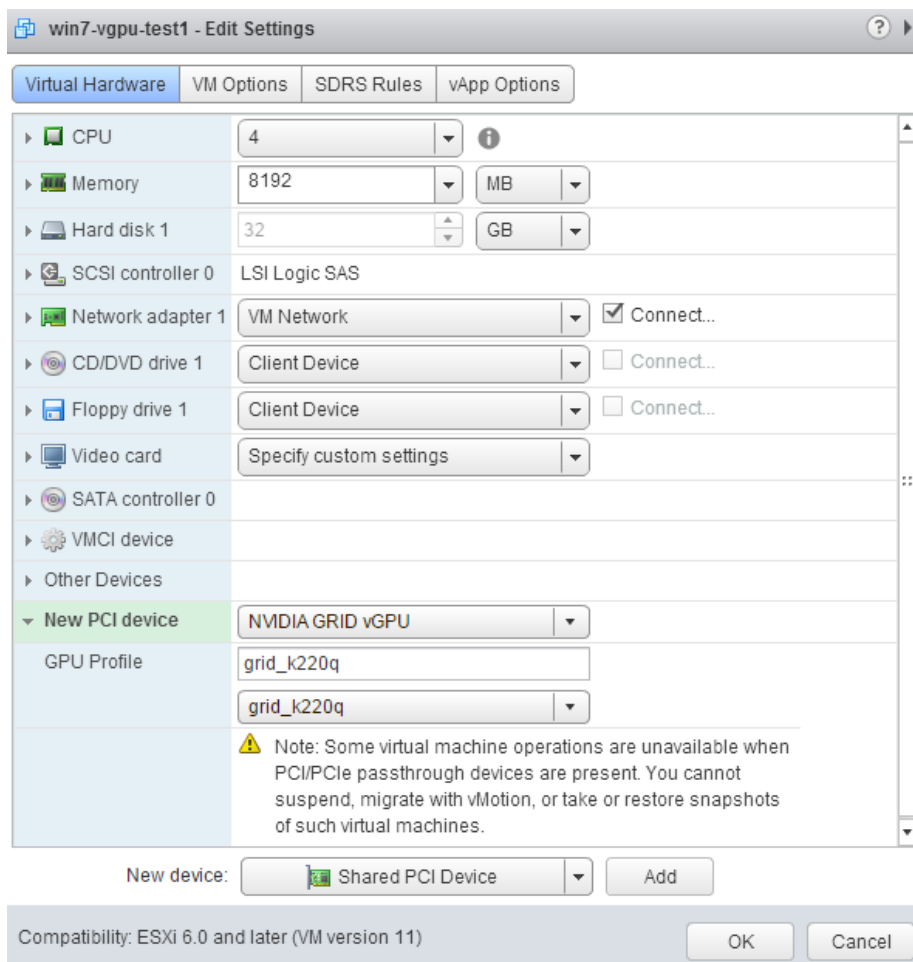


Figure 10 VM settings for vGPU

VMs running vGPU should have all their memory reserved:

- ▶ Select `Edit virtual machine settings` from vCenter Web UI
- ▶ Expand `Memory` section and click `Reserve all guest memory (All locked)`

## 2.2.5 Changing the Mode of a Tesla M60 or M6 GPU

Tesla M60 GPUs and M6 GPUs support compute mode and graphics mode. GRID vGPU requires that the Tesla M60 GPUs and M6 GPUs operate in graphics mode. However, by default, these GPUs are supplied in compute mode.

If you are using a Tesla M6 or M60 GPU, you must change the mode of GPU to graphics mode. To change the mode of a GPU, use the `gpumodeswitch` tool as explained in **gpumodeswitch User Guide**.

## 2.2.6 Booting the VM and Installing Drivers

Once you have configured a VM with a vGPU, start the VM. VM console in vSphere Web Client is not supported in this vGPU release; use VMware Horizon or VNC to access the VM's desktop.

The VM should boot to a standard Windows desktop in VGA mode at 800x600 resolution. The Windows screen resolution control panel may be used to increase the resolution to other standard resolutions, but to fully enable vGPU operation, as for a physical NVIDIA GPU, the NVIDIA driver must be installed.

- ▶ Copy the 32- or 64-bit NVIDIA Windows driver package to the guest VM and execute it to unpack and run the driver installer.
- ▶ Click through the license agreement
- ▶ Select **Express Installation**
- ▶ Once driver installation completes, the installer may prompt you to restart the platform. Select **Restart Now** to reboot the VM, or exit the installer and reboot the VM when ready.

Once the VM restarts, it will boot to a Windows desktop. Verify that the NVIDIA driver is running by right-clicking on the desktop. The NVIDIA Control Panel will be listed in the menu; select it to open the control panel. Selecting "System Information" in the NVIDIA control panel will report the Virtual GPU that the VM is using, its capabilities, and the NVIDIA driver version that is loaded.

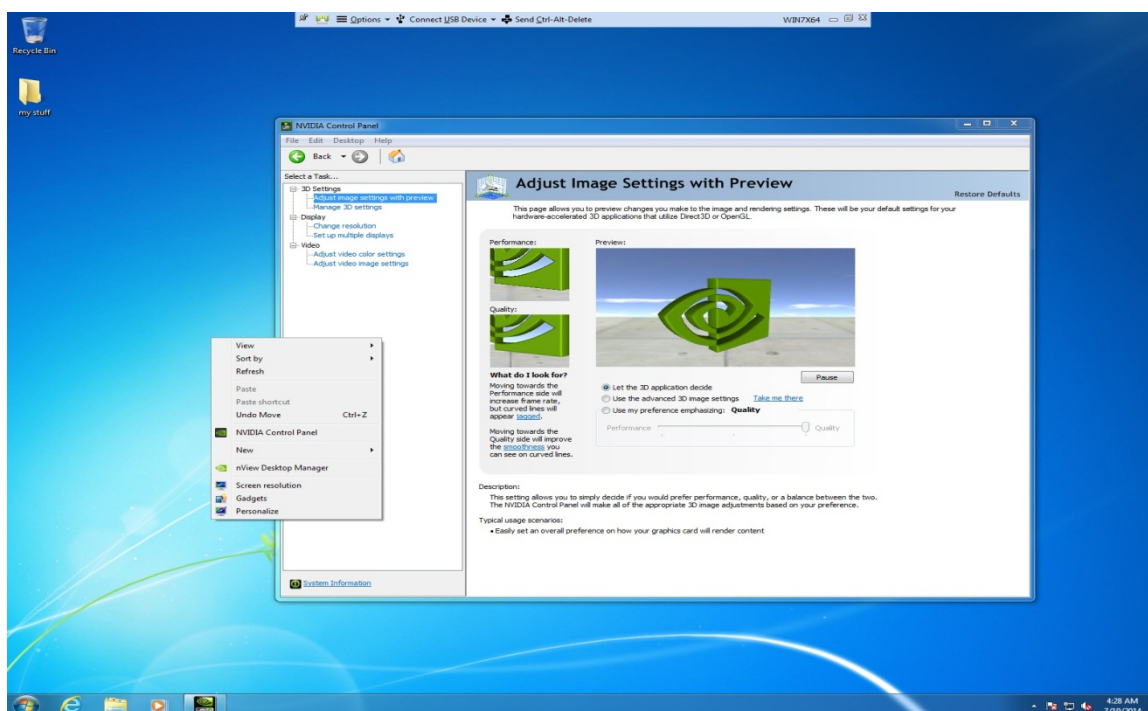


Figure 11 Verifying NVIDIA driver operation using NVIDIA Control Panel

This completes the process of setting up a single VM to use GRID vGPU. The VM is now capable of running the full range of DirectX and OpenGL graphics applications.

## 2.2.7 Applying a vGPU license

GRID vGPU is a licensed feature on Tesla M6, M60. When booted on these GPUs, a vGPU runs at full capability even without a license. However, until a license is acquired, users are warned each time a vGPU tries and fails to obtain a license. You may optionally configure a license server to provide licenses to a vGPU. See section 2.3 for details on how to configure licensing on Windows.

## 2.2.8 Removing a VM's vGPU configuration

To remove a vGPU configuration from a VM:

- ▶ Select `Edit settings` after right-clicking on the VM in the vCenter Web UI
- ▶ Select the `Virtual Hardware` tab
- ▶ Mouse over the `PCI Device` entry showing `NVIDIA GRID vGPU` and click on the (X) icon to mark the device for removal.
- ▶ Click `OK` to remove the device and update the VM settings.

## 2.2.9 Modifying GPU assignment for vGPU-Enabled VMs

VMware vSphere Hypervisor (ESXi) by default uses a *breadth-first* allocation scheme for vGPU-enabled VMs; allocating new vGPU-enabled VMs on an available, least loaded physical GPU. This policy generally leads to higher performance because it attempts to minimize sharing of physical GPUs, but in doing so it may artificially limit the total number of vGPUs that can run.

ESXi also provides a *depth-first* allocation scheme for vGPU-enabled VMs. The depth-first allocation policy attempts to maximize the number of vGPUs running on each physical GPU, by placing newly-created vGPUs on the physical GPU that can support the new vGPU and that has the most number of vGPUs already resident. This policy generally leads to higher density of vGPUs, particularly when different types of vGPUs are being run, but may result in lower performance because it attempts to maximize sharing of physical GPUs.

To switch to depth-first allocation scheme add the following parameter to `/etc/vmware/config`:

```
vGPU.consolidation = true
```

## 2.3 VGPU LICENSING ON WINDOWS

GRID vGPU is a licensed feature on Tesla M6, M60. When booted on these GPUs, a vGPU runs at full capability even without a license. However, until a license is acquired, users are warned each time a vGPU tries and fails to obtain a license.

These warnings cease after a license is acquired.

Full information on configuring and using GRID licensed features, including vGPU, is given in the **GRID Licensing User Guide**. Basic configuration information is given here:

To configure licensing, open NVIDIA Control Panel and select **Manage License** task in the **Licensing** section of the navigation pane. Enter the address of your local GRID License Server in the **License Server** field. The address can be a fully-qualified domain name such as `gridlicense.mycompany.com`, or an IP address such as `10.31.20.45`.

The **Port Number** field can be left unset and will default to 7070, which is the default port number used by NVIDIA GRID License Server.

Select **Apply** to assign the settings. The system will request the appropriate license for the current vGPU from the configured license server. If the system fails to obtain a license, refer to the **GRID Licensing User Guide** for guidance on troubleshooting.

# Chapter 3. USING VGPU ON LINUX

Tesla M6/M60 GPUs support vGPU on Linux VMs. 64-bit Linux guest VMs are supported on the following virtual GPU types:

Tesla M60	M60-8Q
	M60-4Q
	M60-2Q
	M60-1Q
	M60-0Q

Tesla M6	M6-8Q
	M6-4Q
	M6-2Q
	M6-1Q
	M6-0Q

Table 4 Virtual GPUs supporting Linux



**Note:** Refer to the driver release notes for further information on supported hypervisor and Linux VM configurations.

## 3.1 INSTALLING VGPU DRIVERS

After creating and booting a Linux VM on the hypervisor, the steps to install NVIDIA Linux vGPU drivers are largely the same as those for installing NVIDIA GPU drivers on a VM running passthrough GPU, or on baremetal Linux.

### 3.1.1 Prerequisites

Installation of the NVIDIA Linux driver requires:

- ▶ Compiler toolchain
- ▶ Kernel headers

### 3.1.2 Running the driver installer

- ▶ Copy the NVIDIA GRID Linux driver package, for example, `NVIDIA-Linux_x86_64-352.47-grid.run`, to the Linux VM.
- ▶ Before the driver installer can be run, you must exit the X server and terminate all OpenGL applications. On Red Hat Enterprise Linux / CentOS systems, this can typically be achieved by transitioning to runlevel 3:

```
[nvidia@localhost ~]$ sudo init 3
```

On Ubuntu platforms, use `CTRL-ALT-F1` to switch to a console login prompt. Log in and shut down the display manager:

```
[nvidia@localhost ~]$ sudo service lightdm stop
```

- ▶ From a console shell, run the driver installer as the root user. The installer should launch and display the driver license agreement (Figure 12):

```
sudo sh ./ NVIDIA-Linux_x86_64-352.47-grid.run
```

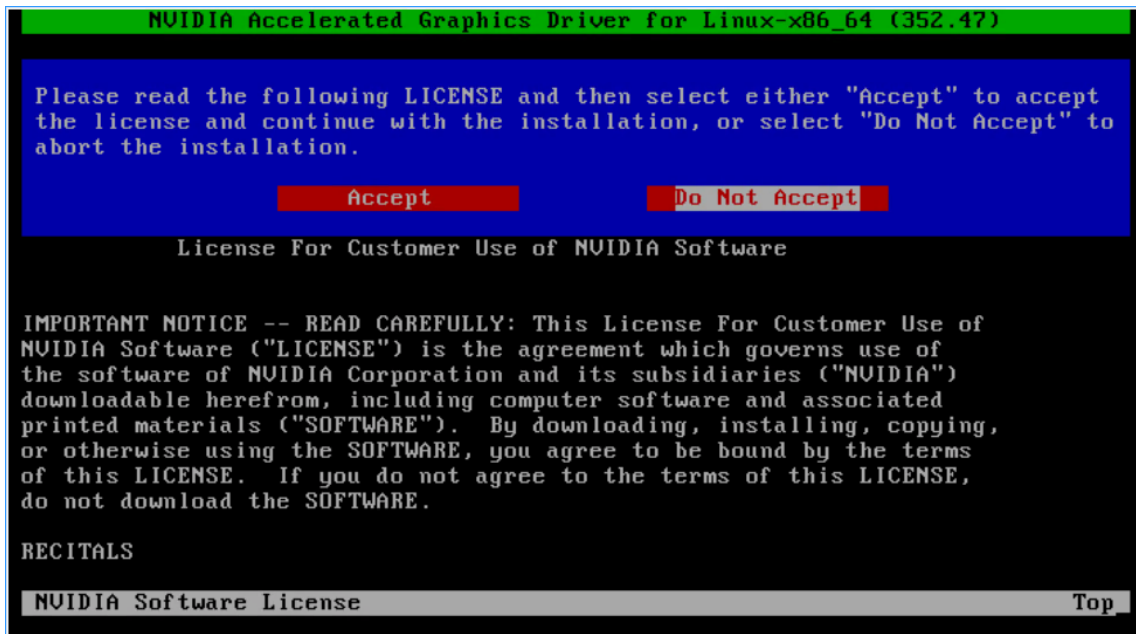


Figure 12 NVIDIA Linux driver installer

- ▶ Accept the license agreement to continue with the driver installation. In some instances the installer may fail to detect the installed kernel headers / sources, in which case the installer should be re-run with the kernel source path specified using the `--kernel-source-path` option:

```
sudo sh ./ NVIDIA-Linux_x86_64-352.47-grid.run \
  --kernel-source-path=/usr/src/kernels/3.10.0-229.11.1.el7.x86_64
```



- ▶ When prompted, accept the option to update the X configuration file (`xorg.conf`) settings (Figure 13):

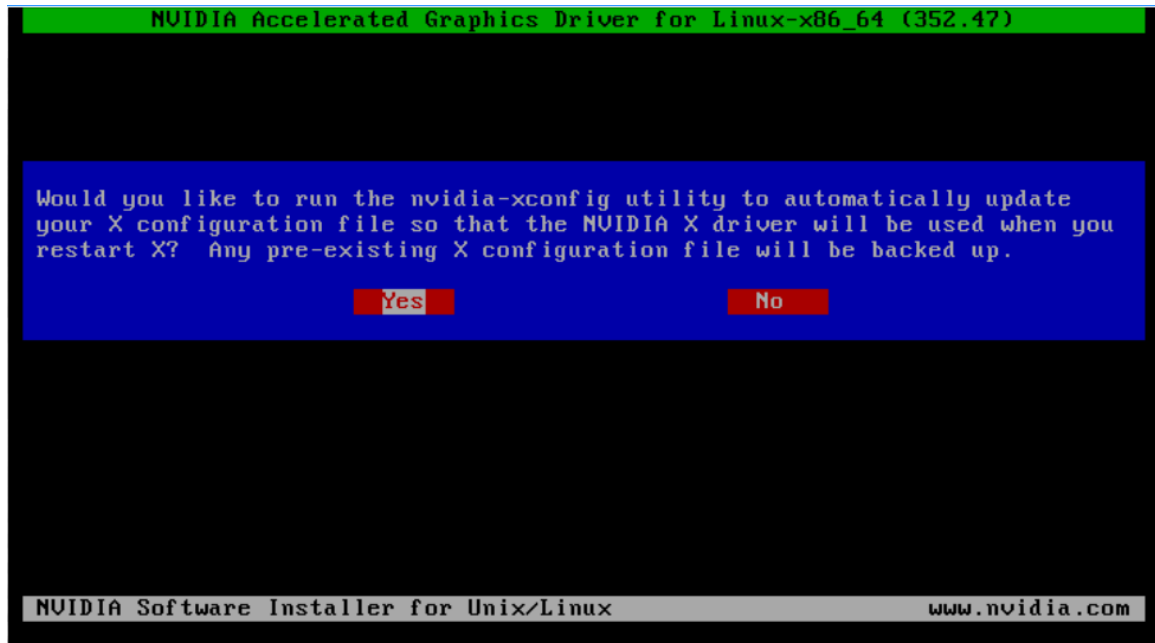


Figure 13 Update `xorg.conf` settings

- ▶ Once installation has completed, select OK to exit the installer.
- ▶ Reboot the system, log in, and run `nvidia-settings` to verify that the NVIDIA is operational with vGPU (Figure 14):

```
[nvidia@localhost ~]$ nvidia-settings
```

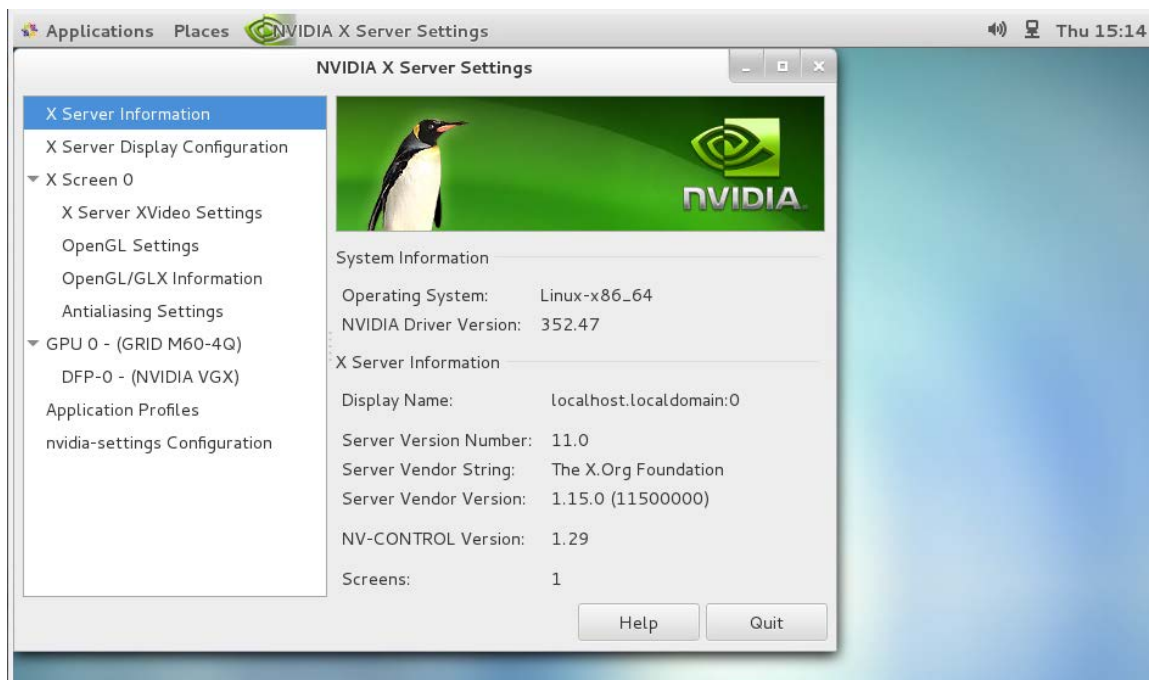


Figure 14 Verifying operation with nvidia-settings

## 3.2 VGPU LICENSING ON LINUX

GRID vGPU is a licensed feature on Tesla M6, M60. When booted on these GPUs, a vGPU runs at full capability even without a license. However, until a license is acquired, users are warned each time a vGPU tries and fails to obtain a license.

These warnings cease after a license is acquired.

Full information on configuring and using GRID licensed features, including vGPU, is given in the **GRID Licensing User Guide**. Basic configuration information is given here:

To license GRID vGPU, edit `/etc/nvidia/gridd.conf`:

```
[nvidia@localhost ~]$ sudo vi /etc/nvidia/gridd.conf
```

**Note:** You can create the `/etc/nvidia/gridd.conf` file by copying the supplied template file `/etc/nvidia/gridd.conf.template`.

Set `ServerURL` to the address and port number of your local NVIDIA GRID License Server. The address can be a fully-qualified domain name such as `gridlicense.mycompany.com`, or an IP address such as `10.31.20.45`. The port number is appended to the address with a colon, for example `:7070`.

Set FeatureType to 1, to license vGPU:

```
# /etc/nvidia/gridd.conf - Configuration file for NVIDIA Grid Daemon

# Description: Set License Server URL
# Data type: string
# Format: "<address>:<port>"
ServerUrl=hqdvls01.nvidia.com:7070

# Description: Set Feature to be enabled
# Data type: integer
# Possible values:
#   1 => for GRID vGPU
#   2 => for GRID Virtual Workstation
FeatureType=1

# Description: Parameter to enable or disable Grid Licensing tab in nvidia-
settings
# Data type: boolean
# Possible values: TRUE or FALSE, default is TRUE
#EnableUI=TRUE
```

Figure 15 Sample gridd.conf for GRID vGPU

Restart the nvidia-gridd service:

```
[nvidia@localhost ~]$ sudo service nvidia-gridd restart
```

The service should automatically obtain a license. This can be confirmed with log messages written to /var/log/messages:

```
[nvidia@localhost ~]$ sudo grep gridd /var/log/messages
...
Sep 13 15:40:06 localhost nvidia-gridd: Started (10430)
Sep 13 15:40:24 localhost nvidia-gridd: License acquired successfully.
```

Once configured in gridd.conf, licensing settings persist across reboots and need only be modified if the license server address changes, or the VM is switched to running GPU passthrough.

If the system fails to obtain a license, refer to the **GRID Licensing User Guide** for guidance on troubleshooting.

# Chapter 4. PERFORMANCE MONITORING

Physical GPU performance monitoring can be done using the `nvidia-smi` command line utility and, on Citrix XenServer platforms, using Citrix XenCenter.



**Note:** It is not currently possible to monitor the performance of GPUs being used for GPU passthrough.

## 4.1 USING NVIDIA-SMI

NVIDIA System Management Interface, `nvidia-smi`, is a command line tool that reports management information for NVIDIA physical GPUs present in the system. `nvidia-smi` is run from the XenServer dom0 or ESXi host shells and, when invoked without additional arguments, it provides a summary of all GPUs in the system, along with PCI bus IDs, power state, temperature, current memory usage, and so on.



**Note:** `nvidia-smi` will not list any GPU currently allocated for GPU passthrough.

In this release of GRID vGPU, `nvidia-smi` provides basic reporting of vGPU instances running on physical GPUs; each vGPU instance is reported in the “Compute processes” section, together with its physical GPU index and the amount of framebuffer memory assigned to it. In the example that follows, five vGPUs are running; one on physical GPU 0, and four on physical GPU 1:

```
[root@xenserver ~]# nvidia-smi
Mon Nov 10 18:46:50 2014
+-----+
| NVIDIA-SMI 361.40      Driver Version: 361.40      |
+-----+-----+-----+-----+
| GPU  Name          Perf  Pwr:Usage/Cap | Bus-Id      Disp. | Volatile Uncorr. ECC |
| Fan  Temp          Perf  Pwr:Usage/Cap | Memory-Usage | GPU-Util  Compute M. |
+-----+-----+-----+-----+
|  0  GRID K1        P8     8W /  31W | 0000:04:00.0  Off |           0%      N/A |
| N/A  27C          P8     8W /  31W | 7% 270MB / 4095MB |           0%      Default |
+-----+-----+-----+-----+
|  1  GRID K1        P8     8W /  31W | 0000:05:00.0  Off |           0%      N/A |
| N/A  26C          P8     8W /  31W | 26% 1048MB / 4095MB |           0%      Default |
+-----+-----+-----+-----+
|  2  GRID K1        P0    13W /  31W | 0000:06:00.0  Off |           0%      N/A |
| N/A  22C          P0    13W /  31W | 0% 9MB / 4095MB |           0%      Default |
+-----+-----+-----+-----+
|  3  GRID K1        P0    13W /  31W | 0000:07:00.0  Off |           0%      N/A |
| N/A  25C          P0    13W /  31W | 0% 9MB / 4095MB |           0%      Default |
+-----+-----+-----+-----+
|  4  GRID K1        P0    14W /  31W | 0000:86:00.0  Off |           0%      N/A |
| N/A  27C          P0    14W /  31W | 0% 9MB / 4095MB |           0%      Default |
+-----+-----+-----+-----+
|  5  GRID K1        P0    13W /  31W | 0000:87:00.0  Off |           0%      N/A |
| N/A  27C          P0    13W /  31W | 0% 9MB / 4095MB |           0%      Default |
+-----+-----+-----+-----+
|  6  GRID K1        P0    13W /  31W | 0000:88:00.0  Off |           0%      N/A |
| N/A  29C          P0    13W /  31W | 0% 9MB / 4095MB |           0%      Default |
+-----+-----+-----+-----+
|  7  GRID K1        P0    12W /  31W | 0000:89:00.0  Off |           0%      N/A |
| N/A  28C          P0    12W /  31W | 0% 9MB / 4095MB |           0%      Default |
+-----+-----+-----+-----+
+-----+-----+-----+-----+
| Compute processes:                                     GPU Memory |
| GPU      PID  Process name                                         Usage |
+-----+-----+-----+-----+
|  0      10300 /usr/lib/xen/bin/vgpu                               256MB |
|  1      10350 /usr/lib/xen/bin/vgpu                               256MB |
|  1      10321 /usr/lib/xen/bin/vgpu                               256MB |
|  1      11512 /usr/lib/xen/bin/vgpu                               256MB |
|  1      10210 /usr/lib/xen/bin/vgpu                               256MB |
+-----+-----+-----+-----+
[root@xenserver ~]#
```

For a list of commands supported by `nvidia-smi`, run `nvidia-smi -h`. Note that not all commands apply to GRID supported GPUs.

## 4.2 USING CITRIX XENCENTER

To monitor GPU performance in XenCenter, click on a server's Performance Tab, then right-click on the graph window, select Actions, then select New Graph. Provide a name for the graph, and in the list of available counter resources, select one or more GPU counters. Counters are listed for each physical GPU not currently being used for GPU passthrough.

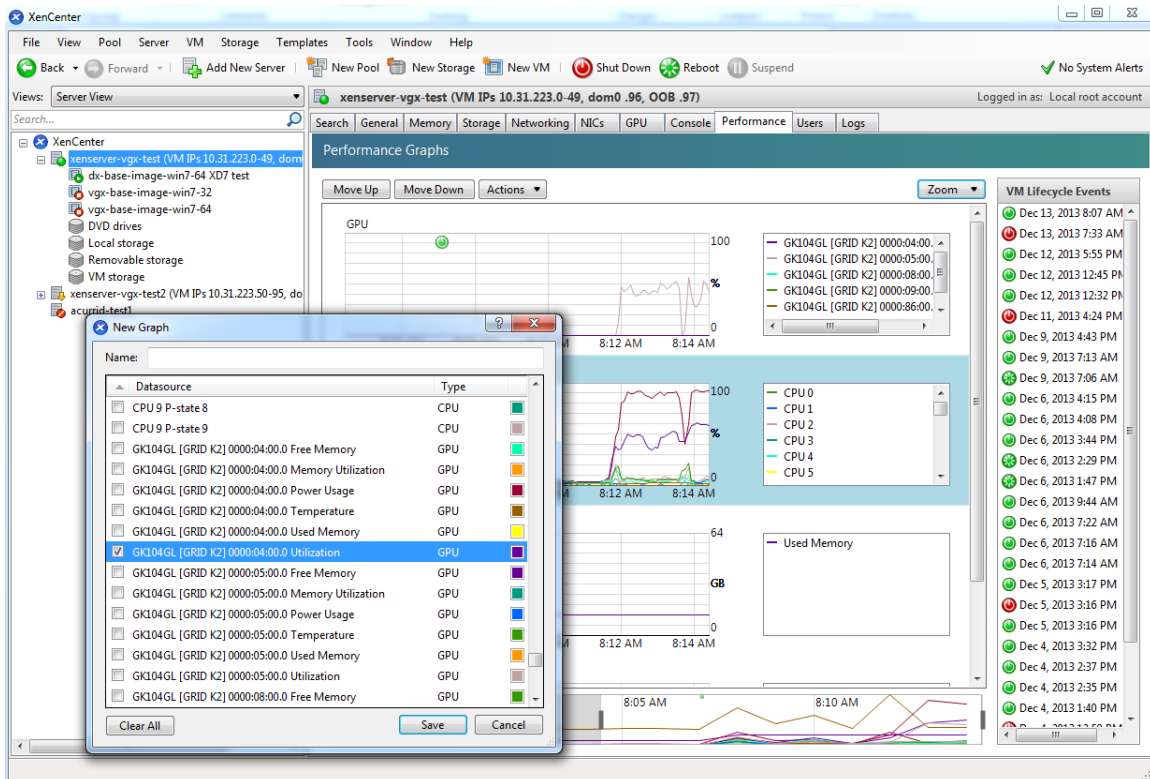


Figure 16 Using XenCenter to monitor GPU performance

# Chapter 5. XENSERVER VGPU MANAGEMENT

This chapter describes Citrix XenServer advanced vGPU management techniques using XenCenter and `xe` command line operations.

## 5.1 MANAGEMENT OBJECTS FOR GPUS

XenServer uses four underlying management objects for GPUs: physical GPUs, GPU groups, vGPU types, and vGPUs. These objects are used directly when managing vGPU via `xe`, and indirectly when managing vGPU via XenCenter.

### 5.1.1 `pgpu`

A `pgpu` object represents a physical GPU, such as one of the multiple GPUs present on a GRID K1 or K2 card. XenServer automatically creates `pgpu` objects at startup to represent each physical GPU present on the platform.

To list the physical GPU objects present on a platform, use `xe pgpu-list`. For example, this platform contains a single GRID K2 card with two physical GPUs:

```
[root@xenserver ~]# xe pgpu-list
uuid ( RO)                : 7c1e3cff-1429-0544-df3d-bf8a086fb70a
  vendor-name ( RO): NVIDIA Corporation
  device-name ( RO): GK104GL [GRID K2]
  gpu-group-uuid ( RW): be825ba2-01d7-8d51-9780-f82cfaa64924

uuid ( RO)                : d07fa627-7dc9-f625-92be-ce5d2655e830
  vendor-name ( RO): NVIDIA Corporation
  device-name ( RO): GK104GL [GRID K2]
  gpu-group-uuid ( RW): be825ba2-01d7-8d51-9780-f82cfaa64924
[root@xenserver ~]#
```

To see detailed information about a pgpu, use `xe pgpu-param-list`:

```
[root@xenserver ~]# xe pgpu-param-list uuid=d07fa627-7dc9-f625-92be-
ce5d2655e830
uuid ( RO)                : d07fa627-7dc9-f625-92be-ce5d2655e830
vendor-name ( RO)         : NVIDIA Corporation
device-name ( RO)         : GK104GL [GRID K2]
gpu-group-uuid ( RW)      : 315a1e1e-6d0c-1cb3-7903-1602d236a33a
gpu-group-name-label ( RO) : Group of NVIDIA Corporation GK104GL [GRID K2]
GPUs
  host-uuid ( RO)         : 2305cc32-c2d8-4fbd-b1aa-d0b0121ba454
  host-name-label ( RO)   : acurrid-vgpu-2 (VM IPs 10.31.223.0 -
10.31.223.19)
  pci-id ( RO)            : 0000:0a:00.0
  dependencies ( SRO)    :
  other-config ( MRW)    :
  supported-VGPU-types ( RO) : c18ab767-ba72-b286-9350-d8010bab4f30; 7cd190db-
e4fe-e824-cf4a-ff1604882323; 24a7baa3-a70a-8c7b-ee7d-f437e0857eca; bfcfb8cd-
c01b-2691-272c-8e908937922d; 0d581f02-c601-a9b1-f440-f852f31f583e; 2c210411-
7de3-37f5-c58c-9635b40d50f6
  enabled-VGPU-types ( SRW) : c18ab767-ba72-b286-9350-d8010bab4f30; 7cd190db-
e4fe-e824-cf4a-ff1604882323; 24a7baa3-a70a-8c7b-ee7d-f437e0857eca; bfcfb8cd-
c01b-2691-272c-8e908937922d; 0d581f02-c601-a9b1-f440-f852f31f583e; 2c210411-
7de3-37f5-c58c-9635b40d50f6
  resident-VGPUs ( RO)   :
```

To view physical GPUs in XenCenter, click on the server's GPU tab:

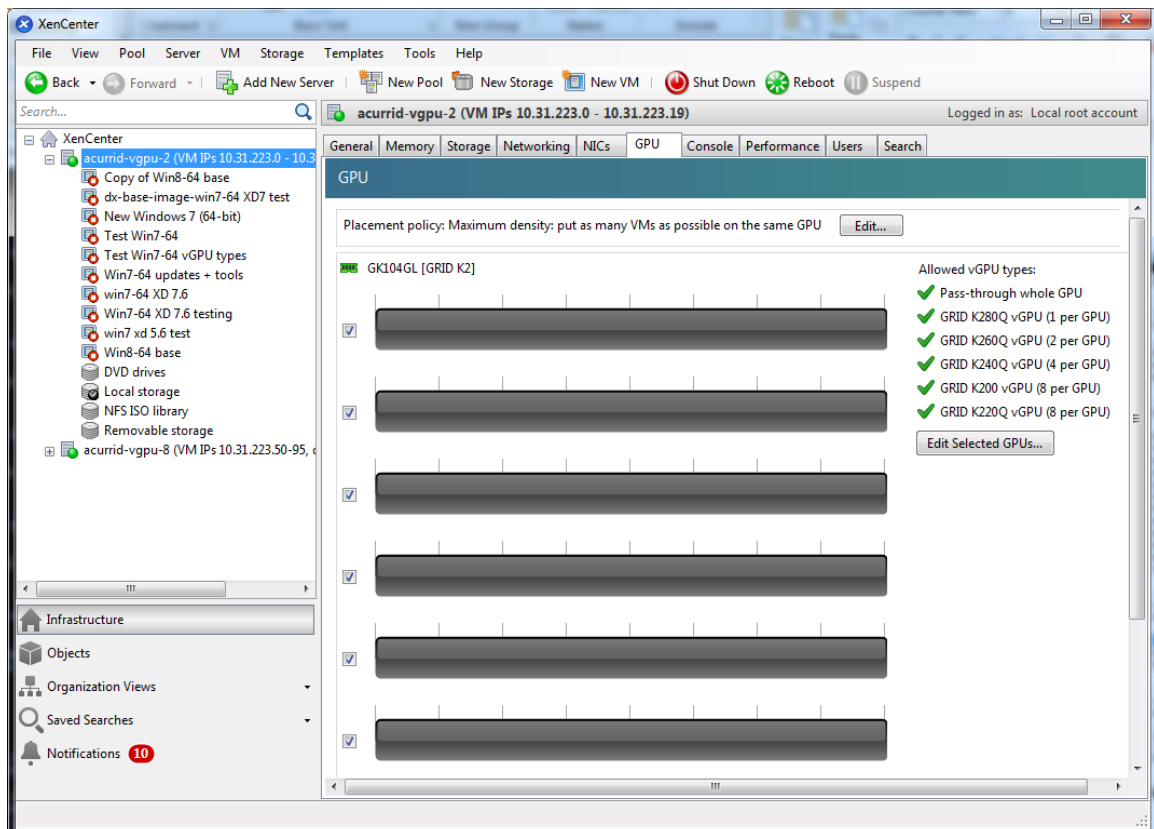


Figure 17 Physical GPU display in XenCenter



## 5.1.2 vgpu-type

A `vgpu-type` represents a type of virtual GPU, such as GRID K100, K140Q, K200, etc. An additional, *passthrough* vGPU type is defined to represent a physical GPU that is directly assignable to a single guest VM.

XenServer automatically creates `vgpu-type` objects at startup to represent each virtual type supported by the physical GPUs present on the platform.

To list the `vgpu-type` objects present on a platform, use `xe vgpu-type-list`. For example, this platform contains multiple GRID K2 cards, therefore the vGPU types reported are solely those supported by GRID K2:

```
[root@xenserver ~]# xe vgpu-type-list
uuid ( RO)                : 7cd190db-e4fe-e824-cf4a-ff1604882323
  vendor-name ( RO): NVIDIA Corporation
  model-name ( RO): GRID K240Q
  max-heads ( RO): 2
  max-resolution ( RO): 2560x1600

uuid ( RO)                : 2c210411-7de3-37f5-c58c-9635b40d50f6
  vendor-name ( RO): NVIDIA Corporation
  model-name ( RO): GRID K220Q
  max-heads ( RO): 2
  max-resolution ( RO): 2560x1600

uuid ( RO)                : 24a7baa3-a70a-8c7b-ee7d-f437e0857eca
  vendor-name ( RO): NVIDIA Corporation
  model-name ( RO): GRID K260Q
  max-heads ( RO): 4
  max-resolution ( RO): 2560x1600

uuid ( RO)                : 0d581f02-c601-a9b1-f440-f852f31f583e
  vendor-name ( RO): NVIDIA Corporation
  model-name ( RO): GRID K200
  max-heads ( RO): 2
  max-resolution ( RO): 1920x1200

uuid ( RO)                : c18ab767-ba72-b286-9350-d8010bab4f30
  vendor-name ( RO):
  model-name ( RO): passthrough
  max-heads ( RO): 0
  max-resolution ( RO): 0x0

uuid ( RO)                : bfcfb8cd-c01b-2691-272c-8e908937922d
  vendor-name ( RO): NVIDIA Corporation
  model-name ( RO): GRID K280Q
  max-heads ( RO): 4
  max-resolution ( RO): 2560x1600

[root@xenserver ~]#
```

To see detailed information about a `vgpu-type`, use `xe vgpu-type-param-list`:

```
[root@xenserver ~]# xe vgpu-type-param-list uuid=7cd190db-e4fe-e824-cf4a-ff1604882323
uuid ( RO)                : 7cd190db-e4fe-e824-cf4a-ff1604882323
      vendor-name ( RO): NVIDIA Corporation
      model-name ( RO): GRID K240Q
      framebuffer-size ( RO): 939524096
      max-heads ( RO): 2
      max-resolution ( RO): 2560x1600
      supported-on-PGPUs ( RO): d72b9b0d-ae86-alfa-4432-a46bcef4a4ab;
f17f00fc-dff2-ecb0-5bdb-8f050da2fd8b; 13cfa311-93fe-79e5-f94f-1e8c38a88486;
a9474d47-ddba-ab3a-8f44-58163ffa49f8; 8d147385-40a5-7305-95ea-de92ed4bcfc8;
d3984345-f8e1-c5fe-c5fc-78d2225f0382; 50493ce6-f3b1-1bd9-c012-2457472f2a92;
4778208a-97a9-cbf0-ceed-a20cd28f91f3
      enabled-on-PGPUs ( RO): d72b9b0d-ae86-alfa-4432-a46bcef4a4ab;
f17f00fc-dff2-ecb0-5bdb-8f050da2fd8b; 13cfa311-93fe-79e5-f94f-1e8c38a88486;
a9474d47-ddba-ab3a-8f44-58163ffa49f8; 8d147385-40a5-7305-95ea-de92ed4bcfc8;
d3984345-f8e1-c5fe-c5fc-78d2225f0382; 50493ce6-f3b1-1bd9-c012-2457472f2a92;
4778208a-97a9-cbf0-ceed-a20cd28f91f3
      supported-on-GPU-groups ( RO): 315a1e1e-6d0c-1cb3-7903-1602d236a33a
      enabled-on-GPU-groups ( RO): 315a1e1e-6d0c-1cb3-7903-1602d236a33a
      VGPU-uuids ( RO): b6242c9c-87ad-92e9-5a24-a6bd1a3d8950
[root@xenserver ~]#
```

### 5.1.3 gpu-group

A `gpu-group` is a collection of physical GPUs, all of the same type. XenServer automatically creates `gpu-group` objects at startup to represent the distinct types of physical GPU present on the platform.

To list the `gpu-group` objects present on a platform, use `xe gpu-group-list`. For example, a system with a single GRID K2 card contains a single GPU group of type GRID K2:

```
[root@xenserver ~]# xe gpu-group-list
uuid ( RO)                : be825ba2-01d7-8d51-9780-f82cfaa64924
      name-label ( RW): Group of NVIDIA Corporation GK104GL [GRID K2] GPUs
      name-description ( RW):

[root@xenserver ~]#
```

To see detailed information about a `gpu-group`, use `xe gpu-group-param-list`:

```
[root@xenserver ~]# xe gpu-group-param-list uuid=be825ba2-01d7-8d51-9780-f82cfaa64924
uuid ( RO)                : be825ba2-01d7-8d51-9780-f82cfaa64924
      name-label ( RW): Group of NVIDIA Corporation GK104GL [GRID K2]
GPUs
      name-description ( RW):
```

```

VGPU-uuids (SRO): 6493ff45-d895-764c-58d8-96f1bc0307aa; 8481cb68-
66e5-25e6-a0c0-bd691df682b3; b73cbd30-096f-8a9a-523e-a800062f4ca7
PGPU-uuids (SRO): a4a4df34-4e5f-de9f-82d6-2134d9e339dc; 84c76e93-
555c-5ffa-e9a9-0d6fcb9ff48d; d07fa627-7dc9-f625-92be-ce5d2655e830; 7c1e3cff-
1429-0544-df3d-bf8a086fb70a
other-config (MRW):
  enabled-VGPU-types ( RO): d1fb00dd-02e6-e7df-ccd5-1944965ece55; 1a312df9-
5397-bd44-c447-c6da804d2fe7; fa50b0f0-9705-6c59-689e-ea62a3d35237; 3f318889-
7508-c9fd-7134-003d4d05ae56
  supported-VGPU-types ( RO): d1fb00dd-02e6-e7df-ccd5-1944965ece55; 1a312df9-
5397-bd44-c447-c6da804d2fe7; fa50b0f0-9705-6c59-689e-ea62a3d35237; 3f318889-
7508-c9fd-7134-003d4d05ae56
  allocation-algorithm ( RW): depth-first
[root@xenserver ~]

```

### 5.1.4 vgpu

A `vgpu` object represents a virtual GPU. Unlike the other GPU management objects, vGPUs are not created automatically by XenServer; they are created when a VM is configured via XenCenter or via `xe` to use a vGPU, or by cloning a VM that is configured to use vGPU (see section 5.4).

## 5.2 CREATING A VGPU USING XE

Use `xe vgpu-create` to create a `vgpu` object, specifying the type of vGPU required, the GPU group it will be allocated from, and the VM it is associated with:

```

[root@xenserver ~]# xe vgpu-create vm-uuid=e71afda4-53f4-3a1b-6c92-a364a7f619c2
gpu-group-uuid=be825ba2-01d7-8d51-9780-f82cfaa64924 vgpu-type-uuid=3f318889-
7508-c9fd-7134-003d4d05ae56
b73cbd30-096f-8a9a-523e-a800062f4ca7
[root@xenserver ~]#

```

Creating the vGPU object for a VM does not immediately cause a virtual GPU to be created on a physical GPU. Instead, the vGPU is created whenever its associated VM is started. For more details on how vGPUs are created at VM startup, see section 5.3.



**Note:** the owning VM must be in the powered-off state in order for the `vgpu-create` command to succeed.

A `vgpu` object's owning VM, associated GPU group, and vGPU type are fixed at creation and cannot be subsequently changed. To change the type of vGPU allocated to a VM, delete the existing `vgpu` object and create another one.

## 5.3 CONTROLLING VGPU ALLOCATION

Configuring a VM to use a vGPU in XenCenter, or creating a `vgpu` object for a VM using `xe`, does not immediately cause a virtual GPU to be created; rather, the virtual GPU is created at the time the VM is next booted, using the following steps:

- ▶ The GPU group that the `vgpu` object is associated with is checked for a physical GPU that can host a vGPU of the required type (i.e. the `vgpu` object's associated `vgpu-type`). Because vGPU types cannot be mixed on a single physical GPU, the new vGPU can only be created on a physical GPU that has no vGPUs resident on it, or only vGPUs of the same type, and less than the limit of vGPUs of that type that the physical GPU can support.
- ▶ If no such physical GPUs exist in the group, the `vgpu` creation fails and the VM startup is aborted.
- ▶ Otherwise, if more than one such physical GPU exists in the group, a physical GPU is selected according to the GPU group's *allocation policy*, as described here:

### 5.3.1 GPU allocation policy

XenServer creates GPU groups with a default allocation policy of *depth-first*. The depth-allocation policy attempts to maximize the number of vGPUs running on each physical GPU within the group, by placing newly-created vGPUs on the physical GPU that can support the new vGPU and that has the most number of vGPUs already resident. This policy generally leads to higher density of vGPUs, particularly when different types of vGPUs are being run, but may result in lower performance because it attempts to maximize sharing of physical GPUs.

Conversely, a *breadth-first* allocation policy attempts to minimize the number of vGPUs running on each physical GPU within the group, by placing newly-created vGPUs on the physical GPU that can support the new vGPU and that has the least number of vGPUs already resident. This policy generally leads to higher performance because it attempts to minimize sharing of physical GPUs, but in doing so it may artificially limit the total number of vGPUs that can run.

The allocation policy of a GPU group is stored in the `allocation-algorithm` parameter of the `gpu-group` object, and can be changed using `gpu-group-param-set`:

```
[root@xenserver ~]# xe gpu-group-param-get uuid=be825ba2-01d7-8d51-9780-f82cfaa64924 param-name=allocation-algorithm
depth-first
[root@xenserver ~]# xe gpu-group-param-set uuid=be825ba2-01d7-8d51-9780-f82cfaa64924 allocation-algorithm=breadth-first
[root@xenserver ~]#
```

Allocation policy can also be controlled from the GPU tab in XenCenter:

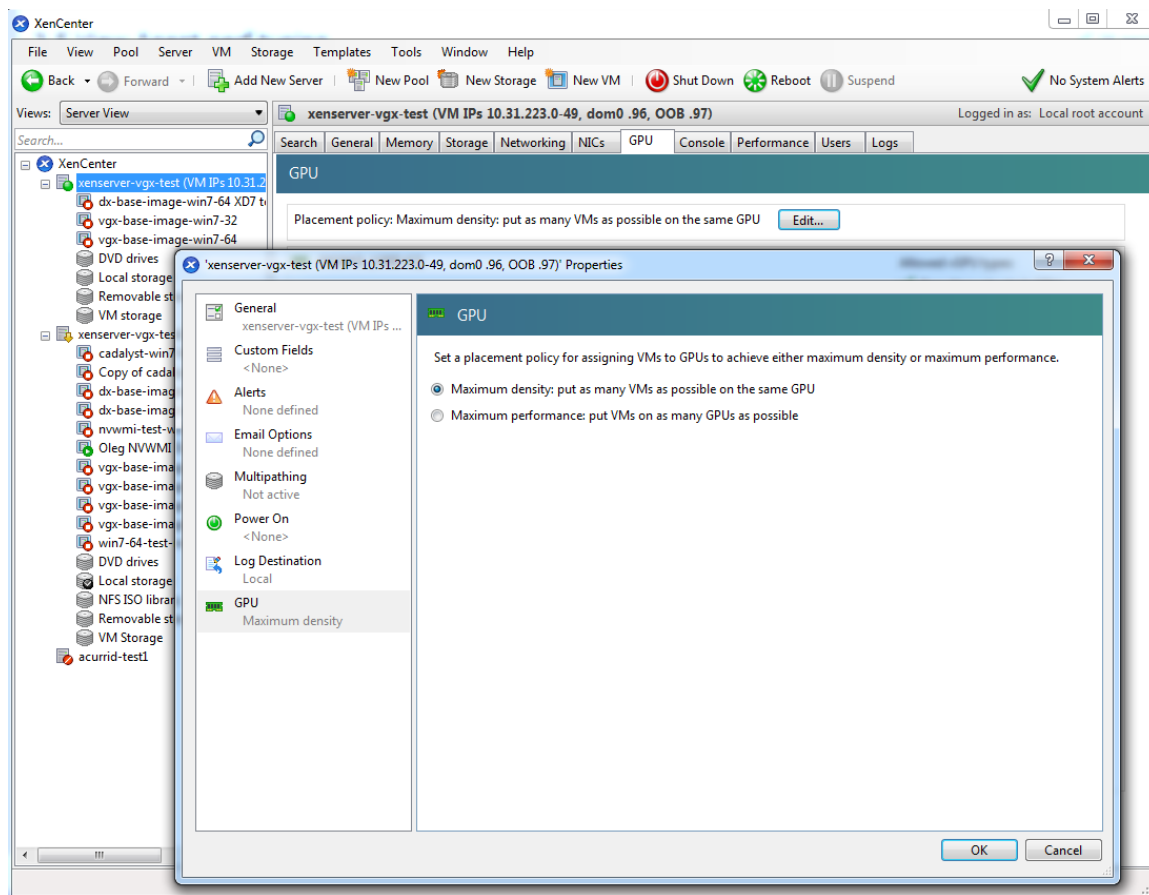


Figure 18 Modifying GPU placement policy in XenCenter

### 5.3.2 Determining the physical GPU that a virtual GPU is resident on

The `vgpu` object's `resident-on` parameter returns the UUID of the `pgpu` object for the physical GPU the vGPU is resident on:

```
[root@xenserver ~]# xe vgpu-param-get uuid=8481cb68-66e5-25e6-a0c0-bd691df682b3
param-name=resident-on
a4a4df34-4e5f-de9f-82d6-2134d9e339dc

[root@xenserver ~]# xe pgpu-param-list uuid=a4a4df34-4e5f-de9f-82d6-
2134d9e339dc
uuid ( RO)                : a4a4df34-4e5f-de9f-82d6-2134d9e339dc
  vendor-name ( RO): NVIDIA Corporation
  device-name ( RO): GK104GL [GRID K2]
  gpu-group-uuid ( RW): be825ba2-01d7-8d51-9780-f82cfaa64924
  gpu-group-name-label ( RO): Group of NVIDIA Corporation GK104GL [GRID K2]
GPUs
  host-uuid ( RO): 6f6209a6-0f11-4c51-b12d-2bce361e9639
```

```

    host-name-label ( RO): xenserver (VM IPs 10.31.213.50-95, dom0 .98,
OOB .99)
        pci-id ( RO): 0000:09:00.0
        dependencies (SRO):
        other-config (MRW):
        supported-VGPU-types ( RO): fa50b0f0-9705-6c59-689e-ea62a3d35237; 1a312df9-
5397-bd44-c447-c6da804d2fe7; d1fb00dd-02e6-e7df-ccd5-1944965ece55; 3f318889-
7508-c9fd-7134-003d4d05ae56
        enabled-VGPU-types (SRW): fa50b0f0-9705-6c59-689e-ea62a3d35237; 1a312df9-
5397-bd44-c447-c6da804d2fe7; d1fb00dd-02e6-e7df-ccd5-1944965ece55; 3f318889-
7508-c9fd-7134-003d4d05ae56
        resident-VGPUs ( RO): 8481cb68-66e5-25e6-a0c0-bd691df682b3

[root@xenserver ~]#

```



**Note:** If the vGPU is not currently running, the `resident-on` parameter is not instantiated for the vGPU, and the `vgpu-param-get` operation returns `<not in database>`.

### 5.3.3 Controlling the vGPU types enabled on specific physical GPUs

Physical GPUs support several vGPU types, as defined in Table 1 on page 3, and the “passthrough” type that is used to assign an entire physical GPU to a VM (see section 5.5). To limit the types of vGPU that may be created on a specific vGPU, open the server’s GPU tab in XenCenter, check the box beside one or more GPUs, and select Edit Selected GPUs:

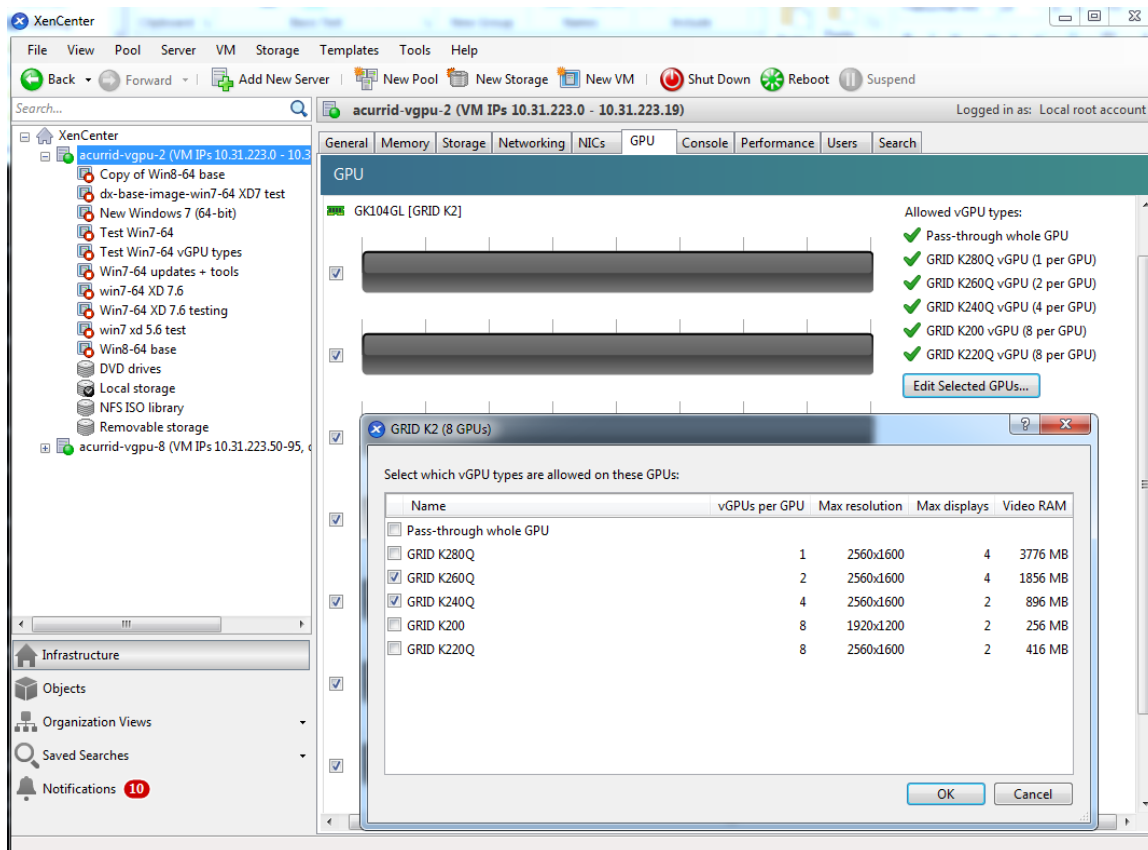


Figure 19 Editing a GPU's enabled vGPU types using XenCenter

Alternatively, modify the physical GPU's `pgpu` object's `enabled-vGPU-types` parameter use `xe pgpu-param-set`:

```
[root@xenserver ~]# xe pgpu-param-list uuid=f2607117-5b4c-d6cc-3900-00bf712e33f4
uuid ( RO)                : f2607117-5b4c-d6cc-3900-00bf712e33f4
vendor-name ( RO)         : NVIDIA Corporation
device-name ( RO)         : GK104GL [GRID K2]
gpu-group-uuid ( RW)      : f4662c69-412c-abc5-6d02-f74b7703cccd
gpu-group-name-label ( RO) : GRID K2 Socket 0
host-uuid ( RO)           : d9eb9118-a5c5-49fb-970e-80e6a8f7ff98
host-name-label ( RO)     : xenserver-vgx-test (VM IPs 10.31.223.0-49, dom0
.96, OOB .97)
pci-id ( RO)              : 0000:08:00.0
dependencies ( SRO)       :
other-config ( MRW)       :
supported-VGPU-types ( RO) : a724b756-d108-4c9f-0ea3-8f3a1553bfbf; 63d9d912-
3454-b020-8519-58dedb3b0117; 0bdf4715-e035-19c3-a57d-5ead20b3e5cd; a7838abe-
0d73-1918-7d29-fd361d3e411f
enabled-VGPU-types ( SRW) : a724b756-d108-4c9f-0ea3-8f3a1553bfbf; 63d9d912-
3454-b020-8519-58dedb3b0117; 0bdf4715-e035-19c3-a57d-5ead20b3e5cd; a7838abe-
0d73-1918-7d29-fd361d3e411f
resident-VGPUs ( RO)     :
```

```
[root@xenserver-vgx-test ~]# xe pgpu-param-set uuid=f2607117-5b4c-d6cc-3900-00bf712e33f4 enabled-VGPU-types=a724b756-d108-4c9f-0ea3-8f3a1553bfbc
```

### 5.3.4 Creating vGPUs on specific physical GPUs

To precisely control allocation of vGPUs on specific physical GPUs, create separate GPU groups for the physical GPUs you wish to allocate vGPUs on. When creating a virtual GPU, create it on the GPU group containing the physical GPU you want it to be allocated on.

For example, to create a new GPU group for the physical GPU at PCI bus ID 0000:05:0.0, start by creating the new GPU group with an appropriate name:

```
[root@xenserver ~]# xe gpu-group-create name-label="GRID K2 5:0.0"
585877ef-5a6c-66af-fc56-7bd525bdc2f6
[root@xenserver ~]#
```

Next, find the UUID of the physical GPU at 0000:05:0.0 that you wish to assign to the new GPU group

```
[root@xenserver ~]# xe pgpu-list pci-id=0000:05:00.0
uuid ( RO)                : 7c1e3cff-1429-0544-df3d-bf8a086fb70a
  vendor-name ( RO): NVIDIA Corporation
  device-name ( RO): GK104GL [GRID K2]
  gpu-group-uuid ( RW): be825ba2-01d7-8d51-9780-f82cfaa64924
[root@xenserver ~]
```



**Note:** the pci-id parameter passed to the pgpu-list command must be in the exact format shown, with the PCI domain fully specified (e.g. 0000) and the PCI bus and devices numbers each being two digits (e.g. 05:00.0).

Ensure that no vGPUs are currently operating on the physical GPU by checking the resident-VGPUs parameter:

```
[root@xenserver ~]# xe pgpu-param-get uuid=7c1e3cff-1429-0544-df3d-bf8a086fb70a
param-name=resident-VGPUs
[root@xenserver ~]#
```

If any vGPUs are listed, shut down the VMs associated with them.



Now change the `gpu-group-uuid` parameter of the physical GPU to the UUID of the newly-created GPU group:

```
[root@xenserver ~]# xe pgpu-param-set uuid=7c1e3cff-1429-0544-df3d-bf8a086fb70a
gpu-group-uuid=585877ef-5a6c-66af-fc56-7bd525bdc2f6
[root@xenserver ~]#
```

Any `vgpu` object now created that specifies this GPU group UUID will always have its vGPUs created on the GPU at PCI bus ID `0000:05:0.0`.

**Note:** you can add more than one physical GPU to a manually-created GPU group - for example, to represent all the GPUs attached to the same CPU socket in a multi-socket server platform - but as for automatically-created GPU groups, all the physical GPUs in the group must of the same type.

In XenCenter, manually-created GPU groups appear in the GPU type listing in a VM's GPU Properties. Select a GPU type within the group from which you wish the vGPU to be allocated:

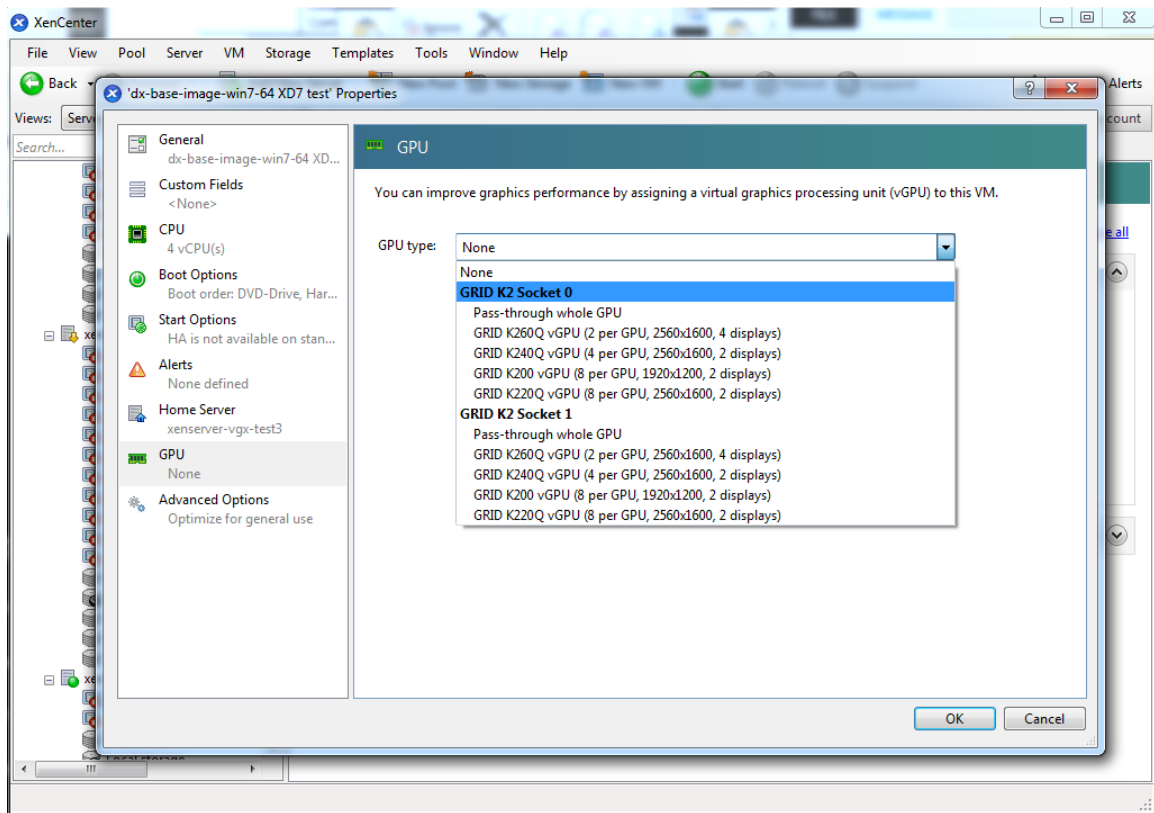


Figure 20 Using a custom GPU group within XenCenter

## 5.4 CLONING VGPU-ENABLED VMS

XenServer’s fast-clone or copying feature can be used to rapidly create new VMs from a “golden” base VM image that has been configured with GRID vGPU, the NVIDIA driver, applications, and remote graphics software. Cloning/copying can be initiated via XenCenter (see Figure 21) or from the dom0 shell:

```
[root@xenserver ~]# xe vm-clone new-name-label="new-vm" vm="base-vm-name"
7f7035cb-388d-1537-1465-1857fb6498e7
[root@xenserver ~]#
```

When a VM is cloned, any vGPU configuration associated with the base VM is copied to the cloned VM. Starting the cloned VM will create a vGPU instance of the same type as the original VM, from the same GPU group as the original vGPU.

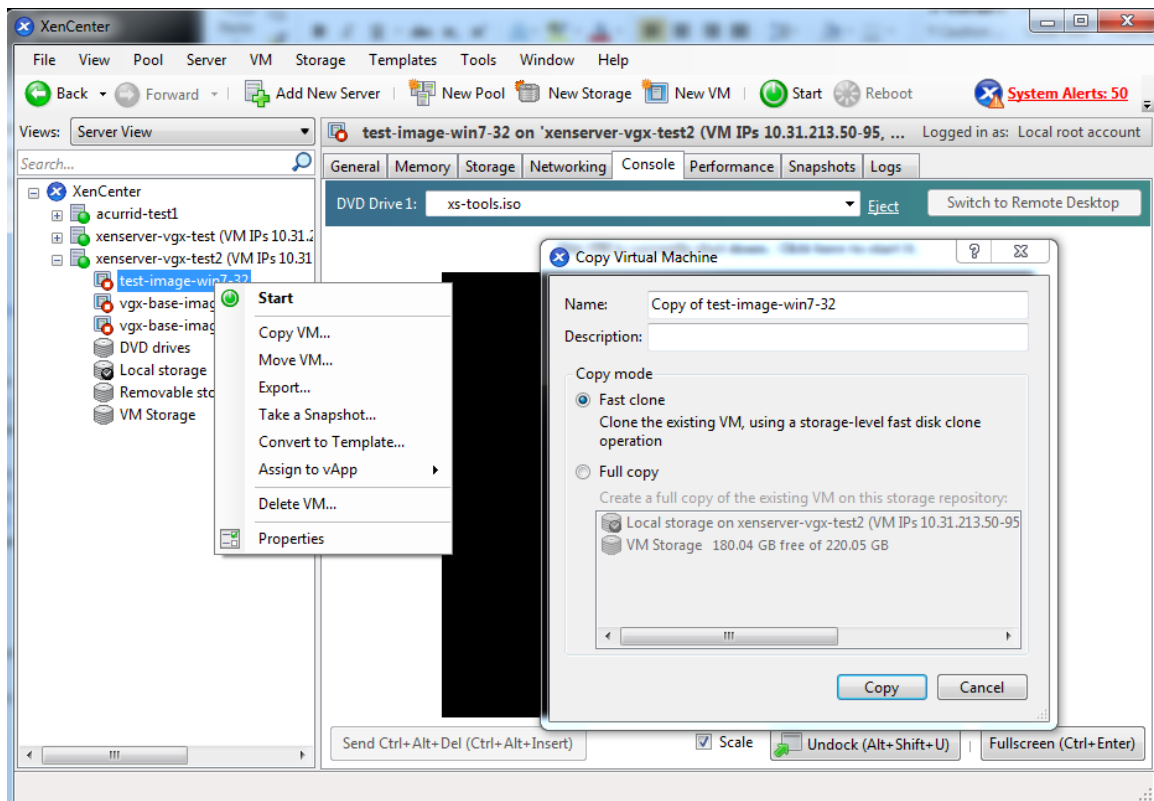


Figure 21 Cloning a VM using XenCenter

## 5.5 USING GPU PASS-THROUGH

GPU pass-through is used to directly assign an entire physical GPU to one VM, bypassing the GRID Virtual GPU Manager. In this mode of operation, the GPU is

accessed exclusively by the NVIDIA driver running in the VM to which it is assigned; the GPU is not shared among VMs.

GPU pass-through can be used in a server platform alongside GRID vGPU, with some restrictions:

- ▶ A physical GPU can host GRID vGPUs, or can be used for pass-through, but cannot do both at the same time.
- ▶ A physical GPU passed through to a VM cannot be performance-monitored via XenCenter or `nvidia-smi` (see Chapter 4).
- ▶ Passthrough GPUs do not provide console output via XenCenter's VM Console tab. Use a remote graphics connection directly into the VM to access the VM's OS.

To configure a VM for GPU pass-through, select the "Pass-through whole GPU" option as the GPU type in the VM's Properties:

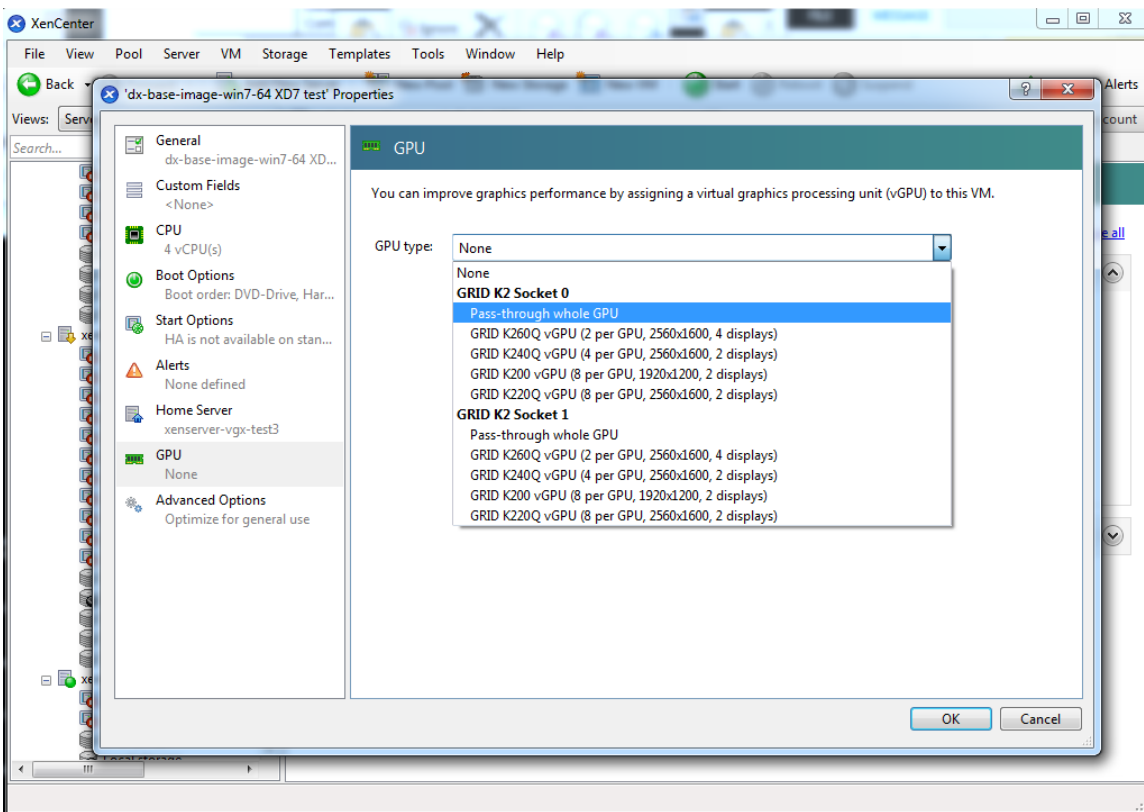


Figure 22 Using XenCenter to configure a passthrough GPU

Alternatively, create a `vgpu` object with the "passthrough" vGPU type:

```
[root@xenserver ~]# xe vgpu-type-list model-name="passthrough"
uuid ( RO)                : fa50b0f0-9705-6c59-689e-ea62a3d35237
vendor-name ( RO):
model-name ( RO): passthrough
```

```
framebuffer-size ( RO): 0

[root@xenserver ~]# xe vgpu-create vm-uuid=753e77a9-e10d-7679-f674-65c078abb2eb
vgpu-type-uuid=fa50b0f0-9705-6c59-689e-ea62a3d35237 gpu-group-uuid=585877ef-
5a6c-66af-fc56-7bd525bdc2f6
6aa530ec-8f27-86bd-b8e4-fe4fde8f08f9
[root@xenserver ~]#
```



**CAUTION:** Do not assign passthrough GPUs using the legacy `other-config:pci` parameter setting. This mechanism is not supported alongside the XenCenter UI and `xe vgpu` mechanisms, and attempts to use it may lead to undefined results.

# Chapter 6. XENSERPER PERFORMANCE TUNING

This chapter provides recommendations on optimizing performance for VMs running with GRID vGPU on Citrix XenServer.

## 6.1 XENSERPER TOOLS

To get maximum performance out of a VM running on Citrix XenServer, regardless of whether you are using GRID vGPU, you must install Citrix XenServer tools within the VM. Without the optimized networking and storage drivers that the XenServer tools provide, remote graphics applications running on GRID vGPU will not deliver maximum performance.

## 6.2 USING REMOTE GRAPHICS

GRID vGPU implements a console VGA interface that permits the VM's graphics output to be viewed via XenCenter's console tab. This feature allows the desktop of a vGPU-enabled VM to be visible in XenCenter before any NVIDIA graphics driver is loaded in the virtual machine, but it is intended solely as a management convenience; it only supports output of vGPU's primary display and isn't designed or optimized to deliver high frame rates.

To deliver high frames from multiple heads on vGPU, we recommend installation of a high-performance remote graphics stack such as Citrix XenDesktop® with HDX 3D Pro remote graphics and, once this is done, disable vGPU's console VGA.

**!** **CAUTION:** Using Windows Remote Desktop (RDP) to access Windows 7 / Windows Server 2008 VMs running GRID vGPU will cause the NVIDIA driver in the VM to be unloaded. GPU-accelerated DirectX, OpenGL, and the NVIDIA control panel will be unavailable whenever RDP is active. Installing a VNC server in the VM will allow for basic, low-performance remote access while leaving the NVIDIA driver loaded and vGPU active, but for high performance remote accesses, use an accelerated stack such as XenDesktop.

## 6.2.1 Disabling console VGA

The console VGA interface in vGPU is optimized to consume minimal resources, but when a system is loaded with a high number of VMs, disabling the console VGA interface entirely may yield some performance benefit.

Once you have installed an alternate means of accessing a VM (such as XenDesktop or a VNC server), its vGPU console VGA interface can be disabled by specifying `disable_vnc=1` in the VM's `platform:vgpu_extra_args` parameter:

```
[root@xenserver ~]# xe vm-param-set uuid=e71afda4-53f4-3a1b-6c92-a364a7f619c2
platform:vgpu_extra_args="disable_vnc=1"
[root@xenserver ~]#
```

The new console VGA setting takes effect the next time the VM is started or rebooted. With console VGA disabled, the XenCenter console will display the Windows boot splash screen for the VM, but nothing beyond that.

**!** **CAUTION:** If you disable console VGA before you have installed/enabled an alternate mechanism to access the VM (such as XenDesktop), you will not be able to interact with the VM once it has booted.

You can recover console VGA access by removing the `vgpu_extra_args` key from the `platform` parameter, or by removing `disable_vnc=1` from the `vgpu_extra_args` key, or by setting `disable_vnc=0`. For example:

```
[root@xenserver ~]# xe vm-param-set uuid=e71afda4-53f4-3a1b-6c92-a364a7f619c2
platform:vgpu_extra_args="disable_vnc=0"
```

## 6.4 ALLOCATION STRATEGIES

### 6.4.1 NUMA considerations

Server platforms typically implement multiple CPU sockets, with system memory and PCI Express expansion slots local to each CPU socket, as illustrated in Figure 23:

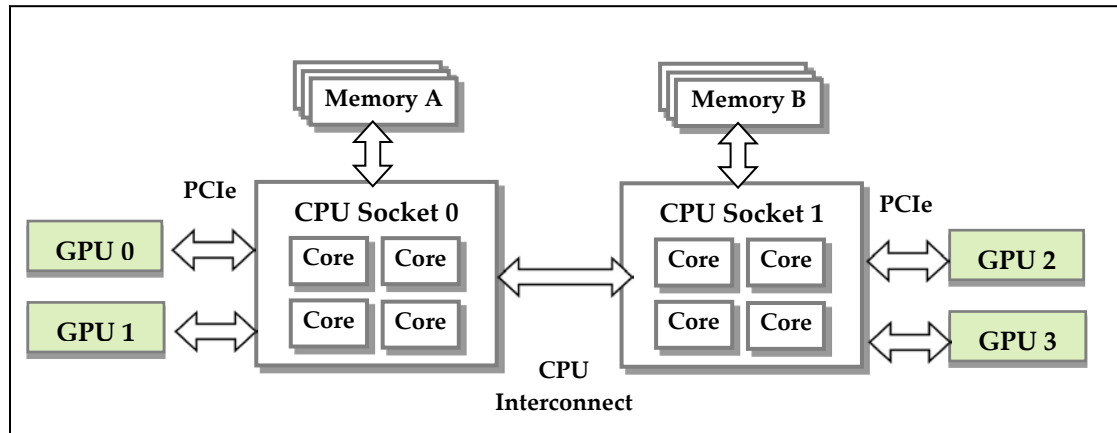


Figure 23 A NUMA server platform

These platforms are typically configured to operate in Non-Uniform Memory Access (NUMA) mode; physical memory is arranged sequentially in the address space, with all the memory attached to each socket appearing in a single contiguous block of addresses. The cost of accessing a range of memory from a CPU or GPU varies; memory attached to the same socket as the CPU or GPU is accessible at lower latency than memory on another CPU socket, because accesses to remote memory must additionally traverse the interconnect between CPU sockets.

To obtain best performance on a NUMA platform, we recommend pinning VM vCPU cores to physical cores on the same CPU socket to which the physical GPU hosting the VM's vGPU is attached. For example, using `as a reference, a VM with a vGPU allocated on physical GPU 0 or 1 should have its vCPUs pinned to CPU cores on CPU socket 0. Similarly, a VM with a vGPU allocated on physical GPU 2 or 3 should have its vCPUs pinned to CPU cores on socket 1.`

See Appendix A.5 for guidance on pinning vCPUs, and A.7 for guidance on determining which CPU socket a GPU is connected to. Section 5.3.3 describes how to precisely control which physical GPU is used to host a vGPU, by creating GPU groups for specific physical GPUs.

## 6.4.2 Maximizing performance

To maximize performance as the number of vGPU-enabled VMs on the platform increases, we recommend adopting a *breadth-first* allocation: allocate new VMs on the least-loaded CPU socket, and allocate the VM's vGPU on an available, least-loaded, physical GPU connected via that socket.

XenServer's creates GPU groups with a default allocation policy of *depth-first*. See section 5.3.1 for details on switching the allocation policy to breadth-first.



**Note:** Due to vGPU's requirement that only one type of vGPU can run on a physical GPU at any given time, not all physical GPUs may be available to host the vGPU type required by the new VM.



# Chapter 7. TROUBLESHOOTING

This chapter describes basic troubleshooting steps for GRID vGPU on Citrix XenServer and VMware vSphere, and how to collect debug information when filing a bug report.

## 7.1 KNOWN ISSUES

Before troubleshooting or filing a bug report, review the release notes that accompany each driver release, for information about known issues with the current release, and potential workarounds.

## 7.2 TROUBLESHOOTING STEPS

If a vGPU-enabled VM fails to start, or doesn't display any output when it does start, follow these steps to narrow down the probable cause.

### 7.2.1 Verify the NVIDIA kernel driver is loaded

On Citrix XenServer, use `lsmod` to verify that the kernel driver is loaded:

```
[root@xenserver ~]# lsmod|grep nvidia
nvidia                9604895  84
i2c_core              20294  2 nvidia,i2c_i801
[root@xenserver ~]#
```

On VMware vSphere, use `vmkload_mod`:

```
[root@esxi:~] vmkload_mod -l | grep nvidia
nvidia                5      8420
```

If the `nvidia` driver is not listed in the output, check `dmesg` for any load-time errors reported by the driver (see section 7.2.3). On XenServer, also use the `'rpm -q'` command to verify that the NVIDIA GPU Manager package is correctly installed (see section 2.1.3.2).

## 7.2.2 Verify that `nvidia-smi` works

If the NVIDIA kernel driver is correctly loaded on the physical GPU, run `nvidia-smi` and verify that all physical GPUs not currently being used for GPU passthrough are listed in the output. For details on expected output, see section 4.1.

If `nvidia-smi` fails to report the expected output, check `dmesg` for NVIDIA kernel driver messages.

## 7.2.3 NVIDIA kernel driver output

Information and debug messages from the NVIDIA kernel driver are logged in kernel logs, prefixed with `"NVRM"` or `'nvidia'`. Run `dmesg` on both Citrix XenServer and VMware vSphere to check for these:

```
[root@xenserver ~]# dmesg | grep -E "NVRM|nvidia"
[ 22.054928] nvidia: module license 'NVIDIA' taints kernel.
[ 22.390414] NVRM: loading
[ 22.829226] nvidia 0000:04:00.0: enabling device (0000 -> 0003)
[ 22.829236] nvidia 0000:04:00.0: PCI INT A -> GSI 32 (level, low) -> IRQ 32
[ 22.829240] NVRM: This PCI I/O region assigned to your NVIDIA device is
invalid:
[ 22.829241] NVRM: BAR0 is 0M @ 0x0 (PCI:0000:00:04.0)
[ 22.829243] NVRM: The system BIOS may have misconfigured your GPU.
```

## 7.2.4 GRID Virtual GPU Manager messages

Information and debug messages from the GRID Virtual GPU Manager are logged to the hypervisor's log files, prefixed with `'vmiop'`:

### 7.2.4.1 Citrix XenServer

GRID Virtual GPU Manager are written to `/var/log/messages`:

```
[root@xenserver ~]# grep vmiop /var/log/messages
```

```

Nov  8 09:17:44 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: vmiop-env:
guest_max_gpfn:0x10efff
Nov  8 09:17:44 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: pluginconfig:
/usr/share/nvidia/vgx/grid_k100.conf,disable_vnc=0,gpu-pci-id=0000:88:00.0
Nov  8 09:17:44 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: Loading Plugin0: libnvidia-
vgx
Nov  8 09:17:45 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: vgpu_type : vdi
Nov  8 09:17:45 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: Framebuffer: 0x10000000
Nov  8 09:17:45 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: Virtual Device Id:
0x0FE7:0x101E
Nov  8 09:17:45 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: ##### vGPU Manager
Information: #####
Nov  8 09:17:45 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: Driver Version: 331.59
Nov  8 09:17:45 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: VGX Version: 1.1
Nov  8 09:17:45 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: Init frame copy engine:
syncing...
Nov  8 09:18:03 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: ##### Guest NVIDIA
Driver Information: #####
Nov  8 09:18:03 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: Driver Version: 331.82
Nov  8 09:18:03 xenserver-vgx-test2 fe: vgpu-2[14901]: vmiop_log: notice: VGX Version: 0.5
[root@xenserver ~]#

```

## 7.2.4.2 VMware vSphere

GRID Virtual GPU Manager are written to `vmware.log` in the guest VM's storage directory:

```

[root@esxi:~] grep vmiop /vmfs/volumes/datastore1/win7-vgpu-test1/vmware.log
2015-04-28T14:02:21.275Z| vmx| I120: DICT pciPassthru0.virtualDev = "vmiop"
2015-04-28T14:02:21.344Z| vmx| I120: GetPluginPath testing /usr/lib64/vmware/plugin/libvmx-vmiop.so
2015-04-28T14:02:21.344Z| vmx| I120: PluginLdr_LoadShared: Loaded shared plugin libvmx-vmiop.so from
/usr/lib64/vmware/plugin/libvmx-vmiop.so
2015-04-28T14:02:21.344Z| vmx| I120: VMIOP: Loaded plugin libvmx-vmiop.so:VMIOP_InitModule
2015-04-28T14:02:21.359Z| vmx| I120: VMIOP: Initializing plugin vmiop-display
2015-04-28T14:02:21.365Z| vmx| I120: vmiop_log: gpu-pci-id : 0000:04:00.0
2015-04-28T14:02:21.365Z| vmx| I120: vmiop_log: vgpu_type : quadro
2015-04-28T14:02:21.365Z| vmx| I120: vmiop_log: Framebuffer: 0x74000000
2015-04-28T14:02:21.365Z| vmx| I120: vmiop_log: Virtual Device Id: 0x11B0:0x101B
2015-04-28T14:02:21.365Z| vmx| I120: vmiop_log: ##### vGPU Manager Information: #####
2015-04-28T14:02:21.365Z| vmx| I120: vmiop_log: Driver Version: 361.40
2015-04-28T14:02:21.365Z| vmx| I120: vmiop_log: VGX Version: 2.0
2015-04-28T14:02:21.445Z| vmx| I120: vmiop_log: Init frame copy engine: syncing...
2015-04-28T14:02:37.031Z| vthread-12| I120: vmiop_log: ##### Guest NVIDIA Driver Information:
#####
2015-04-28T14:02:37.031Z| vthread-12| I120: vmiop_log: Driver Version: 347.52
2015-04-28T14:02:37.031Z| vthread-12| I120: vmiop_log: VGX Version: 2.0
2015-04-28T14:02:37.093Z| vthread-12| I120: vmiop_log: Clearing BAR1 mapping
2015-07-06T23:39:55.726Z| vmx| I120: VMIOP: Shutting down plugin vmiop-display
[root@esxi:~]

```

## 7.3 FILING A BUG REPORT

When filing a bug report with NVIDIA, capture relevant configuration data from the platform exhibiting the bug, using `nvidia-bug-report.sh`. On Citrix XenServer, a server status report may be used as an alternative.

### 7.3.1 nvidia-bug-report.sh

Run `nvidia-bug-report.sh` from Citrix XenServer's dom0 shell or VMware ESXi's host shell to capture debug information into a gzip'd log file on the server. The example shows execution on Citrix XenServer, but the procedure is the same on vSphere ESXi:

```
[root@xenserver ~]# nvidia-bug-report.sh

nvidia-bug-report.sh will now collect information about your
system and create the file 'nvidia-bug-report.log.gz' in the current
directory. It may take several seconds to run. In some
cases, it may hang trying to capture data generated dynamically
by the Linux kernel and/or the NVIDIA kernel module. While
the bug report log file will be incomplete if this happens, it
may still contain enough data to diagnose your problem.

For Xen open source/XCP users, if you are reporting a domain issue,
please run: nvidia-bug-report.sh --domain-name <"domain_name">

Please include the 'nvidia-bug-report.log.gz' log file when reporting
your bug via the NVIDIA Linux forum (see devtalk.nvidia.com)
or by sending email to 'linux-bugs@nvidia.com'.

Running nvidia-bug-report.sh...

If the bug report script hangs after this point consider running with
--safe-mode command line argument.

complete.

[root@xenserver ~]#
```

### 7.3.2 XenServer status report

From XenCenter, select the Tools menu, Server Status Report, then select the XenServer instance from which you wish to collect a status report. Select the data to include in the report, check "NVIDIA-logs" to include GRID vGPU debug information, then generate the report.

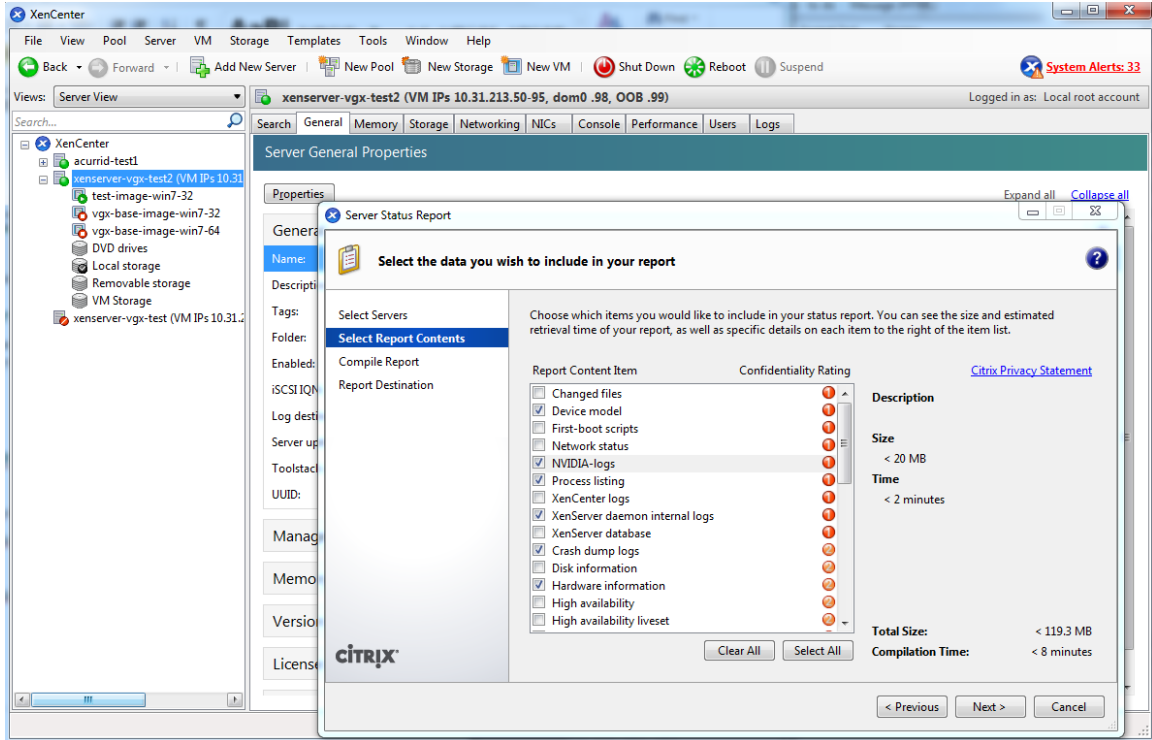


Figure 24 Including NVIDIA logs in server status report

# Appendix A. XENSERVER BASICS

This appendix outlines basic operations on XenServer that are needed in order to install and configure GRID vGPU, and optimize XenServer operation with vGPU.

## A.1 OPENING A DOM0 SHELL

Most configuration commands must be run in a command shell on XenServer's dom0. There are two ways to open a shell on XenServer's dom0; using the console window in XenCenter, or using a standalone secure shell (ssh) client:

### A.1.1 Accessing the dom0 shell via XenCenter

To access the dom0 shell via XenCenter, in the left-hand pane click on the XenServer host you wish to connect to. Then click on the Console tab to open the XenServer's console, and press enter to start a shell prompt:

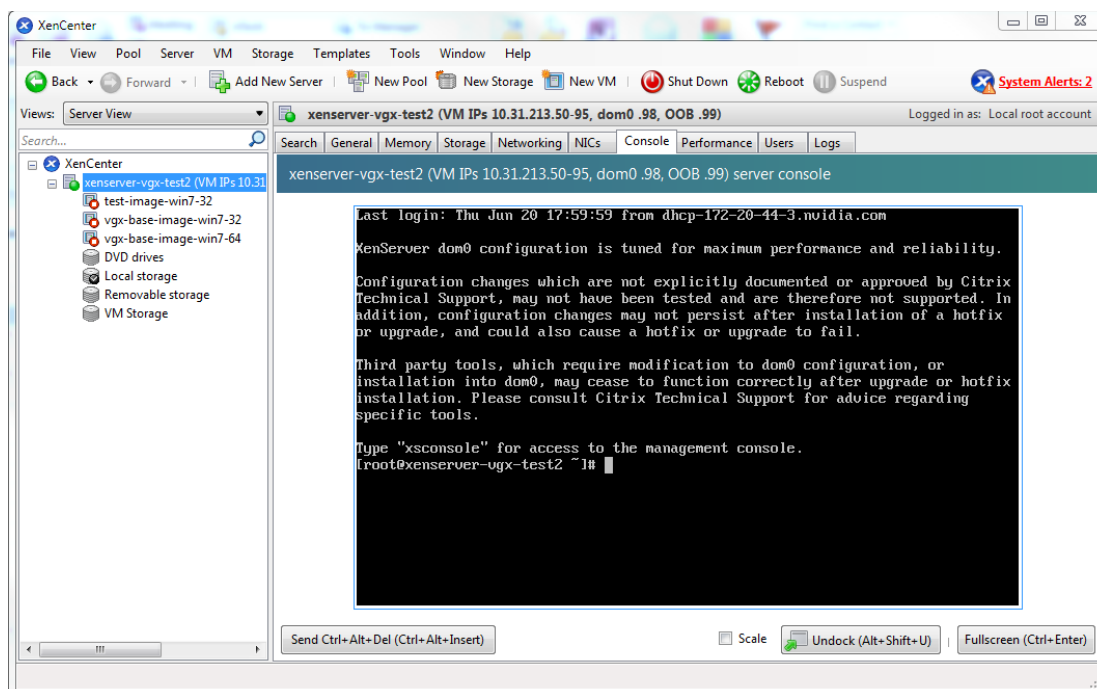


Figure 25 Connecting to the dom0 shell via XenCenter

## A.1.2 Accessing the dom0 shell using ssh

To access the dom0 shell via an ssh client, you will need an ssh client suite such as *putty* on Windows, or the ssh client from OpenSSH on Linux.

Connect your ssh client to the management IP address of the XenServer, and log in as the root user.

## A.2 COPYING FILES TO DOM0

Files can be easily copied to/from XenServer dom0 using an scp client or using a network-mounted filesystem.

### A.2.1 Copying files using scp

Copying files using scp

scp is a secure copy program that is part of the ssh suite of applications. scp is implemented in dom0 and can be used to copy from a remote ssh-enabled server:

```
[root@xenserver ~]# scp root@10.31.213.96:/tmp/somefile .
The authenticity of host '10.31.213.96 (10.31.213.96)' can't be established.
RSA key fingerprint is 26:2d:9b:b9:bf:6c:81:70:36:76:13:02:c1:82:3d:3c.
```

```
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '10.31.213.96' (RSA) to the list of known hosts.
root@10.31.213.96's password:
somefile                               100% 532      0.5KB/s   00:00
[root@xenserver ~]#
```

Alternatively, `scp` can be used to copy files from a remote system to XenServer. Using the `pscp` program from the putty suite on Windows:

```
C:\Users\nvidia>pscp somefile root@10.31.213.98:/tmp
root@10.31.213.98's password:
somefile          | 80 kB | 80.1 kB/s | ETA: 00:00:00 | 100%
C:\Users\nvidia>
```

## A.2.2 Copying files via a CIFS-mounted filesystem

Files can be copied to/from a CIFS/SMB file share by mounting the share from `dom0`.

The following example assumes that the fileshare is part of an Active Directory domain called `domain.com`, and user `myuser` has permissions to access the share. To mount a network share `\\myserver.domain.com\myshare` at `/mnt/myshare` on `dom0`,

```
[root@xenserver ~]# mkdir /mnt/myshare
[root@xenserver ~]# mount -t cifs -o username=myuser,workgroup=domain.com
//myserver.domain.com/myshare /mnt/myshare
Password:
[root@xenserver ~]#
```

When prompted for a password, enter the password for `myuser` in the `domain.com` domain. After completion, files can be copied to/from the fileshare by copying to/from `/mnt/myshare`:

```
[root@xenserver ~]# cp /mnt/myshare/NVIDIA-vGPU-xenserver-6.2-331.59.i386.rpm .
[root@xenserver ~]#
```

## A.3 DETERMINING A VM'S UUID

To determine a virtual machine's UUID, use the `xe vm-list` command in a `dom0` shell, or XenCenter:



## A.3.1 Using xe vm-list

To list all VMs and their associated UUIDs, use `xe vm-list`:

```
[root@xenserver ~]# xe vm-list
uuid ( RO)          : 6b5585f6-bd74-2e3e-0e11-03b9281c3ade
  name-label ( RW): vgx-base-image-win7-64
  power-state ( RO): halted

uuid ( RO)          : fa3d15c7-7e88-4886-c36a-cdb23ed8e275
  name-label ( RW): test-image-win7-32
  power-state ( RO): halted

uuid ( RO)          : 501bb598-a9b3-4afc-9143-ff85635d5dc3
  name-label ( RW): Control domain on host: xenserver
  power-state ( RO): running

uuid ( RO)          : 8495adf7-be9d-eee1-327f-02e4f40714fc
  name-label ( RW): vgx-base-image-win7-32
  power-state ( RO): halted
```

To find the UUID of a specific named VM, use the `name-label` parameter to `xe vm-list`:

```
[root@xenserver ~]# xe vm-list name-label=test-image-win7-32
uuid ( RO)          : fa3d15c7-7e88-4886-c36a-cdb23ed8e275
  name-label ( RW): test-image-win7-32
  power-state ( RO): halted
```

## A.3.2 Using XenCenter

In the left-hand pane click on the VM, then click on the General tab . The UUID is listed in the VM's General Properties.

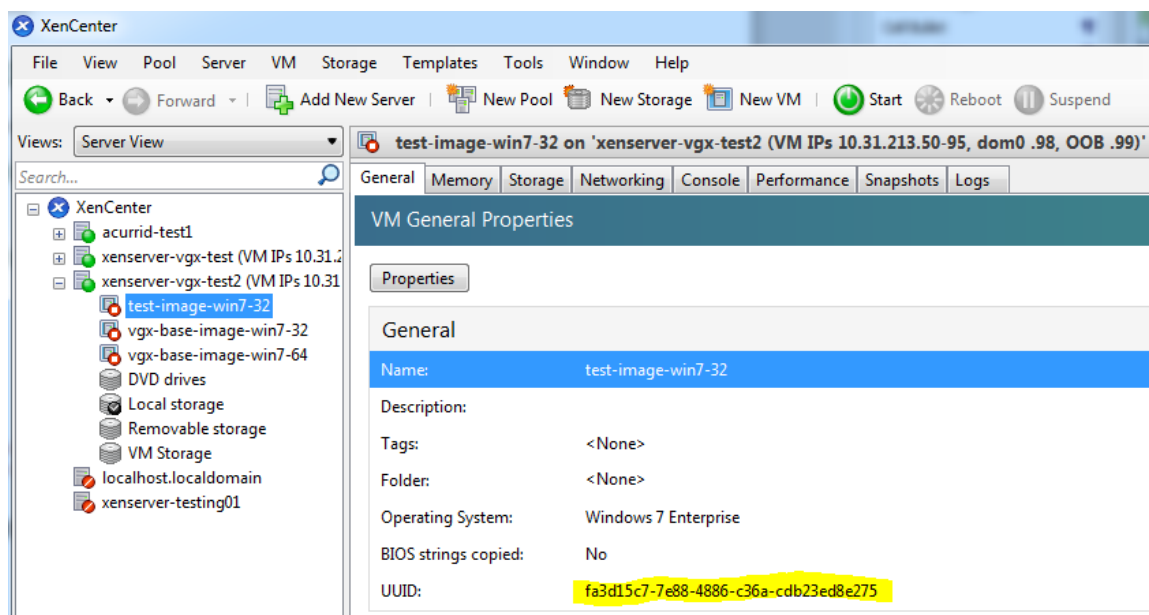


Figure 26 Using XenCenter to determine a VM's UUID

## A.4 USING MORE THAN TWO VCPUS WITH WINDOWS CLIENT VMS

Windows client operating systems support a maximum of two CPU sockets. When allocating vCPUs to virtual sockets within a guest VM, XenServer defaults to allocating one vCPU per socket; any more than two vCPUs allocated to the VM won't be recognized by the Windows client OS.

To fix this, set `platform:cores-per-socket` to the number of vCPUs allocated to the VM:

```
[root@xenserver ~]# xe vm-param-set uuid=<vm-uuid> platform:cores-per-socket=4
VCPUs-max=4 VCPUs-at-startup=4
```

## A.5 PINNING VMS TO A SPECIFIC CPU SOCKET AND CORES

Use `xe host-cpu-info` to determine the number of CPU sockets and logical CPU cores in the server platform. In this example the server implements 32 logical CPU cores across two sockets:

```
[root@xenserver ~]# xe host-cpu-info
cpu_count          : 32
```

```

socket_count: 2
  vendor: GenuineIntel
  speed: 2600.064
  modelname: Intel(R) Xeon(R) CPU E5-2670 0 @ 2.60GHz
  family: 6
  model: 45
  stepping: 7
  flags: fpu de tsc msr pae mce cx8 apic sep mtrr mca cmov
pat clflush acpi mmx fxsr sse sse2 ss ht nx constant_tsc nonstop_tsc aperfmperf
pni pclmulqdq vmx est ssse3 sse4_1 sse4_2 x2apic popcnt aes hypervisor ida arat
tpr_shadow vnmi flexpriority ept vpid
  features: 17bee3ff-bfebfbff-00000001-2c100800
  features_after_reboot: 17bee3ff-bfebfbff-00000001-2c100800
  physical_features: 17bee3ff-bfebfbff-00000001-2c100800
  maskable: full

```

To pin a VM's vCPUs to a specific socket, set `VCPUs-params:mask`. This setting persists over VM reboots and shutdowns. In a dual socket platform with 32 total cores, cores 0-15 are on socket 0, and cores 16-31 are on socket 1. To restrict a VM to only run on socket 0:

```
[root@xenserver ~]# xe vm-param-set uuid=<vm-uuid> VCPUs-params:mask=0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15
```

Similarly, to restrict a VM to only run on socket 1:

```
[root@xenserver ~]# xe vm-param-set uuid=<vm-uuid> VCPUs-params:mask=16,17,18,19,20,21,22,23,24,25,26,27,28,29,30,31
```

To pin vCPUs to specific cores within a socket, specify the cores directly:

```
[root@xenserver ~]# xe vm-param-set uuid=<vm-uuid> VCPUs-params:mask=16,17,18,19
```

Use `xl vcpu-list` to list the current assignment of vCPUs to physical CPUs:

```
[root@xenserver ~]# xl vcpu-list
```

Name	ID	VCPU	CPU	State	Time(s)	CPU Affinity
Domain-0	0	0	25	-b-	9188.4	any cpu
Domain-0	0	1	19	r--	8908.4	any cpu
Domain-0	0	2	30	-b-	6815.1	any cpu
Domain-0	0	3	17	-b-	4881.4	any cpu
Domain-0	0	4	22	-b-	4956.9	any cpu
Domain-0	0	5	20	-b-	4319.2	any cpu
Domain-0	0	6	28	-b-	5720.0	any cpu

Domain-0	0	7	26	-b-	5736.0	any cpu
test-image-win7-32	34	0	9	-b-	17.0	4-15
test-image-win7-32	34	1	4	-b-	13.7	4-15

## A.6 CHANGING DOM0 VCPUS AND PINNING

The default number of vCPUs assigned to dom0 is 8. To change this number, modify the `dom0_max_vcpus` parameter in the Xen bootline. For example:

```
[root@xenserver ~]# /opt/xensource/libexec/xen-cmdline --set-xen
dom0_max_vcpus=4
```



**Note:** After applying this setting, you must reboot the system for it to take effect. Use `shutdown -r now` to reboot the server, or reboot it from XenCenter.

By default, dom0's vCPUs are unpinned, and able to run on any physical CPU in the system. To pin dom0 vCPUs to specific physical CPUs, use `xl vcpu-pin`. For example, to pin dom0's vCPU 0 to physical CPU 18, use:

```
[root@xenserver ~]# xl vcpu-pin Domain-0 0 18
```

CPU pinnings applied this way take effect immediately but do not persist over reboots. To make settings persistent, add `xl vcpu-pin` commands into `/etc/rc.local`, for example:

```
xl vcpu-pin 0 0 0-15
xl vcpu-pin 0 1 0-15
xl vcpu-pin 0 2 0-15
xl vcpu-pin 0 3 0-15
xl vcpu-pin 0 4 16-31
xl vcpu-pin 0 5 16-31
xl vcpu-pin 0 6 16-31
xl vcpu-pin 0 7 16-31
```

## A.7 DETERMINING GPU LOCALITY

As noted in section 6.4.1, current multi-socket, servers typically implement PCIe expansion slots local to each CPU socket and it is advantageous to pin VMs to the same socket that their associated physical GPU is connected to.

For current Intel platforms, CPU socket 0 typically has its PCIe root ports located on bus 0, so any GPU below a root port located on bus 0 is connected to socket 0. CPU socket 1 has its root ports on a higher bus number, typically bus 0x20 or bus 0x80 depending on the specific server platform.

## Notice

ALL NVIDIA DESIGN SPECIFICATIONS, REFERENCE BOARDS, FILES, DRAWINGS, DIAGNOSTICS, LISTS, AND OTHER DOCUMENTS (TOGETHER AND SEPARATELY, "MATERIALS") ARE BEING PROVIDED "AS IS." NVIDIA MAKES NO WARRANTIES, EXPRESSED, IMPLIED, STATUTORY, OR OTHERWISE WITH RESPECT TO THE MATERIALS, AND EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF NONINFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE.

Information furnished is believed to be accurate and reliable. However, NVIDIA Corporation assumes no responsibility for the consequences of use of such information or for any infringement of patents or other rights of third parties that may result from its use. No license is granted by implication of otherwise under any patent rights of NVIDIA Corporation. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all other information previously supplied. NVIDIA Corporation products are not authorized as critical components in life support devices or systems without express written approval of NVIDIA Corporation.

## HDMI

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

## OpenCL

OpenCL is a trademark of Apple Inc. used under license to the Khronos Group Inc.

## Trademarks

NVIDIA and the NVIDIA logo are trademarks or registered trademarks of NVIDIA Corporation in the U.S. and other countries. Other company and product names may be trademarks of the respective companies with which they are associated.

## Copyright

© 2016 NVIDIA Corporation. All rights reserved.