



Function holoscan::viz::GetCurrent

Table of contents

Function Documentation

- Defined in [File holoviz.hpp](#)

Function Documentation

[InstanceHandle](#) holoscan::viz::GetCurrent()

Returns

the current instance for the active thread.

© Copyright 2022-2024, NVIDIA.. PDF Generated on 06/06/2024