



Enabling G-SYNC

For better performance and to keep up with the high refresh rate of Holoscan applications, we recommend the use of a [G-SYNC display](#).

Tip

Holoscan has been tested with these two G-SYNC displays:

- [Asus ROG Swift PG279QM](#)
- [Asus ROG Swift 360 Hz PG259QNR](#)

Follow these steps to ensure G-SYNC is enabled on your display:

1. Open the “NVIDIA Settings” Graphical application (`nvidia-settings` in Terminal).
2. Click on `X Server Display Configuration` then the `Advanced` button. This will show the `Allow G-SYNC on monitor not validated as G-SYNC compatible` option. Enable the option and click `Apply`:

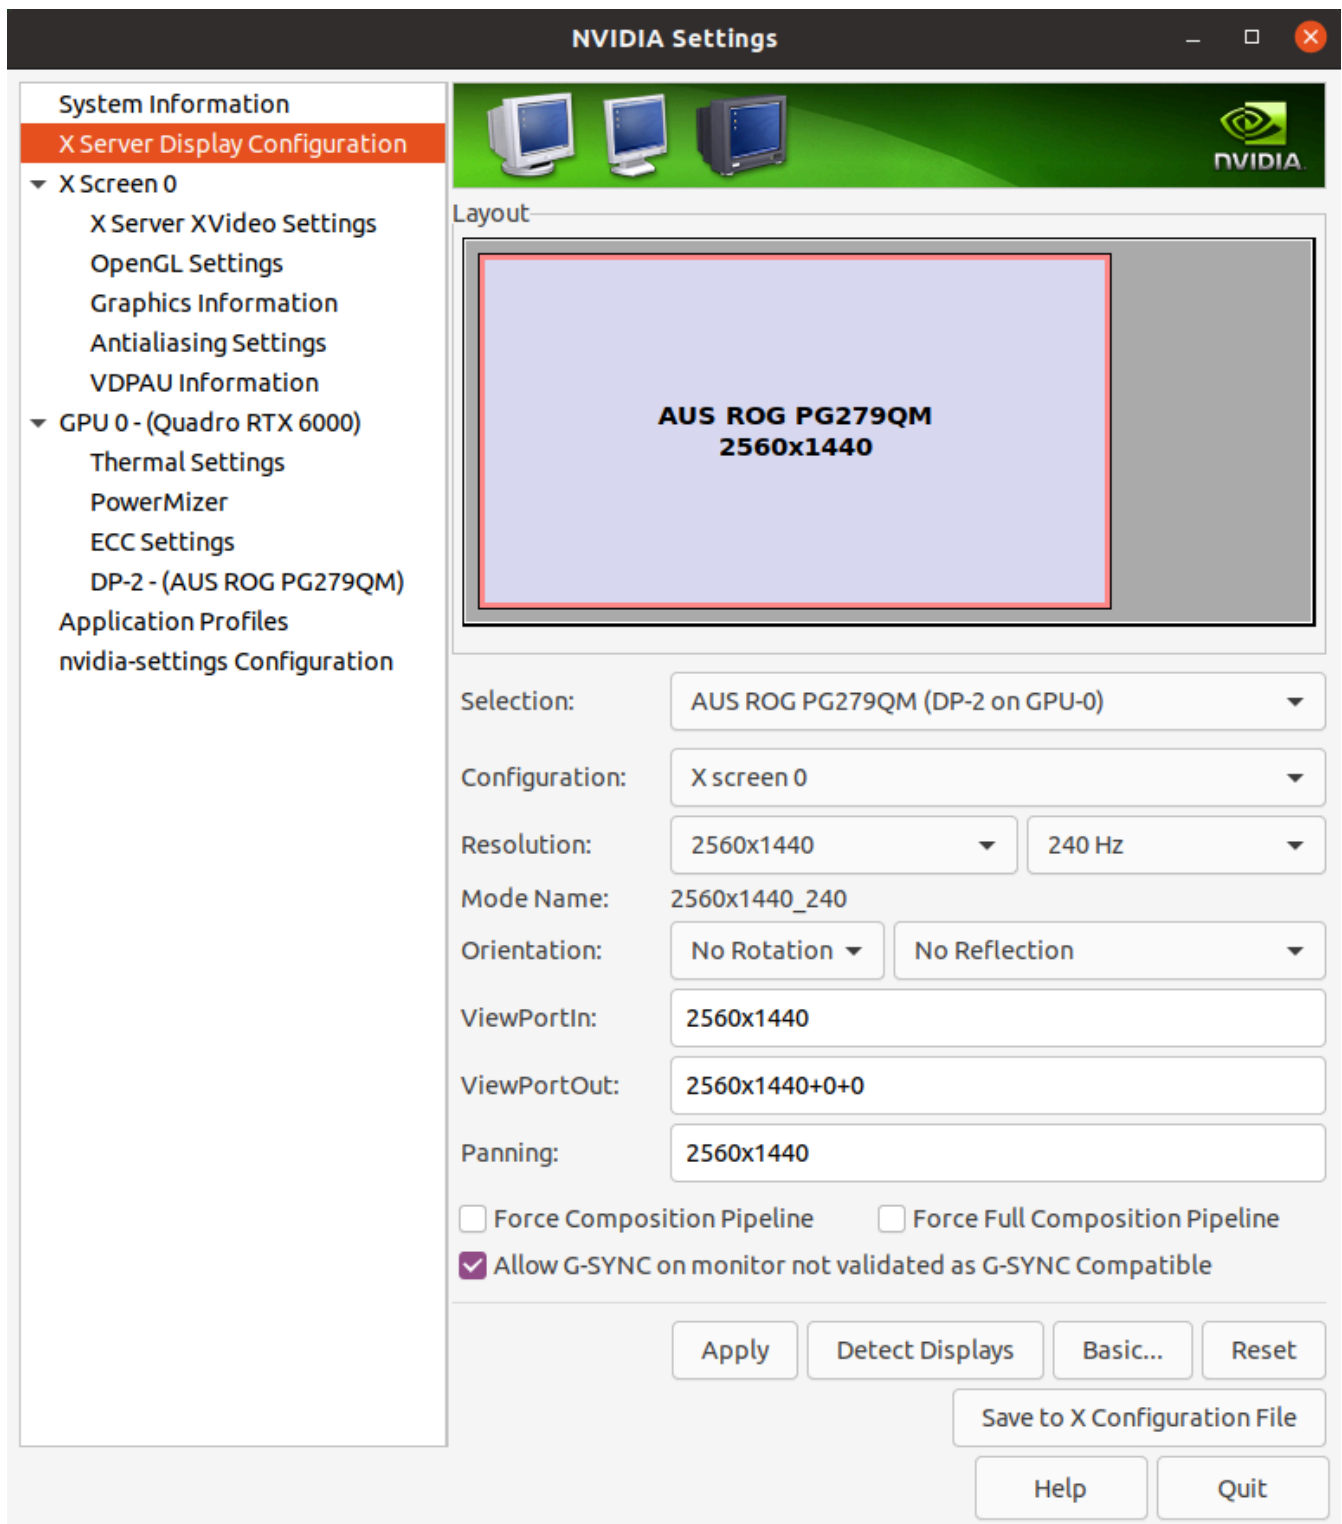


Fig. 1 Enable G-SYNC for the current display

3. To show the refresh rate and G-SYNC label on the display window, click on `OpenGL Settings` for the selected display. Now click `Allow G-SYNC/G-SYNC Compatible` and

Enable G-SYNC/G-SYNC Compatible Visual Indicator options and click **Quit**. This step is shown in below image. The **Gsync** indicator will be at the top right screen once the application is running.

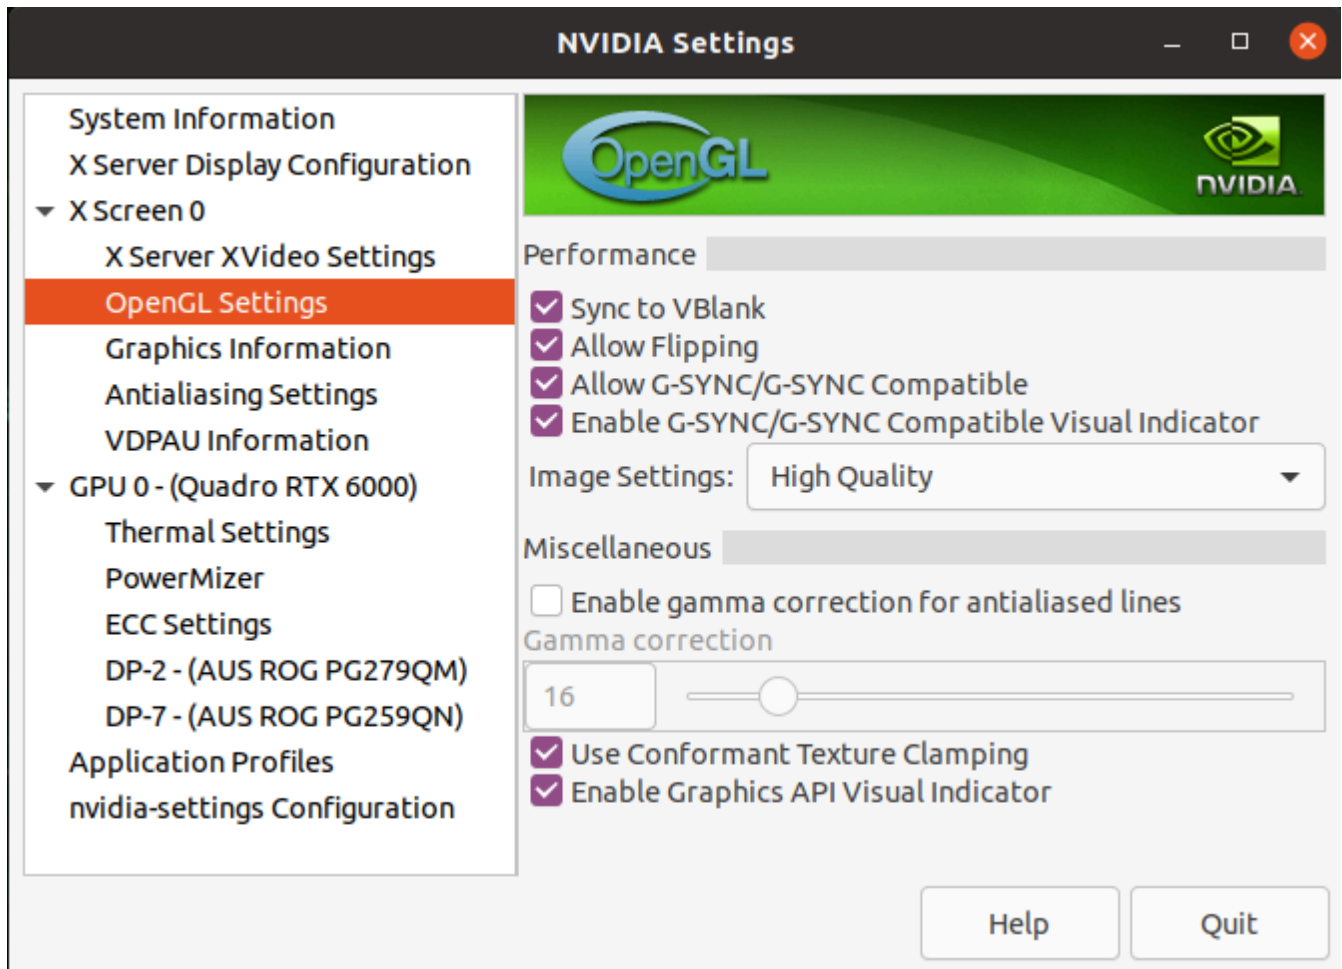


Fig. 2 Enable Visual Indicator for the current display

© Copyright 2022-2024, NVIDIA.. PDF Generated on 06/06/2024