



## **Default RoCE Mode Setting**

1. Mount the configs file.

```
# mount -t configs none /sys/kernel/config
```

2. Create a directory for the mlx4/mlx5 device.

```
# mkdir -p /sys/kernel/config/rdma_cm/mlx4_0/
```

3. Validate what is the used RoCE mode in the default\_roce\_mode configs file.

```
# cat /sys/kernel/config/rdma_cm/mlx4_0/ports/1/default_roce_mode IB/RoCE  
v1
```

4. Change the default RoCE mode:

- For RoCE v1: IB/RoCE v1

```
# echo "IB/RoCE v1" >  
/sys/kernel/config/rdma_cm/mlx4_0/ports/1/default_roce_mode  
# cat /sys/kernel/config/rdma_cm/mlx4_0/ports/1/default_roce_mode IB/RoCE  
v1
```

- For RoCE v2: RoCE v2

```
# echo "RoCE v2" >  
/sys/kernel/config/rdma_cm/mlx4_0/ports/1/default_roce_mode  
# cat /sys/kernel/config/rdma_cm/mlx4_0/ports/1/default_roce_mode RoCE v2
```

Copyright 2024. PDF Generated on 06/05/2024