



Modules Loading and Unloading

Adapter Cards	Modules
ConnectX-3/ConnectX-3	mlx4_en, mlx4_core, mlx4_ib
ConnectX-4 and above	mlx5_core, mlx5_ib

To unload the driver, first unload mlx*_en/mlx*_ib and then the mlx*_core module.

To load and unload the modules, use the commands below:

- Loading the driver: modprobe <module name>

```
# modprobe mlx5_ib
```

- Unloading the driver: modprobe -r <module name>

```
# modprobe -r mlx5_ib
```

Copyright 2024. PDF Generated on 06/05/2024