

Table of contents

Accounts and Roles	
User Account Management	
Add New User	
Edit/Remove Existing User	

List of Figures

Figure 0. Image2022 4 28 22 55 13 Version 1 Modificationdate 1716899126340 Api V2

Figure 1. User Managements Add New Version 1 Modificationdate 1716899125657 Api V2

Figure 2. Image2022 4 28 22 55 44 Version 1 Modificationdate 1716899125177 Api V2

Accounts and Roles

Each UFM user can be assigned to one of the following four roles:

- **System Admin** users can perform all operations including managing other users accounts.
- Fabric Admin users can perform fabric administrator actions such as update SM configuration, update global credentials, manage reports, managing unhealthy ports, and manage PKeys, etc.
- **Fabric Operator** users can perform fabric operator actions such as device management actions (enable/disable port, add/remove devices to/from groups, reboot device, upgrade software, etc.)
- Monitoring Only users can perform monitoring actions such as view the fabric configuration, open monitoring sessions, define monitoring templates, and export monitoring data to CSV files, etc.

User Account Management


By default and upon every UFM deployment, the **admin** user (System Admin) is generated to allow initial access to the UFM.

A user with system Administration rights can manage other users' accounts, including the creation, deletion, and modification of accounts.


To edit existing user accounts, right-click the account from the list of user accounts and perform the desired action (Change Password/Remove).

Add New User

1. Click the "New" button.

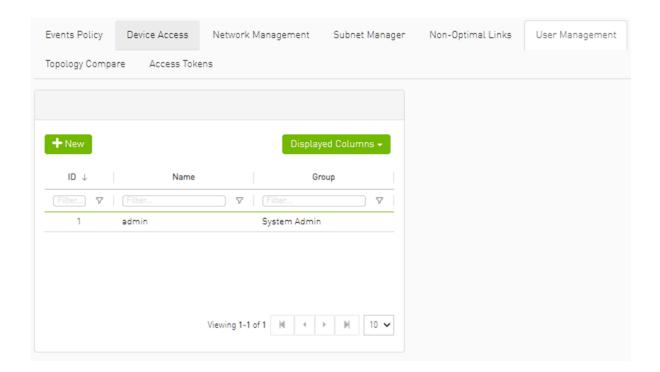


2. Fill in the required fields in the dialog box.

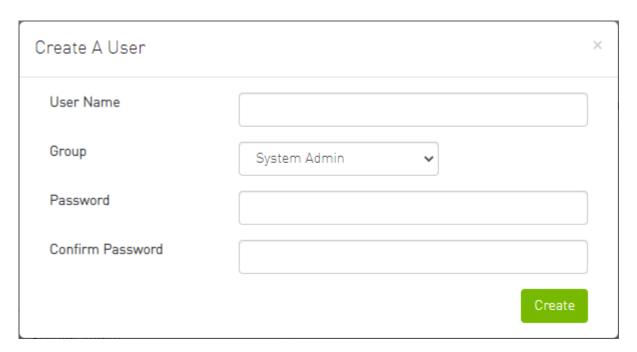

Edit/Remove Existing User

Right-click the account from the list of user accounts and perform the desired action (Change Password/Remove).

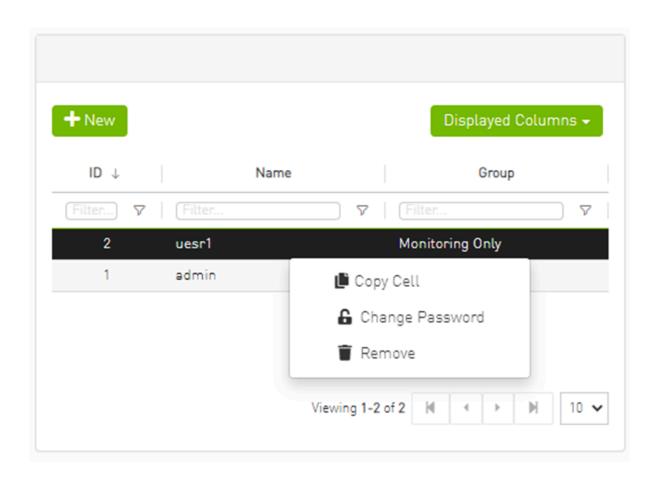

© Copyright 2024, NVIDIA. PDF Generated on 06/06/2024