



**Remote Location**

Remote location tab is used to set a predefined remote location for the results of System Dump action on switches and hosts and for IBDiagnet executions.

Field	Description
Protocol	The protocol to use to move the dump file to the external storage (scp/sftp)
Server	Hostname or IP address of the server
Path	The path where dump files are saved
Username	Username for the server
Password	Respective password

After configuring these parameters, it would be possible for users to collect sysdumps for specific devices, groups, or links (through Network Map/Cables Window) by right-clicking the item and selecting System Dump.