



Uninstalling UFM

Table of contents

Uninstalling UFM in Standalone Mode

Uninstalling UFM in High Availability

Uninstalling UFM in Docker Deployment

The UFM Server can be uninstalled by running an uninstall script in the different server modes:

- [Uninstalling UFM in Standalone Mode](#)
- [Uninstalling UFM in High Availability](#)
- [Uninstalling UFM in Docker Deployment](#)

Uninstalling UFM in Standalone Mode

To uninstall the UFM Server:

1. Go to `/opt/ufm`.
2. Run `./uninstall.sh`.

Note

Child interfaces are not deleted.

3. To delete primary interfaces, restart `/etc/init.d/openibd`.

Uninstalling UFM in High Availability

To uninstall the UFM Server in high availability mode:

1. Run the following on the master and slave to clean up the UFM HA configuration:

```
ufm_ha_cluser cleanup
```

2. To uninstall the UFM HA configuration, run:

```
/opt/ufm/ufm_ha/uninstall_ha.sh
```

3. To uninstall UFM Enterprise software, run the following on the master and slave:

```
/opt/ufm/uninstall.sh
```

Uninstalling UFM in Docker Deployment

To uninstall the UFM Server in high availability mode:

1. Run the following on the master and slave:

```
ufm_ha_cluser cleanup
```

2. Run:

```
/opt/ufm/ufm_ha/uninstall_ha.sh
```

3. Run the following on the master and slave:

```
/opt/ufm/files/uninstall.sh
```

© Copyright 2024, NVIDIA. PDF Generated on 06/06/2024