




Virtual Ports Window

Note


This page is only available if [Virtualization is enabled in gv.cfg](#).

Provides a list of all virtual ports in UFM.

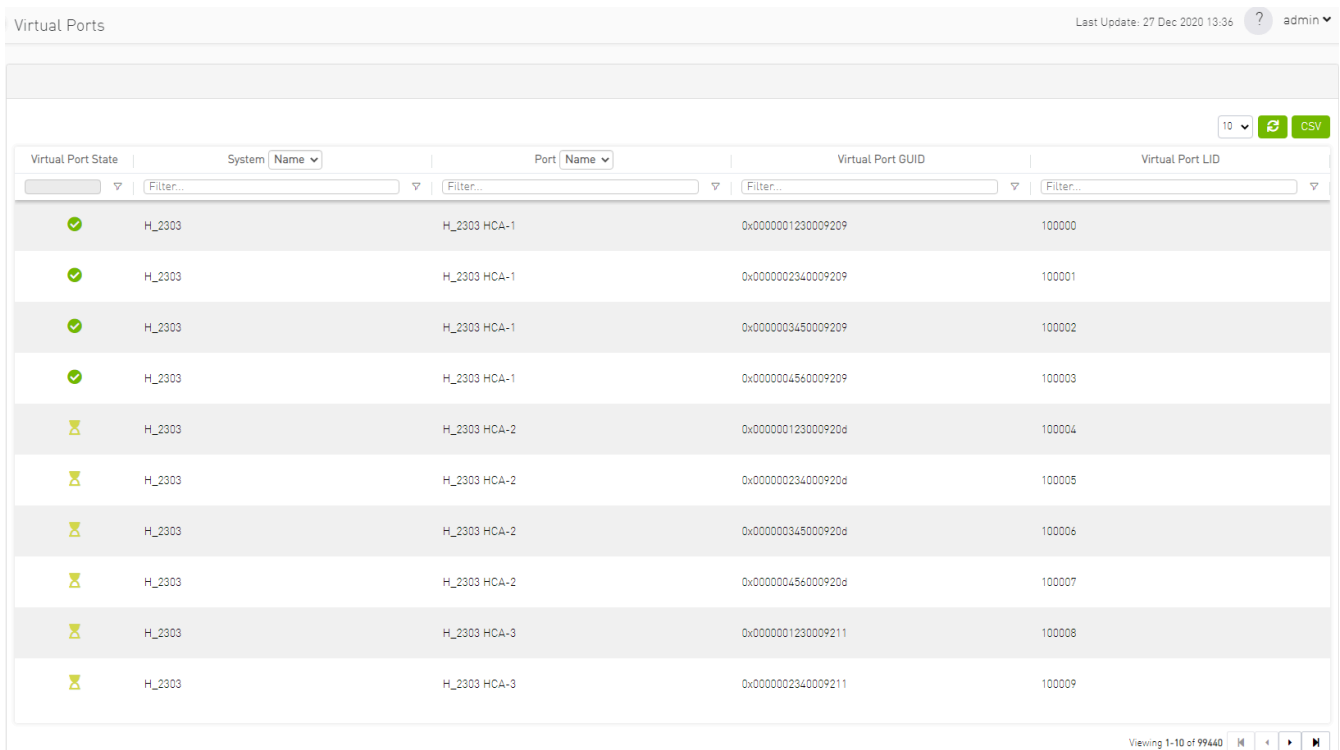

Virtual Port State	System Name	Port Name	Virtual Port GUID	Virtual Port LID
✔	H_2303	H_2303 HCA-1	0x0000001230009209	100000
✔	H_2303	H_2303 HCA-1	0x0000002340009209	100001
✔	H_2303	H_2303 HCA-1	0x0000003450009209	100002
✔	H_2303	H_2303 HCA-1	0x0000004560009209	100003
⚠	H_2303	H_2303 HCA-2	0x000000123000920a	100004
⚠	H_2303	H_2303 HCA-2	0x000000234000920a	100005
⚠	H_2303	H_2303 HCA-2	0x000000345000920a	100006
⚠	H_2303	H_2303 HCA-2	0x000000456000920a	100007
⚠	H_2303	H_2303 HCA-3	0x0000001230009211	100008
⚠	H_2303	H_2303 HCA-3	0x0000002340009211	100009

Right-clicking a virtual port allows navigation to the physical port mapped it is mapped to.

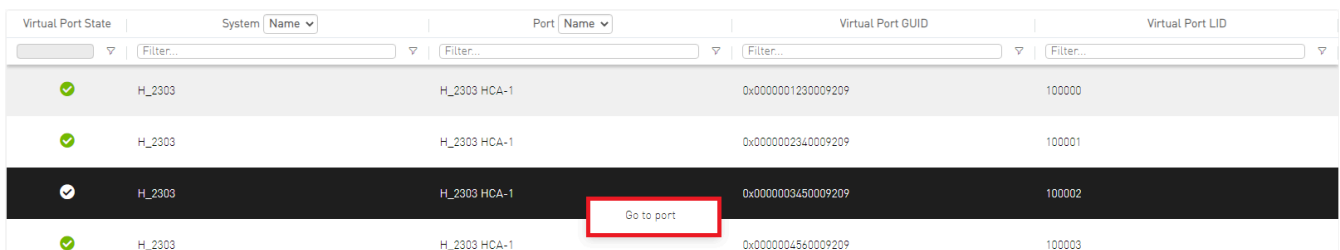


Virtual Port State	System Name	Port Name	Virtual Port GUID	Virtual Port LID
✔	H_2303	H_2303 HCA-1	0x0000001230009209	100000
✔	H_2303	H_2303 HCA-1	0x0000002340009209	100001
✔	H_2303	H_2303 HCA-1	0x0000003450009209	100002
✔	H_2303	H_2303 HCA-1	0x0000004560009209	100003

Clicking "Go to port" navigates to the [Virtual Networking tab](#) of the Device Information screen.

Showing 10 out of 8400. Click to reset all filters

10 All CSV

S...	Name ↑	GUID	Type ▾	Model	IP	Firmware ...
✓ I...	H_1287	0x0002c9000...	host	Computer	N/A	N/A
✓ I...	H_3130	0x0002c9000...	host	Computer	N/A	N/A
✓ I...	H_1294	0x0002c9000...	host	Computer	N/A	N/A
✓ I...	H_3138	0x0002c9000...	host	Computer	N/A	N/A
✓ I...	H_1301	0x0002c9000...	host	Computer	N/A	N/A
✓ I...	H_3145	0x0002c9000...	host	Computer	N/A	N/A
✓ I...	H_132	0x0002c9000...	host	Computer	N/A	N/A
✓ I...	H_3152	0x0002c9000...	host	Computer	N/A	N/A
✓ I...	H_1316	0x0002c9000...	host	Computer	N/A	N/A

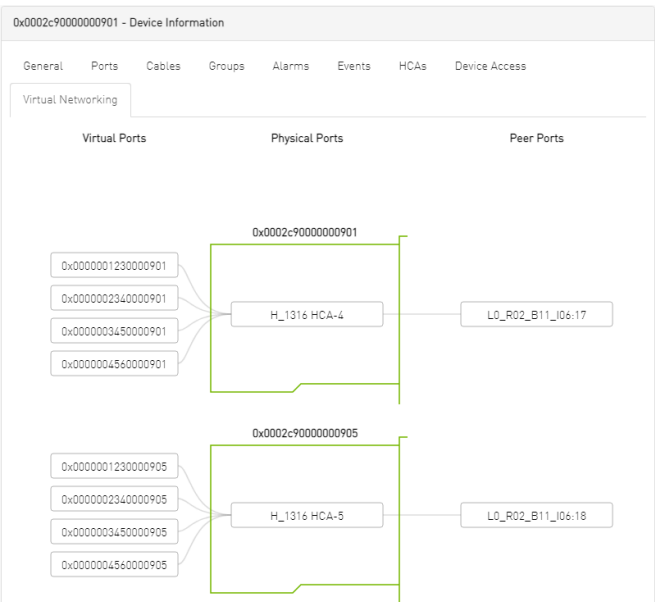

Copyright 2024. PDF Generated on 08/14/2024