



Configuring Uplink MTU

To configure the port MTU while operating in DPU mode, users must restrict the external host port ownership by issuing the following command on the BlueField:

```
mlxprivhost -d /dev/mst/<pciconf0 device> r --disable_port_owner
```

Server cold reboot is required for this restriction to take effect.

Once the host is restricted, the port MTU is configured by changing the MTU of the uplink representor (p0 or p1).

Copyright 2024. PDF Generated on 08/20/2024