



Isolated Mode Troubleshooting and How-Tos

Table of contents

Unable to burn FW from host server

Unable to burn FW from host server

Please verify that you are not in running in isolated mode. Run:

```
$ sudo mlxprivhost -d /dev/mst/mt41686_pciconf0 q
Current device configurations:
-----
level          : PRIVILEGED
...
```

© Copyright 2024, NVIDIA. PDF Generated on 08/20/2024