



Performance Troubleshooting

Table of contents

Degradation in performance

Degradation in performance

Degradation in performance indicates that openvswitch may not be offloaded.

Verify offload state. Run:

```
# ovs-vsctl get Open_vSwitch . other_config:hw-offload
```

- If hw-offload = true – Fast Pass is configured (desired result)
- If hw-offload = false – Slow Pass is configured

If hw-offload = false :

- For RHEL/CentOS, run:

```
# ovs-vsctl set Open_vSwitch . other_config:hw-offload=true;
# systemctl restart openvswitch;
# systemctl enable openvswitch;
```

- Ubuntu/Debian:

```
# ovs-vsctl set Open_vSwitch . other_config:hw-offload=true;
# /etc/init.d/openvswitch-switch restart
```

© Copyright 2024, NVIDIA. PDF Generated on 08/20/2024