



Fast Driver Unload

This feature enables optimizing mlx5 driver teardown time in shutdown and kexec flows.

The fast driver unload is disabled by default. To enable it, the `prof_sel` module parameter of `mlx5_core` module should be set to 3.

Copyright 2024. PDF Generated on 06/06/2024