



InfiniBand Interface

Table of contents

Port Type Management

RDMA Counters

Port Type Management

For information on port type management of ConnectX-4 and above adapter cards, please refer to [Port Type Management/VPI Cards Configuration](#) section.

RDMA Counters

- RDMA counters are available only through sysfs located under:
 - `# /sys/class/infiniband/<device>/ports/*/hw_counters/`
 - `# /sys/class/infiniband/<device>/hw_counters/`
 - `# /sys/class/infiniband/<device>/ports/*/counters`

For mlx5 port and RDMA counters, refer to the [Understanding mlx5 Linux Counters](#) Community post.

© Copyright 2024, NVIDIA. PDF Generated on 06/06/2024