



InfiniBand Related Issues

Issue	Cause	Solution
<p>The following messages is logged after loading the driver: multicast join failed with status - 22</p>	<p>Trying to join a multicast group that does not exist or exceeding the number of multicast groups supported by the SM.</p>	<p>If this message is logged often, check for the multicast group's join requirements as the node might not meet them. Note: If this message is logged after driver load, it may safely be ignored.</p>
<p>Unable to stop the driver with the following on screen message: ERROR: Module <module> is in use</p>	<p>An external application is using the reported module.</p>	<p>Manually unloading the module using the 'modprobe -r' command.</p>
<p>Logical link fails to come up while port logical state is Initializing.</p>	<p>The logical port state is in the Initializing state while pending the SM for the LID assignment.</p>	<ol style="list-style-type: none"> 1. Verify an SM is running in the fabric. Run 'sminfo' from any host connected to the fabric. 2. If SM is not running, activate the SM on a node or on managed switch.
<p>InfiniBand utilities commands fail to find devices on the system. For example, the 'ibv_devinfo' command fail with the following output: Failed to get IB devices list: Function not implemented</p>	<p>The InfiniBand utilities commands are invoked when the driver is not loaded.</p>	<p>Load the driver: /etc/init.d/openibd start</p>