



Local Loopback Disable

Local Loopback Disable feature allows users to force the disablement of local loopback on the virtual port (vport). This disables both unicast and multicast loopback in the hardware.

➤ *To enable Local Loopback Disable, run the following command:*

```
echo 1 > /sys/class/net/<ifname>/settings/force_lb_disable"
```

To disable Local Loopback Disable, run the following command:



```
echo 0 > /sys/class/net/<ifname>/settings/force_lb_disable"
```

Note

When turned off, the driver configures the loopback mode according to its own logic.

Copyright 2024. PDF Generated on 06/06/2024