



SR-IOV Related Issues

Issue	Cause	Solution
<p>When assigning a VF to a VM the following message is reported on the screen: PCI-assign: error: requires KVM support</p>	<p>SR-IOV and virtualization are not enabled in the BIOS.</p>	<ol style="list-style-type: none"> 1. Verify they are both enabled in the BIOS 2. Add to the GRUB configuration file to the following kernel parameter: "intel_immun=on" (see "Setting Up SR-IOV" section).

Copyright 2024. PDF Generated on 06/06/2024