



CUDA Runtime API

API Reference Manual

Table of Contents

Chapter 1. Difference between the driver and runtime APIs.....	1
Chapter 2. API synchronization behavior.....	3
Chapter 3. Stream synchronization behavior.....	5
Chapter 4. Graph object thread safety.....	7
Chapter 5. Rules for version mixing.....	8
Chapter 6. Modules.....	9
6.1. Device Management.....	10
cudaChooseDevice.....	10
cudaDeviceFlushGPUDirectRDMAWrites.....	11
cudaDeviceGetAttribute.....	12
cudaDeviceGetByPCIBusId.....	18
cudaDeviceGetCacheConfig.....	19
cudaDeviceGetDefaultMemPool.....	20
cudaDeviceGetLimit.....	21
cudaDeviceGetMemPool.....	22
cudaDeviceGetNvSciSyncAttributes.....	23
cudaDeviceGetP2PAttribute.....	24
cudaDeviceGetPCIBusId.....	25
cudaDeviceGetSharedMemConfig.....	26
cudaDeviceGetStreamPriorityRange.....	27
cudaDeviceGetTexture1DLinearMaxWidth.....	28
cudaDeviceReset.....	29
cudaDeviceSetCacheConfig.....	30
cudaDeviceSetLimit.....	31
cudaDeviceSetMemPool.....	33
cudaDeviceSetSharedMemConfig.....	34
cudaDeviceSynchronize.....	35
cudaGetDevice.....	36
cudaGetDeviceCount.....	37
cudaGetDeviceFlags.....	37
cudaGetDeviceProperties.....	39
cudaInitDevice.....	45
cudaLpcCloseMemHandle.....	46
cudaLpcGetEventHandle.....	47

cudaIpcGetMemHandle.....	48
cudaIpcOpenEventHandle.....	49
cudaIpcOpenMemHandle.....	50
cudaSetDevice.....	52
cudaSetDeviceFlags.....	53
cudaSetValidDevices.....	55
6.2. Thread Management [DEPRECATED].....	56
cudaThreadExit.....	56
cudaThreadGetCacheConfig.....	57
cudaThreadGetLimit.....	58
cudaThreadSetCacheConfig.....	59
cudaThreadSetLimit.....	60
cudaThreadSynchronize.....	61
6.3. Error Handling.....	62
cudaGetErrorName.....	62
cudaGetErrorString.....	63
cudaGetLastError.....	63
cudaPeekAtLastError.....	64
6.4. Stream Management.....	65
cudaStreamCallback_t.....	65
cudaCtxResetPersistingL2Cache.....	66
cudaStreamAddCallback.....	66
cudaStreamAttachMemAsync.....	68
cudaStreamBeginCapture.....	70
cudaStreamBeginCaptureToGraph.....	71
cudaStreamCopyAttributes.....	72
cudaStreamCreate.....	73
cudaStreamCreateWithFlags.....	74
cudaStreamCreateWithPriority.....	75
cudaStreamDestroy.....	76
cudaStreamEndCapture.....	77
cudaStreamGetAttribute.....	78
cudaStreamGetCaptureInfo.....	79
cudaStreamGetCaptureInfo_v3.....	80
cudaStreamGetFlags.....	82
cudaStreamGetId.....	83
cudaStreamGetPriority.....	84
cudaStreamIsCapturing.....	85

cudaStreamQuery.....	86
cudaStreamSetAttribute.....	87
cudaStreamSynchronize.....	87
cudaStreamUpdateCaptureDependencies.....	88
cudaStreamUpdateCaptureDependencies_v2.....	89
cudaStreamWaitEvent.....	91
cudaThreadExchangeStreamCaptureMode.....	92
6.5. Event Management.....	93
cudaEventCreate.....	93
cudaEventCreateWithFlags.....	94
cudaEventDestroy.....	95
cudaEventElapsedTime.....	96
cudaEventQuery.....	97
cudaEventRecord.....	98
cudaEventRecordWithFlags.....	100
cudaEventSynchronize.....	101
6.6. External Resource Interoperability.....	102
cudaDestroyExternalMemory.....	102
cudaDestroyExternalSemaphore.....	103
cudaExternalMemoryGetMappedBuffer.....	104
cudaExternalMemoryGetMappedMipmappedArray.....	105
cudaImportExternalMemory.....	107
cudaImportExternalSemaphore.....	110
cudaSignalExternalSemaphoresAsync.....	113
cudaWaitExternalSemaphoresAsync.....	115
6.7. Execution Control.....	117
cudaFuncGetAttributes.....	117
cudaFuncGetName.....	118
cudaFuncSetAttribute.....	119
cudaFuncSetCacheConfig.....	120
cudaFuncSetSharedMemConfig.....	122
cudaGetParameterBuffer.....	123
cudaGridDependencySynchronize.....	124
cudaLaunchCooperativeKernel.....	124
cudaLaunchCooperativeKernelMultiDevice.....	126
cudaLaunchDevice.....	128
cudaLaunchHostFunc.....	129
cudaLaunchKernel.....	131

cudaLaunchKernelExC.....	132
cudaSetDoubleForDevice.....	134
cudaSetDoubleForHost.....	135
cudaTriggerProgrammaticLaunchCompletion.....	135
6.8. Occupancy.....	136
cudaOccupancyAvailableDynamicSMemPerBlock.....	136
cudaOccupancyMaxActiveBlocksPerMultiprocessor.....	137
cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags.....	139
cudaOccupancyMaxActiveClusters.....	140
cudaOccupancyMaxPotentialClusterSize.....	141
6.9. Memory Management.....	142
cudaArrayGetInfo.....	143
cudaArrayGetMemoryRequirements.....	144
cudaArrayGetPlane.....	144
cudaArrayGetSparseProperties.....	145
cudaFree.....	146
cudaFreeArray.....	147
cudaFreeHost.....	148
cudaFreeMipmappedArray.....	149
cudaGetMipmappedArrayLevel.....	150
cudaGetSymbolAddress.....	151
cudaGetSymbolSize.....	152
cudaHostAlloc.....	153
cudaHostGetDevicePointer.....	154
cudaHostGetFlags.....	156
cudaHostRegister.....	156
cudaHostUnregister.....	159
cudaMalloc.....	159
cudaMalloc3D.....	160
cudaMalloc3DArray.....	161
cudaMallocArray.....	165
cudaMallocHost.....	166
cudaMallocManaged.....	167
cudaMallocMipmappedArray.....	170
cudaMallocPitch.....	173
cudaMemAdvise.....	174
cudaMemAdvise_v2.....	177
cudaMemcpy.....	181

cudaMemcpy2D.....	182
cudaMemcpy2DArrayToArray.....	184
cudaMemcpy2DAsync.....	186
cudaMemcpy2DFromArray.....	188
cudaMemcpy2DFromArrayAsync.....	189
cudaMemcpy2DToArray.....	191
cudaMemcpy2DToArrayAsync.....	193
cudaMemcpy3D.....	194
cudaMemcpy3DAsync.....	197
cudaMemcpy3DPeer.....	199
cudaMemcpy3DPeerAsync.....	200
cudaMemcpyAsync.....	201
cudaMemcpyFromSymbol.....	203
cudaMemcpyFromSymbolAsync.....	204
cudaMemcpyPeer.....	205
cudaMemcpyPeerAsync.....	207
cudaMemcpyToSymbol.....	208
cudaMemcpyToSymbolAsync.....	209
cudaMemGetInfo.....	211
cudaMemPrefetchAsync.....	212
cudaMemRangeGetAttribute.....	214
cudaMemRangeGetAttributes.....	217
cudaMemset.....	218
cudaMemset2D.....	219
cudaMemset2DAsync.....	220
cudaMemset3D.....	222
cudaMemset3DAsync.....	223
cudaMemsetAsync.....	224
cudaMipmappedArrayGetMemoryRequirements.....	226
cudaMipmappedArrayGetSparseProperties.....	227
make_cudaExtent.....	228
make_cudaPitchedPtr.....	228
make_cudaPos.....	229
6.10. Memory Management [DEPRECATED].....	229
cudaMemcpyArrayToArray.....	230
cudaMemcpyFromArray.....	231
cudaMemcpyFromArrayAsync.....	233
cudaMemcpyToArray.....	234

cudaMemcpyToArrayAsync.....	236
6.11. Stream Ordered Memory Allocator.....	237
cudaFreeAsync.....	238
cudaMallocAsync.....	239
cudaMallocFromPoolAsync.....	240
cudaMemPoolCreate.....	241
cudaMemPoolDestroy.....	242
cudaMemPoolExportPointer.....	242
cudaMemPoolExportToShareableHandle.....	243
cudaMemPoolGetAccess.....	244
cudaMemPoolGetAttribute.....	244
cudaMemPoolImportFromShareableHandle.....	246
cudaMemPoolImportPointer.....	247
cudaMemPoolSetAccess.....	247
cudaMemPoolSetAttribute.....	248
cudaMemPoolTrimTo.....	249
6.12. Unified Addressing.....	250
cudaPointerGetAttributes.....	252
6.13. Peer Device Memory Access.....	253
cudaDeviceCanAccessPeer.....	253
cudaDeviceDisablePeerAccess.....	254
cudaDeviceEnablePeerAccess.....	255
6.14. OpenGL Interoperability.....	256
cudaGLDeviceList.....	256
cudaGLGetDevices.....	257
cudaGraphicsGLRegisterBuffer.....	258
cudaGraphicsGLRegisterImage.....	259
cudaWGLGetDevice.....	260
6.15. OpenGL Interoperability [DEPRECATED].....	261
cudaGLMapFlags.....	261
cudaGLMapBufferObject.....	261
cudaGLMapBufferObjectAsync.....	262
cudaGLRegisterBufferObject.....	263
cudaGLSetBufferObjectMapFlags.....	264
cudaGLSetGLDevice.....	265
cudaGLUnmapBufferObject.....	265
cudaGLUnmapBufferObjectAsync.....	266
cudaGLUnregisterBufferObject.....	267

6.16. Direct3D 9 Interoperability.....	267
cudaD3D9DeviceList.....	268
cudaD3D9GetDevice.....	268
cudaD3D9GetDevices.....	269
cudaD3D9GetDirect3DDevice.....	270
cudaD3D9SetDirect3DDevice.....	270
cudaGraphicsD3D9RegisterResource.....	271
6.17. Direct3D 9 Interoperability [DEPRECATED].....	274
cudaD3D9MapFlags.....	274
cudaD3D9RegisterFlags.....	274
cudaD3D9MapResources.....	274
cudaD3D9RegisterResource.....	275
cudaD3D9ResourceGetMappedArray.....	277
cudaD3D9ResourceGetMappedPitch.....	278
cudaD3D9ResourceGetMappedPointer.....	279
cudaD3D9ResourceGetMappedSize.....	281
cudaD3D9ResourceGetSurfaceDimensions.....	282
cudaD3D9ResourceSetMapFlags.....	283
cudaD3D9UnmapResources.....	284
cudaD3D9UnregisterResource.....	285
6.18. Direct3D 10 Interoperability.....	285
cudaD3D10DeviceList.....	285
cudaD3D10GetDevice.....	286
cudaD3D10GetDevices.....	287
cudaGraphicsD3D10RegisterResource.....	288
6.19. Direct3D 10 Interoperability [DEPRECATED].....	290
cudaD3D10MapFlags.....	290
cudaD3D10RegisterFlags.....	290
cudaD3D10GetDirect3DDevice.....	291
cudaD3D10MapResources.....	291
cudaD3D10RegisterResource.....	292
cudaD3D10ResourceGetMappedArray.....	294
cudaD3D10ResourceGetMappedPitch.....	295
cudaD3D10ResourceGetMappedPointer.....	296
cudaD3D10ResourceGetMappedSize.....	297
cudaD3D10ResourceGetSurfaceDimensions.....	298
cudaD3D10ResourceSetMapFlags.....	299
cudaD3D10SetDirect3DDevice.....	300

cudaD3D10UnmapResources.....	301
cudaD3D10UnregisterResource.....	302
6.20. Direct3D 11 Interoperability.....	303
cudaD3D11DeviceList.....	303
cudaD3D11GetDevice.....	303
cudaD3D11GetDevices.....	304
cudaGraphicsD3D11RegisterResource.....	305
6.21. Direct3D 11 Interoperability [DEPRECATED].....	307
cudaD3D11GetDirect3DDevice.....	307
cudaD3D11SetDirect3DDevice.....	308
6.22. VDPAU Interoperability.....	309
cudaGraphicsVDPAURegisterOutputSurface.....	309
cudaGraphicsVDPAURegisterVideoSurface.....	310
cudaVDPAUGetDevice.....	311
cudaVDPAUSetVDPAUDevice.....	312
6.23. EGL Interoperability.....	312
cudaEGLStreamConsumerAcquireFrame.....	313
cudaEGLStreamConsumerConnect.....	314
cudaEGLStreamConsumerConnectWithFlags.....	314
cudaEGLStreamConsumerDisconnect.....	315
cudaEGLStreamConsumerReleaseFrame.....	316
cudaEGLStreamProducerConnect.....	316
cudaEGLStreamProducerDisconnect.....	317
cudaEGLStreamProducerPresentFrame.....	318
cudaEGLStreamProducerReturnFrame.....	319
cudaEventCreateFromEGLSync.....	319
cudaGraphicsEGLRegisterImage.....	320
cudaGraphicsResourceGetMappedEglFrame.....	322
6.24. Graphics Interoperability.....	323
cudaGraphicsMapResources.....	323
cudaGraphicsResourceGetMappedMipmappedArray.....	324
cudaGraphicsResourceGetMappedPointer.....	325
cudaGraphicsResourceSetMapFlags.....	326
cudaGraphicsSubResourceGetMappedArray.....	327
cudaGraphicsUnmapResources.....	328
cudaGraphicsUnregisterResource.....	329
6.25. Texture Object Management.....	330
cudaCreateChannelDesc.....	331

cudaCreateTextureObject.....	332
cudaDestroyTextureObject.....	337
cudaGetChannelDesc.....	338
cudaGetTextureObjectResourceDesc.....	339
cudaGetTextureObjectResourceViewDesc.....	340
cudaGetTextureObjectTextureDesc.....	341
6.26. Surface Object Management.....	341
cudaCreateSurfaceObject.....	342
cudaDestroySurfaceObject.....	343
cudaGetSurfaceObjectResourceDesc.....	344
6.27. Version Management.....	344
cudaDriverGetVersion.....	345
cudaRuntimeGetVersion.....	345
6.28. Graph Management.....	346
cudaDeviceGetGraphMemAttribute.....	347
cudaDeviceGraphMemTrim.....	348
cudaDeviceSetGraphMemAttribute.....	349
cudaGetCurrentGraphExec.....	350
cudaGraphAddChildGraphNode.....	350
cudaGraphAddDependencies.....	351
cudaGraphAddDependencies_v2.....	353
cudaGraphAddEmptyNode.....	354
cudaGraphAddEventRecordNode.....	355
cudaGraphAddEventWaitNode.....	356
cudaGraphAddExternalSemaphoresSignalNode.....	358
cudaGraphAddExternalSemaphoresWaitNode.....	359
cudaGraphAddHostNode.....	361
cudaGraphAddKernelNode.....	362
cudaGraphAddMemAllocNode.....	364
cudaGraphAddMemcpyNode.....	366
cudaGraphAddMemcpyNode1D.....	368
cudaGraphAddMemcpyNodeFromSymbol.....	369
cudaGraphAddMemcpyNodeToSymbol.....	371
cudaGraphAddMemFreeNode.....	373
cudaGraphAddMemsetNode.....	374
cudaGraphAddNode.....	376
cudaGraphAddNode_v2.....	377
cudaGraphChildGraphNodeGetGraph.....	379

cudaGraphClone.....	380
cudaGraphConditionalHandleCreate.....	381
cudaGraphCreate.....	382
cudaGraphDebugDotPrint.....	383
cudaGraphDestroy.....	383
cudaGraphDestroyNode.....	384
cudaGraphEventRecordNodeGetEvent.....	385
cudaGraphEventRecordNodeSetEvent.....	386
cudaGraphEventWaitNodeGetEvent.....	387
cudaGraphEventWaitNodeSetEvent.....	388
cudaGraphExecChildGraphNodeSetParams.....	389
cudaGraphExecDestroy.....	390
cudaGraphExecEventRecordNodeSetEvent.....	391
cudaGraphExecEventWaitNodeSetEvent.....	392
cudaGraphExecExternalSemaphoresSignalNodeSetParams.....	393
cudaGraphExecExternalSemaphoresWaitNodeSetParams.....	395
cudaGraphExecGetFlags.....	396
cudaGraphExecHostNodeSetParams.....	397
cudaGraphExecKernelNodeSetParams.....	398
cudaGraphExecMemcpyNodeSetParams.....	400
cudaGraphExecMemcpyNodeSetParams1D.....	401
cudaGraphExecMemcpyNodeSetParamsFromSymbol.....	403
cudaGraphExecMemcpyNodeSetParamsToSymbol.....	404
cudaGraphExecMemsetNodeSetParams.....	406
cudaGraphExecNodeSetParams.....	407
cudaGraphExecUpdate.....	409
cudaGraphExternalSemaphoresSignalNodeGetParams.....	412
cudaGraphExternalSemaphoresSignalNodeSetParams.....	413
cudaGraphExternalSemaphoresWaitNodeGetParams.....	414
cudaGraphExternalSemaphoresWaitNodeSetParams.....	415
cudaGraphGetEdges.....	416
cudaGraphGetEdges_v2.....	417
cudaGraphGetNodes.....	418
cudaGraphGetRootNodes.....	419
cudaGraphHostNodeGetParams.....	420
cudaGraphHostNodeSetParams.....	421
cudaGraphInstantiate.....	422
cudaGraphInstantiateWithFlags.....	424

cudaGraphInstantiateWithParams.....	426
cudaGraphKernelNodeCopyAttributes.....	429
cudaGraphKernelNodeGetAttribute.....	429
cudaGraphKernelNodeGetParams.....	430
cudaGraphKernelNodeSetAttribute.....	431
cudaGraphKernelNodeSetParams.....	432
cudaGraphLaunch.....	433
cudaGraphMemAllocNodeGetParams.....	434
cudaGraphMemcpyNodeGetParams.....	435
cudaGraphMemcpyNodeSetParams.....	436
cudaGraphMemcpyNodeSetParams1D.....	437
cudaGraphMemcpyNodeSetParamsFromSymbol.....	438
cudaGraphMemcpyNodeSetParamsToSymbol.....	439
cudaGraphMemFreeNodeGetParams.....	441
cudaGraphMemsetNodeGetParams.....	442
cudaGraphMemsetNodeSetParams.....	443
cudaGraphNodeFindInClone.....	444
cudaGraphNodeGetDependencies.....	445
cudaGraphNodeGetDependencies_v2.....	446
cudaGraphNodeGetDependentNodes.....	447
cudaGraphNodeGetDependentNodes_v2.....	448
cudaGraphNodeGetEnabled.....	449
cudaGraphNodeGetType.....	450
cudaGraphNodeSetEnabled.....	451
cudaGraphNodeSetParams.....	453
cudaGraphReleaseUserObject.....	454
cudaGraphRemoveDependencies.....	454
cudaGraphRemoveDependencies_v2.....	456
cudaGraphRetainUserObject.....	457
cudaGraphSetConditional.....	458
cudaGraphUpload.....	458
cudaUserObjectCreate.....	459
cudaUserObjectRelease.....	460
cudaUserObjectRetain.....	460
6.29. Driver Entry Point Access.....	461
cudaGetDriverEntryPoint.....	461
6.30. C++ API Routines.....	463
__cudaOccupancyB2DHelper.....	463

cudaCreateChannelDesc.....	463
cudaEventCreate.....	464
cudaFuncGetAttributes.....	465
cudaFuncGetName.....	466
cudaFuncSetAttribute.....	467
cudaFuncSetCacheConfig.....	469
cudaGetKernel.....	470
cudaGetSymbolAddress.....	471
cudaGetSymbolSize.....	472
cudaGraphAddMemcpyNodeFromSymbol.....	473
cudaGraphAddMemcpyNodeToSymbol.....	475
cudaGraphExecMemcpyNodeSetParamsFromSymbol.....	477
cudaGraphExecMemcpyNodeSetParamsToSymbol.....	478
cudaGraphInstantiate.....	480
cudaGraphMemcpyNodeSetParamsFromSymbol.....	481
cudaGraphMemcpyNodeSetParamsToSymbol.....	482
cudaLaunchCooperativeKernel.....	484
cudaLaunchKernel.....	485
cudaLaunchKernelEx.....	487
cudaMallocAsync.....	488
cudaMallocHost.....	489
cudaMallocManaged.....	490
cudaMemAdvise.....	493
cudaMemcpyFromSymbol.....	493
cudaMemcpyFromSymbolAsync.....	494
cudaMemcpyToSymbol.....	496
cudaMemcpyToSymbolAsync.....	497
cudaOccupancyAvailableDynamicSMemPerBlock.....	499
cudaOccupancyMaxActiveBlocksPerMultiprocessor.....	500
cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags.....	501
cudaOccupancyMaxActiveClusters.....	503
cudaOccupancyMaxPotentialBlockSize.....	504
cudaOccupancyMaxPotentialBlockSizeVariableSMem.....	505
cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags.....	506
cudaOccupancyMaxPotentialBlockSizeWithFlags.....	508
cudaOccupancyMaxPotentialClusterSize.....	510
cudaStreamAttachMemAsync.....	511
6.31. Interactions with the CUDA Driver API.....	513

cudaGetFuncBySymbol.....	515
cudaGetKernel.....	516
6.32. Profiler Control.....	516
cudaProfilerStart.....	516
cudaProfilerStop.....	517
6.33. Data types used by CUDA Runtime.....	517
cudaAccessPolicyWindow.....	518
cudaArrayMemoryRequirements.....	518
cudaArraySparseProperties.....	518
cudaChannelFormatDesc.....	518
cudaChildGraphNodeParams.....	518
cudaConditionalNodeParams.....	518
cudaDeviceProp.....	518
cudaEglFrame.....	518
cudaEglPlaneDesc.....	518
cudaEventRecordNodeParams.....	518
cudaEventWaitNodeParams.....	518
cudaExtent.....	518
cudaExternalMemoryBufferDesc.....	518
cudaExternalMemoryHandleDesc.....	518
cudaExternalMemoryMipmappedArrayDesc.....	518
cudaExternalSemaphoreHandleDesc.....	518
cudaExternalSemaphoreSignalNodeParams.....	518
cudaExternalSemaphoreSignalNodeParamsV2.....	519
cudaExternalSemaphoreSignalParams.....	519
cudaExternalSemaphoreSignalParams_v1.....	519
cudaExternalSemaphoreWaitNodeParams.....	519
cudaExternalSemaphoreWaitNodeParamsV2.....	519
cudaExternalSemaphoreWaitParams.....	519
cudaExternalSemaphoreWaitParams_v1.....	519
cudaFuncAttributes.....	519
cudaGraphEdgeData.....	519
cudaGraphExecUpdateResultInfo.....	519
cudaGraphInstantiateParams.....	519
cudaGraphNodeParams.....	519
cudaHostNodeParams.....	519
cudaHostNodeParamsV2.....	519
cudalpcEventHandle_t.....	519

cudaIpcMemHandle_t.....	519
cudaKernelNodeParams.....	519
cudaKernelNodeParamsV2.....	520
cudaLaunchAttribute.....	520
cudaLaunchAttributeValue.....	520
cudaLaunchConfig_t.....	520
cudaLaunchMemSyncDomainMap.....	520
cudaLaunchParams.....	520
cudaMemAccessDesc.....	520
cudaMemAllocNodeParams.....	520
cudaMemAllocNodeParamsV2.....	520
cudaMemcpy3DParms.....	520
cudaMemcpy3DPeerParms.....	520
cudaMemcpyNodeParams.....	520
cudaMemFreeNodeParams.....	520
cudaMemLocation.....	520
cudaMemPoolProps.....	520
cudaMemPoolPtrExportData.....	520
cudaMemsetParams.....	520
cudaMemsetParamsV2.....	521
cudaPitchedPtr.....	521
cudaPointerAttributes.....	521
cudaPos.....	521
cudaResourceDesc.....	521
cudaResourceViewDesc.....	521
cudaTextureDesc.....	521
CUuid_st.....	521
cudaAccessProperty.....	521
cudaCgScope.....	521
cudaChannelFormatKind.....	522
cudaClusterSchedulingPolicy.....	523
cudaComputeMode.....	524
cudaDeviceAttr.....	524
cudaDeviceP2PAttr.....	530
cudaDriverEntryPointQueryResult.....	530
cudaEglColorFormat.....	531
cudaEglFrameType.....	537
cudaEglResourceLocationFlags.....	538

cudaError.....	538
cudaExternalMemoryHandleType.....	549
cudaExternalSemaphoreHandleType.....	549
cudaFlushGPUDirectRDMAWritesOptions.....	550
cudaFlushGPUDirectRDMAWritesScope.....	550
cudaFlushGPUDirectRDMAWritesTarget.....	550
cudaFuncAttribute.....	550
cudaFuncCache.....	551
cudaGetDriverEntryPointFlags.....	551
cudaGPUDirectRDMAWritesOrdering.....	552
cudaGraphConditionalNodeType.....	552
cudaGraphDebugDotFlags.....	552
cudaGraphDependencyType.....	553
cudaGraphExecUpdateResult.....	553
cudaGraphicsCubeFace.....	554
cudaGraphicsMapFlags.....	554
cudaGraphicsRegisterFlags.....	554
cudaGraphInstantiateFlags.....	555
cudaGraphInstantiateResult.....	555
cudaGraphMemAttributeType.....	556
cudaGraphNodeType.....	556
cudaLaunchAttributeID.....	557
cudaLaunchMemSyncDomain.....	558
cudaLimit.....	559
cudaMemAccessFlags.....	560
cudaMemAllocationHandleType.....	560
cudaMemAllocationType.....	560
cudaMemcpyKind.....	560
cudaMemLocationType.....	561
cudaMemoryAdvise.....	561
cudaMemoryType.....	562
cudaMemPoolAttr.....	562
cudaMemRangeAttribute.....	563
cudaResourceType.....	563
cudaResourceViewFormat.....	564
cudaSharedCarveout.....	565
cudaSharedMemConfig.....	566
cudaStreamCaptureMode.....	566

cudaStreamCaptureStatus.....	566
cudaStreamUpdateCaptureDependenciesFlags.....	566
cudaSurfaceBoundaryMode.....	567
cudaSurfaceFormatMode.....	567
cudaTextureAddressMode.....	567
cudaTextureFilterMode.....	567
cudaTextureReadMode.....	568
cudaUserObjectFlags.....	568
cudaUserObjectRetainFlags.....	568
cudaArray_const_t.....	568
cudaArray_t.....	568
cudaEglStreamConnection.....	569
cudaError_t.....	569
cudaEvent_t.....	569
cudaExternalMemory_t.....	569
cudaExternalSemaphore_t.....	569
cudaFunction_t.....	569
cudaGraph_t.....	569
cudaGraphConditionalHandle.....	569
cudaGraphExec_t.....	569
cudaGraphicsResource_t.....	570
cudaGraphNode_t.....	570
cudaHostFn_t.....	570
cudaKernel_t.....	570
cudaMemPool_t.....	570
cudaMipmappedArray_const_t.....	570
cudaMipmappedArray_t.....	570
cudaStream_t.....	570
cudaSurfaceObject_t.....	570
cudaTextureObject_t.....	571
cudaUserObject_t.....	571
CUDA_EGL_MAX_PLANES.....	571
CUDA_IPC_HANDLE_SIZE.....	571
cudaArrayColorAttachment.....	571
cudaArrayCubemap.....	571
cudaArrayDefault.....	571
cudaArrayDeferredMapping.....	571
cudaArrayLayered.....	571

cudaArraySparse.....	571
cudaArraySparsePropertiesSingleMipTail.....	572
cudaArraySurfaceLoadStore.....	572
cudaArrayTextureGather.....	572
cudaCooperativeLaunchMultiDeviceNoPostSync.....	572
cudaCooperativeLaunchMultiDeviceNoPreSync.....	572
cudaCpuDeviceId.....	572
cudaDeviceBlockingSync.....	572
cudaDeviceLmemResizeToMax.....	572
cudaDeviceMapHost.....	573
cudaDeviceMask.....	573
cudaDeviceScheduleAuto.....	573
cudaDeviceScheduleBlockingSync.....	573
cudaDeviceScheduleMask.....	573
cudaDeviceScheduleSpin.....	573
cudaDeviceScheduleYield.....	573
cudaDeviceSyncMemops.....	573
cudaEventBlockingSync.....	573
cudaEventDefault.....	573
cudaEventDisableTiming.....	573
cudaEventInterprocess.....	574
cudaEventRecordDefault.....	574
cudaEventRecordExternal.....	574
cudaEventWaitDefault.....	574
cudaEventWaitExternal.....	574
cudaExternalMemoryDedicated.....	574
cudaExternalSemaphoreSignalSkipNvSciBufMemSync.....	574
cudaExternalSemaphoreWaitSkipNvSciBufMemSync.....	574
cudaGraphKernelNodePortDefault.....	575
cudaGraphKernelNodePortLaunchCompletion.....	575
cudaGraphKernelNodePortProgrammatic.....	575
cudaHostAllocDefault.....	575
cudaHostAllocMapped.....	575
cudaHostAllocPortable.....	575
cudaHostAllocWriteCombined.....	575
cudaHostRegisterDefault.....	575
cudaHostRegisterIoMemory.....	575
cudaHostRegisterMapped.....	576

cudaHostRegisterPortable.....	576
cudaHostRegisterReadOnly.....	576
cudaInitDeviceFlagsAreValid.....	576
cudaInvalidDeviceId.....	576
cudaLpcMemLazyEnablePeerAccess.....	576
cudaMemAttachGlobal.....	576
cudaMemAttachHost.....	576
cudaMemAttachSingle.....	576
cudaNvSciSyncAttrSignal.....	576
cudaNvSciSyncAttrWait.....	577
cudaOccupancyDefault.....	577
cudaOccupancyDisableCachingOverride.....	577
cudaPeerAccessDefault.....	577
cudaStreamDefault.....	577
cudaStreamLegacy.....	577
cudaStreamNonBlocking.....	577
cudaStreamPerThread.....	577
Chapter 7. Data Structures.....	578
__cudaOccupancyB2DHelper.....	579
cudaAccessPolicyWindow.....	579
base_ptr.....	580
hitProp.....	580
hitRatio.....	580
missProp.....	580
num_bytes.....	580
cudaArrayMemoryRequirements.....	580
alignment.....	580
size.....	580
cudaArraySparseProperties.....	581
depth.....	581
flags.....	581
height.....	581
miptailFirstLevel.....	581
miptailSize.....	581
width.....	581
cudaChannelFormatDesc.....	581
f.....	582
w.....	582

x.....	582
y.....	582
z.....	582
cudaChildGraphNodeParams.....	582
graph.....	582
cudaConditionalNodeParams.....	582
handle.....	583
phGraph_out.....	583
size.....	583
type.....	583
cudaDeviceProp.....	583
accessPolicyMaxWindowSize.....	583
asyncEngineCount.....	584
canMapHostMemory.....	584
canUseHostPointerForRegisteredMem.....	584
clockRate.....	584
clusterLaunch.....	584
computeMode.....	584
computePreemptionSupported.....	584
concurrentKernels.....	584
concurrentManagedAccess.....	584
cooperativeLaunch.....	584
cooperativeMultiDeviceLaunch.....	585
deferredMappingCudaArraySupported.....	585
deviceOverlap.....	585
directManagedMemAccessFromHost.....	585
ECCEnabled.....	585
globalL1CacheSupported.....	585
gpuDirectRDMAFlushWritesOptions.....	585
gpuDirectRDMASupported.....	585
gpuDirectRDMAWritesOrdering.....	585
hostNativeAtomicSupported.....	586
hostRegisterReadOnlySupported.....	586
hostRegisterSupported.....	586
integrated.....	586
ipcEventSupported.....	586
isMultiGpuBoard.....	586
kernelExecTimeoutEnabled.....	586

l2CacheSize.....	586
localL1CacheSupported.....	586
luid.....	586
luidDeviceNodeMask.....	587
major.....	587
managedMemory.....	587
maxBlocksPerMultiProcessor.....	587
maxGridSize.....	587
maxSurface1D.....	587
maxSurface1DLayered.....	587
maxSurface2D.....	587
maxSurface2DLayered.....	587
maxSurface3D.....	587
maxSurfaceCubemap.....	587
maxSurfaceCubemapLayered.....	588
maxTexture1D.....	588
maxTexture1DLayered.....	588
maxTexture1DLinear.....	588
maxTexture1DMipmap.....	588
maxTexture2D.....	588
maxTexture2DGather.....	588
maxTexture2DLayered.....	588
maxTexture2DLinear.....	588
maxTexture2DMipmap.....	588
maxTexture3D.....	589
maxTexture3DAlt.....	589
maxTextureCubemap.....	589
maxTextureCubemapLayered.....	589
maxThreadsDim.....	589
maxThreadsPerBlock.....	589
maxThreadsPerMultiProcessor.....	589
memoryBusWidth.....	589
memoryClockRate.....	589
memoryPoolsSupported.....	589
memoryPoolSupportedHandleTypes.....	590
memPitch.....	590
minor.....	590
multiGpuBoardGroupId.....	590

multiProcessorCount.....	590
name.....	590
pageableMemoryAccess.....	590
pageableMemoryAccessUsesHostPageTables.....	590
pciBusID.....	590
pciDeviceID.....	590
pciDomainID.....	591
persistingL2CacheMaxSize.....	591
regsPerBlock.....	591
regsPerMultiprocessor.....	591
reserved.....	591
reserved1.....	591
reservedSharedMemPerBlock.....	591
sharedMemPerBlock.....	591
sharedMemPerBlockOptin.....	591
sharedMemPerMultiprocessor.....	591
singleToDoublePrecisionPerfRatio.....	592
sparseCudaArraySupported.....	592
streamPrioritiesSupported.....	592
surfaceAlignment.....	592
tccDriver.....	592
textureAlignment.....	592
texturePitchAlignment.....	592
timelineSemaphoreInteropSupported.....	592
totalConstMem.....	592
totalGlobalMem.....	592
unifiedAddressing.....	593
unifiedFunctionPointers.....	593
uuid.....	593
warpSize.....	593
cudaEglFrame.....	593
eglColorFormat.....	593
frameType.....	593
pArray.....	593
planeCount.....	594
planeDesc.....	594
pPitch.....	594
cudaEglPlaneDesc.....	594

channelDesc.....	594
depth.....	594
height.....	594
numChannels.....	594
pitch.....	594
reserved.....	594
width.....	595
cudaEventRecordNodeParams.....	595
event.....	595
cudaEventWaitNodeParams.....	595
event.....	595
cudaExtent.....	595
depth.....	595
height.....	595
width.....	596
cudaExternalMemoryBufferDesc.....	596
flags.....	596
offset.....	596
size.....	596
cudaExternalMemoryHandleDesc.....	596
fd.....	596
flags.....	596
handle.....	597
name.....	597
nvSciBufObject.....	597
size.....	597
type.....	597
win32.....	597
cudaExternalMemoryMipmappedArrayDesc.....	598
extent.....	598
flags.....	598
formatDesc.....	598
numLevels.....	598
offset.....	598
cudaExternalSemaphoreHandleDesc.....	598
fd.....	599
flags.....	599
handle.....	599

name.....	599
nvSciSyncObj.....	599
type.....	599
win32.....	599
cudaExternalSemaphoreSignalNodeParams.....	600
extSemArray.....	600
numExtSems.....	600
paramsArray.....	600
cudaExternalSemaphoreSignalNodeParamsV2.....	600
extSemArray.....	600
numExtSems.....	601
paramsArray.....	601
cudaExternalSemaphoreSignalParams.....	601
fence.....	601
fence.....	601
flags.....	601
keyedMutex.....	602
value.....	602
cudaExternalSemaphoreSignalParams_v1.....	602
fence.....	602
fence.....	602
flags.....	602
keyedMutex.....	603
value.....	603
cudaExternalSemaphoreWaitNodeParams.....	603
extSemArray.....	603
numExtSems.....	603
paramsArray.....	603
cudaExternalSemaphoreWaitNodeParamsV2.....	603
extSemArray.....	604
numExtSems.....	604
paramsArray.....	604
cudaExternalSemaphoreWaitParams.....	604
fence.....	604
fence.....	604
flags.....	604
key.....	605
keyedMutex.....	605

timeoutMs.....	605
value.....	605
cudaExternalSemaphoreWaitParams_v1.....	605
fence.....	605
fence.....	605
flags.....	606
key.....	606
keyedMutex.....	606
timeoutMs.....	606
value.....	606
cudaFuncAttributes.....	606
binaryVersion.....	607
cacheModeCA.....	607
clusterDimMustBeSet.....	607
clusterSchedulingPolicyPreference.....	607
constSizeBytes.....	607
localSizeBytes.....	607
maxDynamicSharedSizeBytes.....	607
maxThreadsPerBlock.....	607
nonPortableClusterSizeAllowed.....	608
numRegs.....	608
preferredShmemCarveout.....	608
ptxVersion.....	608
requiredClusterWidth.....	608
reserved.....	609
sharedSizeBytes.....	609
cudaGraphEdgeData.....	609
from_port.....	609
reserved.....	609
to_port.....	609
type.....	609
cudaGraphExecUpdateResultInfo.....	610
errorFromNode.....	610
errorNode.....	610
result.....	610
cudaGraphInstantiateParams.....	610
errNode_out.....	610
flags.....	610

result_out.....	611
uploadStream.....	611
cudaGraphNodeParams.....	611
alloc.....	611
conditional.....	611
eventRecord.....	611
eventWait.....	611
extSemSignal.....	612
extSemWait.....	612
free.....	612
graph.....	612
host.....	612
kernel.....	612
memcpy.....	612
memset.....	612
reserved0.....	613
reserved1.....	613
reserved2.....	613
type.....	613
cudaHostNodeParams.....	613
fn.....	613
userData.....	613
cudaHostNodeParamsV2.....	613
fn.....	613
userData.....	614
cudaLpcEventHandle_t.....	614
cudaLpcMemHandle_t.....	614
cudaKernelNodeParams.....	614
blockDim.....	614
extra.....	614
func.....	614
gridDim.....	614
kernelParams.....	615
sharedMemBytes.....	615
cudaKernelNodeParamsV2.....	615
blockDim.....	615
extra.....	615
func.....	615

gridDim.....	615
kernelParams.....	615
sharedMemBytes.....	615
cudaLaunchAttribute.....	616
id.....	616
val.....	616
cudaLaunchAttributeValue.....	616
accessPolicyWindow.....	616
clusterDim.....	616
clusterSchedulingPolicyPreference.....	617
cooperative.....	617
event.....	617
flags.....	617
launchCompletionEvent.....	617
memSyncDomain.....	617
memSyncDomainMap.....	617
priority.....	618
programmaticEvent.....	618
programmaticStreamSerializationAllowed.....	618
syncPolicy.....	618
triggerAtBlockStart.....	618
cudaLaunchConfig_t.....	618
attrs.....	618
blockDim.....	618
dynamicSmemBytes.....	618
gridDim.....	619
numAttrs.....	619
stream.....	619
cudaLaunchMemSyncDomainMap.....	619
default_.....	619
remote.....	619
cudaLaunchParams.....	619
args.....	620
blockDim.....	620
func.....	620
gridDim.....	620
sharedMem.....	620
stream.....	620

cudaMemAccessDesc.....	620
flags.....	620
location.....	620
cudaMemAllocNodeParams.....	621
accessDescCount.....	621
accessDescs.....	621
bytesize.....	621
dptr.....	621
poolProps.....	621
cudaMemAllocNodeParamsV2.....	621
accessDescCount.....	622
accessDescs.....	622
bytesize.....	622
dptr.....	622
poolProps.....	622
cudaMemcpy3DParms.....	622
dstArray.....	622
dstPos.....	622
dstPtr.....	623
extent.....	623
kind.....	623
srcArray.....	623
srcPos.....	623
srcPtr.....	623
cudaMemcpy3DPeerParms.....	623
dstArray.....	623
dstDevice.....	623
dstPos.....	623
dstPtr.....	624
extent.....	624
srcArray.....	624
srcDevice.....	624
srcPos.....	624
srcPtr.....	624
cudaMemcpyNodeParams.....	624
copyParams.....	624
flags.....	624
reserved.....	625

cudaMemFreeNodeParams.....	625
dptr.....	625
cudaMemLocation.....	625
id.....	625
type.....	625
cudaMemPoolProps.....	625
allocType.....	625
handleTypes.....	626
location.....	626
maxSize.....	626
reserved.....	626
win32SecurityAttributes.....	626
cudaMemPoolPtrExportData.....	626
cudaMemsetParams.....	626
dst.....	626
elementSize.....	627
height.....	627
pitch.....	627
value.....	627
width.....	627
cudaMemsetParamsV2.....	627
dst.....	627
elementSize.....	627
height.....	627
pitch.....	627
value.....	628
width.....	628
cudaPitchedPtr.....	628
pitch.....	628
ptr.....	628
xsize.....	628
ysize.....	628
cudaPointerAttributes.....	628
device.....	628
devicePointer.....	629
hostPointer.....	629
type.....	629
cudaPos.....	629

x.....	629
y.....	629
z.....	629
cudaResourceDesc.....	630
array.....	630
desc.....	630
devPtr.....	630
height.....	630
mipmap.....	630
pitchInBytes.....	630
resType.....	630
sizeInBytes.....	630
width.....	630
cudaResourceViewDesc.....	631
depth.....	631
firstLayer.....	631
firstMipmapLevel.....	631
format.....	631
height.....	631
lastLayer.....	631
lastMipmapLevel.....	631
width.....	631
cudaTextureDesc.....	632
addressMode.....	632
borderColor.....	632
disableTrilinearOptimization.....	632
filterMode.....	632
maxAnisotropy.....	632
maxMipmapLevelClamp.....	632
minMipmapLevelClamp.....	632
mipmapFilterMode.....	632
mipmapLevelBias.....	633
normalizedCoords.....	633
readMode.....	633
seamlessCubemap.....	633
sRGB.....	633
CUuid_st.....	633
bytes.....	633

Chapter 8. Data Fields.....	634
Chapter 9. Deprecated List.....	651

Chapter 1. Difference between the driver and runtime APIs

The driver and runtime APIs are very similar and can for the most part be used interchangeably. However, there are some key differences worth noting between the two.

Complexity vs. control

The runtime API eases device code management by providing implicit initialization, context management, and module management. This leads to simpler code, but it also lacks the level of control that the driver API has.

In comparison, the driver API offers more fine-grained control, especially over contexts and module loading. Kernel launches are much more complex to implement, as the execution configuration and kernel parameters must be specified with explicit function calls. However, unlike the runtime, where all the kernels are automatically loaded during initialization and stay loaded for as long as the program runs, with the driver API it is possible to only keep the modules that are currently needed loaded, or even dynamically reload modules. The driver API is also language-independent as it only deals with cubin objects.

Context management

Context management can be done through the driver API, but is not exposed in the runtime API. Instead, the runtime API decides itself which context to use for a thread: if a context has been made current to the calling thread through the driver API, the runtime will use that, but if there is no such context, it uses a "primary context." Primary contexts are created as needed, one per device per process, are reference-counted, and are then destroyed when there are no more references to them. Within one process, all users of the runtime API will share the primary context, unless a context has been made current to each thread. The context that the runtime uses, i.e., either the current context or primary context, can be synchronized with `cudaDeviceSynchronize()`, and destroyed with `cudaDeviceReset()`.

Using the runtime API with primary contexts has its tradeoffs, however. It can cause trouble for users writing plug-ins for larger software packages, for example, because if all plug-ins run in the same process, they will all share a context but will likely have no way to communicate with each other. So, if one of them calls `cudaDeviceReset()` after finishing all its CUDA work, the other plug-ins will fail because the context they were using was destroyed

without their knowledge. To avoid this issue, CUDA clients can use the driver API to create and set the current context, and then use the runtime API to work with it. However, contexts may consume significant resources, such as device memory, extra host threads, and performance costs of context switching on the device. This runtime-driver context sharing is important when using the driver API in conjunction with libraries built on the runtime API, such as cuBLAS or cuFFT.

Chapter 2. API synchronization behavior

The API provides `memcpy`/`memset` functions in both synchronous and asynchronous forms, the latter having an "Async" suffix. This is a misnomer as each function may exhibit synchronous or asynchronous behavior depending on the arguments passed to the function.

Any CUDA API call may block or synchronize for various reasons such as contention for or unavailability of internal resources. Such behavior is subject to change and undocumented behavior should not be relied upon.

Memcpy

In the reference documentation, each `memcpy` function is categorized as synchronous or asynchronous, corresponding to the definitions below.

Synchronous

1. For transfers from pageable host memory to device memory, a stream sync is performed before the copy is initiated. The function will return once the pageable buffer has been copied to the staging memory for DMA transfer to device memory, but the DMA to final destination may not have completed.
2. For transfers from pinned host memory to device memory, the function is synchronous with respect to the host.
3. For transfers from device to either pageable or pinned host memory, the function returns only once the copy has completed.
4. For transfers from device memory to device memory, no host-side synchronization is performed.
5. For transfers from any host memory to any host memory, the function is fully synchronous with respect to the host.

Asynchronous

1. For transfers between device memory and pageable host memory, the function might be synchronous with respect to host.

2. For transfers from any host memory to any host memory, the function is fully synchronous with respect to the host.
3. If pageable memory must first be staged to pinned memory, the driver may synchronize with the stream and stage the copy into pinned memory.
4. For all other transfers, the function should be fully asynchronous.

Memset

The `cudaMemcpy` functions are asynchronous with respect to the host except when the target memory is pinned host memory. The Async versions are always asynchronous with respect to the host.

Kernel Launches

Kernel launches are asynchronous with respect to the host. Details of concurrent kernel execution and data transfers can be found in the CUDA Programmers Guide.

Chapter 3. Stream synchronization behavior

Default stream

The default stream, used when 0 is passed as a `cudaStream_t` or by APIs that operate on a stream implicitly, can be configured to have either [legacy](#) or [per-thread](#) synchronization behavior as described below.

The behavior can be controlled per compilation unit with the `--default-stream` nvcc option. Alternatively, per-thread behavior can be enabled by defining the `CUDA_API_PER_THREAD_DEFAULT_STREAM` macro before including any CUDA headers. Either way, the `CUDA_API_PER_THREAD_DEFAULT_STREAM` macro will be defined in compilation units using per-thread synchronization behavior.

Legacy default stream

The legacy default stream is an implicit stream which synchronizes with all other streams in the same `CUcontext` except for non-blocking streams, described below. (For applications using the runtime APIs only, there will be one context per device.) When an action is taken in the legacy stream such as a kernel launch or `cudaStreamWaitEvent()`, the legacy stream first waits on all blocking streams, the action is queued in the legacy stream, and then all blocking streams wait on the legacy stream.

For example, the following code launches a kernel `k_1` in stream `s`, then `k_2` in the legacy stream, then `k_3` in stream `s`:

```
k_1<<<1, 1, 0, s>>>();  
k_2<<<1, 1>>>();  
k_3<<<1, 1, 0, s>>>();
```

The resulting behavior is that `k_2` will block on `k_1` and `k_3` will block on `k_2`.

Non-blocking streams which do not synchronize with the legacy stream can be created using the `cudaStreamNonBlocking` flag with the stream creation APIs.

The legacy default stream can be used explicitly with the `cuStream` (`cudaStream_t`) handle `CU_STREAM_LEGACY` (`cudaStreamLegacy`).

Per-thread default stream

The per-thread default stream is an implicit stream local to both the thread and the `CUcontext`, and which does not synchronize with other streams (just like explicitly created streams). The per-thread default stream is not a non-blocking stream and will synchronize with the legacy default stream if both are used in a program.

The per-thread default stream can be used explicitly with the `CUstream` (`cudaStream_t`) handle `CU_STREAM_PER_THREAD` (`cudaStreamPerThread`).

Chapter 4. Graph object thread safety

Graph objects (`cudaGraph_t`, `cugraph`) are not internally synchronized and must not be accessed concurrently from multiple threads. API calls accessing the same graph object must be serialized externally.

Note that **this includes APIs which may appear to be read-only**, such as `cudaGraphClone()` (`cuGraphClone()`) and `cudaGraphInstantiate()` (`cuGraphInstantiate()`). No API or pair of APIs is guaranteed to be safe to call on the same graph object from two different threads without serialization.

Chapter 5. Rules for version mixing

1. Starting with CUDA 11.0, the ABI version for the CUDA runtime is bumped every major release. CUDA-defined types, whether opaque handles or structures like `cudaDeviceProp`, have their ABI tied to the major release of the CUDA runtime. It is unsafe to pass them from function A to function B if those functions have been compiled with different major versions of the toolkit and linked together into the same device executable.
2. The CUDA Driver API has a per-function ABI denoted with a `_v*` extension. CUDA-defined types (e.g. structs) should not be passed across different ABI versions. For example, an application calling `cuMemcpy2D_v2` (`const CUDA_MEMCPY2D_v2 *pCopy`) and using the older version of the struct `CUDA_MEMCPY2D_v1` instead of `CUDA_MEMCPY2D_v2`.
3. Users should not arbitrarily mix different API versions during the lifetime of a resource. These resources include IPC handles, memory, streams, contexts, events, etc. For example, a user who wants to allocate CUDA memory using `cuMemAlloc_v2` should free the memory using `cuMemFree_v2` and not `cuMemFree`.

Chapter 6. Modules

Here is a list of all modules:

- ▶ [Device Management](#)
- ▶ [Thread Management \[DEPRECATED\]](#)
- ▶ [Error Handling](#)
- ▶ [Stream Management](#)
- ▶ [Event Management](#)
- ▶ [External Resource Interoperability](#)
- ▶ [Execution Control](#)
- ▶ [Occupancy](#)
- ▶ [Memory Management](#)
- ▶ [Memory Management \[DEPRECATED\]](#)
- ▶ [Stream Ordered Memory Allocator](#)
- ▶ [Unified Addressing](#)
- ▶ [Peer Device Memory Access](#)
- ▶ [OpenGL Interoperability](#)
- ▶ [OpenGL Interoperability \[DEPRECATED\]](#)
- ▶ [Direct3D 9 Interoperability](#)
- ▶ [Direct3D 9 Interoperability \[DEPRECATED\]](#)
- ▶ [Direct3D 10 Interoperability](#)
- ▶ [Direct3D 10 Interoperability \[DEPRECATED\]](#)
- ▶ [Direct3D 11 Interoperability](#)
- ▶ [Direct3D 11 Interoperability \[DEPRECATED\]](#)
- ▶ [VDPAU Interoperability](#)

- ▶ [EGL Interoperability](#)
- ▶ [Graphics Interoperability](#)
- ▶ [Texture Object Management](#)
- ▶ [Surface Object Management](#)
- ▶ [Version Management](#)
- ▶ [Graph Management](#)
- ▶ [Driver Entry Point Access](#)
- ▶ [C++ API Routines](#)
- ▶ [Interactions with the CUDA Driver API](#)
- ▶ [Profiler Control](#)
- ▶ [Data types used by CUDA Runtime](#)

6.1. Device Management

This section describes the device management functions of the CUDA runtime application programming interface.

`__host__ cudaError_t cudaChooseDevice (int *device,
const cudaDeviceProp *prop)`

Select compute-device which best matches criteria.

Parameters

device

- Device with best match

prop

- Desired device properties

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns in *device the device which has properties that best match *prop.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetDeviceCount](#), [cudaGetDevice](#), [cudaSetDevice](#), [cudaGetDeviceProperties](#),
[cudaInitDevice](#)

__host__cudaError_t**cudaDeviceFlushGPUDirectRDMAWrites**

([cudaFlushGPUDirectRDMAWritesTarget](#) target,
[cudaFlushGPUDirectRDMAWritesScope](#) scope)

Blocks until remote writes are visible to the specified scope.

Parameters**target**

- The target of the operation, see [cudaFlushGPUDirectRDMAWritesTarget](#)

scope

- The scope of the operation, see [cudaFlushGPUDirectRDMAWritesScope](#)

Returns

[cudaSuccess](#), [cudaErrorNotSupported](#),

Description

Blocks until remote writes to the target context via mappings created through GPUDirect RDMA APIs, like `nvidia_p2p_get_pages` (see <https://docs.nvidia.com/cuda/gpudirect-rdma> for more information), are visible to the specified scope.

If the scope equals or lies within the scope indicated by [cudaDevAttrGPUDirectRDMAWritesOrdering](#), the call will be a no-op and can be safely omitted for performance. This can be determined by comparing the numerical values between the two enums, with smaller scopes having smaller values.

Users may query support for this API via [cudaDevAttrGPUDirectRDMAFlushWritesOptions](#).

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:[cuFlushGPUDirectRDMAWrites](#)

__host__ __device__ cudaError_t
cudaDeviceGetAttribute (int *value, cudaDeviceAttr attr, int device)

Returns information about the device.

Parameters**value**

- Returned device attribute value

attr

- Device attribute to query

device

- Device number to query

Returns[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#)**Description**

Returns in `*value` the integer value of the attribute `attr` on device `device`. The supported attributes are:

- ▶ [cudaDevAttrMaxThreadsPerBlock](#): Maximum number of threads per block
- ▶ [cudaDevAttrMaxBlockDimX](#): Maximum x-dimension of a block
- ▶ [cudaDevAttrMaxBlockDimY](#): Maximum y-dimension of a block
- ▶ [cudaDevAttrMaxBlockDimZ](#): Maximum z-dimension of a block

- ▶ [`cudaDevAttrMaxGridDimX`](#): Maximum x-dimension of a grid
- ▶ [`cudaDevAttrMaxGridDimY`](#): Maximum y-dimension of a grid
- ▶ [`cudaDevAttrMaxGridDimZ`](#): Maximum z-dimension of a grid
- ▶ [`cudaDevAttrMaxSharedMemoryPerBlock`](#): Maximum amount of shared memory available to a thread block in bytes
- ▶ [`cudaDevAttrTotalConstantMemory`](#): Memory available on device for `__constant__` variables in a CUDA C kernel in bytes
- ▶ [`cudaDevAttrWarpSize`](#): Warp size in threads
- ▶ [`cudaDevAttrMaxPitch`](#): Maximum pitch in bytes allowed by the memory copy functions that involve memory regions allocated through [`cudaMallocPitch\(\)`](#)
- ▶ [`cudaDevAttrMaxTexture1DWidth`](#): Maximum 1D texture width
- ▶ [`cudaDevAttrMaxTexture1DLinearWidth`](#): Maximum width for a 1D texture bound to linear memory
- ▶ [`cudaDevAttrMaxTexture1DMipmappedWidth`](#): Maximum mipmapped 1D texture width
- ▶ [`cudaDevAttrMaxTexture2DWidth`](#): Maximum 2D texture width
- ▶ [`cudaDevAttrMaxTexture2DHeight`](#): Maximum 2D texture height
- ▶ [`cudaDevAttrMaxTexture2DLinearWidth`](#): Maximum width for a 2D texture bound to linear memory
- ▶ [`cudaDevAttrMaxTexture2DLinearHeight`](#): Maximum height for a 2D texture bound to linear memory
- ▶ [`cudaDevAttrMaxTexture2DLinearPitch`](#): Maximum pitch in bytes for a 2D texture bound to linear memory
- ▶ [`cudaDevAttrMaxTexture2DMipmappedWidth`](#): Maximum mipmapped 2D texture width
- ▶ [`cudaDevAttrMaxTexture2DMipmappedHeight`](#): Maximum mipmapped 2D texture height
- ▶ [`cudaDevAttrMaxTexture3DWidth`](#): Maximum 3D texture width
- ▶ [`cudaDevAttrMaxTexture3DHeight`](#): Maximum 3D texture height
- ▶ [`cudaDevAttrMaxTexture3DDepth`](#): Maximum 3D texture depth
- ▶ [`cudaDevAttrMaxTexture3DWidthAlt`](#): Alternate maximum 3D texture width, 0 if no alternate maximum 3D texture size is supported
- ▶ [`cudaDevAttrMaxTexture3DHeightAlt`](#): Alternate maximum 3D texture height, 0 if no alternate maximum 3D texture size is supported
- ▶ [`cudaDevAttrMaxTexture3DDepthAlt`](#): Alternate maximum 3D texture depth, 0 if no alternate maximum 3D texture size is supported

- ▶ [`cudaDevAttrMaxTextureCubemapWidth`](#): Maximum cubemap texture width or height
- ▶ [`cudaDevAttrMaxTexture1DLayeredWidth`](#): Maximum 1D layered texture width
- ▶ [`cudaDevAttrMaxTexture1DLayeredLayers`](#): Maximum layers in a 1D layered texture
- ▶ [`cudaDevAttrMaxTexture2DLayeredWidth`](#): Maximum 2D layered texture width
- ▶ [`cudaDevAttrMaxTexture2DLayeredHeight`](#): Maximum 2D layered texture height
- ▶ [`cudaDevAttrMaxTexture2DLayeredLayers`](#): Maximum layers in a 2D layered texture
- ▶ [`cudaDevAttrMaxTextureCubemapLayeredWidth`](#): Maximum cubemap layered texture width or height
- ▶ [`cudaDevAttrMaxTextureCubemapLayeredLayers`](#): Maximum layers in a cubemap layered texture
- ▶ [`cudaDevAttrMaxSurface1DWidth`](#): Maximum 1D surface width
- ▶ [`cudaDevAttrMaxSurface2DWidth`](#): Maximum 2D surface width
- ▶ [`cudaDevAttrMaxSurface2DHeight`](#): Maximum 2D surface height
- ▶ [`cudaDevAttrMaxSurface3DWidth`](#): Maximum 3D surface width
- ▶ [`cudaDevAttrMaxSurface3DHeight`](#): Maximum 3D surface height
- ▶ [`cudaDevAttrMaxSurface3DDepth`](#): Maximum 3D surface depth
- ▶ [`cudaDevAttrMaxSurface1DLayeredWidth`](#): Maximum 1D layered surface width
- ▶ [`cudaDevAttrMaxSurface1DLayeredLayers`](#): Maximum layers in a 1D layered surface
- ▶ [`cudaDevAttrMaxSurface2DLayeredWidth`](#): Maximum 2D layered surface width
- ▶ [`cudaDevAttrMaxSurface2DLayeredHeight`](#): Maximum 2D layered surface height
- ▶ [`cudaDevAttrMaxSurface2DLayeredLayers`](#): Maximum layers in a 2D layered surface
- ▶ [`cudaDevAttrMaxSurfaceCubemapWidth`](#): Maximum cubemap surface width
- ▶ [`cudaDevAttrMaxSurfaceCubemapLayeredWidth`](#): Maximum cubemap layered surface width
- ▶ [`cudaDevAttrMaxSurfaceCubemapLayeredLayers`](#): Maximum layers in a cubemap layered surface
- ▶ [`cudaDevAttrMaxRegistersPerBlock`](#): Maximum number of 32-bit registers available to a thread block
- ▶ [`cudaDevAttrClockRate`](#): Peak clock frequency in kilohertz
- ▶ [`cudaDevAttrTextureAlignment`](#): Alignment requirement; texture base addresses aligned to `textureAlign` bytes do not need an offset applied to texture fetches
- ▶ [`cudaDevAttrTexturePitchAlignment`](#): Pitch alignment requirement for 2D texture references bound to pitched memory

- ▶ [`cudaDevAttrGpuOverlap`](#): 1 if the device can concurrently copy memory between host and device while executing a kernel, or 0 if not
- ▶ [`cudaDevAttrMultiProcessorCount`](#): Number of multiprocessors on the device
- ▶ [`cudaDevAttrKernelExecTimeout`](#): 1 if there is a run time limit for kernels executed on the device, or 0 if not
- ▶ [`cudaDevAttrIntegrated`](#): 1 if the device is integrated with the memory subsystem, or 0 if not
- ▶ [`cudaDevAttrCanMapHostMemory`](#): 1 if the device can map host memory into the CUDA address space, or 0 if not
- ▶ [`cudaDevAttrComputeMode`](#): Compute mode is the compute mode that the device is currently in. Available modes are as follows:
 - ▶ [`cudaComputeModeDefault`](#): Default mode - Device is not restricted and multiple threads can use [`cudaSetDevice\(\)`](#) with this device.
 - ▶ [`cudaComputeModeProhibited`](#): Compute-prohibited mode - No threads can use [`cudaSetDevice\(\)`](#) with this device.
 - ▶ [`cudaComputeModeExclusiveProcess`](#): Compute-exclusive-process mode - Many threads in one process will be able to use [`cudaSetDevice\(\)`](#) with this device.
- ▶ [`cudaDevAttrConcurrentKernels`](#): 1 if the device supports executing multiple kernels within the same context simultaneously, or 0 if not. It is not guaranteed that multiple kernels will be resident on the device concurrently so this feature should not be relied upon for correctness.
- ▶ [`cudaDevAttrEccEnabled`](#): 1 if error correction is enabled on the device, 0 if error correction is disabled or not supported by the device
- ▶ [`cudaDevAttrPciBusId`](#): PCI bus identifier of the device
- ▶ [`cudaDevAttrPciDeviceId`](#): PCI device (also known as slot) identifier of the device
- ▶ [`cudaDevAttrTccDriver`](#): 1 if the device is using a TCC driver. TCC is only available on Tesla hardware running Windows Vista or later.
- ▶ [`cudaDevAttrMemoryClockRate`](#): Peak memory clock frequency in kilohertz
- ▶ [`cudaDevAttrGlobalMemoryBusWidth`](#): Global memory bus width in bits
- ▶ [`cudaDevAttrL2CacheSize`](#): Size of L2 cache in bytes. 0 if the device doesn't have L2 cache.
- ▶ [`cudaDevAttrMaxThreadsPerMultiProcessor`](#): Maximum resident threads per multiprocessor
- ▶ [`cudaDevAttrUnifiedAddressing`](#): 1 if the device shares a unified address space with the host, or 0 if not
- ▶ [`cudaDevAttrComputeCapabilityMajor`](#): Major compute capability version number

- ▶ [`cudaDevAttrComputeCapabilityMinor`](#): Minor compute capability version number
- ▶ [`cudaDevAttrStreamPrioritiesSupported`](#): 1 if the device supports stream priorities, or 0 if not
- ▶ [`cudaDevAttrGlobalL1CacheSupported`](#): 1 if device supports caching globals in L1 cache, 0 if not
- ▶ [`cudaDevAttrLocalL1CacheSupported`](#): 1 if device supports caching locals in L1 cache, 0 if not
- ▶ [`cudaDevAttrMaxSharedMemoryPerMultiprocessor`](#): Maximum amount of shared memory available to a multiprocessor in bytes; this amount is shared by all thread blocks simultaneously resident on a multiprocessor
- ▶ [`cudaDevAttrMaxRegistersPerMultiprocessor`](#): Maximum number of 32-bit registers available to a multiprocessor; this number is shared by all thread blocks simultaneously resident on a multiprocessor
- ▶ [`cudaDevAttrManagedMemory`](#): 1 if device supports allocating managed memory, 0 if not
- ▶ [`cudaDevAttrIsMultiGpuBoard`](#): 1 if device is on a multi-GPU board, 0 if not
- ▶ [`cudaDevAttrMultiGpuBoardGroupID`](#): Unique identifier for a group of devices on the same multi-GPU board
- ▶ [`cudaDevAttrHostNativeAtomicSupported`](#): 1 if the link between the device and the host supports native atomic operations
- ▶ [`cudaDevAttrSingleToDoublePrecisionPerfRatio`](#): Ratio of single precision performance (in floating-point operations per second) to double precision performance
- ▶ [`cudaDevAttrPageableMemoryAccess`](#): 1 if the device supports coherently accessing pageable memory without calling `cudaHostRegister` on it, and 0 otherwise
- ▶ [`cudaDevAttrConcurrentManagedAccess`](#): 1 if the device can coherently access managed memory concurrently with the CPU, and 0 otherwise
- ▶ [`cudaDevAttrComputePreemptionSupported`](#): 1 if the device supports Compute Preemption, 0 if not
- ▶ [`cudaDevAttrCanUseHostPointerForRegisteredMem`](#): 1 if the device can access host registered memory at the same virtual address as the CPU, and 0 otherwise
- ▶ [`cudaDevAttrCooperativeLaunch`](#): 1 if the device supports launching cooperative kernels via [`cudaLaunchCooperativeKernel`](#), and 0 otherwise
- ▶ [`cudaDevAttrCooperativeMultiDeviceLaunch`](#): 1 if the device supports launching cooperative kernels via [`cudaLaunchCooperativeKernelMultiDevice`](#), and 0 otherwise
- ▶ [`cudaDevAttrCanFlushRemoteWrites`](#): 1 if the device supports flushing of outstanding remote writes, and 0 otherwise

- ▶ [cudaDevAttrHostRegisterSupported](#): 1 if the device supports host memory registration via [cudaHostRegister](#), and 0 otherwise
- ▶ [cudaDevAttrPageableMemoryAccessUsesHostPageTables](#): 1 if the device accesses pageable memory via the host's page tables, and 0 otherwise
- ▶ [cudaDevAttrDirectManagedMemAccessFromHost](#): 1 if the host can directly access managed memory on the device without migration, and 0 otherwise
- ▶ [cudaDevAttrMaxSharedMemoryPerBlockOptin](#): Maximum per block shared memory size on the device. This value can be opted into when using [cudaFuncSetAttribute](#)
- ▶ [cudaDevAttrMaxBlocksPerMultiprocessor](#): Maximum number of thread blocks that can reside on a multiprocessor
- ▶ [cudaDevAttrMaxPersistingL2CacheSize](#): Maximum L2 persisting lines capacity setting in bytes
- ▶ [cudaDevAttrMaxAccessPolicyWindowSize](#): Maximum value of [cudaAccessPolicyWindow::num_bytes](#)
- ▶ [cudaDevAttrReservedSharedMemoryPerBlock](#): Shared memory reserved by CUDA driver per block in bytes
- ▶ [cudaDevAttrSparseCudaArraySupported](#): 1 if the device supports sparse CUDA arrays and sparse CUDA mipmapped arrays.
- ▶ [cudaDevAttrHostRegisterReadOnlySupported](#): Device supports using the [cudaHostRegister](#) flag `cudaHostRegisterReadOnly` to register memory that must be mapped as read-only to the GPU
- ▶ [cudaDevAttrMemoryPoolsSupported](#): 1 if the device supports using the `cudaMallocAsync` and `cudaMemPool` family of APIs, and 0 otherwise
- ▶ [cudaDevAttrGPUDirectRDMASupported](#): 1 if the device supports GPUDirect RDMA APIs, and 0 otherwise
- ▶ [cudaDevAttrGPUDirectRDMAFlushWritesOptions](#): bitmask to be interpreted according to the [cudaFlushGPUDirectRDMAWritesOptions](#) enum
- ▶ [cudaDevAttrGPUDirectRDMAWritesOrdering](#): see the [cudaGPUDirectRDMAWritesOrdering](#) enum for numerical values
- ▶ [cudaDevAttrMemoryPoolSupportedHandleTypes](#): Bitmask of handle types supported with mempool based IPC
- ▶ [cudaDevAttrDeferredMappingCudaArraySupported](#) : 1 if the device supports deferred mapping CUDA arrays and CUDA mipmapped arrays.
- ▶ [cudaDevAttrIpcEventSupport](#): 1 if the device supports IPC Events.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetDeviceCount](#), [cudaGetDevice](#), [cudaSetDevice](#), [cudaChooseDevice](#),
[cudaGetDeviceProperties](#), [cudaInitDevice](#), [cuDeviceGetAttribute](#)

`_host_<stdint.h> cudaError_t cudaDeviceGetByPCIBusId (int *device, const char *pciBusId)`

Returns a handle to a compute device.

Parameters

device

- Returned device ordinal

pciBusId

- String in one of the following forms: [domain]:[bus]:[device].[function] [domain]:[bus]:[device] [bus]:[device].[function] where domain, bus, device, and function are all hexadecimal values

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#)

Description

Returns in *device a device ordinal given a PCI bus ID string.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceGetPCIBusId](#), [cuDeviceGetByPCIBusId](#)

**`_host____device__cudaError_t
cudaDeviceGetCacheConfig (cudaFuncCache
*pCacheConfig)`**

Returns the preferred cache configuration for the current device.

Parameters

pCacheConfig

- Returned cache configuration

Returns

[cudaSuccess](#)

Description

On devices where the L1 cache and shared memory use the same hardware resources, this returns through pCacheConfig the preferred cache configuration for the current device. This is only a preference. The runtime will use the requested configuration if possible, but it is free to choose a different configuration if required to execute functions.

This will return a pCacheConfig of [cudaFuncCachePreferNone](#) on devices where the size of the L1 cache and shared memory are fixed.

The supported cache configurations are:

- ▶ [cudaFuncCachePreferNone](#): no preference for shared memory or L1 (default)
- ▶ [cudaFuncCachePreferShared](#): prefer larger shared memory and smaller L1 cache
- ▶ [cudaFuncCachePreferL1](#): prefer larger L1 cache and smaller shared memory
- ▶ [cudaFuncCachePreferEqual](#): prefer equal size L1 cache and shared memory



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceSetCacheConfig](#), [cudaFuncSetCacheConfig](#) (C API), [cudaFuncSetCacheConfig](#) (C++ API), [cuCtxGetCacheConfig](#)

__host__ cudaError_t cudaDeviceGetDefaultMemPool **(cudaMemPool_t *memPool, int device)**

Returns the default mempool of a device.

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#) [cudaErrorNotSupported](#)

Description

The default mempool of a device contains device memory from that device.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cuDeviceGetDefaultMemPool](#), [cudaMallocAsync](#), [cudaMemPoolTrimTo](#),
[cudaMemPoolGetAttribute](#), [cudaDeviceSetMemPool](#), [cudaMemPoolSetAttribute](#),
[cudaMemPoolSetAccess](#)

__host__ __device__ cudaError_t cudaDeviceGetLimit(size_t *pValue, cudaLimit limit)

Return resource limits.

Parameters

pValue

- Returned size of the limit

limit

- Limit to query

Returns

[cudaSuccess](#), [cudaErrorUnsupportedLimit](#), [cudaErrorInvalidValue](#)

Description

Returns in *pValue the current size of limit. The following [cudaLimit](#) values are supported.

- ▶ [cudaLimitStackSize](#) is the stack size in bytes of each GPU thread.
- ▶ [cudaLimitPrintfFifoSize](#) is the size in bytes of the shared FIFO used by the printf() device system call.
- ▶ [cudaLimitMallocHeapSize](#) is the size in bytes of the heap used by the malloc() and free() device system calls.
- ▶ [cudaLimitDevRuntimeSyncDepth](#) is the maximum grid depth at which a thread can issue the device runtime call [cudaDeviceSynchronize\(\)](#) to wait on child grid launches to complete. This functionality is removed for devices of compute capability >= 9.0, and hence will return error [cudaErrorUnsupportedLimit](#) on such devices.
- ▶ [cudaLimitDevRuntimePendingLaunchCount](#) is the maximum number of outstanding device runtime launches.
- ▶ [cudaLimitMaxL2FetchGranularity](#) is the L2 cache fetch granularity.
- ▶ [cudaLimitPersistingL2CacheSize](#) is the persisting L2 cache size in bytes.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceSetLimit](#), [cuCtxGetLimit](#)

__host__ [cudaError_t](#) [cudaDeviceGetMemPool](#) ([cudaMemPool_t](#) *memPool, int device)

Gets the current mempool for a device.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#) [cudaErrorNotSupported](#)

Description

Returns the last pool provided to [cudaDeviceSetMemPool](#) for this device or the device's default memory pool if [cudaDeviceSetMemPool](#) has never been called. By default the current mempool is the default mempool for a device, otherwise the returned pool must have been set with [cuDeviceSetMemPool](#) or [cudaDeviceSetMemPool](#).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cuDeviceGetMemPool](#), [cudaDeviceGetDefaultMemPool](#), [cudaDeviceSetMemPool](#)

```
_host_ cudaError_t
cudaDeviceGetNvSciSyncAttributes (void
*nvSciSyncAttrList, int device, int flags)
```

Return NvSciSync attributes that this device can support.

Parameters

nvSciSyncAttrList

- Return NvSciSync attributes supported.

device

- Valid Cuda Device to get NvSciSync attributes for.

flags

- flags describing NvSciSync usage.

Description

Returns in **nvSciSyncAttrList**, the properties of NvSciSync that this CUDA device, **dev** can support. The returned **nvSciSyncAttrList** can be used to create an NvSciSync that matches this device's capabilities.

If **NvSciSyncAttrKey_RequiredPerm** field in **nvSciSyncAttrList** is already set this API will return [cudaErrorInvalidValue](#).

The applications should set **nvSciSyncAttrList** to a valid **NvSciSyncAttrList** failing which this API will return **cudaErrorInvalidHandle**.

The **flags** controls how applications intends to use the NvSciSync created from the **nvSciSyncAttrList**. The valid flags are:

- ▶ [cudaNvSciSyncAttrSignal](#), specifies that the applications intends to signal an NvSciSync on this CUDA device.
- ▶ [cudaNvSciSyncAttrWait](#), specifies that the applications intends to wait on an NvSciSync on this CUDA device.

At least one of these flags must be set, failing which the API returns [cudaErrorInvalidValue](#).

Both the flags are orthogonal to one another: a developer may set both these flags that allows to set both wait and signal specific attributes in the same **nvSciSyncAttrList**.

Note that this API updates the input **nvSciSyncAttrList** with values equivalent to the following public attribute key-values: **NvSciSyncAttrKey_RequiredPerm** is set to

- ▶ **NvSciSyncAccessPerm_SignalOnly** if [cudaNvSciSyncAttrSignal](#) is set in **flags**.
- ▶ **NvSciSyncAccessPerm_WaitOnly** if [cudaNvSciSyncAttrWait](#) is set in **flags**.
- ▶ **NvSciSyncAccessPerm_WaitSignal** if both [cudaNvSciSyncAttrWait](#) and [cudaNvSciSyncAttrSignal](#) are set in **flags**. **NvSciSyncAttrKey_PrimitiveInfo** is set to

- ▶ NvSciSyncAttrValPrimitiveType_SysmemSemaphore on any valid device.
- ▶ NvSciSyncAttrValPrimitiveType_Syncpoint if device is a Tegra device.
- ▶ NvSciSyncAttrValPrimitiveType_SysmemSemaphorePayload64b if device is GA10X+. NvSciSyncAttrKey_Gpuld is set to the same UUID that is returned in [cudaDeviceProp.uuid](#) from cudaDeviceGetProperties for this device.

[cudaSuccess](#), [cudaErrorDeviceUninitialized](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidHandle](#), [cudaErrorInvalidDevice](#), [cudaErrorNotSupported](#), [cudaErrorMemoryAllocation](#)

See also:

[cudaImportExternalSemaphore](#), [cudaDestroyExternalSemaphore](#),
[cudaSignalExternalSemaphoresAsync](#), [cudaWaitExternalSemaphoresAsync](#)

**__host__ cudaError_t cudaDeviceGetP2PAttribute
(int *value, cudaDeviceP2PAttr attr, int srcDevice, int dstDevice)**

Queries attributes of the link between two devices.

Parameters

value

- Returned value of the requested attribute

attr

srcDevice

- The source device of the target link.

dstDevice

- The destination device of the target link.

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#)

Description

Returns in *value the value of the requested attribute attr of the link between srcDevice and dstDevice. The supported attributes are:

- ▶ [cudaDevP2PAttrPerformanceRank](#): A relative value indicating the performance of the link between two devices. Lower value means better performance (0 being the value used for most performant link).
- ▶ [cudaDevP2PAttrAccessSupported](#): 1 if peer access is enabled.
- ▶ [cudaDevP2PAttrNativeAtomicSupported](#): 1 if native atomic operations over the link are supported.

- ▶ [cudaDevP2PAttrCudaArrayAccessSupported](#): 1 if accessing CUDA arrays over the link is supported.

Returns [cudaErrorInvalidDevice](#) if `srcDevice` or `dstDevice` are not valid or if they represent the same device.

Returns [cudaErrorInvalidValue](#) if `attrib` is not valid or if `value` is a null pointer.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceEnablePeerAccess](#), [cudaDeviceDisablePeerAccess](#), [cudaDeviceCanAccessPeer](#), [cuDeviceGetP2PAttribute](#)

host [cudaError_t](#) `cudaDeviceGetPCIBusId` (`char *pciBusId`, `int len`, `int device`)

Returns a PCI Bus Id string for the device.

Parameters

pciBusId

- Returned identifier string for the device in the following format [domain]:[bus]:[device].[function] where domain, bus, device, and function are all hexadecimal values.
- pciBusId should be large enough to store 13 characters including the NULL-terminator.

len

- Maximum length of string to store in name

device

- Device to get identifier string for

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#)

Description

Returns an ASCII string identifying the device dev in the NULL-terminated string pointed to by `pciBusId`. `len` specifies the maximum length of the string that may be returned.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceGetByPCIBusId](#), [cuDeviceGetPCIBusId](#)

**`_host __device__ cudaError_t
cudaDeviceGetSharedMemConfig
(cudaSharedMemConfig *pConfig)`**

Returns the shared memory configuration for the current device.

Parameters

pConfig

- Returned cache configuration

Returns

`cudaSuccess`, [cudaErrorInvalidValue](#)

Description

This function will return in `pConfig` the current size of shared memory banks on the current device. On devices with configurable shared memory banks, [cudaDeviceSetSharedMemConfig](#) can be used to change this setting, so that all subsequent kernel launches will by default use the new bank size. When [cudaDeviceGetSharedMemConfig](#) is called on devices without configurable shared memory, it will return the fixed bank size of the hardware.

The returned bank configurations can be either:

- ▶ `cudaSharedMemBankSizeFourByte` - shared memory bank width is four bytes.
- ▶ `cudaSharedMemBankSizeEightByte` - shared memory bank width is eight bytes.

**Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceSetCacheConfig](#), [cudaDeviceGetCacheConfig](#), [cudaDeviceSetSharedMemConfig](#),
[cudaFuncSetCacheConfig](#), [cuCtxGetSharedMemConfig](#)

__host__ cudaError_t
cudaDeviceGetStreamPriorityRange (int *leastPriority, int *greatestPriority)

Returns numerical values that correspond to the least and greatest stream priorities.

Parameters**leastPriority**

- Pointer to an int in which the numerical value for least stream priority is returned

greatestPriority

- Pointer to an int in which the numerical value for greatest stream priority is returned

Returns

[cudaSuccess](#)

Description

Returns in `*leastPriority` and `*greatestPriority` the numerical values that correspond to the least and greatest stream priorities respectively. Stream priorities follow a convention where lower numbers imply greater priorities. The range of meaningful stream priorities is given by `[*greatestPriority, *leastPriority]`. If the user attempts to create a stream with a priority value that is outside the the meaningful range as specified by this API, the priority is automatically clamped down or up to either `*leastPriority` or

*greatestPriority respectively. See [cudaStreamCreateWithPriority](#) for details on creating a priority stream. A NULL may be passed in for *leastPriority or *greatestPriority if the value is not desired.

This function will return '0' in both *leastPriority and *greatestPriority if the current context's device does not support stream priorities (see [cudaDeviceGetAttribute](#)).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreateWithPriority](#), [cudaStreamGetPriority](#), [cuCtxGetStreamPriorityRange](#)

**__host__cudaError_t
cudaDeviceGetTexture1DLinearMaxWidth
(size_t *maxWidthInElements, const
cudaChannelFormatDesc *fmtDesc, int device)**

Returns the maximum number of elements allocatable in a 1D linear texture for a given element size.

Parameters**maxWidthInElements**

- Returns maximum number of texture elements allocatable for given fmtDesc.

fmtDesc

- Texture format description.

device**Returns**

[cudaSuccess](#), [cudaErrorUnsupportedLimit](#), [cudaErrorInvalidValue](#)

Description

Returns in `maxWidthInElements` the maximum number of elements allocatable in a 1D linear texture for given format descriptor `FmtDesc`.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cuDeviceGetTexture1DLinearMaxWidth](#)

[__host__ cudaError_t cudaDeviceReset \(void\)](#)

Destroy all allocations and reset all state on the current device in the current process.

Returns

[cudaSuccess](#)

Description

Explicitly destroys and cleans up all resources associated with the current device in the current process. It is the caller's responsibility to ensure that the resources are not accessed or passed in subsequent API calls and doing so will result in undefined behavior. These resources include CUDA types such as [cudaStream_t](#), [cudaEvent_t](#), [cudaArray_t](#), [cudaMipmappedArray_t](#), [cudaTextureObject_t](#), [cudaSurfaceObject_t](#), [textureReference](#), [surfaceReference](#), [cudaExternalMemory_t](#), [cudaExternalSemaphore_t](#) and [cudaGraphicsResource_t](#). Any subsequent API call to this device will reinitialize the device.

Note that this function will reset the device immediately. It is the caller's responsibility to ensure that the device is not being accessed by any other host threads from the process when this function is called.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:[cudaDeviceSynchronize](#)

__host__ [cudaError_t](#) [cudaDeviceSetCacheConfig](#)([cudaFuncCache](#) [cacheConfig](#))

Sets the preferred cache configuration for the current device.

Parameters**cacheConfig**

- Requested cache configuration

Returns[cudaSuccess](#)**Description**

On devices where the L1 cache and shared memory use the same hardware resources, this sets through `cacheConfig` the preferred cache configuration for the current device. This is only a preference. The runtime will use the requested configuration if possible, but it is free to choose a different configuration if required to execute the function. Any function preference set via [cudaFuncSetCacheConfig \(C API \)](#) or [cudaFuncSetCacheConfig \(C++ API \)](#) will be preferred over this device-wide setting. Setting the device-wide cache configuration to [cudaFuncCachePreferNone](#) will cause subsequent kernel launches to prefer to not change the cache configuration unless required to launch the kernel.

This setting does nothing on devices where the size of the L1 cache and shared memory are fixed.

Launching a kernel with a different preference than the most recent preference setting may insert a device-side synchronization point.

The supported cache configurations are:

- ▶ [cudaFuncCachePreferNone](#): no preference for shared memory or L1 (default)
- ▶ [cudaFuncCachePreferShared](#): prefer larger shared memory and smaller L1 cache
- ▶ [cudaFuncCachePreferL1](#): prefer larger L1 cache and smaller shared memory

- ▶ [cudaFuncCachePreferEqual](#): prefer equal size L1 cache and shared memory

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceGetCacheConfig](#), [cudaFuncSetCacheConfig](#) [C API], [cudaFuncSetCacheConfig](#) [C+ + API], [cuCtxSetCacheConfig](#)

[__host__ cudaError_t cudaDeviceSetLimit](#) ([cudaLimit](#) [limit](#), [size_t](#) [value](#))

Set resource limits.

Parameters

limit

- Limit to set

value

- Size of limit

Returns

[cudaSuccess](#), [cudaErrorUnsupportedLimit](#), [cudaErrorInvalidValue](#),
[cudaErrorMemoryAllocation](#)

Description

Setting [limit](#) to [value](#) is a request by the application to update the current limit maintained by the device. The driver is free to modify the requested value to meet h/w requirements (this could be clamping to minimum or maximum values, rounding up to nearest element size, etc). The application can use [cudaDeviceGetLimit\(\)](#) to find out exactly what the limit has been set to.

Setting each [cudaLimit](#) has its own specific restrictions, so each is discussed here.

- ▶ [cudaLimitStackSize](#) controls the stack size in bytes of each GPU thread.

- ▶ [cudaLimitPrintfFifoSize](#) controls the size in bytes of the shared FIFO used by the printf() device system call. Setting [cudaLimitPrintfFifoSize](#) must not be performed after launching any kernel that uses the printf() device system call - in such case [cudaErrorInvalidValue](#) will be returned.
- ▶ [cudaLimitMallocHeapSize](#) controls the size in bytes of the heap used by the malloc() and free() device system calls. Setting [cudaLimitMallocHeapSize](#) must not be performed after launching any kernel that uses the malloc() or free() device system calls - in such case [cudaErrorInvalidValue](#) will be returned.
- ▶ [cudaLimitDevRuntimeSyncDepth](#) controls the maximum nesting depth of a grid at which a thread can safely call [cudaDeviceSynchronize\(\)](#). Setting this limit must be performed before any launch of a kernel that uses the device runtime and calls [cudaDeviceSynchronize\(\)](#) above the default sync depth, two levels of grids. Calls to [cudaDeviceSynchronize\(\)](#) will fail with error code [cudaErrorSyncDepthExceeded](#) if the limitation is violated. This limit can be set smaller than the default or up the maximum launch depth of 24. When setting this limit, keep in mind that additional levels of sync depth require the runtime to reserve large amounts of device memory which can no longer be used for user allocations. If these reservations of device memory fail, [cudaDeviceSetLimit](#) will return [cudaErrorMemoryAllocation](#), and the limit can be reset to a lower value. This limit is only applicable to devices of compute capability < 9.0. Attempting to set this limit on devices of other compute capability will results in error [cudaErrorUnsupportedLimit](#) being returned.
- ▶ [cudaLimitDevRuntimePendingLaunchCount](#) controls the maximum number of outstanding device runtime launches that can be made from the current device. A grid is outstanding from the point of launch up until the grid is known to have been completed. Device runtime launches which violate this limitation fail and return [cudaErrorLaunchPendingCountExceeded](#) when [cudaGetLastError\(\)](#) is called after launch. If more pending launches than the default (2048 launches) are needed for a module using the device runtime, this limit can be increased. Keep in mind that being able to sustain additional pending launches will require the runtime to reserve larger amounts of device memory upfront which can no longer be used for allocations. If these reservations fail, [cudaDeviceSetLimit](#) will return [cudaErrorMemoryAllocation](#), and the limit can be reset to a lower value. This limit is only applicable to devices of compute capability 3.5 and higher. Attempting to set this limit on devices of compute capability less than 3.5 will result in the error [cudaErrorUnsupportedLimit](#) being returned.
- ▶ [cudaLimitMaxL2FetchGranularity](#) controls the L2 cache fetch granularity. Values can range from 0B to 128B. This is purely a performance hint and it can be ignored or clamped depending on the platform.
- ▶ [cudaLimitPersistingL2CacheSize](#) controls size in bytes available for persisting L2 cache. This is purely a performance hint and it can be ignored or clamped depending on the platform.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:[cudaDeviceGetLimit](#), [cuCtxSetLimit](#)

__host__ [cudaError_t](#) [cudaDeviceSetMemPool](#) (int device, [cudaMemPool_t](#) memPool)

Sets the current memory pool of a device.

Returns[cudaSuccess](#), [cudaErrorInvalidValue](#) [cudaErrorInvalidDevice](#) [cudaErrorNotSupported](#)**Description**

The memory pool must be local to the specified device. Unless a mempool is specified in the [cudaMallocAsync](#) call, [cudaMallocAsync](#) allocates from the current mempool of the provided stream's device. By default, a device's current memory pool is its default memory pool.

Note:

Use [cudaMallocFromPoolAsync](#) to specify asynchronous allocations from a device different than the one the stream runs on.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cuDeviceSetMemPool](#), [cudaDeviceGetMemPool](#), [cudaDeviceGetDefaultMemPool](#),
[cudaMemPoolCreate](#), [cudaMemPoolDestroy](#), [cudaMallocFromPoolAsync](#)

__host__ cudaError_t cudaDeviceSetSharedMemConfig (cudaSharedMemConfig config)

Sets the shared memory configuration for the current device.

Parameters

config

- Requested cache configuration

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

On devices with configurable shared memory banks, this function will set the shared memory bank size which is used for all subsequent kernel launches. Any per-function setting of shared memory set via [cudaFuncSetSharedMemConfig](#) will override the device wide setting.

Changing the shared memory configuration between launches may introduce a device side synchronization point.

Changing the shared memory bank size will not increase shared memory usage or affect occupancy of kernels, but may have major effects on performance. Larger bank sizes will allow for greater potential bandwidth to shared memory, but will change what kinds of accesses to shared memory will result in bank conflicts.

This function will do nothing on devices with fixed shared memory bank size.

The supported bank configurations are:

- ▶ `cudaSharedMemBankSizeDefault`: set bank width the device default (currently, four bytes)
- ▶ `cudaSharedMemBankSizeFourByte`: set shared memory bank width to be four bytes natively.
- ▶ `cudaSharedMemBankSizeEightByte`: set shared memory bank width to be eight bytes natively.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceSetCacheConfig](#), [cudaDeviceGetCacheConfig](#), [cudaDeviceGetSharedMemConfig](#),
[cudaFuncSetCacheConfig](#), [cuCtxSetSharedMemConfig](#)

__host__ __device__ cudaError_t cudaDeviceSynchronize (void)

Wait for compute device to finish.

Returns

[cudaSuccess](#)

Description

Blocks until the device has completed all preceding requested tasks.

[cudaDeviceSynchronize\(\)](#) returns an error if one of the preceding tasks has failed. If the [cudaDeviceScheduleBlockingSync](#) flag was set for this device, the host thread will block until the device has finished its work.

Note:

- ▶ Use of `cudaDeviceSynchronize` in device code was deprecated in CUDA 11.6 and removed for compute_90+ compilation. For compute capability < 9.0, compile-time opt-in by specifying -D CUDA_FORCE_CDP1_IF_SUPPORTED is required to continue using [cudaDeviceSynchronize\(\)](#) in device code for now. Note that this is different from host-side `cudaDeviceSynchronize`, which is still supported.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceReset](#), [cuCtxSynchronize](#)

_host____device__cudaError_t cudaGetDevice (int *device)

Returns which device is currently being used.

Parameters

device

- Returns the device on which the active host thread executes the device code.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorDeviceUnavailable](#),

Description

Returns in `*device` the current device for the calling host thread.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetDeviceCount](#), [cudaSetDevice](#), [cudaGetDeviceProperties](#), [cudaChooseDevice](#), [cuCtxGetCurrent](#)

__host__device__cudaError_t cudaGetDeviceCount (int *count)

Returns the number of compute-capable devices.

Parameters

count

- Returns the number of devices with compute capability greater or equal to 2.0

Returns

cudaSuccess

Description

Returns in *count the number of devices with compute capability greater or equal to 2.0 that are available for execution.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return cudaErrorInitializationError, cudaErrorInsufficientDriver or cudaErrorNoDevice if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by cudaStreamAddCallback no CUDA function may be called from callback. cudaErrorNotPermitted may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

cudaGetDevice, cudaSetDevice, cudaGetDeviceProperties, cudaChooseDevice, cudaInitDevice, cuDeviceGetCount

__host__cudaError_t cudaGetDeviceFlags(unsigned int *flags)

Gets the flags for the current device.

Parameters

flags

- Pointer to store the device flags

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#)

Description

Returns in `flags` the flags for the current device. If there is a current device for the calling thread, the flags for the device are returned. If there is no current device, the flags for the first device are returned, which may be the default flags. Compare to the behavior of [cudaSetDeviceFlags](#).

Typically, the flags returned should match the behavior that will be seen if the calling thread uses a device after this call, without any change to the flags or current device inbetween by this or another thread. Note that if the device is not initialized, it is possible for another thread to change the flags for the current device before it is initialized. Additionally, when using exclusive mode, if this thread has not requested a specific device, it may use a device other than the first device, contrary to the assumption made by this function.

If a context has been created via the driver API and is current to the calling thread, the flags for that context are always returned.

Flags returned by this function may specifically include [cudaDeviceMapHost](#) even though it is not accepted by [cudaSetDeviceFlags](#) because it is implicit in runtime API flags. The reason for this is that the current context may have been created via the driver API in which case the flag is not implicit and may be unset.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetDevice](#), [cudaGetDeviceProperties](#), [cudaSetDevice](#), [cudaSetDeviceFlags](#),
[cudaInitDevice](#), [cuCtxGetFlags](#), [cuDevicePrimaryCtxGetState](#)

__host__ cudaError_t cudaGetDeviceProperties(cudaDeviceProp *prop, int device)

Returns information about the compute-device.

Parameters

prop

- Properties for the specified device

device

- Device number to get properties for

Returns

cudaSuccess, cudaErrorInvalidDevice

Description

Returns in *prop the properties of device dev. The cudaDeviceProp structure is defined as:

```
' struct cudaDeviceProp {
    char name[256];
    cudaUUID_t uuid;
    size_t totalGlobalMem;
    size_t sharedMemPerBlock;
    int regsPerBlock;
    int warpSize;
    size_t memPitch;
    int maxThreadsPerBlock;
    int maxThreadsDim[3];
    int maxGridSize[3];
    int clockRate;
    size_t totalConstMem;
    int major;
    int minor;
    size_t textureAlignment;
    size_t texturePitchAlignment;
    int deviceOverlap;
    int multiProcessorCount;
    int kernelExecTimeoutEnabled;
    int integrated;
    int canMapHostMemory;
    int computeMode;
    int maxTexture1D;
    int maxTexture1DMipmap;
    int maxTexture1DLinear;
    int maxTexture2D[2];
    int maxTexture2DMipmap[2];
    int maxTexture2DLinear[3];
    int maxTexture2DGather[2];
    int maxTexture3D[3];
    int maxTexture3DAlt[3];
    int maxTextureCubemap;
    int maxTexture1DLayered[2];
    int maxTexture2DLayered[3];
    int maxTextureCubemapLayered[2];
    int maxSurface1D;
    int maxSurface2D[2];
    int maxSurface3D[3];
}
```

```

int maxSurface1DLayered[2];
int maxSurface2DLayered[3];
int maxSurfaceCubemap;
int maxSurfaceCubemapLayered[2];
size_t surfaceAlignment;
int concurrentKernels;
int ECCEnabled;
int pciBusID;
int pciDeviceID;
int pciDomainID;
int tccDriver;
int asyncEngineCount;
int unifiedAddressing;
int memoryClockRate;
int memoryBusWidth;
int l2CacheSize;
int persistingL2CacheMaxSize;
int maxThreadsPerMultiProcessor;
int streamPrioritiesSupported;
int globalL1CacheSupported;
int localL1CacheSupported;
size_t sharedMemPerMultiprocessor;
int regsPerMultiprocessor;
int managedMemory;
int isMultiGpuBoard;
int multiGpuBoardGroupID;
int singleToDoublePrecisionPerfRatio;
int pageableMemoryAccess;
int concurrentManagedAccess;
int computePreemptionSupported;
int canUseHostPointerForRegisteredMem;
int cooperativeLaunch;
int cooperativeMultiDeviceLaunch;
int pageableMemoryAccessUsesHostPageTables;
int directManagedMemAccessFromHost;
int accessPolicyMaxWindowSize;
}

```

where:

- ▶ name[256] is an ASCII string identifying the device.
- ▶ uuid is a 16-byte unique identifier.
- ▶ totalGlobalMem is the total amount of global memory available on the device in bytes.
- ▶ sharedMemPerBlock is the maximum amount of shared memory available to a thread block in bytes.
- ▶ regsPerBlock is the maximum number of 32-bit registers available to a thread block.
- ▶ warpSize is the warp size in threads.
- ▶ memPitch is the maximum pitch in bytes allowed by the memory copy functions that involve memory regions allocated through cudaMallocPitch().
- ▶ maxThreadsPerBlock is the maximum number of threads per block.
- ▶ maxThreadsDim[3] contains the maximum size of each dimension of a block.
- ▶ maxGridSize[3] contains the maximum size of each dimension of a grid.

- ▶ [clockRate](#) is the clock frequency in kilohertz.
- ▶ [totalConstMem](#) is the total amount of constant memory available on the device in bytes.
- ▶ [major](#), [minor](#) are the major and minor revision numbers defining the device's compute capability.
- ▶ [textureAlignment](#) is the alignment requirement; texture base addresses that are aligned to [textureAlignment](#) bytes do not need an offset applied to texture fetches.
- ▶ [texturePitchAlignment](#) is the pitch alignment requirement for 2D texture references that are bound to pitched memory.
- ▶ [deviceOverlap](#) is 1 if the device can concurrently copy memory between host and device while executing a kernel, or 0 if not. Deprecated, use instead [asyncEngineCount](#).
- ▶ [multiProcessorCount](#) is the number of multiprocessors on the device.
- ▶ [kernelExecTimeoutEnabled](#) is 1 if there is a run time limit for kernels executed on the device, or 0 if not.
- ▶ [integrated](#) is 1 if the device is an integrated (motherboard) GPU and 0 if it is a discrete (card) component.
- ▶ [canMapHostMemory](#) is 1 if the device can map host memory into the CUDA address space for use with [cudaHostAlloc\(\)](#)/[cudaHostGetDevicePointer\(\)](#), or 0 if not.
- ▶ [computeMode](#) is the compute mode that the device is currently in. Available modes are as follows:
 - ▶ [cudaComputeModeDefault](#): Default mode - Device is not restricted and multiple threads can use [cudaSetDevice\(\)](#) with this device.
 - ▶ [cudaComputeModeProhibited](#): Compute-prohibited mode - No threads can use [cudaSetDevice\(\)](#) with this device.
 - ▶ [cudaComputeModeExclusiveProcess](#): Compute-exclusive-process mode - Many threads in one process will be able to use [cudaSetDevice\(\)](#) with this device.

When an occupied exclusive mode device is chosen with [cudaSetDevice](#), all subsequent non-device management runtime functions will return [cudaErrorDevicesUnavailable](#).

- ▶ [maxTexture1D](#) is the maximum 1D texture size.
- ▶ [maxTexture1DMipmap](#) is the maximum 1D mipmapped texture texture size.
- ▶ [maxTexture1DLinear](#) is the maximum 1D texture size for textures bound to linear memory.
- ▶ [maxTexture2D\[2\]](#) contains the maximum 2D texture dimensions.
- ▶ [maxTexture2DMipmap\[2\]](#) contains the maximum 2D mipmapped texture dimensions.
- ▶ [maxTexture2DLinear\[3\]](#) contains the maximum 2D texture dimensions for 2D textures bound to pitch linear memory.

- ▶ `maxTexture2DGather[2]` contains the maximum 2D texture dimensions if texture gather operations have to be performed.
- ▶ `maxTexture3D[3]` contains the maximum 3D texture dimensions.
- ▶ `maxTexture3DAlt[3]` contains the maximum alternate 3D texture dimensions.
- ▶ `maxTextureCubemap` is the maximum cubemap texture width or height.
- ▶ `maxTexture1DLayered[2]` contains the maximum 1D layered texture dimensions.
- ▶ `maxTexture2DLayered[3]` contains the maximum 2D layered texture dimensions.
- ▶ `maxTextureCubemapLayered[2]` contains the maximum cubemap layered texture dimensions.
- ▶ `maxSurface1D` is the maximum 1D surface size.
- ▶ `maxSurface2D[2]` contains the maximum 2D surface dimensions.
- ▶ `maxSurface3D[3]` contains the maximum 3D surface dimensions.
- ▶ `maxSurface1DLayered[2]` contains the maximum 1D layered surface dimensions.
- ▶ `maxSurface2DLayered[3]` contains the maximum 2D layered surface dimensions.
- ▶ `maxSurfaceCubemap` is the maximum cubemap surface width or height.
- ▶ `maxSurfaceCubemapLayered[2]` contains the maximum cubemap layered surface dimensions.
- ▶ `surfaceAlignment` specifies the alignment requirements for surfaces.
- ▶ `concurrentKernels` is 1 if the device supports executing multiple kernels within the same context simultaneously, or 0 if not. It is not guaranteed that multiple kernels will be resident on the device concurrently so this feature should not be relied upon for correctness.
- ▶ `ECCEnabled` is 1 if the device has ECC support turned on, or 0 if not.
- ▶ `pciBusID` is the PCI bus identifier of the device.
- ▶ `pciDeviceID` is the PCI device (sometimes called slot) identifier of the device.
- ▶ `pciDomainID` is the PCI domain identifier of the device.
- ▶ `tccDriver` is 1 if the device is using a TCC driver or 0 if not.
- ▶ `asyncEngineCount` is 1 when the device can concurrently copy memory between host and device while executing a kernel. It is 2 when the device can concurrently copy memory between host and device in both directions and execute a kernel at the same time. It is 0 if neither of these is supported.
- ▶ `unifiedAddressing` is 1 if the device shares a unified address space with the host and 0 otherwise.

- ▶ `memoryClockRate` is the peak memory clock frequency in kilohertz.
- ▶ `memoryBusWidth` is the memory bus width in bits.
- ▶ `l2CacheSize` is L2 cache size in bytes.
- ▶ `persistingL2CacheMaxSize` is L2 cache's maximum persisting lines size in bytes.
- ▶ `maxThreadsPerMultiProcessor` is the number of maximum resident threads per multiprocessor.
- ▶ `streamPrioritiesSupported` is 1 if the device supports stream priorities, or 0 if it is not supported.
- ▶ `globalL1CacheSupported` is 1 if the device supports caching of globals in L1 cache, or 0 if it is not supported.
- ▶ `localL1CacheSupported` is 1 if the device supports caching of locals in L1 cache, or 0 if it is not supported.
- ▶ `sharedMemPerMultiprocessor` is the maximum amount of shared memory available to a multiprocessor in bytes; this amount is shared by all thread blocks simultaneously resident on a multiprocessor.
- ▶ `regsPerMultiprocessor` is the maximum number of 32-bit registers available to a multiprocessor; this number is shared by all thread blocks simultaneously resident on a multiprocessor.
- ▶ `managedMemory` is 1 if the device supports allocating managed memory on this system, or 0 if it is not supported.
- ▶ `isMultiGpuBoard` is 1 if the device is on a multi-GPU board (e.g. Gemini cards), and 0 if not;
- ▶ `multiGpuBoardGroupID` is a unique identifier for a group of devices associated with the same board. Devices on the same multi-GPU board will share the same identifier.
- ▶ `hostNativeAtomicSupported` is 1 if the link between the device and the host supports native atomic operations, or 0 if it is not supported.
- ▶ `singleToDoublePrecisionPerfRatio` is the ratio of single precision performance (in floating-point operations per second) to double precision performance.
- ▶ `pageableMemoryAccess` is 1 if the device supports coherently accessing pageable memory without calling `cudaHostRegister` on it, and 0 otherwise.
- ▶ `concurrentManagedAccess` is 1 if the device can coherently access managed memory concurrently with the CPU, and 0 otherwise.
- ▶ `computePreemptionSupported` is 1 if the device supports Compute Preemption, and 0 otherwise.
- ▶ `canUseHostPointerForRegisteredMem` is 1 if the device can access host registered memory at the same virtual address as the CPU, and 0 otherwise.

- ▶ [cooperativeLaunch](#) is 1 if the device supports launching cooperative kernels via [cudaLaunchCooperativeKernel](#), and 0 otherwise.
- ▶ [cooperativeMultiDeviceLaunch](#) is 1 if the device supports launching cooperative kernels via [cudaLaunchCooperativeKernelMultiDevice](#), and 0 otherwise.
- ▶ [sharedMemPerBlockOptin](#) is the per device maximum shared memory per block usable by special opt in
- ▶ [pageableMemoryAccessUsesHostPageTables](#) is 1 if the device accesses pageable memory via the host's page tables, and 0 otherwise.
- ▶ [directManagedMemAccessFromHost](#) is 1 if the host can directly access managed memory on the device without migration, and 0 otherwise.
- ▶ [maxBlocksPerMultiProcessor](#) is the maximum number of thread blocks that can reside on a multiprocessor.
- ▶ [accessPolicyMaxWindowSize](#) is the maximum value of [cudaAccessPolicyWindow::num_bytes](#).
- ▶ [reservedSharedMemPerBlock](#) is the shared memory reserved by CUDA driver per block in bytes
- ▶ [hostRegisterSupported](#) is 1 if the device supports host memory registration via [cudaHostRegister](#), and 0 otherwise.
- ▶ [sparseCudaArraySupported](#) is 1 if the device supports sparse CUDA arrays and sparse CUDA mipmapped arrays, 0 otherwise
- ▶ [hostRegisterReadOnlySupported](#) is 1 if the device supports using the [cudaHostRegister](#) flag `cudaHostRegisterReadOnly` to register memory that must be mapped as read-only to the GPU
- ▶ [timelineSemaphoreInteropSupported](#) is 1 if external timeline semaphore interop is supported on the device, 0 otherwise
- ▶ [memoryPoolsSupported](#) is 1 if the device supports using the `cudaMallocAsync` and `cudaMemPool` family of APIs, 0 otherwise
- ▶ [gpuDirectRDMASupported](#) is 1 if the device supports GPUDirect RDMA APIs, 0 otherwise
- ▶ [gpuDirectRDMAFlushWritesOptions](#) is a bitmask to be interpreted according to the [cudaFlushGPUDirectRDMAWritesOptions](#) enum
- ▶ [gpuDirectRDMAWritesOrdering](#) See the [cudaGPUDirectRDMAWritesOrdering](#) enum for numerical values
- ▶ [memoryPoolSupportedHandleTypes](#) is a bitmask of handle types supported with mempool-based IPC

- ▶ [deferredMappingCudaArraySupported](#) is 1 if the device supports deferred mapping CUDA arrays and CUDA mipmapped arrays
- ▶ [ipcEventSupported](#) is 1 if the device supports IPC Events, and 0 otherwise
- ▶ [unifiedFunctionPointers](#) is 1 if the device support unified pointers, and 0 otherwise

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetDeviceCount](#), [cudaGetDevice](#), [cudaSetDevice](#), [cudaChooseDevice](#),
[cudaDeviceGetAttribute](#), [cudaInitDevice](#), [cuDeviceGetAttribute](#), [cuDeviceGetName](#)

__host__ [cudaError_t](#) [cudaInitDevice](#) (int device, unsigned int deviceFlags, unsigned int flags)

Initialize device to be used for GPU executions.

Parameters

device

- Device on which the runtime will initialize itself.

deviceFlags

- Parameters for device operation.

flags

- Flags for controlling the device initialization.

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#),

Description

This function will initialize the CUDA Runtime structures and primary context on `device` when called, but the context will not be made current to `device`.

When `cudaInitDeviceFlagsAreValid` is set in `flags`, deviceFlags are applied to the requested device. The values of deviceFlags match those of the flags parameters in `cudaSetDeviceFlags`. The effect may be verified by `cudaGetDeviceFlags`.

This function will return an error if the device is in `cudaComputeModeExclusiveProcess` and is occupied by another process or if the device is in `cudaComputeModeProhibited`.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetDeviceCount](#), [cudaGetDevice](#), [cudaGetDeviceProperties](#), [cudaChooseDevice](#), [cudaSetDevice](#) [cuCtxSetCurrent](#)

__host__ cudaError_t `cudaLpcCloseMemHandle` (void *`devPtr`)

Attempts to close memory mapped with `cudaLpcOpenMemHandle`.

Parameters

devPtr

- Device pointer returned by `cudaLpcOpenMemHandle`

Returns

[cudaSuccess](#), [cudaErrorMapBufferObjectFailed](#), [cudaErrorNotSupported](#), [cudaErrorInvalidValue](#)

Description

Decrements the reference count of the memory returned by `cudaLpcOpenMemHandle` by 1. When the reference count reaches 0, this API unmaps the memory. The original allocation in the exporting process as well as imported mappings in other processes will be unaffected.

Any resources used to enable peer access will be freed if this is the last mapping using them.

IPC functionality is restricted to devices with support for unified addressing on Linux and Windows operating systems. IPC functionality on Windows is restricted to GPUs in TCC mode. Users can test their device for IPC functionality by calling [cudaDeviceGetAttribute](#) with [cudaDevAttrIpcEventSupport](#)



Note:

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc](#), [cudaFree](#), [cudalpcGetEventHandle](#), [cudalpcOpenEventHandle](#),
[cudalpcGetMemHandle](#), [cudalpcOpenMemHandle](#), [culpcCloseMemHandle](#)

__host__ cudaError_t cudalpcGetEventHandle (cudalpcEventHandle_t *handle, cudaEvent_t event)

Gets an interprocess handle for a previously allocated event.

Parameters

handle

- Pointer to a user allocated cudalpcEventHandle in which to return the opaque event handle

event

- Event allocated with [cudaEventInterprocess](#) and [cudaEventDisableTiming](#) flags.

Returns


[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorMemoryAllocation](#),
[cudaErrorMapBufferObjectFailed](#), [cudaErrorNotSupported](#), [cudaErrorInvalidValue](#)

Description

Takes as input a previously allocated event. This event must have been created with the [cudaEventInterprocess](#) and [cudaEventDisableTiming](#) flags set. This opaque handle may be copied into other processes and opened with [cudalpcOpenEventHandle](#) to allow efficient hardware synchronization between GPU work in different processes.

After the event has been opened in the importing process, [cudaEventRecord](#), [cudaEventSynchronize](#), [cudaStreamWaitEvent](#) and [cudaEventQuery](#) may be used in either process. Performing operations on the imported event after the exported event has been freed with [cudaEventDestroy](#) will result in undefined behavior.

IPC functionality is restricted to devices with support for unified addressing on Linux and Windows operating systems. IPC functionality on Windows is restricted to GPUs in TCC mode. Users can test their device for IPC functionality by calling [cudaDeviceGetAttribute](#) with [cudaDevAttrIpcEventSupport](#)

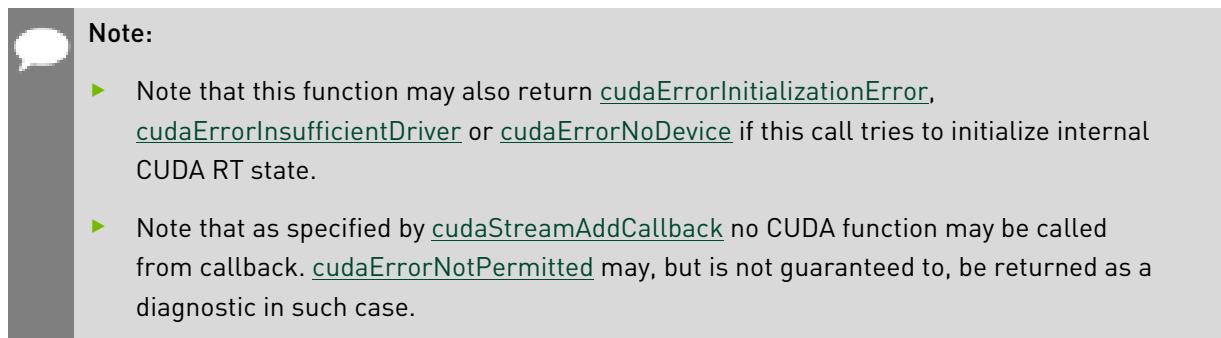

See also:

[cudaEventCreate](#), [cudaEventDestroy](#), [cudaEventSynchronize](#), [cudaEventQuery](#),
[cudaStreamWaitEvent](#), [cudalpcOpenEventHandle](#), [cudalpcGetMemHandle](#),
[cudalpcOpenMemHandle](#), [cudalpcCloseMemHandle](#), [culpcGetEventHandle](#)

__host__ cudaError_t cudalpcGetMemHandle (cudalpcMemHandle_t *handle, void *devPtr)

Gets an interprocess memory handle for an existing device memory allocation.

Parameters

handle

- Pointer to user allocated cudalpcMemHandle to return the handle in.

devPtr

- Base pointer to previously allocated device memory

Returns

[cudaSuccess](#), [cudaErrorMemoryAllocation](#), [cudaErrorMapBufferObjectFailed](#),
[cudaErrorNotSupported](#), [cudaErrorInvalidValue](#)

Description

Takes a pointer to the base of an existing device memory allocation created with [cudaMalloc](#) and exports it for use in another process. This is a lightweight operation and may be called multiple times on an allocation without adverse effects.

If a region of memory is freed with [cudaFree](#) and a subsequent call to [cudaMalloc](#) returns memory with the same device address, [cudalpcGetMemHandle](#) will return a unique handle for the new memory.

IPC functionality is restricted to devices with support for unified addressing on Linux and Windows operating systems. IPC functionality on Windows is restricted to GPUs in TCC mode. Users can test their device for IPC functionality by calling [cudaDeviceGetAttribute](#) with [cudaDevAttrIpcEventSupport](#)

 **Note:**

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc](#), [cudaFree](#), [cudalpcGetEventHandle](#), [cudalpcOpenEventHandle](#), [cudalpcOpenMemHandle](#), [cudalpcCloseMemHandle](#), [culpcGetMemHandle](#)

__host__cudaError_t cudalpcOpenEventHandle (cudaEvent_t *event, cudalpcEventHandle_t handle)

Opens an interprocess event handle for use in the current process.

Parameters

event

- Returns the imported event

handle

- Interprocess handle to open

Returns

[cudaSuccess](#), [cudaErrorMapBufferObjectFailed](#), [cudaErrorNotSupported](#), [cudaErrorInvalidValue](#), [cudaErrorDeviceUninitialized](#)

Description

Opens an interprocess event handle exported from another process with `cudaLpcGetEventHandle`. This function returns a `cudaEvent_t` that behaves like a locally created event with the `cudaEventDisableTiming` flag specified. This event must be freed with `cudaEventDestroy`.

Performing operations on the imported event after the exported event has been freed with `cudaEventDestroy` will result in undefined behavior.

IPC functionality is restricted to devices with support for unified addressing on Linux and Windows operating systems. IPC functionality on Windows is restricted to GPUs in TCC mode. Users can test their device for IPC functionality by calling `cudaDeviceGetAttribute` with `cudaDevAttrIpcEventSupport`

 **Note:**

- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

`cudaEventCreate`, `cudaEventDestroy`, `cudaEventSynchronize`, `cudaEventQuery`,
`cudaStreamWaitEvent`, `cudaLpcGetEventHandle`, `cudaLpcGetMemHandle`,
`cudaLpcOpenMemHandle`, `cudaLpcCloseMemHandle`, `culpcOpenEventHandle`

```
__host__ cudaError_t cudaLpcOpenMemHandle (void
**devPtr, cudaLpcMemHandle_t handle, unsigned int
flags)
```

Opens an interprocess memory handle exported from another process and returns a device pointer usable in the local process.

Parameters

devPtr

- Returned device pointer

handle

- `cudaLpcMemHandle` to open

flags

- Flags for this operation. Must be specified as [_cudaLpcMemLazyEnablePeerAccess](#)

Returns

[cudaSuccess](#), [cudaErrorMapBufferObjectFailed](#), [cudaErrorInvalidResourceHandle](#),
[cudaErrorDeviceUninitialized](#), [cudaErrorTooManyPeers](#), [cudaErrorNotSupported](#),
[cudaErrorInvalidValue](#)

Description

Maps memory exported from another process with [_cudaLpcGetMemHandle](#) into the current device address space. For contexts on different devices [_cudaLpcOpenMemHandle](#) can attempt to enable peer access between the devices as if the user called [_cudaDeviceEnablePeerAccess](#). This behavior is controlled by the [_cudaLpcMemLazyEnablePeerAccess](#) flag. [_cudaDeviceCanAccessPeer](#) can determine if a mapping is possible.

[_cudaLpcOpenMemHandle](#) can open handles to devices that may not be visible in the process calling the API.

Contexts that may open [_cudaLpcMemHandle](#)s are restricted in the following way. [_cudaLpcMemHandle](#)s from each device in a given process may only be opened by one context per device per other process.

If the memory handle has already been opened by the current context, the reference count on the handle is incremented by 1 and the existing device pointer is returned.

Memory returned from [_cudaLpcOpenMemHandle](#) must be freed with [_cudaLpcCloseMemHandle](#).

Calling [_cudaFree](#) on an exported memory region before calling [_cudaLpcCloseMemHandle](#) in the importing context will result in undefined behavior.

IPC functionality is restricted to devices with support for unified addressing on Linux and Windows operating systems. IPC functionality on Windows is restricted to GPUs in TCC mode. Users can test their device for IPC functionality by calling [_cudaDeviceGetAttribute](#) with [_cudaDevAttrIpcEventSupport](#)

**Note:**

- ▶ Note that this function may also return [_cudaErrorInitializationError](#), [_cudaErrorInsufficientDriver](#) or [_cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [_cudaStreamAddCallback](#) no CUDA function may be called from callback. [_cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

- ▶ No guarantees are made about the address returned in *devPtr. In particular, multiple processes may not receive the same address for the same handle.

See also:

[cudaMalloc](#), [cudaFree](#), [cudalpcGetEventHandle](#), [cudalpcOpenEventHandle](#),
[cudalpcGetMemHandle](#), [cudalpcCloseMemHandle](#), [cudaDeviceEnablePeerAccess](#),
[cudaDeviceCanAccessPeer](#), [culpcOpenMemHandle](#)

__host__ cudaError_t cudaSetDevice (int device)

Set device to be used for GPU executions.

Parameters

device

- Device on which the active host thread should execute the device code.

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorDeviceUnavailable](#),

Description

Sets device as the current device for the calling host thread. Valid device id's are 0 to [\[cudaGetDeviceCount\(\)\] - 1](#).

Any device memory subsequently allocated from this host thread using [cudaMalloc\(\)](#), [cudaMallocPitch\(\)](#) or [cudaMallocArray\(\)](#) will be physically resident on device. Any host memory allocated from this host thread using [cudaMallocHost\(\)](#) or [cudaHostAlloc\(\)](#) or [cudaHostRegister\(\)](#) will have its lifetime associated with device. Any streams or events created from this host thread will be associated with device. Any kernels launched from this host thread using the <<>>> operator or [cudaLaunchKernel\(\)](#) will be executed on device.

This call may be made from any host thread, to any device, and at any time. This function will do no synchronization with the previous or new device, and should only take significant time when it initializes the runtime's context state. This call will bind the primary context of the specified device to the calling thread and all the subsequent memory allocations, stream and event creations, and kernel launches will be associated with the primary context. This function will also immediately initialize the runtime state on the primary context, and the context will be current on device immediately. This function will return an error if the device is in [cudaComputeModeExclusiveProcess](#) and is occupied by another process or if the device is in [cudaComputeModeProhibited](#).

It is not required to call [cudalInitDevice](#) before using this function.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetDeviceCount](#), [cudaGetDevice](#), [cudaGetDeviceProperties](#), [cudaChooseDevice](#), [cudaInitDevice](#), [cuCtxSetCurrent](#)

__host__ `cudaError_t cudaSetDeviceFlags (unsigned int flags)`

Sets flags to be used for device executions.

Parameters

flags

- Parameters for device operation

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Records `flags` as the flags for the current device. If the current device has been set and that device has already been initialized, the previous flags are overwritten. If the current device has not been initialized, it is initialized with the provided flags. If no device has been made current to the calling thread, a default device is selected and initialized with the provided flags.

The two LSBs of the `flags` parameter can be used to control how the CPU thread interacts with the OS scheduler when waiting for results from the device.

- ▶ [cudaDeviceScheduleAuto](#): The default value if the `flags` parameter is zero, uses a heuristic based on the number of active CUDA contexts in the process C and the number of logical processors in the system P . If $C > P$, then CUDA will yield to other OS threads when waiting for the device, otherwise CUDA will not yield while waiting for results and actively spin on the processor. Additionally, on Tegra devices, [cudaDeviceScheduleAuto](#) uses a heuristic based on the power profile of the platform and may choose [cudaDeviceScheduleBlockingSync](#) for low-powered devices.

- ▶ [cudaDeviceScheduleSpin](#): Instruct CUDA to actively spin when waiting for results from the device. This can decrease latency when waiting for the device, but may lower the performance of CPU threads if they are performing work in parallel with the CUDA thread.
- ▶ [cudaDeviceScheduleYield](#): Instruct CUDA to yield its thread when waiting for results from the device. This can increase latency when waiting for the device, but can increase the performance of CPU threads performing work in parallel with the device.
- ▶ [cudaDeviceScheduleBlockingSync](#): Instruct CUDA to block the CPU thread on a synchronization primitive when waiting for the device to finish work.
- ▶ [cudaDeviceBlockingSync](#): Instruct CUDA to block the CPU thread on a synchronization primitive when waiting for the device to finish work.

Deprecated: This flag was deprecated as of CUDA 4.0 and replaced with [cudaDeviceScheduleBlockingSync](#).
- ▶ [cudaDeviceMapHost](#): This flag enables allocating pinned host memory that is accessible to the device. It is implicit for the runtime but may be absent if a context is created using the driver API. If this flag is not set, [cudaHostGetDevicePointer\(\)](#) will always return a failure code.
- ▶ [cudaDeviceLmemResizeToMax](#): Instruct CUDA to not reduce local memory after resizing local memory for a kernel. This can prevent thrashing by local memory allocations when launching many kernels with high local memory usage at the cost of potentially increased memory usage.

Deprecated: This flag is deprecated and the behavior enabled by this flag is now the default and cannot be disabled.
- ▶ [cudaDeviceSyncMemops](#): Ensures that synchronous memory operations initiated on this context will always synchronize. See further documentation in the section titled "API Synchronization behavior" to learn more about cases when synchronous memory operations can exhibit asynchronous behavior.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetDeviceFlags](#), [cudaGetDeviceCount](#), [cudaGetDevice](#), [cudaGetDeviceProperties](#),
[cudaSetDevice](#), [cudaSetValidDevices](#), [cudaInitDevice](#), [cudaChooseDevice](#),
[cuDevicePrimaryCtxSetFlags](#)

host **cudaError_t** **cudaSetValidDevices** (int ***device_arr**, int **len**)

Set a list of devices that can be used for CUDA.

Parameters

device_arr

- List of devices to try

len


- Number of devices in specified list

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#)

Description

Sets a list of devices for CUDA execution in priority order using **device_arr**. The parameter **len** specifies the number of elements in the list. CUDA will try devices from the list sequentially until it finds one that works. If this function is not called, or if it is called with a **len** of 0, then CUDA will go back to its default behavior of trying devices sequentially from a default list containing all of the available CUDA devices in the system. If a specified device ID in the list does not exist, this function will return [cudaErrorInvalidDevice](#). If **len** is not 0 and **device_arr** is NULL or if **len** exceeds the number of devices in the system, then [cudaErrorInvalidValue](#) is returned.

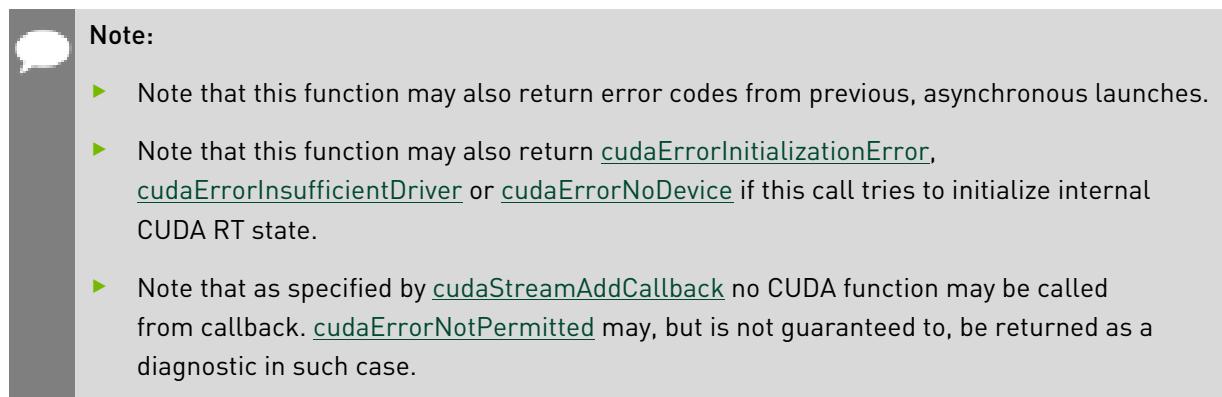

See also:

[cudaGetDeviceCount](#), [cudaSetDevice](#), [cudaGetDeviceProperties](#), [cudaSetDeviceFlags](#),
[cudaChooseDevice](#)

6.2. Thread Management [DEPRECATED]

This section describes deprecated thread management functions of the CUDA runtime application programming interface.

`__host__ cudaError_t cudaThreadExit (void)`

Exit and clean up from CUDA launches.

Returns

[cudaSuccess](#)

Description

Deprecated

Note that this function is deprecated because its name does not reflect its behavior. Its functionality is identical to the non-deprecated function [cudaDeviceReset\(\)](#), which should be used instead.

Explicitly destroys all cleans up all resources associated with the current device in the current process. Any subsequent API call to this device will reinitialize the device.

Note that this function will reset the device immediately. It is the caller's responsibility to ensure that the device is not being accessed by any other host threads from the process when this function is called.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceReset](#)

`__host__ cudaError_t cudaThreadGetCacheConfig(cudaFuncCache *pCacheConfig)`

Returns the preferred cache configuration for the current device.

Parameters

pCacheConfig

- Returned cache configuration

Returns

[cudaSuccess](#)

Description

Deprecated

Note that this function is deprecated because its name does not reflect its behavior. Its functionality is identical to the non-deprecated function [cudaDeviceGetCacheConfig\(\)](#), which should be used instead.

On devices where the L1 cache and shared memory use the same hardware resources, this returns through pCacheConfig the preferred cache configuration for the current device. This is only a preference. The runtime will use the requested configuration if possible, but it is free to choose a different configuration if required to execute functions.

This will return a pCacheConfig of [cudaFuncCachePreferNone](#) on devices where the size of the L1 cache and shared memory are fixed.

The supported cache configurations are:

- ▶ [cudaFuncCachePreferNone](#): no preference for shared memory or L1 (default)
- ▶ [cudaFuncCachePreferShared](#): prefer larger shared memory and smaller L1 cache
- ▶ [cudaFuncCachePreferL1](#): prefer larger L1 cache and smaller shared memory

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:[cudaDeviceGetCacheConfig](#)

__host__cudaError_t cudaThreadGetLimit (size_t *pValue, cudaLimit limit)

Returns resource limits.

Parameters

pValue

- Returned size in bytes of limit

limit

- Limit to query

Returns

[cudaSuccess](#), [cudaErrorUnsupportedLimit](#), [cudaErrorInvalidValue](#)

Description

Deprecated

Note that this function is deprecated because its name does not reflect its behavior. Its functionality is identical to the non-deprecated function [cudaDeviceGetLimit\(\)](#), which should be used instead.

Returns in *pValue the current size of limit. The supported [cudaLimit](#) values are:

- ▶ [cudaLimitStackSize](#): stack size of each GPU thread;
- ▶ [cudaLimitPrintfFifoSize](#): size of the shared FIFO used by the printf() device system call.
- ▶ [cudaLimitMallocHeapSize](#): size of the heap used by the malloc() and free() device system calls;

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:[cudaDeviceGetLimit](#)

__host__ **cudaError_t** **cudaThreadSetCacheConfig**(**cudaFuncCache** **cacheConfig**)

Sets the preferred cache configuration for the current device.

Parameters

cacheConfig

- Requested cache configuration

Returns

[cudaSuccess](#)

Description

Deprecated

Note that this function is deprecated because its name does not reflect its behavior. Its functionality is identical to the non-deprecated function [cudaDeviceSetCacheConfig\(\)](#), which should be used instead.

On devices where the L1 cache and shared memory use the same hardware resources, this sets through `cacheConfig` the preferred cache configuration for the current device. This is only a preference. The runtime will use the requested configuration if possible, but it is free to choose a different configuration if required to execute the function. Any function preference set via [cudaFuncSetCacheConfig \(C API \)](#) or [cudaFuncSetCacheConfig \(C++ API \)](#) will be preferred over this device-wide setting. Setting the device-wide cache configuration to [cudaFuncCachePreferNone](#) will cause subsequent kernel launches to prefer to not change the cache configuration unless required to launch the kernel.

This setting does nothing on devices where the size of the L1 cache and shared memory are fixed.

Launching a kernel with a different preference than the most recent preference setting may insert a device-side synchronization point.

The supported cache configurations are:

- ▶ [cudaFuncCachePreferNone](#): no preference for shared memory or L1 (default)
- ▶ [cudaFuncCachePreferShared](#): prefer larger shared memory and smaller L1 cache
- ▶ [cudaFuncCachePreferL1](#): prefer larger L1 cache and smaller shared memory

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:[cudaDeviceSetCacheConfig](#)

__host__ `cudaError_t cudaThreadSetLimit (cudaLimit limit, size_t value)`

Set resource limits.

Parameters

limit

- Limit to set

value

- Size in bytes of limit

Returns

[cudaSuccess](#), [cudaErrorUnsupportedLimit](#), [cudaErrorInvalidValue](#)

Description

Deprecated

Note that this function is deprecated because its name does not reflect its behavior. Its functionality is identical to the non-deprecated function [cudaDeviceSetLimit\(\)](#), which should be used instead.

Setting `limit` to `value` is a request by the application to update the current limit maintained by the device. The driver is free to modify the requested value to meet h/w requirements (this could be clamping to minimum or maximum values, rounding up to nearest element size, etc). The application can use [cudaThreadGetLimit\(\)](#) to find out exactly what the limit has been set to.

Setting each [cudaLimit](#) has its own specific restrictions, so each is discussed here.

- ▶ [cudaLimitStackSize](#) controls the stack size of each GPU thread.

- ▶ [cudaLimitPrintfFifoSize](#) controls the size of the shared FIFO used by the printf() device system call. Setting [cudaLimitPrintfFifoSize](#) must be performed before launching any kernel that uses the printf() device system call, otherwise [cudaErrorInvalidValue](#) will be returned.
- ▶ [cudaLimitMallocHeapSize](#) controls the size of the heap used by the malloc() and free() device system calls. Setting [cudaLimitMallocHeapSize](#) must be performed before launching any kernel that uses the malloc() or free() device system calls, otherwise [cudaErrorInvalidValue](#) will be returned.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceSetLimit](#)

host [cudaError_t](#) [cudaThreadSynchronize](#) (void)

Wait for compute device to finish.

Returns

[cudaSuccess](#)

Description

[Deprecated](#)

Note that this function is deprecated because its name does not reflect its behavior. Its functionality is similar to the non-deprecated function [cudaDeviceSynchronize\(\)](#), which should be used instead.

Blocks until the device has completed all preceding requested tasks.

[cudaThreadSynchronize\(\)](#) returns an error if one of the preceding tasks has failed. If the [cudaDeviceScheduleBlockingSync](#) flag was set for this device, the host thread will block until the device has finished its work.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:[cudaDeviceSynchronize](#)

6.3. Error Handling

This section describes the error handling functions of the CUDA runtime application programming interface.

**__host__ __device__ const char *cudaGetErrorName
(cudaError_t error)**

Returns the string representation of an error code enum name.

Parameters

error

- Error code to convert to string

Returns

char* pointer to a NULL-terminated string

Description

Returns a string containing the name of an error code in the enum. If the error code is not recognized, "unrecognized error code" is returned.

See also:[cudaGetErrorString](#), [cudaGetLastError](#), [cudaPeekAtLastError](#), [cudaError](#), [cuGetErrorName](#)

`__host__ __device__ const char *cudaGetErrorString (cudaError_t error)`

Returns the description string for an error code.

Parameters

error

- Error code to convert to string

Returns

`char*` pointer to a NULL-terminated string

Description

Returns the description string for an error code. If the error code is not recognized, "unrecognized error code" is returned.

See also:

[cudaGetErrorName](#), [cudaGetLastError](#), [cudaPeekAtLastError](#), [cudaError](#), [cuGetErrorString](#)

`__host__ __device__ cudaError_t cudaGetLastError (void)`

Returns the last error from a runtime call.


Returns

[cudaSuccess](#), [cudaErrorMissingConfiguration](#), [cudaErrorMemoryAllocation](#),
[cudaErrorInitializationError](#), [cudaErrorLaunchFailure](#), [cudaErrorLaunchTimeout](#),
[cudaErrorLaunchOutOfResources](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidConfiguration](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#),
[cudaErrorInvalidPitchValue](#), [cudaErrorInvalidSymbol](#), [cudaErrorUnmapBufferObjectFailed](#),
[cudaErrorInvalidDevicePointer](#), [cudaErrorInvalidTexture](#), [cudaErrorInvalidTextureBinding](#),
[cudaErrorInvalidChannelDescriptor](#), [cudaErrorInvalidMemcpyDirection](#),
[cudaErrorInvalidFilterSetting](#), [cudaErrorInvalidNormSetting](#), [cudaErrorUnknown](#),
[cudaErrorInvalidResourceHandle](#), [cudaErrorInsufficientDriver](#), [cudaErrorNoDevice](#),
[cudaErrorSetOnActiveProcess](#), [cudaErrorStartupFailure](#), [cudaErrorInvalidPtx](#),
[cudaErrorUnsupportedPtxVersion](#), [cudaErrorNoKernelImageForDevice](#),
[cudaErrorJitCompilerNotFound](#), [cudaErrorJitCompilationDisabled](#)

Description

Returns the last error that has been produced by any of the runtime calls in the same instance of the CUDA Runtime library in the host thread and resets it to [cudaSuccess](#).

Note: Multiple instances of the CUDA Runtime library can be present in an application when using a library that statically links the CUDA Runtime.

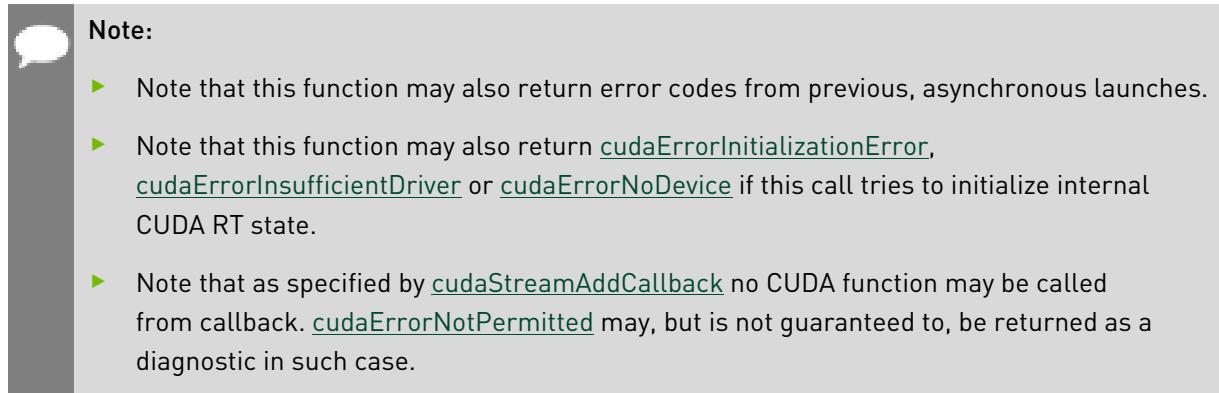

See also:

[cudaPeekAtLastError](#), [cudaGetErrorName](#), [cudaGetErrorString](#), [cudaError](#)

host device cudaError_t cudaPeekAtLastError (void)

Returns the last error from a runtime call.

Returns

[cudaSuccess](#), [cudaErrorMissingConfiguration](#), [cudaErrorMemoryAllocation](#),
[cudaErrorInitializationError](#), [cudaErrorLaunchFailure](#), [cudaErrorLaunchTimeout](#),
[cudaErrorLaunchOutOfResources](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidConfiguration](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#),
[cudaErrorInvalidPitchValue](#), [cudaErrorInvalidSymbol](#), [cudaErrorUnmapBufferObjectFailed](#),
[cudaErrorInvalidDevicePointer](#), [cudaErrorInvalidTexture](#), [cudaErrorInvalidTextureBinding](#),
[cudaErrorInvalidChannelDescriptor](#), [cudaErrorInvalidMemcpyDirection](#),
[cudaErrorInvalidFilterSetting](#), [cudaErrorInvalidNormSetting](#), [cudaErrorUnknown](#),
[cudaErrorInvalidResourceHandle](#), [cudaErrorInsufficientDriver](#), [cudaErrorNoDevice](#),
[cudaErrorSetOnActiveProcess](#), [cudaErrorStartupFailure](#), [cudaErrorInvalidPtx](#),
[cudaErrorUnsupportedPtxVersion](#), [cudaErrorNoKernelImageForDevice](#),
[cudaErrorJitCompilerNotFound](#), [cudaErrorJitCompilationDisabled](#)

Description

Returns the last error that has been produced by any of the runtime calls in the same instance of the CUDA Runtime library in the host thread. This call does not reset the error to [cudaSuccess](#) like [cudaGetLastError\(\)](#).

Note: Multiple instances of the CUDA Runtime library can be present in an application when using a library that statically links the CUDA Runtime.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetLastError](#), [cudaGetErrorName](#), [cudaGetErrorString](#), [cudaError](#)

6.4. Stream Management

This section describes the stream management functions of the CUDA runtime application programming interface.

```
typedef void (CUDART_CB *cudaStreamCallback_t)
(cudaStream_t stream, cudaError_t status, void*
userData)
```

Type of stream callback functions.

__host__cudaError_t cudaCtxResetPersistingL2Cache (void)

Resets all persisting lines in cache to normal status.

Returns

cudaSuccess,

Description

Resets all persisting lines in cache to normal status. Takes effect on function return.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

cudaAccessPolicyWindow

__host__cudaError_t cudaStreamAddCallback (cudaStream_t stream, cudaStreamCallback_t callback, void *userData, unsigned int flags)

Add a callback to a compute stream.

Parameters

stream

- Stream to add callback to

callback

- The function to call once preceding stream operations are complete

userData

- User specified data to be passed to the callback function

flags

- Reserved for future use, must be 0

Returns

cudaSuccess, cudaErrorInvalidResourceHandle, cudaErrorInvalidValue,
cudaErrorNotSupported

Description

**Note:**

This function is slated for eventual deprecation and removal. If you do not require the callback to execute in case of a device error, consider using [cudaLaunchHostFunc](#). Additionally, this function is not supported with [cudaStreamBeginCapture](#) and [cudaStreamEndCapture](#), unlike [cudaLaunchHostFunc](#).

Adds a callback to be called on the host after all currently enqueued items in the stream have completed. For each `cudaStreamAddCallback` call, a callback will be executed exactly once. The callback will block later work in the stream until it is finished.

The callback may be passed [cudaSuccess](#) or an error code. In the event of a device error, all subsequently executed callbacks will receive an appropriate [cudaError_t](#).

Callbacks must not make any CUDA API calls. Attempting to use CUDA APIs may result in [cudaErrorNotPermitted](#). Callbacks must not perform any synchronization that may depend on outstanding device work or other callbacks that are not mandated to run earlier. Callbacks without a mandated order (in independent streams) execute in undefined order and may be serialized.

For the purposes of Unified Memory, callback execution makes a number of guarantees:

- ▶ The callback stream is considered idle for the duration of the callback. Thus, for example, a callback may always use memory attached to the callback stream.
- ▶ The start of execution of a callback has the same effect as synchronizing an event recorded in the same stream immediately prior to the callback. It thus synchronizes streams which have been "joined" prior to the callback.
- ▶ Adding device work to any stream does not have the effect of making the stream active until all preceding callbacks have executed. Thus, for example, a callback might use global attached memory even if work has been added to another stream, if it has been properly ordered with an event.
- ▶ Completion of a callback does not cause a stream to become active except as described above. The callback stream will remain idle if no device work follows the callback, and will remain idle across consecutive callbacks without device work in between. Thus, for example, stream synchronization can be done by signaling from a callback at the end of the stream.

**Note:**

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreate](#), [cudaStreamCreateWithFlags](#), [cudaStreamQuery](#),
[cudaStreamSynchronize](#), [cudaStreamWaitEvent](#), [cudaStreamDestroy](#), [cudaMallocManaged](#),
[cudaStreamAttachMemAsync](#), [cudaLaunchHostFunc](#), [cuStreamAddCallback](#)

**`__host__ cudaError_t cudaStreamAttachMemAsync
 (cudaStream_t stream, void *devPtr, size_t length,
 unsigned int flags)`**

Attach memory to a stream asynchronously.

Parameters**stream**

- Stream in which to enqueue the attach operation

devPtr

- Pointer to memory (must be a pointer to managed memory or to a valid host-accessible region of system-allocated memory)

length

- Length of memory (defaults to zero)

flags

- Must be one of [cudaMemAttachGlobal](#), [cudaMemAttachHost](#) or [cudaMemAttachSingle](#) (defaults to [cudaMemAttachSingle](#))

Returns

[cudaSuccess](#), [cudaErrorNotReady](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Enqueues an operation in `stream` to specify stream association of `length` bytes of memory starting from `devPtr`. This function is a stream-ordered operation, meaning that it is dependent on, and will only take effect when, previous work in `stream` has completed. Any previous association is automatically replaced.

`devPtr` must point to an one of the following types of memories:

- ▶ managed memory declared using the `__managed__` keyword or allocated with [cudaMallocManaged](#).
- ▶ a valid host-accessible region of system-allocated pageable memory. This type of memory may only be specified if the device associated with the stream reports a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#).

For managed allocations, `length` must be either zero or the entire allocation's size. Both indicate that the entire allocation's stream association is being changed. Currently, it is not possible to change stream association for a portion of a managed allocation.

For pageable allocations, `length` must be non-zero.

The stream association is specified using `flags` which must be one of [cudaMemAttachGlobal](#), [cudaMemAttachHost](#) or [cudaMemAttachSingle](#). The default value for `flags` is [cudaMemAttachSingle](#). If the [cudaMemAttachGlobal](#) flag is specified, the memory can be accessed by any stream on any device. If the [cudaMemAttachHost](#) flag is specified, the program makes a guarantee that it won't access the memory on the device from any stream on a device that has a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#). If the [cudaMemAttachSingle](#) flag is specified and `stream` is associated with a device that has a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#), the program makes a guarantee that it will only access the memory on the device from `stream`. It is illegal to attach singly to the NULL stream, because the NULL stream is a virtual global stream and not a specific stream. An error will be returned in this case.

When memory is associated with a single stream, the Unified Memory system will allow CPU access to this memory region so long as all operations in `stream` have completed, regardless of whether other streams are active. In effect, this constrains exclusive ownership of the managed memory region by an active GPU to per-stream activity instead of whole-GPU activity.

Accessing memory on the device from streams that are not associated with it will produce undefined results. No error checking is performed by the Unified Memory system to ensure that kernels launched into other streams do not access this region.

It is a program's responsibility to order calls to [cudaStreamAttachMemAsync](#) via events, synchronization or other means to ensure legal access to memory at all times. Data visibility and coherency will be changed appropriately for all kernels which follow a stream-association change.

If `stream` is destroyed while data is associated with it, the association is removed and the association reverts to the default visibility of the allocation as specified at [cudaMallocManaged](#). For `__managed__` variables, the default association is always [cudaMemAttachGlobal](#). Note that destroying a stream is an asynchronous operation, and as a result, the change to default association won't happen until all work in the stream has completed.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreate](#), [cudaStreamCreateWithFlags](#), [cudaStreamWaitEvent](#),
[cudaStreamSynchronize](#), [cudaStreamAddCallback](#), [cudaStreamDestroy](#), [cudaMallocManaged](#),
[cuStreamAttachMemAsync](#)

__host__ [cudaError_t](#) [cudaStreamBeginCapture](#) ([cudaStream_t](#) **stream**, [cudaStreamCaptureMode](#) **mode**)

Begins graph capture on a stream.

Parameters

stream

- Stream in which to initiate capture

mode

- Controls the interaction of this capture sequence with other API calls that are potentially unsafe. For more details see [cudaThreadExchangeStreamCaptureMode](#).

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Begin graph capture on **stream**. When a stream is in capture mode, all operations pushed into the stream will not be executed, but will instead be captured into a graph, which will be returned via [cudaStreamEndCapture](#). Capture may not be initiated if **stream** is [cudaStreamLegacy](#). Capture must be ended on the same stream in which it was initiated, and it may only be initiated if the stream is not already in capture mode. The capture mode may be queried via [cudaStreamIsCapturing](#). A unique id representing the capture sequence may be queried via [cudaStreamGetCaptureInfo](#).

If mode is not `cudaStreamCaptureModeRelaxed`, `cudaStreamEndCapture` must be called on this stream from the same thread.

 **Note:**

Kernels captured using this API must not use texture and surface references. Reading or writing through any texture or surface reference is undefined behavior. This restriction does not apply to texture and surface objects.

 **Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

`cudaStreamCreate`, `cudaStreamIsCapturing`, `cudaStreamEndCapture`,
`cudaThreadExchangeStreamCaptureMode`

**`__host__ cudaError_t
cudaStreamBeginCaptureToGraph (cudaStream_t
stream, cudaGraph_t graph, const cudaGraphNode_t
*dependencies, const cudaGraphEdgeData
*dependencyData, size_t numDependencies,
cudaStreamCaptureMode mode)`**

Begins graph capture on a stream to an existing graph.

Parameters

stream

- Stream in which to initiate capture.

graph

- Graph to capture into.

dependencies

- Dependencies of the first node captured in the stream. Can be NULL if numDependencies is 0.

dependencyData

- Optional array of data associated with each dependency.

numDependencies

- Number of dependencies.

mode

- Controls the interaction of this capture sequence with other API calls that are potentially unsafe. For more details see [cudaThreadExchangeStreamCaptureMode](#).

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Begin graph capture on `stream`. When a stream is in capture mode, all operations pushed into the stream will not be executed, but will instead be captured into `graph`, which will be returned via [cudaStreamEndCapture](#).

Capture may not be initiated if `stream` is [cudaStreamLegacy](#). Capture must be ended on the same stream in which it was initiated, and it may only be initiated if the stream is not already in capture mode. The capture mode may be queried via [cudaStreamIsCapturing](#). A unique id representing the capture sequence may be queried via [cudaStreamGetCaptureInfo](#).

If `mode` is not `cudaStreamCaptureModeRelaxed`, [cudaStreamEndCapture](#) must be called on this stream from the same thread.

**Note:**

Kernels captured using this API must not use texture and surface references. Reading or writing through any texture or surface reference is undefined behavior. This restriction does not apply to texture and surface objects.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaStreamCreate](#), [cudaStreamIsCapturing](#), [cudaStreamEndCapture](#),
[cudaThreadExchangeStreamCaptureMode](#)

host `cudaError_t cudaStreamCopyAttributes` (`cudaStream_t dst, cudaStream_t src`)

Copies attributes from source stream to destination stream.

Parameters**dst**

Destination stream

src

Source stream For attributes see `cudaStreamAttrID`

Returns

`cudaSuccess`, `cudaErrorNotSupported`

Description

Copies attributes from source stream `src` to destination stream `dst`. Both streams must have the same context.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaAccessPolicyWindow](#)

__host__ `cudaError_t` `cudaStreamCreate` (`cudaStream_t` *`pStream`)

Create an asynchronous stream.

Parameters**pStream**

- Pointer to new stream identifier

Returns

`cudaSuccess`, `cudaErrorInvalidValue`

Description

Creates a new asynchronous stream.

**Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreateWithPriority](#), [cudaStreamCreateWithFlags](#), [cudaStreamGetPriority](#),
[cudaStreamGetFlags](#), [cudaStreamQuery](#), [cudaStreamSynchronize](#), [cudaStreamWaitEvent](#),
[cudaStreamAddCallback](#), [cudaStreamDestroy](#), [cuStreamCreate](#)

**`_host____device__cudaError_t
cudaStreamCreateWithFlags (cudaStream_t
*pStream, unsigned int flags)`**

Create an asynchronous stream.

Parameters

pStream

- Pointer to new stream identifier

flags

- Parameters for stream creation

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new asynchronous stream. The `flags` argument determines the behaviors of the stream. Valid values for `flags` are

- ▶ [cudaStreamDefault](#): Default stream creation flag.
- ▶ [cudaStreamNonBlocking](#): Specifies that work running in the created stream may run concurrently with work in stream 0 (the NULL stream), and that the created stream should perform no implicit synchronization with stream 0.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreate](#), [cudaStreamCreateWithPriority](#), [cudaStreamGetFlags](#), [cudaStreamQuery](#), [cudaStreamSynchronize](#), [cudaStreamWaitEvent](#), [cudaStreamAddCallback](#), [cudaStreamDestroy](#), [cuStreamCreate](#)

`__host__ cudaError_t cudaStreamCreateWithPriority`
`(cudaStream_t *pStream, unsigned int flags, int priority)`

Create an asynchronous stream with the specified priority.

Parameters

pStream

- Pointer to new stream identifier

flags

- Flags for stream creation. See [cudaStreamCreateWithFlags](#) for a list of valid flags that can be passed

priority

- Priority of the stream. Lower numbers represent higher priorities. See [cudaDeviceGetStreamPriorityRange](#) for more information about the meaningful stream priorities that can be passed.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a stream with the specified priority and returns a handle in pstream. This affects the scheduling priority of work in the stream. Priorities provide a hint to preferentially run work with higher priority when possible, but do not preempt already-running work or provide any other functional guarantee on execution order.

priority follows a convention where lower numbers represent higher priorities. '0' represents default priority. The range of meaningful numerical priorities can be queried using [cudaDeviceGetStreamPriorityRange](#). If the specified priority is outside the numerical range returned by [cudaDeviceGetStreamPriorityRange](#), it will automatically be clamped to the lowest or the highest number in the range.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Stream priorities are supported only on GPUs with compute capability 3.5 or higher.
- ▶ In the current implementation, only compute kernels launched in priority streams are affected by the stream's priority. Stream priorities have no effect on host-to-device and device-to-host memory operations.

See also:

[cudaStreamCreate](#), [cudaStreamCreateWithFlags](#), [cudaDeviceGetStreamPriorityRange](#),
[cudaStreamGetPriority](#), [cudaStreamQuery](#), [cudaStreamWaitEvent](#), [cudaStreamAddCallback](#),
[cudaStreamSynchronize](#), [cudaStreamDestroy](#), [cuStreamCreateWithPriority](#)

host device `cudaError_t cudaStreamDestroy` (`cudaStream_t stream`)

Destroys and cleans up an asynchronous stream.

Parameters

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Destroys and cleans up the asynchronous stream specified by `stream`.

In case the device is still doing work in the stream `stream` when [cudaStreamDestroy\(\)](#) is called, the function will return immediately and the resources associated with `stream` will be released automatically once the device has completed all work in `stream`.

Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Use of the handle after this call is undefined behavior.

See also:

[cudaStreamCreate](#), [cudaStreamCreateWithFlags](#), [cudaStreamQuery](#), [cudaStreamWaitEvent](#), [cudaStreamSynchronize](#), [cudaStreamAddCallback](#), [cuStreamDestroy](#)

__host__ [cudaError_t](#) [cudaStreamEndCapture](#) ([cudaStream_t](#) **stream**, [cudaGraph_t](#) ***pGraph**)

Ends capture on a stream, returning the captured graph.

Parameters

stream

- Stream to query

pGraph

- The captured graph

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorStreamCaptureWrongThread](#)

Description

End capture on **stream**, returning the captured graph via **pGraph**. Capture must have been initiated on **stream** via a call to [cudaStreamBeginCapture](#). If capture was invalidated, due to a violation of the rules of stream capture, then a NULL graph will be returned.

If the mode argument to [cudaStreamBeginCapture](#) was not [cudaStreamCaptureModeRelaxed](#), this call must be from the same thread as [cudaStreamBeginCapture](#).

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaStreamCreate](#), [cudaStreamBeginCapture](#), [cudaStreamIsCapturing](#), [cudaGraphDestroy](#)

**`__host__ cudaError_t cudaStreamGetAttribute
(cudaStream_t hStream, cudaStreamAttrID attr,
cudaStreamAttributeValue *value_out)`**

Queries stream attribute.

Parameters**`hStream`****`attr`****`value_out`****Returns**

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Queries attribute `attr` from `hStream` and stores it in corresponding member of `value_out`.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaAccessPolicyWindow](#)

```
__host__ cudaError_t cudaStreamGetCaptureInfo
(cudaStream_t stream, cudaStreamCaptureStatus
*captureStatus_out, unsigned long long *id_out,
cudaGraph_t *graph_out, const cudaGraphNode_t
**dependencies_out, size_t *numDependencies_out)
```

Query a stream's capture state.

Parameters

stream

- The stream to query

captureStatus_out

- Location to return the capture status of the stream; required

id_out

- Optional location to return an id for the capture sequence, which is unique over the lifetime of the process

graph_out

- Optional location to return the graph being captured into. All operations other than destroy and node removal are permitted on the graph while the capture sequence is in progress. This API does not transfer ownership of the graph, which is transferred or destroyed at [cudaStreamEndCapture](#). Note that the graph handle may be invalidated before end of capture for certain errors. Nodes that are or become unreachable from the original stream at [cudaStreamEndCapture](#) due to direct actions on the graph do not trigger [cudaErrorStreamCaptureUnjoined](#).

dependencies_out

- Optional location to store a pointer to an array of nodes. The next node to be captured in the stream will depend on this set of nodes, absent operations such as event wait which modify this set. The array pointer is valid until the next API call which operates on the stream or until the capture is terminated. The node handles may be copied out and are valid until they or the graph is destroyed. The driver-owned array may also be passed directly to APIs that operate on the graph (not the stream) without copying.

numDependencies_out

- Optional location to store the size of the array returned in dependencies_out.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorStreamCaptureImplicit](#)

Description

Query stream state related to stream capture.

If called on [cudaStreamLegacy](#) (the "null stream") while a stream not created with [cudaStreamNonBlocking](#) is capturing, returns [cudaErrorStreamCaptureImplicit](#).

Valid data (other than capture status) is returned only if both of the following are true:

- ▶ the call returns `cudaSuccess`
- ▶ the returned capture status is [cudaStreamCaptureStatusActive](#)



Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaStreamGetCaptureInfo_v3](#), [cudaStreamBeginCapture](#), [cudaStreamIsCapturing](#),
[cudaStreamUpdateCaptureDependencies](#)

```
__host__ cudaError_t cudaStreamGetCaptureInfo_v3
          (cudaStream_t stream, cudaStreamCaptureStatus
           *captureStatus_out, unsigned long long *id_out,
            cudaGraph_t *graph_out, const cudaGraphNode_t
           **dependencies_out, const cudaGraphEdgeData
           **edgeData_out, size_t *numDependencies_out)
```

Query a stream's capture state (12.3+).

Parameters

stream

- The stream to query

captureStatus_out

- Location to return the capture status of the stream; required

id_out

- Optional location to return an id for the capture sequence, which is unique over the lifetime of the process

graph_out

- Optional location to return the graph being captured into. All operations other than destroy and node removal are permitted on the graph while the capture sequence is in progress. This API does not transfer ownership of the graph, which is transferred or destroyed at [cudaStreamEndCapture](#). Note that the graph handle may be invalidated before end of capture for certain errors. Nodes that are or become unreachable from the

original stream at [cudaStreamEndCapture](#) due to direct actions on the graph do not trigger [cudaErrorStreamCaptureUnjoined](#).

dependencies_out

- Optional location to store a pointer to an array of nodes. The next node to be captured in the stream will depend on this set of nodes, absent operations such as event wait which modify this set. The array pointer is valid until the next API call which operates on the stream or until the capture is terminated. The node handles may be copied out and are valid until they or the graph is destroyed. The driver-owned array may also be passed directly to APIs that operate on the graph (not the stream) without copying.

edgeData_out

- Optional location to store a pointer to an array of graph edge data. This array parallels `dependencies_out`; the next node to be added has an edge to `dependencies_out[i]` with annotation `edgeData_out[i]` for each `i`. The array pointer is valid until the next API call which operates on the stream or until the capture is terminated.

numDependencies_out

- Optional location to store the size of the array returned in `dependencies_out`.

Returns

`cudaSuccess`, [cudaErrorInvalidValue](#), [cudaErrorStreamCaptureImplicit](#), [cudaErrorLossyQuery](#)

Description

Query stream state related to stream capture.

If called on [cudaStreamLegacy](#) (the "null stream") while a stream not created with [cudaStreamNonBlocking](#) is capturing, returns [cudaErrorStreamCaptureImplicit](#).

Valid data (other than capture status) is returned only if both of the following are true:

- ▶ the call returns `cudaSuccess`
- ▶ the returned capture status is [cudaStreamCaptureStatusActive](#)

If `edgeData_out` is non-NULL then `dependencies_out` must be as well. If `dependencies_out` is non-NULL and `edgeData_out` is NULL, but there is non-zero edge data for one or more of the current stream dependencies, the call will return [cudaErrorLossyQuery](#).



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaStreamBeginCapture](#), [cudaStreamIsCapturing](#), [cudaStreamUpdateCaptureDependencies](#)

`__host__ cudaError_t cudaStreamGetFlags (cudaStream_t hStream, unsigned int *flags)`

Query the flags of a stream.

Parameters

hStream

- Handle to the stream to be queried

flags

- Pointer to an unsigned integer in which the stream's flags are returned

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Query the flags of a stream. The flags are returned in `flags`. See [cudaStreamCreateWithFlags](#) for a list of valid flags.

Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreateWithPriority](#), [cudaStreamCreateWithFlags](#), [cudaStreamGetPriority](#), [cuStreamGetFlags](#)

```
__host__ cudaError_t cudaStreamGetId
(cudaStream_t hStream, unsigned long long
*streamId)
```

Query the Id of a stream.

Parameters

hStream

- Handle to the stream to be queried

streamId

- Pointer to an unsigned long long in which the stream Id is returned

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorInvalidResourceHandle`

Description

Query the Id of a stream. The Id is returned in `streamId`. The Id is unique for the life of the program.

The stream handle `hStream` can refer to any of the following:

- ▶ a stream created via any of the CUDA runtime APIs such as `cudaStreamCreate`, `cudaStreamCreateWithFlags` and `cudaStreamCreateWithPriority`, or their driver API equivalents such as `cuStreamCreate` or `cuStreamCreateWithPriority`. Passing an invalid handle will result in undefined behavior.
- ▶ any of the special streams such as the NULL stream, `cudaStreamLegacy` and `cudaStreamPerThread` respectively. The driver API equivalents of these are also accepted which are `NULL`, `CU_STREAM_LEGACY` and `CU_STREAM_PER_THREAD`.

Note:

- ▶ This function uses standard `default stream` semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreateWithPriority](#), [cudaStreamCreateWithFlags](#), [cudaStreamGetPriority](#),
[cudaStreamGetFlags](#), [cuStreamGetId](#)

__host__cudaError_t cudaStreamGetPriority (cudaStream_t hStream, int *priority)

Query the priority of a stream.

Parameters

hStream

- Handle to the stream to be queried

priority


- Pointer to a signed integer in which the stream's priority is returned

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Query the priority of a stream. The priority is returned in `priority`. Note that if the stream was created with a priority outside the meaningful numerical range returned by [cudaDeviceGetStreamPriorityRange](#), this function returns the clamped priority. See [cudaStreamCreateWithPriority](#) for details about priority clamping.

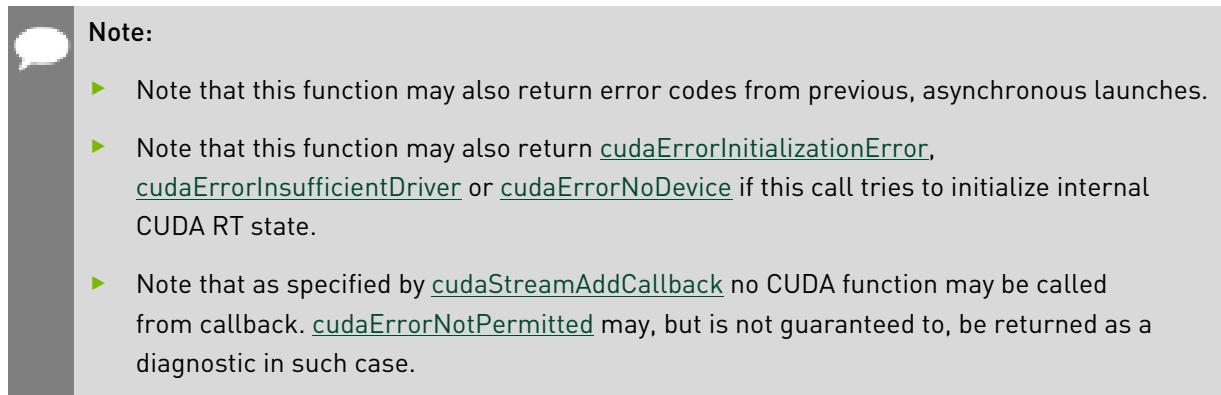**See also:**

[cudaStreamCreateWithPriority](#), [cudaDeviceGetStreamPriorityRange](#), [cudaStreamGetFlags](#),
[cuStreamGetPriority](#)

`__host__ cudaError_t cudaStreamIsCapturing (cudaStream_t stream, cudaStreamCaptureStatus *pCaptureStatus)`

Returns a stream's capture status.

Parameters

stream

- Stream to query

pCaptureStatus

- Returns the stream's capture status

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorStreamCaptureImplicit`

Description

Return the capture status of `stream` via `pCaptureStatus`. After a successful call, `*pCaptureStatus` will contain one of the following:

- ▶ `cudaStreamCaptureStatusNone`: The stream is not capturing.
- ▶ `cudaStreamCaptureStatusActive`: The stream is capturing.
- ▶ `cudaStreamCaptureStatusInvalidated`: The stream was capturing but an error has invalidated the capture sequence. The capture sequence must be terminated with `cudaStreamEndCapture` on the stream where it was initiated in order to continue using `stream`.

Note that, if this is called on `cudaStreamLegacy` (the "null stream") while a blocking stream on the same device is capturing, it will return `cudaErrorStreamCaptureImplicit` and `*pCaptureStatus` is unspecified after the call. The blocking stream capture is not invalidated.

When a blocking stream is capturing, the legacy stream is in an unusable state until the blocking stream capture is terminated. The legacy stream is not supported for stream capture, but attempted use would have an implicit dependency on the capturing stream(s).



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

`cudaStreamCreate`, `cudaStreamBeginCapture`, `cudaStreamEndCapture`

`__host__ cudaError_t cudaStreamQuery(cudaStream_t stream)`

Queries an asynchronous stream for completion status.

Parameters

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorNotReady](#), [cudaErrorInvalidResourceHandle](#)

Description

Returns [cudaSuccess](#) if all operations in `stream` have completed, or [cudaErrorNotReady](#) if not.

For the purposes of Unified Memory, a return value of [cudaSuccess](#) is equivalent to having called [cudaStreamSynchronize\(\)](#).

Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreate](#), [cudaStreamCreateWithFlags](#), [cudaStreamWaitEvent](#),
[cudaStreamSynchronize](#), [cudaStreamAddCallback](#), [cudaStreamDestroy](#), [cuStreamQuery](#)

```
__host__cudaError_t cudaStreamSetAttribute  
(cudaStream_t hStream, cudaStreamAttrID attr, const  
cudaStreamAttributeValue *value)
```

Sets stream attribute.

Parameters

hStream

attr

value

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Sets attribute `attr` on `hStream` from corresponding attribute of `value`. The updated attribute will be applied to subsequent work submitted to the stream. It will not affect previously submitted work.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaAccessPolicyWindow](#)

```
__host__cudaError_t cudaStreamSynchronize  
(cudaStream_t stream)
```

Waits for stream tasks to complete.

Parameters

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#)

Description

Blocks until stream has completed all operations. If the [cudaDeviceScheduleBlockingSync](#) flag was set for this device, the host thread will block until the stream is finished with all of its tasks.

Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreate](#), [cudaStreamCreateWithFlags](#), [cudaStreamQuery](#), [cudaStreamWaitEvent](#), [cudaStreamAddCallback](#), [cudaStreamDestroy](#), [cuStreamSynchronize](#)

__host__cudaError_t
cudaStreamUpdateCaptureDependencies
{
 cudaStream_t **stream**, **cudaGraphNode_t**
 ***dependencies**, **size_t numDependencies**, **unsigned int flags**
}

Update the set of dependencies in a capturing stream (11.3+).

Parameters

stream

- The stream to update

dependencies

- The set of dependencies to add

numDependencies

- The size of the dependencies array

flags

- See above

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorIllegalState](#)

Description

Modifies the dependency set of a capturing stream. The dependency set is the set of nodes that the next captured node in the stream will depend on.

Valid flags are [cudaStreamAddCaptureDependencies](#) and [cudaStreamSetCaptureDependencies](#). These control whether the set passed to the API is added to the existing set or replaces it. A flags value of 0 defaults to [cudaStreamAddCaptureDependencies](#).

Nodes that are removed from the dependency set via this API do not result in [cudaErrorStreamCaptureUnjoined](#) if they are unreachable from the stream at [cudaStreamEndCapture](#).

Returns [cudaErrorIllegalState](#) if the stream is not capturing.

This API is new in CUDA 11.3. Developers requiring compatibility across minor versions of the CUDA driver to 11.0 should not use this API or provide a fallback.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaStreamBeginCapture](#), [cudaStreamGetCaptureInfo](#),

```
__host__ cudaError_t
cudaStreamUpdateCaptureDependencies_v2
(cudaStream_t stream, cudaGraphNode_t
*dependencies, const cudaGraphEdgeData
*dependencyData, size_t numDependencies, unsigned
int flags)
```

Update the set of dependencies in a capturing stream (12.3+).

Parameters

stream

- The stream to update

dependencies

- The set of dependencies to add

dependencyData

- Optional array of data associated with each dependency.

numDependencies

- The size of the dependencies array

flags

- See above

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorIllegalState](#)

Description

Modifies the dependency set of a capturing stream. The dependency set is the set of nodes that the next captured node in the stream will depend on.

Valid flags are [cudaStreamAddCaptureDependencies](#) and [cudaStreamSetCaptureDependencies](#). These control whether the set passed to the API is added to the existing set or replaces it. A flags value of 0 defaults to [cudaStreamAddCaptureDependencies](#).

Nodes that are removed from the dependency set via this API do not result in [cudaErrorStreamCaptureUnjoined](#) if they are unreachable from the stream at [cudaStreamEndCapture](#).

Returns [cudaErrorIllegalState](#) if the stream is not capturing.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaStreamBeginCapture](#), [cudaStreamGetCaptureInfo](#),

```
__host__ __device__ cudaError_t
cudaStreamWaitEvent (cudaStream_t stream,
cudaEvent_t event, unsigned int flags)
```

Make a compute stream wait on an event.

Parameters

stream

- Stream to wait

event

- Event to wait on

flags

- Parameters for the operation(See above)

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Makes all future work submitted to `stream` wait for all work captured in `event`. See [cudaEventRecord\(\)](#) for details on what is captured by an event. The synchronization will be performed efficiently on the device when applicable. `event` may be from a different device than `stream`.

flags include:

- ▶ [cudaEventWaitDefault](#): Default event creation flag.
- ▶ [cudaEventWaitExternal](#): Event is captured in the graph as an external event node when performing stream capture.

Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreate](#), [cudaStreamCreateWithFlags](#), [cudaStreamQuery](#), [cudaStreamSynchronize](#),
[cudaStreamAddCallback](#), [cudaStreamDestroy](#), [cuStreamWaitEvent](#)

__host__ cudaError_t cudaThreadExchangeStreamCaptureMode (cudaStreamCaptureMode *mode)

Swaps the stream capture interaction mode for a thread.

Parameters

mode

- Pointer to mode value to swap with the current mode

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the calling thread's stream capture interaction mode to the value contained in *mode, and overwrites *mode with the previous mode for the thread. To facilitate deterministic behavior across function or module boundaries, callers are encouraged to use this API in a push-pop fashion:

```
`    cudaStreamCaptureMode mode = desiredMode;
        cudaThreadExchangeStreamCaptureMode(&mode);
        ...
        cudaThreadExchangeStreamCaptureMode(&mode); // restore previous mode
```

During stream capture (see [cudaStreamBeginCapture](#)), some actions, such as a call to [cudaMalloc](#), may be unsafe. In the case of [cudaMalloc](#), the operation is not enqueued asynchronously to a stream, and is not observed by stream capture. Therefore, if the sequence of operations captured via [cudaStreamBeginCapture](#) depended on the allocation being replayed whenever the graph is launched, the captured graph would be invalid.

Therefore, stream capture places restrictions on API calls that can be made within or concurrently to a [cudaStreamBeginCapture](#)-[cudaStreamEndCapture](#) sequence. This behavior can be controlled via this API and flags to [cudaStreamBeginCapture](#).

A thread's mode is one of the following:

- ▶ `cudaStreamCaptureModeGlobal`: This is the default mode. If the local thread has an ongoing capture sequence that was not initiated with `cudaStreamCaptureModeRelaxed` at `cuStreamBeginCapture`, or if any other thread has a concurrent capture sequence initiated with `cudaStreamCaptureModeGlobal`, this thread is prohibited from potentially unsafe API calls.

- ▶ `cudaStreamCaptureModeThreadLocal`: If the local thread has an ongoing capture sequence not initiated with `cudaStreamCaptureModeRelaxed`, it is prohibited from potentially unsafe API calls. Concurrent capture sequences in other threads are ignored.
- ▶ `cudaStreamCaptureModeRelaxed`: The local thread is not prohibited from potentially unsafe API calls. Note that the thread is still prohibited from API calls which necessarily conflict with stream capture, for example, attempting `cudaEventQuery` on an event that was last recorded inside a capture sequence.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaStreamBeginCapture](#)

6.5. Event Management

This section describes the event management functions of the CUDA runtime application programming interface.

`_host__cudaError_t cudaEventCreate (cudaEvent_t *event)`

Creates an event object.

Parameters

event

- Newly created event

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorLaunchFailure](#), [cudaErrorMemoryAllocation](#)

Description

Creates an event object for the current device using [cudaEventDefault](#).

**Note:**

▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaEventCreate](#) (C++ API), [cudaEventCreateWithFlags](#), [cudaEventRecord](#), [cudaEventQuery](#), [cudaEventSynchronize](#), [cudaEventDestroy](#), [cudaEventElapsedTime](#), [cudaStreamWaitEvent](#), [cuEventCreate](#)

**__host__ __device__ cudaError_t
cudaEventCreateWithFlags (cudaEvent_t *event,
unsigned int flags)**

Creates an event object with the specified flags.

Parameters**event**

- Newly created event

flags

- Flags for new event

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorLaunchFailure](#), [cudaErrorMemoryAllocation](#)

Description

Creates an event object for the current device with the specified flags. Valid flags include:

- ▶ [cudaEventDefault](#): Default event creation flag.
- ▶ [cudaEventBlockingSync](#): Specifies that event should use blocking synchronization. A host thread that uses [cudaEventSynchronize\(\)](#) to wait on an event created with this flag will block until the event actually completes.
- ▶ [cudaEventDisableTiming](#): Specifies that the created event does not need to record timing data. Events created with this flag specified and the [cudaEventBlockingSync](#) flag not specified will provide the best performance when used with [cudaStreamWaitEvent\(\)](#) and [cudaEventQuery\(\)](#).

- ▶ [cudaEventInterprocess](#): Specifies that the created event may be used as an interprocess event by [cudaLpcGetEventHandle\(\)](#). [cudaEventInterprocess](#) must be specified along with [cudaEventDisableTiming](#).

**Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaEventCreate](#) (C API), [cudaEventSynchronize](#), [cudaEventDestroy](#), [cudaEventElapsedTime](#), [cudaStreamWaitEvent](#), [cuEventCreate](#)

__host__ __device__ cudaError_t cudaEventDestroy (cudaEvent_t event)

Destroys an event object.

Parameters

event

- Event to destroy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#),
[cudaErrorLaunchFailure](#)

Description

Destroys the event specified by event.

An event may be destroyed before it is complete (i.e., while [cudaEventQuery\(\)](#) would return [cudaErrorNotReady](#)). In this case, the call does not block on completion of the event, and any associated resources will automatically be released asynchronously at completion.

**Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Use of the handle after this call is undefined behavior.
- ▶ Returns [cudaErrorInvalidResourceHandle](#) in the event of being passed NULL as the input event.

See also:

[cudaEventCreate](#) (C API), [cudaEventCreateWithFlags](#), [cudaEventQuery](#),
[cudaEventSynchronize](#), [cudaEventRecord](#), [cudaEventElapsedTime](#), [cuEventDestroy](#)

__host__ [cudaError_t](#) [cudaEventElapsedTime](#) (float *ms, [cudaEvent_t](#) start, [cudaEvent_t](#) end)

Computes the elapsed time between events.

Parameters

ms

- Time between start and end in ms

start

- Starting event

end

- Ending event

Returns

[cudaSuccess](#), [cudaErrorNotReady](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#),
[cudaErrorLaunchFailure](#), [cudaErrorUnknown](#)

Description

Computes the elapsed time between two events (in milliseconds with a resolution of around 0.5 microseconds).

If either event was last recorded in a non-NULL stream, the resulting time may be greater than expected (even if both used the same stream handle). This happens because the [cudaEventRecord\(\)](#) operation takes place asynchronously and there is no guarantee that the measured latency is actually just between the two events. Any number of other different

stream operations could execute in between the two measured events, thus altering the timing in a significant way.

If `cudaEventRecord()` has not been called on either event, then `cudaErrorInvalidResourceHandle` is returned. If `cudaEventRecord()` has been called on both events but one or both of them has not yet been completed (that is, `cudaEventQuery()` would return `cudaErrorNotReady` on at least one of the events), `cudaErrorNotReady` is returned. If either event was created with the `cudaEventDisableTiming` flag, then this function will return `cudaErrorInvalidResourceHandle`.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Returns `cudaErrorInvalidResourceHandle` in the event of being passed NULL as the input event.

See also:

`cudaEventCreate` (C API), `cudaEventCreateWithFlags`, `cudaEventQuery`,
`cudaEventSynchronize`, `cudaEventDestroy`, `cudaEventRecord`, `cuEventElapsedTime`

__host__ `cudaError_t` `cudaEventQuery` (`cudaEvent_t` `event`)

Queries an event's status.

Parameters

event

- Event to query

Returns

`cudaSuccess`, `cudaErrorNotReady`, `cudaErrorInvalidValue`, `cudaErrorInvalidResourceHandle`,
`cudaErrorLaunchFailure`

Description

Queries the status of all work currently captured by event. See [cudaEventRecord\(\)](#) for details on what is captured by an event.

Returns [cudaSuccess](#) if all captured work has been completed, or [cudaErrorNotReady](#) if any captured work is incomplete.

For the purposes of Unified Memory, a return value of [cudaSuccess](#) is equivalent to having called [cudaEventSynchronize\(\)](#).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Returns [cudaErrorInvalidResourceHandle](#) in the event of being passed NULL as the input event.

See also:

[cudaEventCreate \(C API\)](#), [cudaEventCreateWithFlags](#), [cudaEventRecord](#),
[cudaEventSynchronize](#), [cudaEventDestroy](#), [cudaEventElapsedTime](#), [cuEventQuery](#)

__host__ __device__ cudaError_t cudaEventRecord
(cudaEvent_t event, cudaStream_t stream)

Records an event.

Parameters

event

- Event to record

stream

- Stream in which to record event

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#),
[cudaErrorLaunchFailure](#)

Description

Captures in event the contents of stream at the time of this call. event and stream must be on the same CUDA context. Calls such as [cudaEventQuery\(\)](#) or [cudaStreamWaitEvent\(\)](#) will then examine or wait for completion of the work that was captured. Uses of stream after this call do not modify event. See note on default stream behavior for what is captured in the default case.

[cudaEventRecord\(\)](#) can be called multiple times on the same event and will overwrite the previously captured state. Other APIs such as [cudaStreamWaitEvent\(\)](#) use the most recently captured state at the time of the API call, and are not affected by later calls to [cudaEventRecord\(\)](#). Before the first call to [cudaEventRecord\(\)](#), an event represents an empty set of work, so for example [cudaEventQuery\(\)](#) would return [cudaSuccess](#).

 **Note:**

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Returns [cudaErrorInvalidResourceHandle](#) in the event of being passed NULL as the input event.

See also:

[cudaEventCreate \(C API\)](#), [cudaEventCreateWithFlags](#), [cudaEventQuery](#),
[cudaEventSynchronize](#), [cudaEventDestroy](#), [cudaEventElapsedTime](#), [cudaStreamWaitEvent](#),
[cudaEventRecordWithFlags](#), [cuEventRecord](#)

```
__host__ cudaError_t cudaEventRecordWithFlags  
(cudaEvent_t event, cudaStream_t stream, unsigned  
int flags)
```

Records an event.

Parameters

event

- Event to record

stream

- Stream in which to record event

flags

- Parameters for the operation(See above)

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#),
[cudaErrorLaunchFailure](#)

Description

Captures in event the contents of stream at the time of this call. event and stream must be on the same CUDA context. Calls such as [cudaEventQuery\(\)](#) or [cudaStreamWaitEvent\(\)](#) will then examine or wait for completion of the work that was captured. Uses of stream after this call do not modify event. See note on default stream behavior for what is captured in the default case.

[cudaEventRecordWithFlags\(\)](#) can be called multiple times on the same event and will overwrite the previously captured state. Other APIs such as [cudaStreamWaitEvent\(\)](#) use the most recently captured state at the time of the API call, and are not affected by later calls to [cudaEventRecordWithFlags\(\)](#). Before the first call to [cudaEventRecordWithFlags\(\)](#), an event represents an empty set of work, so for example [cudaEventQuery\(\)](#) would return [cudaSuccess](#).

flags include:

- ▶ [cudaEventRecordDefault](#): Default event creation flag.
- ▶ [cudaEventRecordExternal](#): Event is captured in the graph as an external event node when performing stream capture.



Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Returns [cudaErrorInvalidResourceHandle](#) in the event of being passed NULL as the input event.

See also:

[cudaEventCreate](#) (C API), [cudaEventCreateWithFlags](#), [cudaEventQuery](#),
[cudaEventSynchronize](#), [cudaEventDestroy](#), [cudaEventElapsedTime](#), [cudaStreamWaitEvent](#),
[cudaEventRecord](#), [cuEventRecord](#),

`__host__ cudaError_t cudaEventSynchronize (cudaEvent_t event)`

Waits for an event to complete.

Parameters

event

- Event to wait for

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#),
[cudaErrorLaunchFailure](#)

Description

Waits until the completion of all work currently captured in `event`. See [cudaEventRecord\(\)](#) for details on what is captured by an event.

Waiting for an event that was created with the [cudaEventBlockingSync](#) flag will cause the calling CPU thread to block until the event has been completed by the device. If the [cudaEventBlockingSync](#) flag has not been set, then the CPU thread will busy-wait until the event has been completed by the device.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Returns [cudaErrorInvalidResourceHandle](#) in the event of being passed NULL as the input event.

See also:

[cudaEventCreate](#) (C API), [cudaEventCreateWithFlags](#), [cudaEventRecord](#), [cudaEventQuery](#), [cudaEventDestroy](#), [cudaEventElapsedTime](#), [cuEventSynchronize](#)

6.6. External Resource Interoperability

This section describes the external resource interoperability functions of the CUDA runtime application programming interface.

[__host__ cudaError_t cudaDestroyExternalMemory](#) ([cudaExternalMemory_t](#) extMem)

Destroys an external memory object.

Parameters

extMem

- External memory object to be destroyed

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#)

Description

Destroys the specified external memory object. Any existing buffers and CUDA mipmapped arrays mapped onto this object must no longer be used and must be explicitly freed using [cudaFree](#) and [cudaFreeMipmappedArray](#) respectively.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Use of the handle after this call is undefined behavior.

See also:

[cudaImportExternalMemory](#), [cudaExternalMemoryGetMappedBuffer](#),
[cudaExternalMemoryGetMappedMipmappedArray](#)

**__host__cudaError_t
cudaDestroyExternalSemaphore
(cudaExternalSemaphore_t extSem)**

Destroys an external semaphore.

Parameters

extSem

- External semaphore to be destroyed

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#)

Description

Destroys an external semaphore object and releases any references to the underlying resource. Any outstanding signals or waits must have completed before the semaphore is destroyed.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

▶ Use of the handle after this call is undefined behavior.

See also:

[cudaImportExternalSemaphore](#), [cudaSignalExternalSemaphoresAsync](#),
[cudaWaitExternalSemaphoresAsync](#)

__host__ cudaError_t
cudaExternalMemoryGetMappedBuffer (void
****devPtr, cudaExternalMemory_t extMem, const**
cudaExternalMemoryBufferDesc *bufferDesc)

Maps a buffer onto an imported memory object.

Parameters

devPtr

- Returned device pointer to buffer

extMem

- Handle to external memory object

bufferDesc

- Buffer descriptor

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Maps a buffer onto an imported memory object and returns a device pointer in `devPtr`.

The properties of the buffer being mapped must be described in `bufferDesc`. The [cudaExternalMemoryBufferDesc](#) structure is defined as follows:

```
†     typedef struct cudaExternalMemoryBufferDesc_st {
        unsigned long long offset;
        unsigned long long size;
        unsigned int flags;
    } cudaExternalMemoryBufferDesc;
```

where [cudaExternalMemoryBufferDesc::offset](#) is the offset in the memory object where the buffer's base address is. [cudaExternalMemoryBufferDesc::size](#) is the size of the buffer. [cudaExternalMemoryBufferDesc::flags](#) must be zero.

The offset and size have to be suitably aligned to match the requirements of the external API. Mapping two buffers whose ranges overlap may or may not result in the same virtual address being returned for the overlapped portion. In such cases, the application must ensure that all accesses to that region from the GPU are volatile. Otherwise writes made via one address are

not guaranteed to be visible via the other address, even if they're issued by the same thread. It is recommended that applications map the combined range instead of mapping separate buffers and then apply the appropriate offsets to the returned pointer to derive the individual buffers.

The returned pointer `devPtr` must be freed using [cudaFree](#).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaImportExternalMemory](#), [cudaDestroyExternalMemory](#),
[cudaExternalMemoryGetMappedMipmappedArray](#)

```
__host__ cudaError_t
cudaExternalMemoryGetMappedMipmappedArray
{cudaMipmappedArray_t *mipmap,
cudaExternalMemory_t extMem, const
cudaExternalMemoryMipmappedArrayDesc
*mipmapDesc}
```

Maps a CUDA mipmapped array onto an external memory object.

Parameters

mipmap

- Returned CUDA mipmapped array

extMem

- Handle to external memory object

mipmapDesc

- CUDA array descriptor

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Maps a CUDA mipmapped array onto an external object and returns a handle to it in `mipmap`.

The properties of the CUDA mipmapped array being mapped must be described in `mipmapDesc`. The structure [cudaExternalMemoryMipmappedArrayDesc](#) is defined as follows:

```
typedef struct cudaExternalMemoryMipmappedArrayDesc_st {
    unsigned long long offset;
    cudaChannelFormatDesc formatDesc;
    cudaExtent extent;
    unsigned int flags;
    unsigned int numLevels;
} cudaExternalMemoryMipmappedArrayDesc;
```

where `cudaExternalMemoryMipmappedArrayDesc::offset` is the offset in the memory object where the base level of the mipmap chain is.

`cudaExternalMemoryMipmappedArrayDesc::formatDesc` describes the format of the data. `cudaExternalMemoryMipmappedArrayDesc::extent` specifies the dimensions of the base level of the mipmap chain. `cudaExternalMemoryMipmappedArrayDesc::flags` are flags associated with CUDA mipmapped arrays. For further details, please refer to the documentation for [cudaMalloc3DArray](#). Note that if the mipmapped array is bound as a color target in the graphics API, then the flag [cudaArrayColorAttachment](#) must be specified in `cudaExternalMemoryMipmappedArrayDesc::flags`.

`cudaExternalMemoryMipmappedArrayDesc::numLevels` specifies the total number of levels in the mipmap chain.

The returned CUDA mipmapped array must be freed using [cudaFreeMipmappedArray](#).



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaImportExternalMemory](#), [cudaDestroyExternalMemory](#),
[cudaExternalMemoryGetMappedBuffer](#)

Note:

If `cudaExternalMemoryHandleDesc::type` is `cudaExternalMemoryHandleTypeNvSciBuf`, then `cudaExternalMemoryMipmappedArrayDesc::numLevels` must not be greater than 1.

```
__host__ cudaError_t cudalImportExternalMemory
(cudaExternalMemory_t *extMem_out, const
cudaExternalMemoryHandleDesc *memHandleDesc)
```

Imports an external memory object.

Parameters

extMem_out

- Returned handle to an external memory object

memHandleDesc

- Memory import handle descriptor

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorInvalidResourceHandle`,
`cudaErrorOperatingSystem`

Description

Imports an externally allocated memory object and returns a handle to that in `extMem_out`.

The properties of the handle being imported must be described in `memHandleDesc`. The `cudaExternalMemoryHandleDesc` structure is defined as follows:

```
typedef struct cudaExternalMemoryHandleDesc_st {
    cudaExternalMemoryHandleType type;
    union {
        int fd;
        struct {
            void *handle;
            const void *name;
        } win32;
        const void *nvSciBufObject;
    } handle;
    unsigned long long size;
    unsigned int flags;
} cudaExternalMemoryHandleDesc;
```

where `cudaExternalMemoryHandleDesc::type` specifies the type of handle being imported. `cudaExternalMemoryHandleType` is defined as:

```
typedef enum cudaExternalMemoryHandleType_enum {
    cudaExternalMemoryHandleTypeOpaqueFd      = 1,
    cudaExternalMemoryHandleTypeOpaqueWin32    = 2,
    cudaExternalMemoryHandleTypeOpaqueWin32Kmt = 3,
```

```

    cudaExternalMemoryHandleTypeD3D12Heap      = 4,
    cudaExternalMemoryHandleTypeD3D12Resource   = 5,
    cudaExternalMemoryHandleTypeD3D11Resource   = 6,
    cudaExternalMemoryHandleTypeD3D11ResourceKmt = 7,
    cudaExternalMemoryHandleTypeNvSciBuf        = 8
} cudaExternalMemoryHandleType;

```

If `cudaExternalMemoryHandleDesc::type` is `cudaExternalMemoryHandleTypeOpaqueFd`, then `cudaExternalMemoryHandleDesc::handle::fd` must be a valid file descriptor referencing a memory object. Ownership of the file descriptor is transferred to the CUDA driver when the handle is imported successfully. Performing any operations on the file descriptor after it is imported results in undefined behavior.

If `cudaExternalMemoryHandleDesc::type` is `cudaExternalMemoryHandleTypeOpaqueWin32`, then exactly one of `cudaExternalMemoryHandleDesc::handle::win32::handle` and `cudaExternalMemoryHandleDesc::handle::win32::name` must not be NULL. If `cudaExternalMemoryHandleDesc::handle::win32::handle` is not NULL, then it must represent a valid shared NT handle that references a memory object. Ownership of this handle is not transferred to CUDA after the import operation, so the application must release the handle using the appropriate system call. If `cudaExternalMemoryHandleDesc::handle::win32::name` is not NULL, then it must point to a NULL-terminated array of UTF-16 characters that refers to a memory object.

If `cudaExternalMemoryHandleDesc::type` is `cudaExternalMemoryHandleTypeOpaqueWin32Kmt`, then `cudaExternalMemoryHandleDesc::handle::win32::handle` must be non-NUL and `cudaExternalMemoryHandleDesc::handle::win32::name` must be NULL. The handle specified must be a globally shared KMT handle. This handle does not hold a reference to the underlying object, and thus will be invalid when all references to the memory object are destroyed.

If `cudaExternalMemoryHandleDesc::type` is `cudaExternalMemoryHandleTypeD3D12Heap`, then exactly one of `cudaExternalMemoryHandleDesc::handle::win32::handle` and `cudaExternalMemoryHandleDesc::handle::win32::name` must not be NULL. If `cudaExternalMemoryHandleDesc::handle::win32::handle` is not NULL, then it must represent a valid shared NT handle that is returned by `ID3D12Device::CreateSharedHandle` when referring to a `ID3D12Heap` object. This handle holds a reference to the underlying object. If `cudaExternalMemoryHandleDesc::handle::win32::name` is not NULL, then it must point to a NULL-terminated array of UTF-16 characters that refers to a `ID3D12Heap` object.

If `cudaExternalMemoryHandleDesc::type` is `cudaExternalMemoryHandleTypeD3D12Resource`, then exactly one of `cudaExternalMemoryHandleDesc::handle::win32::handle` and `cudaExternalMemoryHandleDesc::handle::win32::name` must not be NULL. If `cudaExternalMemoryHandleDesc::handle::win32::handle` is not NULL, then it must represent a valid shared NT handle that is returned by `ID3D12Device::CreateSharedHandle` when referring to a `ID3D12Resource` object. This handle holds a reference to the underlying object. If `cudaExternalMemoryHandleDesc::handle::win32::name` is not NULL, then it must point to a NULL-terminated array of UTF-16 characters that refers to a `ID3D12Resource` object.

If `cudaExternalMemoryHandleDesc::type` is `cudaExternalMemoryHandleTypeD3D11Resource`, then exactly one of `cudaExternalMemoryHandleDesc::handle::win32::handle` and `cudaExternalMemoryHandleDesc::handle::win32::name` must not be `NULL`. If `cudaExternalMemoryHandleDesc::handle::win32::handle` is not `NULL`, then it must represent a valid shared NT handle that is returned by `IDXGIResource1::CreateSharedHandle` when referring to a `ID3D11Resource` object. If `cudaExternalMemoryHandleDesc::handle::win32::name` is not `NULL`, then it must point to a `NULL`-terminated array of UTF-16 characters that refers to a `ID3D11Resource` object.

If `cudaExternalMemoryHandleDesc::type` is `cudaExternalMemoryHandleTypeD3D11ResourceKmt`, then `cudaExternalMemoryHandleDesc::handle::win32::handle` must be non-`NULL` and `cudaExternalMemoryHandleDesc::handle::win32::name` must be `NULL`. The handle specified must be a valid shared KMT handle that is returned by `IDXGIResource::GetSharedHandle` when referring to a `ID3D11Resource` object.

If `cudaExternalMemoryHandleDesc::type` is `cudaExternalMemoryHandleTypeNvSciBuf`, then `cudaExternalMemoryHandleDesc::handle::nvSciBufObject` must be NON-`NULL` and reference a valid NvSciBuf object. If the NvSciBuf object imported into CUDA is also mapped by other drivers, then the application must use `cudaWaitExternalSemaphoresAsync` or `cudaSignalExternalSemaphoresAsync` as appropriate barriers to maintain coherence between CUDA and the other drivers. See `cudaExternalSemaphoreWaitSkipNvSciBufMemSync` and `cudaExternalSemaphoreSignalSkipNvSciBufMemSync` for memory synchronization.

The size of the memory object must be specified in `cudaExternalMemoryHandleDesc::size`.

Specifying the flag `cudaExternalMemoryDedicated` in `cudaExternalMemoryHandleDesc::flags` indicates that the resource is a dedicated resource. The definition of what a dedicated resource is outside the scope of this extension. This flag must be set if `cudaExternalMemoryHandleDesc::type` is one of the following: `cudaExternalMemoryHandleTypeD3D12Resource`
`cudaExternalMemoryHandleTypeD3D11Resource`
`cudaExternalMemoryHandleTypeD3D11ResourceKmt`

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

- ▶ If the Vulkan memory imported into CUDA is mapped on the CPU then the application must use `vkInvalidateMappedMemoryRanges/vkFlushMappedMemoryRanges` as well as appropriate Vulkan pipeline barriers to maintain coherence between CPU and GPU. For more information on these APIs, please refer to "Synchronization and Cache Control" chapter from Vulkan specification.

See also:

[cudaDestroyExternalMemory](#), [cudaExternalMemoryGetMappedBuffer](#),
[cudaExternalMemoryGetMappedMipmappedArray](#)

```
__host__ cudaError_t cudalImportExternalSemaphore
(cudaExternalSemaphore_t *extSem_out,
const cudaExternalSemaphoreHandleDesc
*semHandleDesc)
```

Imports an external semaphore.

Parameters

extSem_out

- Returned handle to an external semaphore

semHandleDesc

- Semaphore import handle descriptor

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorOperatingSystem](#)

Description

Imports an externally allocated synchronization object and returns a handle to that in `extSem_out`.

The properties of the handle being imported must be described in `semHandleDesc`. The [cudaExternalSemaphoreHandleDesc](#) is defined as follows:

```
typedef struct cudaExternalSemaphoreHandleDesc_st {
    cudaExternalSemaphoreHandleType type;
    union {
        int fd;
        struct {
            void *handle;
            const void *name;
        } win32;
        const void* NvSciSyncObj;
    } handle;
    unsigned int flags;
} cudaExternalSemaphoreHandleDesc;
```

where `cudaExternalSemaphoreHandleDesc::type` specifies the type of handle being imported. `cudaExternalSemaphoreHandleType` is defined as:

```
typedef enum cudaExternalSemaphoreHandleType_enum {
    cudaExternalSemaphoreHandleTypeOpaqueFd          = 1,
    cudaExternalSemaphoreHandleTypeOpaqueWin32        = 2,
    cudaExternalSemaphoreHandleTypeOpaqueWin32Kmt     = 3,
    cudaExternalSemaphoreHandleTypeD3D12Fence         = 4,
    cudaExternalSemaphoreHandleTypeD3D11Fence         = 5,
    cudaExternalSemaphoreHandleTypeNvSciSync          = 6,
    cudaExternalSemaphoreHandleTypeKeyedMutex          = 7,
    cudaExternalSemaphoreHandleTypeKeyedMutexKmt      = 8,
    cudaExternalSemaphoreHandleTypeTimelineSemaphoreFd = 9,
    cudaExternalSemaphoreHandleTypeTimelineSemaphoreWin32 = 10
} cudaExternalSemaphoreHandleType;
```

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeOpaqueFd`, then `cudaExternalSemaphoreHandleDesc::handle::fd` must be a valid file descriptor referencing a synchronization object. Ownership of the file descriptor is transferred to the CUDA driver when the handle is imported successfully. Performing any operations on the file descriptor after it is imported results in undefined behavior.

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeOpaqueWin32`, then exactly one of `cudaExternalSemaphoreHandleDesc::handle::win32::handle` and `cudaExternalSemaphoreHandleDesc::handle::win32::name` must not be NULL. If `cudaExternalSemaphoreHandleDesc::handle::win32::handle` is not NULL, then it must represent a valid shared NT handle that references a synchronization object. Ownership of this handle is not transferred to CUDA after the import operation, so the application must release the handle using the appropriate system call. If `cudaExternalSemaphoreHandleDesc::handle::win32::name` is not NULL, then it must name a valid synchronization object.

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeOpaqueWin32Kmt`, then `cudaExternalSemaphoreHandleDesc::handle::win32::handle` must be non-NUL and `cudaExternalSemaphoreHandleDesc::handle::win32::name` must be NULL. The handle specified must be a globally shared KMT handle. This handle does not hold a reference to the underlying object, and thus will be invalid when all references to the synchronization object are destroyed.

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeD3D12Fence`, then exactly one of `cudaExternalSemaphoreHandleDesc::handle::win32::handle` and `cudaExternalSemaphoreHandleDesc::handle::win32::name` must not be NULL. If `cudaExternalSemaphoreHandleDesc::handle::win32::handle` is not NULL, then it must represent a valid shared NT handle that is returned by `ID3D12Device::CreateSharedHandle` when referring to a `ID3D12Fence` object. This handle holds a reference to the underlying object. If `cudaExternalSemaphoreHandleDesc::handle::win32::name` is not NULL, then it must name a valid synchronization object that refers to a valid `ID3D12Fence` object.

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeD3D11Fence`, then exactly one of `cudaExternalSemaphoreHandleDesc::handle::win32::handle` and `cudaExternalSemaphoreHandleDesc::handle::win32::name` must not be NULL. If `cudaExternalSemaphoreHandleDesc::handle::win32::handle` is not NULL, then it must represent a valid shared NT handle that is returned by `ID3D11Fence::CreateSharedHandle`. If `cudaExternalSemaphoreHandleDesc::handle::win32::name` is not NULL, then it must name a valid synchronization object that refers to a valid `ID3D11Fence` object.

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeNvSciSync`, then `cudaExternalSemaphoreHandleDesc::handle::nvSciSyncObj` represents a valid `NvSciSyncObj`.

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeKeyedMutex`, then exactly one of `cudaExternalSemaphoreHandleDesc::handle::win32::handle` and `cudaExternalSemaphoreHandleDesc::handle::win32::name` must not be NULL. If `cudaExternalSemaphoreHandleDesc::handle::win32::handle` is not NULL, then it represents a valid shared NT handle that is returned by `IDXGIResource1::CreateSharedHandle` when referring to a `IDXGIKeyedMutex` object.

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeKeyedMutexKmt`, then `cudaExternalSemaphoreHandleDesc::handle::win32::handle` must be non-NULL and `cudaExternalSemaphoreHandleDesc::handle::win32::name` must be NULL. The handle specified must represent a valid KMT handle that is returned by `IDXGIResource::GetSharedHandle` when referring to a `IDXGIKeyedMutex` object.

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeTimelineSemaphoreFd`, then `cudaExternalSemaphoreHandleDesc::handle::fd` must be a valid file descriptor referencing a synchronization object. Ownership of the file descriptor is transferred to the CUDA driver when the handle is imported successfully. Performing any operations on the file descriptor after it is imported results in undefined behavior.

If `cudaExternalSemaphoreHandleDesc::type` is `cudaExternalSemaphoreHandleTypeTimelineSemaphoreWin32`, then exactly one of `cudaExternalSemaphoreHandleDesc::handle::win32::handle` and `cudaExternalSemaphoreHandleDesc::handle::win32::name` must not be NULL. If `cudaExternalSemaphoreHandleDesc::handle::win32::handle` is not NULL, then it must represent a valid shared NT handle that references a synchronization object. Ownership of this handle is not transferred to CUDA after the import operation, so the application must release the handle using the appropriate system call. If `cudaExternalSemaphoreHandleDesc::handle::win32::name` is not NULL, then it must name a valid synchronization object.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDestroyExternalSemaphore](#), [cudaSignalExternalSemaphoresAsync](#),
[cudaWaitExternalSemaphoresAsync](#)

__host__ cudaError_t
cudaSignalExternalSemaphoresAsync (const
cudaExternalSemaphore_t *extSemArray, const
cudaExternalSemaphoreSignalParams *paramsArray,
unsigned int numExtSems, cudaStream_t stream)

Signals a set of external semaphore objects.

Parameters

extSemArray

- Set of external semaphores to be signaled

paramsArray

- Array of semaphore parameters

numExtSems

- Number of semaphores to signal

stream

- Stream to enqueue the signal operations in

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#)

Description

Enqueues a signal operation on a set of externally allocated semaphore object in the specified stream. The operations will be executed when all prior operations in the stream complete.

The exact semantics of signaling a semaphore depends on the type of the object.

If the semaphore object is any one of the following types:

[cudaExternalSemaphoreHandleTypeOpaqueFd](#),

[cudaExternalSemaphoreHandleTypeOpaqueWin32](#),

[cudaExternalSemaphoreHandleTypeOpaqueWin32Kmt](#) then signaling the semaphore will set it to the signaled state.

If the semaphore object is any one of the following types:

[cudaExternalSemaphoreHandleTypeD3D12Fence](#),

[cudaExternalSemaphoreHandleTypeD3D11Fence](#),

[cudaExternalSemaphoreHandleTypeTimelineSemaphoreFd](#),

[cudaExternalSemaphoreHandleTypeTimelineSemaphoreWin32](#) then the semaphore will be set to the value specified in `cudaExternalSemaphoreSignalParams::params::fence::value`.

If the semaphore object is of the type [cudaExternalSemaphoreHandleTypeNvSciSync](#)

this API sets `cudaExternalSemaphoreSignalParams::params::nvSciSync::fence` to a value that can be used by subsequent waiters of the same NvSciSync object to order operations with those currently submitted in `stream`. Such an update will overwrite previous contents of `cudaExternalSemaphoreSignalParams::params::nvSciSync::fence`.

By default, signaling such an external semaphore object causes appropriate memory synchronization operations to be performed over all the external memory objects

that are imported as [cudaExternalMemoryHandleTypeNvSciBuf](#). This ensures that

any subsequent accesses made by other importers of the same set of NvSciBuf

memory object(s) are coherent. These operations can be skipped by specifying the flag

[cudaExternalSemaphoreSignalSkipNvSciBufMemSync](#), which can be used as a performance optimization when data coherency is not required. But specifying this flag in scenarios

where data coherency is required results in undefined behavior. Also, for semaphore object of the type [cudaExternalSemaphoreHandleTypeNvSciSync](#), if the `NvSciSyncAttrList` used to create the `NvSciSyncObj` had not set the flags in [cudaDeviceGetNvSciSyncAttributes](#) to `cudaNvSciSyncAttrSignal`, this API will return `cudaErrorNotSupported`.

`cudaExternalSemaphoreSignalParams::params::nvSciSync::fence` associated with semaphore object of the type [cudaExternalSemaphoreHandleTypeNvSciSync](#) can be deterministic.

For this the `NvSciSyncAttrList` used to create the semaphore object must have value of

`NvSciSyncAttrKey_RequireDeterministicFences` key set to true. Deterministic fences allow users to enqueue a wait over the semaphore object even before corresponding signal is

enqueued. For such a semaphore object, CUDA guarantees that each signal operation will increment the fence value by '1'. Users are expected to track count of signals enqueued on the semaphore object and insert waits accordingly. When such a semaphore object is signaled from multiple streams, due to concurrent stream execution, it is possible that the order in which the semaphore gets signaled is indeterministic. This could lead to waiters of the semaphore getting unblocked incorrectly. Users are expected to handle such situations, either by not using the same semaphore object with deterministic fence support enabled in different streams or by adding explicit dependency amongst such streams so that the semaphore is signaled in order.

If the semaphore object is any one of the following types:

`cudaExternalSemaphoreHandleTypeKeyedMutex`,

`cudaExternalSemaphoreHandleTypeKeyedMutexKmt`, then the keyed mutex will be released with the key specified in `cudaExternalSemaphoreSignalParams::params::keyedmutex::key`.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

`cudaImportExternalSemaphore`, `cudaDestroyExternalSemaphore`,
`cudaWaitExternalSemaphoresAsync`

**`__host__ cudaError_t
cudaWaitExternalSemaphoresAsync (const
cudaExternalSemaphore_t *extSemArray, const
cudaExternalSemaphoreWaitParams *paramsArray,
unsigned int numExtSems, cudaStream_t stream)`**

Waits on a set of external semaphore objects.

Parameters

extSemArray

- External semaphores to be waited on

paramsArray

- Array of semaphore parameters

numExtSems

- Number of semaphores to wait on

stream

- Stream to enqueue the wait operations in

Returns

`cudaSuccess`, `cudaErrorInvalidResourceHandle` `cudaErrorTimeout`

Description

Enqueues a wait operation on a set of externally allocated semaphore object in the specified stream. The operations will be executed when all prior operations in the stream complete.

The exact semantics of waiting on a semaphore depends on the type of the object.

If the semaphore object is any one of the following types:

[cudaExternalSemaphoreHandleTypeOpaqueFd](#),

[cudaExternalSemaphoreHandleTypeOpaqueWin32](#),

[cudaExternalSemaphoreHandleTypeOpaqueWin32Kmt](#) then waiting on the semaphore will wait until the semaphore reaches the signaled state. The semaphore will then be reset to the unsignaled state. Therefore for every signal operation, there can only be one wait operation.

If the semaphore object is any one of the following types:

[cudaExternalSemaphoreHandleTypeD3D12Fence](#),

[cudaExternalSemaphoreHandleTypeD3D11Fence](#),

[cudaExternalSemaphoreHandleTypeTimelineSemaphoreFd](#),

[cudaExternalSemaphoreHandleTypeTimelineSemaphoreWin32](#) then waiting on the semaphore will wait until the value of the semaphore is greater than or equal to `cudaExternalSemaphoreWaitParams::params::fence::value`.

If the semaphore object is of the type [cudaExternalSemaphoreHandleTypeNvSciSync](#) then,

waiting on the semaphore will wait until the

`cudaExternalSemaphoreSignalParams::params::nvSciSync::fence` is signaled by the

signaler of the `NvSciSyncObj` that was associated with this semaphore object. By

default, waiting on such an external semaphore object causes appropriate memory

synchronization operations to be performed over all external memory objects that

are imported as [cudaExternalMemoryHandleTypeNvSciBuf](#). This ensures that any

subsequent accesses made by other importers of the same set of `NvSciBuf` memory

object(s) are coherent. These operations can be skipped by specifying the flag

[cudaExternalSemaphoreWaitSkipNvSciBufMemSync](#), which can be used as a performance

optimization when data coherency is not required. But specifying this flag in scenarios

where data coherency is required results in undefined behavior. Also, for semaphore object

of the type [cudaExternalSemaphoreHandleTypeNvSciSync](#), if the `NvSciSyncAttrList` used

to create the `NvSciSyncObj` had not set the flags in [cudaDeviceGetNvSciSyncAttributes](#) to

`cudaNvSciSyncAttrWait`, this API will return `cudaErrorNotSupported`.

If the semaphore object is any one of the following types:

[cudaExternalSemaphoreHandleTypeKeyedMutex](#),

[cudaExternalSemaphoreHandleTypeKeyedMutexKmt](#), then the keyed

mutex will be acquired when it is released with the key specified in

`cudaExternalSemaphoreSignalParams::params::keyedmutex::key` or until the timeout

specified by `cudaExternalSemaphoreSignalParams::params::keyedmutex::timeoutMs` has

lapsed. The timeout interval can either be a finite value specified in milliseconds or an infinite

value. In case an infinite value is specified the timeout never elapses. The windows INFINITE macro must be used to specify infinite timeout

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaImportExternalSemaphore](#), [cudaDestroyExternalSemaphore](#),
[cudaSignalExternalSemaphoresAsync](#)

6.7. Execution Control

This section describes the execution control functions of the CUDA runtime application programming interface.

Some functions have overloaded C++ API template versions documented separately in the [C++ API Routines](#) module.

__host__ __device__ cudaError_t
cudaFuncGetAttributes (cudaFuncAttributes *attr,
const void *func)

Find out attributes for a given function.

Parameters

attr

- Return pointer to function's attributes

func

- Device function symbol

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#)

Description

This function obtains the attributes of a function specified via `func`. `func` is a device function symbol and must be declared as a `__global__` function. The fetched attributes are placed in `attr`. If the specified function does not exist, then `cudaErrorInvalidDeviceFunction` is returned. For templated functions, pass the function symbol as follows: `func_name<template_arg_0,...,template_arg_N>`

Note that some function attributes such as `maxThreadsPerBlock` may vary based on the device that is currently being used.


Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Use of a string naming a function as the `func` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaFuncSetCacheConfig \(C API\)](#), [cudaFuncGetAttributes \(C++ API\)](#), [cudaLaunchKernel \(C API\)](#), [cuFuncGetAttribute](#)

`__host__ cudaError_t cudaFuncGetName (const char **name, const void *func)`

Returns the function name for a device entry function pointer.

Parameters

name

- The returned name of the function

func

- The function pointer to retrieve name for

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorInvalidDeviceFunction`

Description

Returns in `**name` the function name associated with the symbol `func`. The function name is returned as a null-terminated string. This API may return a mangled name if the function is not declared as having C linkage. If `**name` is NULL, `cudaErrorInvalidValue` is returned. If `func` is not a device entry function, `cudaErrorInvalidDeviceFunction` is returned.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

[cudaFuncGetName \(C++ API \)](#)

```
__host__ cudaError_t cudaFuncSetAttribute (const void *func, cudaFuncAttribute attr, int value)
```

Set attributes for a given function.

Parameters

func

- Function to get attributes of

attr

- Attribute to set

value

- Value to set

Returns

`cudaSuccess`, `cudaErrorInvalidDeviceFunction`, `cudaErrorInvalidValue`


Description

This function sets the attributes of a function specified via `func`. The parameter `func` must be a pointer to a function that executes on the device. The parameter specified by `func` must be declared as a `__global__` function. The enumeration defined by `attr` is set to the value defined by `value`. If the specified function does not exist, then `cudaErrorInvalidDeviceFunction`

is returned. If the specified attribute cannot be written, or if the value is incorrect, then [cudaErrorInvalidValue](#) is returned.

Valid values for `attr` are:

- ▶ [cudaFuncAttributeMaxDynamicSharedMemorySize](#) - The requested maximum size in bytes of dynamically-allocated shared memory. The sum of this value and the function attribute `sharedSizeBytes` cannot exceed the device attribute [cudaDevAttrMaxSharedMemoryPerBlockOptin](#). The maximal size of requestable dynamic shared memory may differ by GPU architecture.
- ▶ [cudaFuncAttributePreferredSharedMemoryCarveout](#) - On devices where the L1 cache and shared memory use the same hardware resources, this sets the shared memory carveout preference, in percent of the total shared memory. See [cudaDevAttrMaxSharedMemoryPerMultiprocessor](#). This is only a hint, and the driver can choose a different ratio if required to execute the function.

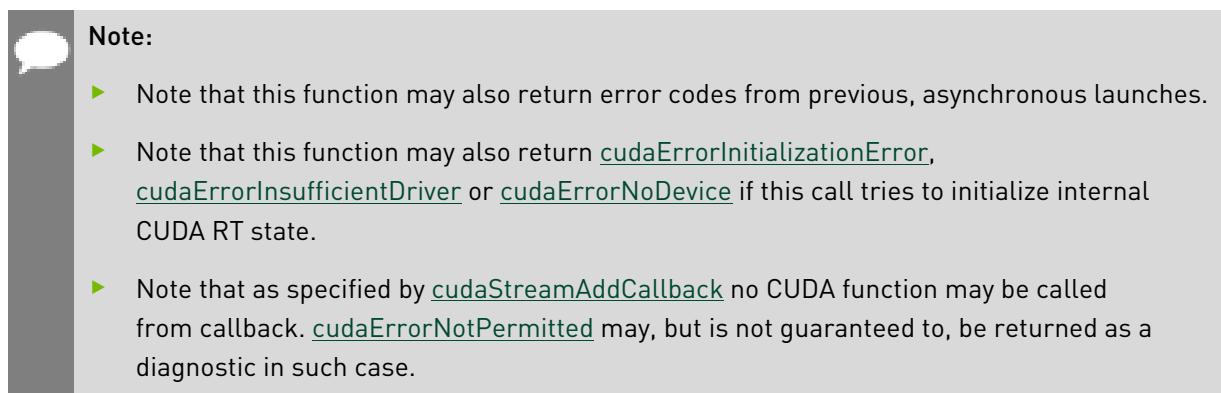

[cudaLaunchKernel](#) [C++ API], [cudaFuncSetCacheConfig](#) [C++ API], [cudaFuncGetAttributes](#) [C API],

__host__ [cudaError_t](#) [cudaFuncSetCacheConfig](#) (const void *func, [cudaFuncCache](#) cacheConfig)

Sets the preferred cache configuration for a device function.

Parameters

func

- Device function symbol

cacheConfig

- Requested cache configuration

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#)

Description

On devices where the L1 cache and shared memory use the same hardware resources, this sets through `cacheConfig` the preferred cache configuration for the function specified via `func`. This is only a preference. The runtime will use the requested configuration if possible, but it is free to choose a different configuration if required to execute `func`.

`func` is a device function symbol and must be declared as a `__global__` function.

If the specified function does not exist, then `cudaErrorInvalidDeviceFunction` is returned. For templated functions, pass the function symbol as follows:

`func_name<template_arg_0,...,template_arg_N>`

This setting does nothing on devices where the size of the L1 cache and shared memory are fixed.

Launching a kernel with a different preference than the most recent preference setting may insert a device-side synchronization point.

The supported cache configurations are:

- ▶ `cudaFuncCacheNone`: no preference for shared memory or L1 (default)
- ▶ `cudaFuncCacheShared`: prefer larger shared memory and smaller L1 cache
- ▶ `cudaFuncCacheL1`: prefer larger L1 cache and smaller shared memory
- ▶ `cudaFuncCacheEqual`: prefer equal size L1 cache and shared memory

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Use of a string naming a function as the `func` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaFuncSetCacheConfig \(C++ API\)](#), [cudaFuncGetAttributes \(C API\)](#), [cudaLaunchKernel \(C API\)](#), [cuFuncSetCacheConfig](#)

__host__ **cudaError_t** **cudaFuncSetSharedMemConfig** (**const void *func**, **cudaSharedMemConfig config**)

Sets the shared memory configuration for a device function.

Parameters

func

- Device function symbol

config

- Requested shared memory configuration

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidValue](#),

Description

On devices with configurable shared memory banks, this function will force all subsequent launches of the specified device function to have the given shared memory bank size configuration. On any given launch of the function, the shared memory configuration of the device will be temporarily changed if needed to suit the function's preferred configuration. Changes in shared memory configuration between subsequent launches of functions, may introduce a device side synchronization point.

Any per-function setting of shared memory bank size set via [cudaFuncSetSharedMemConfig](#) will override the device wide setting set by [cudaDeviceSetSharedMemConfig](#).

Changing the shared memory bank size will not increase shared memory usage or affect occupancy of kernels, but may have major effects on performance. Larger bank sizes will allow for greater potential bandwidth to shared memory, but will change what kinds of accesses to shared memory will result in bank conflicts.

This function will do nothing on devices with fixed shared memory bank size.

For templated functions, pass the function symbol as follows:

`func_name<template_arg_0,...,template_arg_N>`

The supported bank configurations are:

- ▶ `cudaSharedMemBankSizeDefault`: use the device's shared memory configuration when launching this function.
- ▶ `cudaSharedMemBankSizeFourByte`: set shared memory bank width to be four bytes natively when launching this function.
- ▶ `cudaSharedMemBankSizeEightByte`: set shared memory bank width to be eight bytes natively when launching this function.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Use of a string naming a function as the `func` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceSetSharedMemConfig](#), [cudaDeviceGetSharedMemConfig](#),
[cudaDeviceSetCacheConfig](#), [cudaDeviceGetCacheConfig](#), [cudaFuncSetCacheConfig](#),
[cuFuncSetSharedMemConfig](#)

__device__ void *cudaGetParameterBuffer (size_t alignment, size_t size)

Obtains a parameter buffer.

Parameters

alignment

- Specifies alignment requirement of the parameter buffer

size

- Specifies size requirement in bytes

Returns

Returns pointer to the allocated parameterBuffer

Description

Obtains a parameter buffer which can be filled with parameters for a kernel launch.

Parameters passed to [cudaLaunchDevice](#) must be allocated via this function.

This is a low level API and can only be accessed from Parallel Thread Execution (PTX). CUDA user code should use <<< >>> to launch kernels.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaLaunchDevice](#)

__device__ void cudaGridDependencySynchronize (void)

Programmatic grid dependency synchronization.

Description

This device function will block the thread until all direct grid dependencies have completed. This API is intended to use in conjuncture with programmatic / launch event / dependency. See [cudaLaunchAttributeID::cudaLaunchAttributeProgrammaticStreamSerialization](#) and [cudaLaunchAttributeID::cudaLaunchAttributeProgrammaticEvent](#) for more information.

__host__ cudaError_t cudaLaunchCooperativeKernel (const void *func, dim3 gridDim, dim3 blockDim, void **args, size_t sharedMem, cudaStream_t stream)

Launches a device function where thread blocks can cooperate and synchronize as they execute.

Parameters

func

- Device function symbol

gridDim

- Grid dimentions

blockDim

- Block dimentions

args

- Arguments

sharedMem

- Shared memory

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidConfiguration](#),
[cudaErrorLaunchFailure](#), [cudaErrorLaunchTimeout](#), [cudaErrorLaunchOutOfResources](#),
[cudaErrorCooperativeLaunchTooLarge](#), [cudaErrorSharedObjectInitFailed](#)

Description

The function invokes kernel `func` on `gridDim.x` `gridDim.y` `gridDim.z` grid of blocks. Each block contains `blockDim.x` `blockDim.y` `blockDim.z` threads.

The device on which this kernel is invoked must have a non-zero value for the device attribute [cudaDevAttrCooperativeLaunch](#).

The total number of blocks launched cannot exceed the maximum number of blocks per multiprocessor as returned by [cudaOccupancyMaxActiveBlocksPerMultiprocessor](#) (or [cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)) times the number of multiprocessors as specified by the device attribute [cudaDevAttrMultiProcessorCount](#).

The kernel cannot make use of CUDA dynamic parallelism.

If the kernel has N parameters the `args` should point to array of N pointers. Each pointer, from `args[0]` to `args[N - 1]`, point to the region of memory from which the actual parameter will be copied.

For templated functions, pass the function symbol as follows:

`func_name<template_arg_0,...,template_arg_N>`

`sharedMem` sets the amount of dynamic shared memory that will be available to each thread block.

`stream` specifies a stream the invocation is associated to.



Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaLaunchCooperativeKernel \(C++ API\)](#), [cudaLaunchCooperativeKernelMultiDevice](#), [cuLaunchCooperativeKernel](#)

```
__host__ cudaError_t
cudaLaunchCooperativeKernelMultiDevice
(cudaLaunchParams *launchParamsList, unsigned int numDevices, unsigned int flags)
```

Launches device functions on multiple devices where thread blocks can cooperate and synchronize as they execute.

Parameters

launchParamsList

- List of launch parameters, one per device

numDevices

- Size of the `launchParamsList` array

flags

- Flags to control launch behavior

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidConfiguration](#), [cudaErrorLaunchFailure](#), [cudaErrorLaunchTimeout](#), [cudaErrorLaunchOutOfResources](#), [cudaErrorCooperativeLaunchTooLarge](#), [cudaErrorSharedObjectInitFailed](#)

Description

Deprecated This function is deprecated as of CUDA 11.3.

Invokes kernels as specified in the `launchParamsList` array where each element of the array specifies all the parameters required to perform a single kernel launch. These kernels can cooperate and synchronize as they execute. The size of the array is specified by `numDevices`.

No two kernels can be launched on the same device. All the devices targeted by this multi-device launch must be identical. All devices must have a non-zero value for the device attribute [cudaDevAttrCooperativeMultiDeviceLaunch](#).

The same kernel must be launched on all devices. Note that any `__device__` or `__constant__` variables are independently instantiated on every device. It is the application's responsibility to ensure these variables are initialized and used appropriately.

The size of the grids as specified in blocks, the size of the blocks themselves and the amount of shared memory used by each thread block must also match across all launched kernels.

The streams used to launch these kernels must have been created via either [cudaStreamCreate](#) or [cudaStreamCreateWithPriority](#) or [cudaStreamCreateWithPriority](#). The NULL stream or [cudaStreamLegacy](#) or [cudaStreamPerThread](#) cannot be used.

The total number of blocks launched per kernel cannot exceed the maximum number of blocks per multiprocessor as returned by [cudaOccupancyMaxActiveBlocksPerMultiprocessor](#) (or [cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)) times the number of multiprocessors as specified by the device attribute [cudaDevAttrMultiProcessorCount](#). Since the total number of blocks launched per device has to match across all devices, the maximum number of blocks that can be launched per device will be limited by the device with the least number of multiprocessors.

The kernel cannot make use of CUDA dynamic parallelism.

The [cudaLaunchParams](#) structure is defined as:

```
/* struct cudaLaunchParams
{
    void *func;
    dim3 gridDim;
    dim3 blockDim;
    void **args;
    size_t sharedMem;
    cudaStream_t stream;
};
```

where:

- ▶ [cudaLaunchParams::func](#) specifies the kernel to be launched. This same function must be launched on all devices. For templated functions, pass the function symbol as follows:
func_name<template_arg_0,...,template_arg_N>
- ▶ [cudaLaunchParams::gridDim](#) specifies the width, height and depth of the grid in blocks. This must match across all kernels launched.
- ▶ [cudaLaunchParams::blockDim](#) is the width, height and depth of each thread block. This must match across all kernels launched.
- ▶ [cudaLaunchParams::args](#) specifies the arguments to the kernel. If the kernel has N parameters then [cudaLaunchParams::args](#) should point to array of N pointers. Each pointer, from [cudaLaunchParams::args\[0\]](#) to [cudaLaunchParams::args\[N - 1\]](#), point to the region of memory from which the actual parameter will be copied.
- ▶ [cudaLaunchParams::sharedMem](#) is the dynamic shared-memory size per thread block in bytes. This must match across all kernels launched.
- ▶ [cudaLaunchParams::stream](#) is the handle to the stream to perform the launch in. This cannot be the NULL stream or [cudaStreamLegacy](#) or [cudaStreamPerThread](#).

By default, the kernel won't begin execution on any GPU until all prior work in all the specified streams has completed. This behavior can be overridden by specifying the flag [cudaCooperativeLaunchMultiDeviceNoPreSync](#). When this flag is specified, each kernel will

only wait for prior work in the stream corresponding to that GPU to complete before it begins execution.

Similarly, by default, any subsequent work pushed in any of the specified streams will not begin execution until the kernels on all GPUs have completed. This behavior can be overridden by specifying the flag `cudaCooperativeLaunchMultiDeviceNoPostSync`. When this flag is specified, any subsequent work pushed in any of the specified streams will only wait for the kernel launched on the GPU corresponding to that stream to complete before it begins execution.

 **Note:**

- ▶ This function uses standard `default stream` semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaLaunchCooperativeKernel \(C++ API\)](#), [cudaLaunchCooperativeKernel](#), [cuLaunchCooperativeKernelMultiDevice](#)

```
__device__ cudaError_t cudaLaunchDevice (void
*func, void *parameterBuffer, dim3 gridDimension,
dim3 blockDimension, unsigned int sharedMemSize,
cudaStream_t stream)
```

Launches a specified kernel.

Parameters

func

- Pointer to the kernel to be launched

parameterBuffer

- Holds the parameters to the launched kernel. parameterBuffer can be NULL. (Optional)

gridDimension

- Specifies grid dimensions

blockDimension

- Specifies block dimensions

sharedMemSize

- Specifies size of shared memory

stream

- Specifies the stream to be used

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorLaunchMaxDepthExceeded](#),
[cudaErrorInvalidConfiguration](#), [cudaErrorStartupFailure](#),
[cudaErrorLaunchPendingCountExceeded](#), [cudaErrorLaunchOutOfResources](#)

Description

Launches a specified kernel with the specified parameter buffer. A parameter buffer can be obtained by calling [cudaGetParameterBuffer\(\)](#).

This is a low level API and can only be accessed from Parallel Thread Execution (PTX). CUDA user code should use <<< >>> to launch the kernels.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

Please refer to Execution Configuration and Parameter Buffer Layout from the CUDA Programming Guide for the detailed descriptions of launch configuration and parameter layout respectively.

See also:

[cudaGetParameterBuffer](#)

```
__host__ cudaError_t cudaLaunchHostFunc
(cudaStream_t stream, cudaHostFn_t fn, void
*userData)
```

Enqueues a host function call in a stream.

Parameters**stream****fn**

- The function to call once preceding stream operations are complete

userData

- User-specified data to be passed to the function

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorInvalidValue](#),
[cudaErrorNotSupported](#)

Description

Enqueues a host function to run in a stream. The function will be called after currently enqueued work and will block work added after it.

The host function must not make any CUDA API calls. Attempting to use a CUDA API may result in [cudaErrorNotPermitted](#), but this is not required. The host function must not perform any synchronization that may depend on outstanding CUDA work not mandated to run earlier. Host functions without a mandated order (such as in independent streams) execute in undefined order and may be serialized.

For the purposes of Unified Memory, execution makes a number of guarantees:

- ▶ The stream is considered idle for the duration of the function's execution. Thus, for example, the function may always use memory attached to the stream it was enqueued in.
- ▶ The start of execution of the function has the same effect as synchronizing an event recorded in the same stream immediately prior to the function. It thus synchronizes streams which have been "joined" prior to the function.
- ▶ Adding device work to any stream does not have the effect of making the stream active until all preceding host functions and stream callbacks have executed. Thus, for example, a function might use global attached memory even if work has been added to another stream, if the work has been ordered behind the function call with an event.
- ▶ Completion of the function does not cause a stream to become active except as described above. The stream will remain idle if no device work follows the function, and will remain idle across consecutive host functions or stream callbacks without device work in between. Thus, for example, stream synchronization can be done by signaling from a host function at the end of the stream.

Note that, in contrast to [cuStreamAddCallback](#), the function will not be called in the event of an error in the CUDA context.



Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreate](#), [cudaStreamQuery](#), [cudaStreamSynchronize](#), [cudaStreamWaitEvent](#),
[cudaStreamDestroy](#), [cudaMallocManaged](#), [cudaStreamAttachMemAsync](#),
[cudaStreamAddCallback](#), [cuLaunchHostFunc](#)

```
_host_ cudaError_t cudaLaunchKernel (const void
*func, dim3 gridDim, dim3 blockDim, void **args,
size_t sharedMem, cudaStream_t stream)
```

Launches a device function.

Parameters

func

- Device function symbol

gridDim

- Grid dimentions

blockDim

- Block dimentions

args

- Arguments

sharedMem

- Shared memory

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidConfiguration](#),
[cudaErrorLaunchFailure](#), [cudaErrorLaunchTimeout](#), [cudaErrorLaunchOutOfResources](#),
[cudaErrorSharedObjectInitFailed](#), [cudaErrorInvalidPtx](#), [cudaErrorUnsupportedPtxVersion](#),
[cudaErrorNoKernelImageForDevice](#), [cudaErrorJitCompilerNotFound](#),
[cudaErrorJitCompilationDisabled](#)

Description

The function invokes kernel `func` on `gridDim` (`gridDim.x` `gridDim.y` `gridDim.z`) grid of blocks. Each block contains `blockDim` (`blockDim.x` `blockDim.y` `blockDim.z`) threads.

If the kernel has N parameters the args should point to array of N pointers. Each pointer, from args [0] to args [N - 1], point to the region of memory from which the actual parameter will be copied.

For templated functions, pass the function symbol as follows:

`func_name<template_arg_0,...,template_arg_N>`

`sharedMem` sets the amount of dynamic shared memory that will be available to each thread block.

`stream` specifies a stream the invocation is associated to.

 **Note:**

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaLaunchKernel](#) (C++ API), [cuLaunchKernel](#)

`__host__ cudaError_t cudaLaunchKernelExC (const cudaLaunchConfig_t *config, const void *func, void **args)`

Launches a CUDA function with launch-time configuration.

Parameters

config

- Launch configuration

func

- Kernel to launch

args

- Array of pointers to kernel parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidConfiguration](#),
[cudaErrorLaunchFailure](#), [cudaErrorLaunchTimeout](#), [cudaErrorLaunchOutOfResources](#),
[cudaErrorSharedObjectInitFailed](#), [cudaErrorInvalidPtx](#), [cudaErrorUnsupportedPtxVersion](#),
[cudaErrorNoKernelImageForDevice](#), [cudaErrorJitCompilerNotFound](#),
[cudaErrorJitCompilationDisabled](#)

Description

Note that the functionally equivalent variadic template [cudaLaunchKernelEx](#) is available for C++11 and newer.

Invokes the kernel func on config->gridDim (config->gridDim.x config->gridDim.y config->gridDim.z) grid of blocks. Each block contains config->blockDim (config->blockDim.x config->blockDim.y config->blockDim.z) threads.

config->dynamicSmemBytes sets the amount of dynamic shared memory that will be available to each thread block.

config->stream specifies a stream the invocation is associated to.

Configuration beyond grid and block dimensions, dynamic shared memory size, and stream can be provided with the following two fields of config:

config->attrs is an array of config->numAttrs contiguous [cudaLaunchAttribute](#) elements. The value of this pointer is not considered if config->numAttrs is zero. However, in that case, it is recommended to set the pointer to NULL. config->numAttrs is the number of attributes populating the first config->numAttrs positions of the config->attrs array.

If the kernel has N parameters the args should point to array of N pointers. Each pointer, from args [0] to args [N - 1], point to the region of memory from which the actual parameter will be copied.

N.B. This function is so named to avoid unintentionally invoking the templated version, [cudaLaunchKernelEx](#), for kernels taking a single void** or void* parameter.



Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaLaunchKernelEx](#)(const [cudaLaunchConfig_t](#) *config, void (*kernel)(ExpTypes...), ActTypes &&... args) "cudaLaunchKernelEx (C++ API)", [cuLaunchKernelEx](#)

__host__ cudaError_t cudaSetDoubleForDevice (double *d)

Converts a double argument to be executed on a device.

Parameters

d

- Double to convert

Returns

[cudaSuccess](#)

Description

[Deprecated](#) This function is deprecated as of CUDA 7.5

Converts the double value of d to an internal float representation if the device does not support double arithmetic. If the device does natively support doubles, then this function does nothing.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaFuncSetCacheConfig \(C API\)](#), [cudaFuncGetAttributes \(C API\)](#), [cudaSetDoubleForHost](#)

__host__ cudaError_t cudaSetDoubleForHost (double *d)

Converts a double argument after execution on a device.

Parameters

d

- Double to convert


Returns

cudaSuccess

Description

Deprecated This function is deprecated as of CUDA 7.5

Converts the double value of d from a potentially internal float representation if the device does not support double arithmetic. If the device does natively support doubles, then this function does nothing.

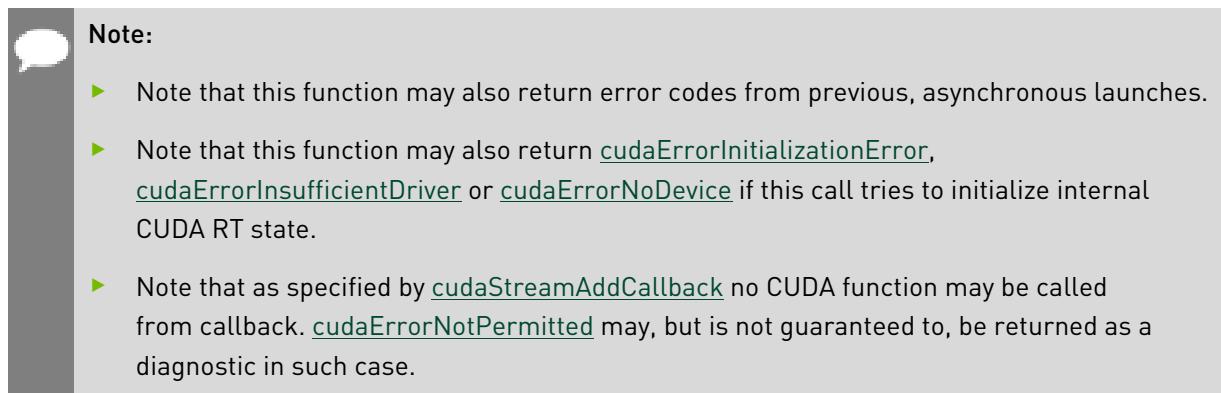

See also:

cudaFuncSetCacheConfig (C API), cudaFuncGetAttributes (C API), cudaSetDoubleForDevice

__device__ void cudaTriggerProgrammaticLaunchCompletion (void)

Programmatic dependency trigger.

Description

This device function ensures the programmatic launch completion edges / events are fulfilled.

See cudaLaunchAttributeID::cudaLaunchAttributeProgrammaticStreamSerialization and

[cudaLaunchAttributed::cudaLaunchAttributeProgrammaticEvent](#) for more information. The event / edge kick off only happens when every CTAs in the grid has either exited or called this function at least once, otherwise the kick off happens automatically after all warps finishes execution but before the grid completes. The kick off only enables scheduling of the secondary kernel. It provides no memory visibility guarantee itself. The user could enforce memory visibility by inserting a memory fence of the correct scope.

6.8. Occupancy

This section describes the occupancy calculation functions of the CUDA runtime application programming interface.

Besides the occupancy calculator functions ([cudaOccupancyMaxActiveBlocksPerMultiprocessor](#) and [cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)), there are also C++ only occupancy-based launch configuration functions documented in [C++ API Routines](#) module.

See [cudaOccupancyMaxPotentialBlockSize \[C++ API\]](#), [cudaOccupancyMaxPotentialBlockSize \[C API\]](#), [cudaOccupancyMaxPotentialBlockSizeVariableSMem \[C + API\]](#), [cudaOccupancyMaxPotentialBlockSizeVariableSMem \[C++ API\]](#), [cudaOccupancyAvailableDynamicSMemPerBlock \[C++ API\]](#),

```
__host__ cudaError_t
cudaOccupancyAvailableDynamicSMemPerBlock
(size_t *dynamicSmemSize, const void *func, int
numBlocks, int blockSize)
```

Returns dynamic shared memory available per block when launching **numBlocks** blocks on SM.

Parameters

dynamicSmemSize

- Returned maximum dynamic shared memory

func

- Kernel function for which occupancy is calculated

numBlocks

- Number of blocks to fit on SM

blockSize

- Size of the block

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

Returns in *dynamicSmemSize the maximum size of dynamic shared memory to allow numBlocks blocks per SM.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#),
[cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#),
[cudaOccupancyMaxPotentialBlockSize \(C++ API\)](#),
[cudaOccupancyMaxPotentialBlockSizeWithFlags \(C++ API\)](#),
[cudaOccupancyMaxPotentialBlockSizeVariableSMem \(C++ API\)](#),
[cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags \(C++ API\)](#),
[cudaOccupancyAvailableDynamicSMemPerBlock](#)

```
__host__ __device__ cudaError_t
cudaOccupancyMaxActiveBlocksPerMultiprocessor
(int *numBlocks, const void *func, int blockSize, size_t
dynamicSMemSize)
```

Returns occupancy for a device function.

Parameters

numBlocks

- Returned occupancy

func

- Kernel function for which occupancy is calculated

blockSize

- Block size the kernel is intended to be launched with

dynamicSMemSize

- Per-block dynamic shared memory usage intended, in bytes

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

Returns in `*numBlocks` the maximum number of active blocks per streaming multiprocessor for the device function.

**Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#),
[cudaOccupancyMaxPotentialBlockSize \(C++ API\)](#),
[cudaOccupancyMaxPotentialBlockSizeWithFlags \(C++ API\)](#),
[cudaOccupancyMaxPotentialBlockSizeVariableSMem \(C++ API\)](#),
[cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags \(C+ + API\)](#), [cudaOccupancyAvailableDynamicSMemPerBlock \(C++ API\)](#),
[cuOccupancyMaxActiveBlocksPerMultiprocessor](#)

```
_host__cudaError_t
cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags
(int *numBlocks, const void *func, int blockSize, size_t
dynamicSMemSize, unsigned int flags)
```

Returns occupancy for a device function with the specified flags.

Parameters

numBlocks

- Returned occupancy

func

- Kernel function for which occupancy is calculated

blockSize

- Block size the kernel is intended to be launched with

dynamicSMemSize

- Per-block dynamic shared memory usage intended, in bytes

flags

- Requested behavior for the occupancy calculator

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

Returns in `*numBlocks` the maximum number of active blocks per streaming multiprocessor for the device function.

The `flags` parameter controls how special cases are handled. Valid flags include:

- ▶ [cudaOccupancyDefault](#): keeps the default behavior as [cudaOccupancyMaxActiveBlocksPerMultiprocessor](#)
- ▶ [cudaOccupancyDisableCachingOverride](#): This flag suppresses the default behavior on platform where global caching affects occupancy. On such platforms, if caching is enabled, but per-block SM resource usage would result in zero occupancy, the occupancy calculator will calculate the occupancy as if caching is disabled. Setting this flag makes the occupancy calculator to return 0 in such cases. More information can be found about this feature in the "Unified L1/Texture Cache" section of the Maxwell tuning guide.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaOccupancyMaxActiveBlocksPerMultiprocessor](#), [cudaOccupancyMaxPotentialBlockSize](#) [C++ API], [cudaOccupancyMaxPotentialBlockSizeWithFlags](#) [C++ API], [cudaOccupancyMaxPotentialBlockSizeVariableSMem](#) [C++ API], [cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags](#) [C++ API], [cudaOccupancyAvailableDynamicSMemPerBlock](#) [C++ API], [cuOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)

__host__cudaError_t

cudaOccupancyMaxActiveClusters (int ***numClusters**, const void ***func**, const **cudaLaunchConfig_t** ***launchConfig**)

Given the kernel function (**func**) and launch configuration (**config**), return the maximum number of clusters that could co-exist on the target device in ***numClusters**.

Parameters**numClusters**

- Returned maximum number of clusters that could co-exist on the target device

func

- Kernel function for which maximum number of clusters are calculated


launchConfig**Returns**

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidClusterSize](#), [cudaErrorUnknown](#),

Description

If the function has required cluster size already set (see [cudaFuncGetAttributes](#)), the cluster size from config must either be unspecified or match the required size. Without required sizes, the cluster size must be specified in config, else the function will return an error.

Note that various attributes of the kernel function may affect occupancy calculation. Runtime environment may affect how the hardware schedules the clusters, so the calculated occupancy is not guaranteed to be achievable.

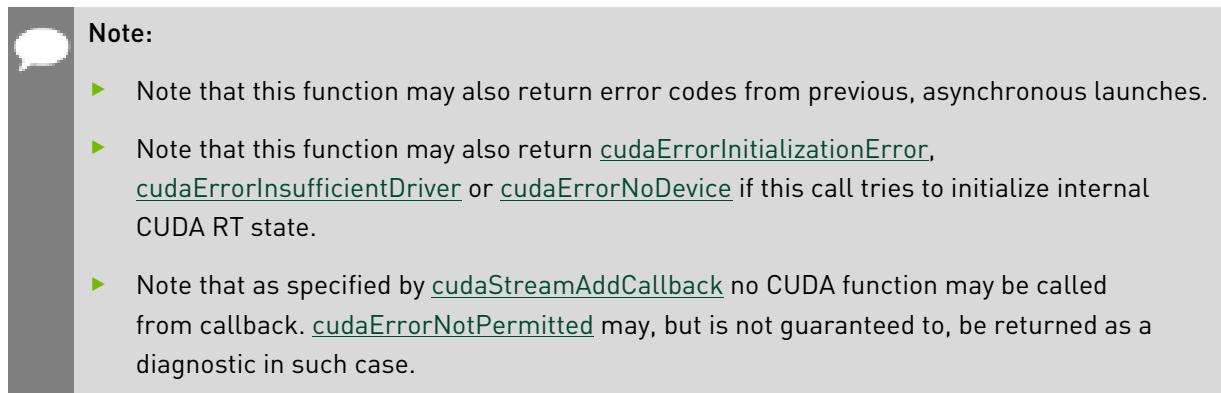

See also:

[cudaFuncGetAttributes](#) [cudaOccupancyMaxActiveClusters](#) (C++ API),
[cuOccupancyMaxActiveClusters](#)

__host__cudaError_t
cudaOccupancyMaxPotentialClusterSize
(int *clusterSize, const void *func, const
cudaLaunchConfig_t *launchConfig)

Given the kernel function (`func`) and launch configuration (`config`), return the maximum cluster size in `*clusterSize`.

Parameters

clusterSize

- Returned maximum cluster size that can be launched for the given kernel function and launch configuration

func

- Kernel function for which maximum cluster size is calculated

launchConfig

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

The cluster dimensions in config are ignored. If func has a required cluster size set (see [cudaFuncGetAttributes](#)), *clusterSize will reflect the required cluster size.

By default this function will always return a value that's portable on future hardware. A higher value may be returned if the kernel function allows non-portable cluster sizes.

This function will respect the compile time launch bounds.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaFuncGetAttributes](#) [cudaOccupancyMaxPotentialClusterSize](#) (C++ API),
[cuOccupancyMaxPotentialClusterSize](#)

6.9. Memory Management

This section describes the memory management functions of the CUDA runtime application programming interface.

Some functions have overloaded C++ API template versions documented separately in the [C++ API Routines](#) module.

```
__host__ cudaError_t cudaArrayGetInfo
(cudaChannelFormatDesc *desc, cudaExtent *extent,
unsigned int *flags, cudaArray_t array)
```

Gets info about the specified cudaArray.

Parameters

desc

- Returned array type

extent

- Returned array shape. 2D arrays will have depth of zero

flags

- Returned array flags

array

- The cudaArray to get info for

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns in *desc, *extent and *flags respectively, the type, shape and flags of array.

Any of *desc, *extent and *flags may be specified as NULL.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cuArrayGetDescriptor](#), [cuArray3DGetDescriptor](#)

```
_host__cudaError_t
cudaArrayGetMemoryRequirements
(cudaArrayMemoryRequirements
*memoryRequirements, cudaArray_t array, int device)
```

Returns the memory requirements of a CUDA array.

Parameters

memoryRequirements

- Pointer to [cudaArrayMemoryRequirements](#)

array

- CUDA array to get the memory requirements of

device

- Device to get the memory requirements for

Returns

[cudaSuccess](#) [cudaErrorInvalidValue](#)

Description

Returns the memory requirements of a CUDA array in `memoryRequirements`. If the CUDA array is not allocated with flag [cudaArrayDeferredMapping](#) [cudaErrorInvalidValue](#) will be returned.

The returned value in `cudaArrayMemoryRequirements::size` represents the total size of the CUDA array. The returned value in `cudaArrayMemoryRequirements::alignment` represents the alignment necessary for mapping the CUDA array.

See also:

[cudaMipmappedArrayGetMemoryRequirements](#)

```
_host__cudaError_t cudaArrayGetPlane
(cudaArray_t *pPlaneArray, cudaArray_t hArray,
unsigned int planeIdx)
```

Gets a CUDA array plane from a CUDA array.

Parameters

pPlaneArray

- Returned CUDA array referenced by the `planeIdx`

hArray

- CUDA array

planeIdx

- Plane index

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#) [cudaErrorInvalidResourceHandle](#)

Description

Returns in pPlaneArray a CUDA array that represents a single format plane of the CUDA array hArray.

If planeIdx is greater than the maximum number of planes in this array or if the array does not have a multi-planar format e.g: [cudaChannelFormatKindNV12](#), then [cudaErrorInvalidValue](#) is returned.

Note that if the hArray has format [cudaChannelFormatKindNV12](#), then passing in 0 for planeIdx returns a CUDA array of the same size as hArray but with one 8-bit channel and [cudaChannelFormatKindUnsigned](#) as its format kind. If 1 is passed for planeIdx, then the returned CUDA array has half the height and width of hArray with two 8-bit channels and [cudaChannelFormatKindUnsigned](#) as its format kind.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cuArrayGetPlane](#)

__host__ cudaError_t cudaArrayGetSparseProperties
(cudaArraySparseProperties *sparseProperties,
cudaArray_t array)

Returns the layout properties of a sparse CUDA array.

Parameters**sparseProperties**

- Pointer to return the [cudaArraySparseProperties](#)

array

- The CUDA array to get the sparse properties of

Returns

[cudaSuccess](#) [cudaErrorInvalidValue](#)

Description

Returns the layout properties of a sparse CUDA array in `sparseProperties`. If the CUDA array is not allocated with flag [cudaArraySparse](#) [cudaErrorInvalidValue](#) will be returned.

If the returned value in [cudaArraySparseProperties::flags](#) contains [cudaArraySparsePropertiesSingleMipTail](#), then [cudaArraySparseProperties::mipTailSize](#) represents the total size of the array. Otherwise, it will be zero. Also, the returned value in [cudaArraySparseProperties::mipTailFirstLevel](#) is always zero. Note that the `array` must have been allocated using [cudaMallocArray](#) or [cudaMalloc3DArray](#). For CUDA arrays obtained using [cudaMipmappedArrayGetLevel](#), [cudaErrorInvalidValue](#) will be returned. Instead, [cudaMipmappedArrayGetSparseProperties](#) must be used to obtain the sparse properties of the entire CUDA mipmapped array to which `array` belongs to.

See also:

[cudaMipmappedArrayGetSparseProperties](#), [cuMemMapArrayAsync](#)

`__host__ __device__ cudaError_t cudaFree (void *devPtr)`

Frees memory on the device.

Parameters

devPtr

- Device pointer to memory to free

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Frees the memory space pointed to by `devPtr`, which must have been returned by a previous call to one of the following memory allocation APIs - [cudaMalloc\(\)](#), [cudaMallocPitch\(\)](#), [cudaMallocManaged\(\)](#), [cudaMallocAsync\(\)](#), [cudaMallocFromPoolAsync\(\)](#).

Note - This API will not perform any implicit synchronization when the pointer was allocated with [cudaMallocAsync](#) or [cudaMallocFromPoolAsync](#). Callers must ensure that all accesses to the pointer have completed before invoking [cudaFree](#). For best performance and memory reuse, users should use [cudaFreeAsync](#) to free memory allocated via the stream ordered memory allocator.

If `cudaFree(devPtr)` has already been called before, an error is returned. If `devPtr` is 0, no operation is performed. `cudaFree()` returns `cudaErrorValue` in case of failure.

The device version of `cudaFree` cannot be used with a `*devPtr` allocated using the host API, and vice versa.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

`cudaMalloc`, `cudaMallocPitch`, `cudaMallocManaged`, `cudaMallocArray`, `cudaFreeArray`, `cudaMallocAsync`, `cudaMallocFromPoolAsync` `cudaMallocHost` [C API], `cudaFreeHost`, `cudaMalloc3D`, `cudaMalloc3DArray`, `cudaFreeAsync` `cudaHostAlloc`, `cuMemFree`

__host__ cudaError_t cudaFreeArray (cudaArray_t array)

Frees an array on the device.

Parameters

array

- Pointer to array to free

Returns

`cudaSuccess`, `cudaErrorInvalidValue`

Description

Frees the CUDA array `array`, which must have been returned by a previous call to `cudaMallocArray()`. If `devPtr` is 0, no operation is performed.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc](#), [cudaMallocPitch](#), [cudaFree](#), [cudaMallocArray](#), [cudaMallocHost \(C API\)](#),
[cudaFreeHost](#), [cudaHostAlloc](#), [cuArrayDestroy](#)

__host__cudaError_t cudaFreeHost (void *ptr)

Frees page-locked memory.

Parameters

ptr

- Pointer to memory to free

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Frees the memory space pointed to by `hostPtr`, which must have been returned by a previous call to [cudaMallocHost\(\)](#) or [cudaHostAlloc\(\)](#).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc](#), [cudaMallocPitch](#), [cudaFree](#), [cudaMallocArray](#), [cudaFreeArray](#), [cudaMallocHost \(C API\)](#), [cudaMalloc3D](#), [cudaMalloc3DArray](#), [cudaHostAlloc](#), [cuMemFreeHost](#)

__host__ cudaError_t cudaFreeMipmappedArray (cudaMipmappedArray_t mipmappedArray)

Frees a mipmapped array on the device.

Parameters

mipmappedArray

- Pointer to mipmapped array to free

Returns

cudaSuccess, cudaErrorInvalidValue

Description

Frees the CUDA mipmapped array `mipmappedArray`, which must have been returned by a previous call to cudaMallocMipmappedArray(). If `devPtr` is 0, no operation is performed.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return cudaErrorInitializationError, cudaErrorInsufficientDriver or cudaErrorNoDevice if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by cudaStreamAddCallback no CUDA function may be called from callback. cudaErrorNotPermitted may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

cudaMalloc, cudaMallocPitch, cudaFree, cudaMallocArray, cudaMallocHost (C API),
cudaFreeHost, cudaHostAlloc, cuMipmappedArrayDestroy

```
__host__ cudaError_t cudaGetMipmappedArrayLevel
(cudaArray_t *levelArray,
cudaMipmappedArray_const_t mipmappedArray,
unsigned int level)
```

Gets a mipmap level of a CUDA mipmapped array.

Parameters

levelArray

- Returned mipmap level CUDA array

mipmappedArray

- CUDA mipmapped array

level

- Mipmap level

Returns

`cudaSuccess`, `cudaErrorInvalidValue` `cudaErrorInvalidResourceHandle`

Description

Returns in `*levelArray` a CUDA array that represents a single mipmap level of the CUDA mipmapped array `mipmappedArray`.

If `level` is greater than the maximum number of levels in this mipmapped array, `cudaErrorInvalidValue` is returned.

If `mipmappedArray` is NULL, `cudaErrorInvalidResourceHandle` is returned.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc3D](#), [cudaMalloc](#), [cudaMallocPitch](#), [cudaFree](#), [cudaFreeArray](#), [cudaMallocHost \[C API\]](#), [cudaFreeHost](#), [cudaHostAlloc](#), [make_cudaExtent](#), [cuMipmappedArrayGetLevel](#)

```
_host_cudaError_t cudaGetSymbolAddress (void  
**devPtr, const void *symbol)
```

Finds the address associated with a CUDA symbol.

Parameters

devPtr

- Return device pointer associated with symbol

symbol

- Device symbol address

Returns

[cudaSuccess](#), [cudaErrorInvalidSymbol](#), [cudaErrorNoKernelImageForDevice](#)

Description

Returns in ***devPtr** the address of symbol **symbol** on the device. **symbol** is a variable that resides in global or constant memory space. If **symbol** cannot be found, or if **symbol** is not declared in the global or constant memory space, ***devPtr** is unchanged and the error [cudaErrorInvalidSymbol](#) is returned.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Use of a string naming a variable as the **symbol** parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetSymbolAddress](#) [C++ API], [cudaGetSymbolSize](#) [C API], [cuModuleGetGlobal](#)

`_host__cudaError_t cudaGetSymbolSize (size_t *size, const void *symbol)`

Finds the size of the object associated with a CUDA symbol.

Parameters

size

- Size of object associated with symbol

symbol

- Device symbol address

Returns

[cudaSuccess](#), [cudaErrorInvalidSymbol](#), [cudaErrorNoKernelImageForDevice](#)

Description

Returns in `*size` the size of symbol `symbol`. `symbol` is a variable that resides in global or constant memory space. If `symbol` cannot be found, or if `symbol` is not declared in global or constant memory space, `*size` is unchanged and the error [cudaErrorInvalidSymbol](#) is returned.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Use of a string naming a variable as the `symbol` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetSymbolAddress](#) (C API), [cudaGetSymbolSize](#) (C++ API), [cuModuleGetGlobal](#)

`__host__ cudaError_t cudaHostAlloc (void **pHost, size_t size, unsigned int flags)`

Allocates page-locked memory on the host.

Parameters

pHost

- Device pointer to allocated memory

size

- Requested allocation size in bytes

flags

- Requested properties of allocated memory

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorMemoryAllocation`

Description

Allocates `size` bytes of host memory that is page-locked and accessible to the device. The driver tracks the virtual memory ranges allocated with this function and automatically accelerates calls to functions such as `cudaMemcpy()`. Since the memory can be accessed directly by the device, it can be read or written with much higher bandwidth than pageable memory obtained with functions such as `malloc()`. Allocating excessive amounts of pinned memory may degrade system performance, since it reduces the amount of memory available to the system for paging. As a result, this function is best used sparingly to allocate staging areas for data exchange between host and device.

The `flags` parameter enables different options to be specified that affect the allocation, as follows.

- ▶ `cudaHostAllocDefault`: This flag's value is defined to be 0 and causes `cudaHostAlloc()` to emulate `cudaMallocHost()`.
- ▶ `cudaHostAllocPortable`: The memory returned by this call will be considered as pinned memory by all CUDA contexts, not just the one that performed the allocation.
- ▶ `cudaHostAllocMapped`: Maps the allocation into the CUDA address space. The device pointer to the memory may be obtained by calling `cudaHostGetDevicePointer()`.
- ▶ `cudaHostAllocWriteCombined`: Allocates the memory as write-combined (WC). WC memory can be transferred across the PCI Express bus more quickly on some system configurations, but cannot be read efficiently by most CPUs. WC memory is a good option for buffers that will be written by the CPU and read by the device via mapped pinned memory or host->device transfers.

All of these flags are orthogonal to one another: a developer may allocate memory that is portable, mapped and/or write-combined with no restrictions.

In order for the [cudaHostAllocMapped](#) flag to have any effect, the CUDA context must support the [cudaDeviceMapHost](#) flag, which can be checked via [cudaGetDeviceFlags\(\)](#). The [cudaDeviceMapHost](#) flag is implicitly set for contexts created via the runtime API.

The [cudaHostAllocMapped](#) flag may be specified on CUDA contexts for devices that do not support mapped pinned memory. The failure is deferred to [cudaHostGetDevicePointer\(\)](#) because the memory may be mapped into other CUDA contexts via the [cudaHostAllocPortable](#) flag.

Memory allocated by this function must be freed with [cudaFreeHost\(\)](#).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaSetDeviceFlags](#), [cudaMallocHost](#) (C API), [cudaFreeHost](#), [cudaGetDeviceFlags](#), [cuMemHostAlloc](#)

`__host__ cudaError_t cudaHostGetDevicePointer (void **pDevice, void *pHost, unsigned int flags)`

Passes back device pointer of mapped host memory allocated by `cudaHostAlloc` or registered by `cudaHostRegister`.

Parameters

pDevice

- Returned device pointer for mapped memory

pHost

- Requested host pointer mapping

flags

- Flags for extensions (must be 0 for now)

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

Passes back the device pointer corresponding to the mapped, pinned host buffer allocated by [cudaHostAlloc\(\)](#) or registered by [cudaHostRegister\(\)](#).

[cudaHostGetDevicePointer\(\)](#) will fail if the [cudaDeviceMapHost](#) flag was not specified before deferred context creation occurred, or if called on a device that does not support mapped, pinned memory.

For devices that have a non-zero value for the device attribute [cudaDevAttrCanUseHostPointerForRegisteredMem](#), the memory can also be accessed from the device using the host pointer `pHost`. The device pointer returned by [cudaHostGetDevicePointer\(\)](#) may or may not match the original host pointer `pHost` and depends on the devices visible to the application. If all devices visible to the application have a non-zero value for the device attribute, the device pointer returned by [cudaHostGetDevicePointer\(\)](#) will match the original pointer `pHost`. If any device visible to the application has a zero value for the device attribute, the device pointer returned by [cudaHostGetDevicePointer\(\)](#) will not match the original host pointer `pHost`, but it will be suitable for use on all devices provided Unified Virtual Addressing is enabled. In such systems, it is valid to access the memory using either pointer on devices that have a non-zero value for the device attribute. Note however that such devices should access the memory using only of the two pointers and not both.

`flags` provides for future releases. For now, it must be set to 0.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaSetDeviceFlags](#), [cudaHostAlloc](#), [cuMemHostGetDevicePointer](#)

__host__ cudaError_t cudaHostGetFlags (unsigned int *pFlags, void *pHost)

Passes back flags used to allocate pinned host memory allocated by cudaHostAlloc.

Parameters

pFlags

- Returned flags word

pHost

- Host pointer

Returns

cudaSuccess, cudaErrorInvalidValue

Description

cudaHostGetFlags() will fail if the input pointer does not reside in an address range allocated by cudaHostAlloc().

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return cudaErrorInitializationError, cudaErrorInsufficientDriver or cudaErrorNoDevice if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by cudaStreamAddCallback no CUDA function may be called from callback. cudaErrorNotPermitted may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

cudaHostAlloc, cuMemHostGetFlags

__host__ cudaError_t cudaHostRegister (void *ptr, size_t size, unsigned int flags)

Registers an existing host memory range for use by CUDA.

Parameters

ptr

- Host pointer to memory to page-lock

size

- Size in bytes of the address range to page-lock in bytes

flags

- Flags for allocation request

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#),
[cudaErrorHostMemoryAlreadyRegistered](#), [cudaErrorNotSupported](#)

Description

Page-locks the memory range specified by `ptr` and `size` and maps it for the device(s) as specified by `flags`. This memory range also is added to the same tracking mechanism as [cudaHostAlloc\(\)](#) to automatically accelerate calls to functions such as [cudaMemcpy\(\)](#). Since the memory can be accessed directly by the device, it can be read or written with much higher bandwidth than pageable memory that has not been registered. Page-locking excessive amounts of memory may degrade system performance, since it reduces the amount of memory available to the system for paging. As a result, this function is best used sparingly to register staging areas for data exchange between host and device.

On systems where `pageableMemoryAccessUsesHostPageTables` is true, [cudaHostRegister](#) will not page-lock the memory range specified by `ptr` but only populate unpopulated pages.

[cudaHostRegister](#) is supported only on I/O coherent devices that have a non-zero value for the device attribute [cudaDevAttrHostRegisterSupported](#).

The `flags` parameter enables different options to be specified that affect the allocation, as follows.

- ▶ [cudaHostRegisterDefault](#): On a system with unified virtual addressing, the memory will be both mapped and portable. On a system with no unified virtual addressing, the memory will be neither mapped nor portable.
- ▶ [cudaHostRegisterPortable](#): The memory returned by this call will be considered as pinned memory by all CUDA contexts, not just the one that performed the allocation.
- ▶ [cudaHostRegisterMapped](#): Maps the allocation into the CUDA address space. The device pointer to the memory may be obtained by calling [cudaHostGetDevicePointer\(\)](#).
- ▶ [cudaHostRegisterIoMemory](#): The passed memory pointer is treated as pointing to some memory-mapped I/O space, e.g. belonging to a third-party PCIe device, and it will be marked as non cache-coherent and contiguous.
- ▶ [cudaHostRegisterReadOnly](#): The passed memory pointer is treated as pointing to memory that is considered read-only by the device. On platforms without `cudaDevAttrPageableMemoryAccessUsesHostPageTables`, this flag is required in order to register memory mapped to the CPU as read-only. Support for the use of this flag can be queried from the device attribute `cudaDeviceAttrReadOnlyHostRegisterSupported`. Using

this flag with a current context associated with a device that does not have this attribute set will cause [cudaHostRegister](#) to error with `cudaErrorNotSupported`.

All of these flags are orthogonal to one another: a developer may page-lock memory that is portable or mapped with no restrictions.

The CUDA context must have been created with the `cudaMapHost` flag in order for the [cudaHostRegisterMapped](#) flag to have any effect.

The [cudaHostRegisterMapped](#) flag may be specified on CUDA contexts for devices that do not support mapped pinned memory. The failure is deferred to [cudaHostGetDevicePointer\(\)](#) because the memory may be mapped into other CUDA contexts via the [cudaHostRegisterPortable](#) flag.

For devices that have a non-zero value for the device attribute [cudaDevAttrCanUseHostPointerForRegisteredMem](#), the memory can also be accessed from the device using the host pointer `ptr`. The device pointer returned by [cudaHostGetDevicePointer\(\)](#) may or may not match the original host pointer `ptr` and depends on the devices visible to the application. If all devices visible to the application have a non-zero value for the device attribute, the device pointer returned by [cudaHostGetDevicePointer\(\)](#) will match the original pointer `ptr`. If any device visible to the application has a zero value for the device attribute, the device pointer returned by [cudaHostGetDevicePointer\(\)](#) will not match the original host pointer `ptr`, but it will be suitable for use on all devices provided Unified Virtual Addressing is enabled. In such systems, it is valid to access the memory using either pointer on devices that have a non-zero value for the device attribute. Note however that such devices should access the memory using only of the two pointers and not both.

The memory page-locked by this function must be unregistered with [cudaHostUnregister\(\)](#).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaHostUnregister](#), [cudaHostGetFlags](#), [cudaHostGetDevicePointer](#), [cuMemHostRegister](#)

__host__ cudaError_t cudaHostUnregister (void *ptr)

Unregisters a memory range that was registered with cudaHostRegister.

Parameters

ptr

- Host pointer to memory to unregister

Returns

cudaSuccess, cudaErrorInvalidValue, cudaErrorHostMemoryNotRegistered

Description

Unmaps the memory range whose base address is specified by **ptr**, and makes it pageable again.

The base address must be the same one specified to cudaHostRegister().

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return cudaErrorInitializationError, cudaErrorInsufficientDriver or cudaErrorNoDevice if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by cudaStreamAddCallback no CUDA function may be called from callback. cudaErrorNotPermitted may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

cudaHostUnregister, cuMemHostUnregister

__host__ __device__ cudaError_t cudaMalloc (void **devPtr, size_t size)

Allocate memory on the device.

Parameters

devPtr

- Pointer to allocated device memory

size

- Requested allocation size in bytes

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

Allocates `size` bytes of linear memory on the device and returns in `*devPtr` a pointer to the allocated memory. The allocated memory is suitably aligned for any kind of variable. The memory is not cleared. [cudaMalloc\(\)](#) returns [cudaErrorMemoryAllocation](#) in case of failure.

The device version of [cudaFree](#) cannot be used with a `*devPtr` allocated using the host API, and vice versa.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMallocPitch](#), [cudaFree](#), [cudaMallocArray](#), [cudaFreeArray](#), [cudaMalloc3D](#), [cudaMalloc3DArray](#), [cudaMallocHost](#) (C API), [cudaFreeHost](#), [cudaHostAlloc](#), [cuMemAlloc](#)

host cudaError_t `cudaMalloc3D` (`cudaPitchedPtr` `*pitchedDevPtr`, `cudaExtent extent`)

Allocates logical 1D, 2D, or 3D memory objects on the device.

Parameters

pitchedDevPtr

- Pointer to allocated pitched device memory

extent

- Requested allocation size (width field in bytes)

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

Allocates at least `width * height * depth` bytes of linear memory on the device and returns a `cudaPitchedPtr` in which `ptr` is a pointer to the allocated memory. The function may pad the allocation to ensure hardware alignment requirements are met. The pitch returned in the `pitch` field of `pitchedDevPtr` is the width in bytes of the allocation.

The returned `cudaPitchedPtr` contains additional fields `xsize` and `ysize`, the logical width and height of the allocation, which are equivalent to the `width` and `height` `extent` parameters provided by the programmer during allocation.

For allocations of 2D and 3D objects, it is highly recommended that programmers perform allocations using `cudaMalloc3D()` or `cudaMallocPitch()`. Due to alignment restrictions in the hardware, this is especially true if the application will be performing memory copies involving 2D or 3D objects (whether linear memory or CUDA arrays).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

`cudaMallocPitch`, `cudaFree`, `cudaMemcpy3D`, `cudaMemset3D`, `cudaMalloc3DArray`, `cudaMallocArray`, `cudaFreeArray`, `cudaMallocHost` (C API), `cudaFreeHost`, `cudaHostAlloc`, `make_cudaPitchedPtr`, `make_cudaExtent`, `cuMemAllocPitch`

**`__host__ cudaError_t cudaMalloc3DArray
(cudaArray_t *array, const cudaChannelFormatDesc
*desc, cudaExtent extent, unsigned int flags)`**

Allocate an array on the device.

Parameters

array

- Pointer to allocated array in device memory

desc

- Requested channel format

extent

- Requested allocation size (width field in elements)

flags

- Flags for extensions

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

Allocates a CUDA array according to the [cudaChannelFormatDesc](#) structure desc and returns a handle to the new CUDA array in *array.

The [cudaChannelFormatDesc](#) is defined as:

```
/* struct cudaChannelFormatDesc {
    int x, y, z, w;
    enum cudaChannelFormatKind
        f;
};
```

where [cudaChannelFormatKind](#) is one of [cudaChannelFormatKindSigned](#), [cudaChannelFormatKindUnsigned](#), or [cudaChannelFormatKindFloat](#).

[cudaMalloc3DArray\(\)](#) can allocate the following:

- ▶ A 1D array is allocated if the height and depth extents are both zero.
- ▶ A 2D array is allocated if only the depth extent is zero.
- ▶ A 3D array is allocated if all three extents are non-zero.
- ▶ A 1D layered CUDA array is allocated if only the height extent is zero and the `cudaArrayLayered` flag is set. Each layer is a 1D array. The number of layers is determined by the depth extent.
- ▶ A 2D layered CUDA array is allocated if all three extents are non-zero and the `cudaArrayLayered` flag is set. Each layer is a 2D array. The number of layers is determined by the depth extent.
- ▶ A cubemap CUDA array is allocated if all three extents are non-zero and the `cudaArrayCubemap` flag is set. Width must be equal to height, and depth must be six. A cubemap is a special type of 2D layered CUDA array, where the six layers represent the six faces of a cube. The order of the six layers in memory is the same as that listed in [cudaGraphicsCubeFace](#).
- ▶ A cubemap layered CUDA array is allocated if all three extents are non-zero, and both, `cudaArrayCubemap` and `cudaArrayLayered` flags are set. Width must be equal to height, and depth must be a multiple of six. A cubemap layered CUDA array is a special type of 2D

layered CUDA array that consists of a collection of cubemaps. The first six layers represent the first cubemap, the next six layers form the second cubemap, and so on.

The `flags` parameter enables different options to be specified that affect the allocation, as follows.

- ▶ [`cudaArrayDefault`](#): This flag's value is defined to be 0 and provides default array allocation
- ▶ [`cudaArrayLayered`](#): Allocates a layered CUDA array, with the depth extent indicating the number of layers
- ▶ [`cudaArrayCubemap`](#): Allocates a cubemap CUDA array. Width must be equal to height, and depth must be six. If the `cudaArrayLayered` flag is also set, depth must be a multiple of six.
- ▶ [`cudaArraySurfaceLoadStore`](#): Allocates a CUDA array that could be read from or written to using a surface reference.
- ▶ [`cudaArrayTextureGather`](#): This flag indicates that texture gather operations will be performed on the CUDA array. Texture gather can only be performed on 2D CUDA arrays.
- ▶ [`cudaArraySparse`](#): Allocates a CUDA array without physical backing memory. The subregions within this sparse array can later be mapped onto a physical memory allocation by calling [`cuMemMapArrayAsync`](#). This flag can only be used for creating 2D, 3D or 2D layered sparse CUDA arrays. The physical backing memory must be allocated via [`cuMemCreate`](#).
- ▶ [`cudaArrayDeferredMapping`](#): Allocates a CUDA array without physical backing memory. The entire array can later be mapped onto a physical memory allocation by calling [`cuMemMapArrayAsync`](#). The physical backing memory must be allocated via [`cuMemCreate`](#).

The width, height and depth extents must meet certain size requirements as listed in the following table. All values are specified in elements.

Note that 2D CUDA arrays have different size requirements if the [`cudaArrayTextureGather`](#) flag is set. In that case, the valid range for (width, height, depth) is ((1,maxTexture2DGather[0]), (1,maxTexture2DGather[1]), 0).

CUDA array type	Valid extents that must always be met {{width range in elements}, {height range}, {depth range}}	Valid extents with <code>cudaArraySurfaceLoadStore</code> set {{width range in elements}, {height range}, {depth range}}
1D	{ (1,maxTexture1D), 0, 0 }	{ (1,maxSurface1D), 0, 0 }
2D	{ (1,maxTexture2D[0]), (1,maxTexture2D[1]), 0 }	{ (1,maxSurface2D[0]), (1,maxSurface2D[1]), 0 }
3D	{ (1,maxTexture3D[0]), (1,maxTexture3D[1]), (1,maxTexture3D[2]) } OR { (1,maxTexture3DAlt[0]), (1,maxTexture3DAlt[1]), (1,maxTexture3DAlt[2]) }	{ (1,maxSurface3D[0]), (1,maxSurface3D[1]), (1,maxSurface3D[2]) }

CUDA array type	Valid extents that must always be met {(width range in elements), (height range), (depth range)}	Valid extents with cudaArraySurfaceLoadStore set {(width range in elements), (height range), (depth range)}
	{(1,maxTexture3DAlt[1]), (1,maxTexture3DAlt[2])}	
1D Layered	{(1,maxTexture1DLayered[0]), 0, (1,maxTexture1DLayered[1])}	{(1,maxSurface1DLayered[0]), 0, (1,maxSurface1DLayered[1])}
2D Layered	{(1,maxTexture2DLayered[0]), (1,maxTexture2DLayered[1]), (1,maxTexture2DLayered[2])}	{(1,maxSurface2DLayered[0]), (1,maxSurface2DLayered[1]), (1,maxSurface2DLayered[2])}
Cubemap	{(1,maxTextureCubemap), (1,maxTextureCubemap), 6}	{(1,maxSurfaceCubemap), (1,maxSurfaceCubemap), 6}
Cubemap Layered	{(1,maxTextureCubemapLayered[0]), (1,maxTextureCubemapLayered[0]), (1,maxTextureCubemapLayered[1])}	{(1,maxSurfaceCubemapLayered[0]), (1,maxSurfaceCubemapLayered[0]), (1,maxSurfaceCubemapLayered[1])}

 Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc3D](#), [cudaMalloc](#), [cudaMallocPitch](#), [cudaFree](#), [cudaFreeArray](#), [cudaMallocHost](#) [C API], [cudaFreeHost](#), [cudaHostAlloc](#), [make_cudaExtent](#), [cuArray3DCreate](#)

```
_host__cudaError_t cudaMallocArray (cudaArray_t  

*array, const cudaChannelFormatDesc *desc, size_t  

width, size_t height, unsigned int flags)
```

Allocate an array on the device.

Parameters

array

- Pointer to allocated array in device memory

desc

- Requested channel format

width

- Requested array allocation width

height

- Requested array allocation height

flags

- Requested properties of allocated array

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

Allocates a CUDA array according to the [cudaChannelFormatDesc](#) structure **desc** and returns a handle to the new CUDA array in ***array**.

The [cudaChannelFormatDesc](#) is defined as:

```
/* struct cudaChannelFormatDesc {  

    int x, y, z, w;  

    enum cudaChannelFormatKind  

        f;  

};
```

where [cudaChannelFormatKind](#) is one of [cudaChannelFormatKindSigned](#), [cudaChannelFormatKindUnsigned](#), or [cudaChannelFormatKindFloat](#).

The **flags** parameter enables different options to be specified that affect the allocation, as follows.

- ▶ [cudaArrayDefault](#): This flag's value is defined to be 0 and provides default array allocation
- ▶ [cudaArraySurfaceLoadStore](#): Allocates an array that can be read from or written to using a surface reference
- ▶ [cudaArrayTextureGather](#): This flag indicates that texture gather operations will be performed on the array.

- ▶ [cudaArraySparse](#): Allocates a CUDA array without physical backing memory. The subregions within this sparse array can later be mapped onto a physical memory allocation by calling [cuMemMapArrayAsync](#). The physical backing memory must be allocated via [cuMemCreate](#).
- ▶ [cudaArrayDeferredMapping](#): Allocates a CUDA array without physical backing memory. The entire array can later be mapped onto a physical memory allocation by calling [cuMemMapArrayAsync](#). The physical backing memory must be allocated via [cuMemCreate](#).

`width` and `height` must meet certain size requirements. See [cudaMalloc3DArray\(\)](#) for more details.


Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc](#), [cudaMallocPitch](#), [cudaFree](#), [cudaFreeArray](#), [cudaMallocHost \[C API\]](#), [cudaFreeHost](#), [cudaMalloc3D](#), [cudaMalloc3DArray](#), [cudaHostAlloc](#), [cuArrayCreate](#)

**`__host__ cudaError_t cudaMallocHost (void **ptr,
size_t size)`**

Allocates page-locked memory on the host.

Parameters

ptr

- Pointer to allocated host memory

size

- Requested allocation size in bytes

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

Allocates `size` bytes of host memory that is page-locked and accessible to the device. The driver tracks the virtual memory ranges allocated with this function and automatically accelerates calls to functions such as `cudaMemcpy*`(). Since the memory can be accessed directly by the device, it can be read or written with much higher bandwidth than pageable memory obtained with functions such as `malloc()`.

On systems where `pageableMemoryAccessUsesHostPageTables` is true, `cudaMallocHost` may not page-lock the allocated memory.

Page-locking excessive amounts of memory with `cudaMallocHost()` may degrade system performance, since it reduces the amount of memory available to the system for paging. As a result, this function is best used sparingly to allocate staging areas for data exchange between host and device.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc](#), [cudaMallocPitch](#), [cudaMallocArray](#), [cudaMalloc3D](#), [cudaMalloc3DArray](#), [cudaHostAlloc](#), [cudaFree](#), [cudaFreeArray](#), [cudaMallocHost \(C++ API\)](#), [cudaFreeHost](#), [cudaHostAlloc](#), [cuMemAllocHost](#)

`_host__cudaError_t cudaMallocManaged (void **devPtr, size_t size, unsigned int flags)`

Allocates memory that will be automatically managed by the Unified Memory system.

Parameters

devPtr

- Pointer to allocated device memory

size

- Requested allocation size in bytes

flags

- Must be either [cudaMemAttachGlobal](#) or [cudaMemAttachHost](#) (defaults to [cudaMemAttachGlobal](#))

Returns

[cudaSuccess](#), [cudaErrorMemoryAllocation](#), [cudaErrorNotSupported](#), [cudaErrorInvalidValue](#)

Description

Allocates `size` bytes of managed memory on the device and returns in `*devPtr` a pointer to the allocated memory. If the device doesn't support allocating managed memory, [cudaErrorNotSupported](#) is returned. Support for managed memory can be queried using the device attribute [cudaDevAttrManagedMemory](#). The allocated memory is suitably aligned for any kind of variable. The memory is not cleared. If `size` is 0, [cudaMallocManaged](#) returns [cudaErrorInvalidValue](#). The pointer is valid on the CPU and on all GPUs in the system that support managed memory. All accesses to this pointer must obey the Unified Memory programming model.

`flags` specifies the default stream association for this allocation. `flags` must be one of [cudaMemAttachGlobal](#) or [cudaMemAttachHost](#). The default value for `flags` is [cudaMemAttachGlobal](#). If [cudaMemAttachGlobal](#) is specified, then this memory is accessible from any stream on any device. If [cudaMemAttachHost](#) is specified, then the allocation should not be accessed from devices that have a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#); an explicit call to [cudaStreamAttachMemAsync](#) will be required to enable access on such devices.

If the association is later changed via [cudaStreamAttachMemAsync](#) to a single stream, the default association, as specified during [cudaMallocManaged](#), is restored when that stream is destroyed. For `__managed__` variables, the default association is always [cudaMemAttachGlobal](#). Note that destroying a stream is an asynchronous operation, and as a result, the change to default association won't happen until all work in the stream has completed.

Memory allocated with [cudaMallocManaged](#) should be released with [cudaFree](#).

Device memory oversubscription is possible for GPUs that have a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#). Managed memory on such GPUs may be evicted from device memory to host memory at any time by the Unified Memory driver in order to make room for other allocations.

In a multi-GPU system where all GPUs have a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#), managed memory may not be populated when this API returns and instead may be populated on access. In such systems, managed memory can migrate to any processor's memory at any time. The Unified Memory driver will employ heuristics to maintain data locality and prevent excessive page faults to the extent possible. The application can also guide the driver about memory usage patterns via [cudaMemAdvise](#).

The application can also explicitly migrate memory to a desired processor's memory via [cudaMemPrefetchAsync](#).

In a multi-GPU system where all of the GPUs have a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#) and all the GPUs have peer-to-peer support with each other, the physical storage for managed memory is created on the GPU which is active at the time [cudaMallocManaged](#) is called. All other GPUs will reference the data at reduced bandwidth via peer mappings over the PCIe bus. The Unified Memory driver does not migrate memory among such GPUs.

In a multi-GPU system where not all GPUs have peer-to-peer support with each other and where the value of the device attribute [cudaDevAttrConcurrentManagedAccess](#) is zero for at least one of those GPUs, the location chosen for physical storage of managed memory is system-dependent.

- ▶ On Linux, the location chosen will be device memory as long as the current set of active contexts are on devices that either have peer-to-peer support with each other or have a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#). If there is an active context on a GPU that does not have a non-zero value for that device attribute and it does not have peer-to-peer support with the other devices that have active contexts on them, then the location for physical storage will be 'zero-copy' or host memory. Note that this means that managed memory that is located in device memory is migrated to host memory if a new context is created on a GPU that doesn't have a non-zero value for the device attribute and does not support peer-to-peer with at least one of the other devices that has an active context. This in turn implies that context creation may fail if there is insufficient host memory to migrate all managed allocations.
- ▶ On Windows, the physical storage is always created in 'zero-copy' or host memory. All GPUs will reference the data at reduced bandwidth over the PCIe bus. In these circumstances, use of the environment variable CUDA_VISIBLE_DEVICES is recommended to restrict CUDA to only use those GPUs that have peer-to-peer support. Alternatively, users can also set CUDA_MANAGED_FORCE_DEVICE_ALLOC to a non-zero value to force the driver to always use device memory for physical storage. When this environment variable is set to a non-zero value, all devices used in that process that support managed memory have to be peer-to-peer compatible with each other. The error [cudaErrorInvalidDevice](#) will be returned if a device that supports managed memory is used and it is not peer-to-peer compatible with any of the other managed memory supporting devices that were previously used in that process, even if [cudaDeviceReset](#) has been called on those devices. These environment variables are described in the CUDA programming guide under the "CUDA environment variables" section.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMallocPitch](#), [cudaFree](#), [cudaMallocArray](#), [cudaFreeArray](#), [cudaMalloc3D](#),
[cudaMalloc3DArray](#), [cudaMallocHost](#) [C API], [cudaFreeHost](#), [cudaHostAlloc](#),
[cudaDeviceGetAttribute](#), [cudaStreamAttachMemAsync](#), [cuMemAllocManaged](#)

`__host__ cudaError_t cudaMallocMipmappedArray`
`(cudaMipmappedArray_t *mipmappedArray, const`
`cudaChannelFormatDesc *desc, cudaExtent extent,`
`unsigned int numLevels, unsigned int flags)`

Allocate a mipmapped array on the device.

Parameters**mipmappedArray**

- Pointer to allocated mipmapped array in device memory

desc

- Requested channel format

extent

- Requested allocation size (width field in elements)

numLevels

- Number of mipmap levels to allocate

flags

- Flags for extensions

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

Allocates a CUDA mipmapped array according to the [cudaChannelFormatDesc](#) structure desc and returns a handle to the new CUDA mipmapped array in *mipmappedArray. numLevels specifies the number of mipmap levels to be allocated. This value is clamped to the range [1, 1 + floor(log2(max{width, height, depth}))].

The `cudaChannelFormatDesc` is defined as:

```
/* struct cudaChannelFormatDesc {
    int x, y, z, w;
    enum cudaChannelFormatKind
        f;
};
```

where `cudaChannelFormatKind` is one of `cudaChannelFormatKindSigned`, `cudaChannelFormatKindUnsigned`, or `cudaChannelFormatKindFloat`.

`cudaMallocMipmappedArray()` can allocate the following:

- ▶ A 1D mipmapped array is allocated if the height and depth extents are both zero.
- ▶ A 2D mipmapped array is allocated if only the depth extent is zero.
- ▶ A 3D mipmapped array is allocated if all three extents are non-zero.
- ▶ A 1D layered CUDA mipmapped array is allocated if only the height extent is zero and the `cudaArrayLayered` flag is set. Each layer is a 1D mipmapped array. The number of layers is determined by the depth extent.
- ▶ A 2D layered CUDA mipmapped array is allocated if all three extents are non-zero and the `cudaArrayLayered` flag is set. Each layer is a 2D mipmapped array. The number of layers is determined by the depth extent.
- ▶ A cubemap CUDA mipmapped array is allocated if all three extents are non-zero and the `cudaArrayCubemap` flag is set. Width must be equal to height, and depth must be six. The order of the six layers in memory is the same as that listed in `cudaGraphicsCubeFace`.
- ▶ A cubemap layered CUDA mipmapped array is allocated if all three extents are non-zero, and both, `cudaArrayCubemap` and `cudaArrayLayered` flags are set. Width must be equal to height, and depth must be a multiple of six. A cubemap layered CUDA mipmapped array is a special type of 2D layered CUDA mipmapped array that consists of a collection of cubemap mipmapped arrays. The first six layers represent the first cubemap mipmapped array, the next six layers form the second cubemap mipmapped array, and so on.

The `flags` parameter enables different options to be specified that affect the allocation, as follows.

- ▶ `cudaArrayDefault`: This flag's value is defined to be 0 and provides default mipmapped array allocation
- ▶ `cudaArrayLayered`: Allocates a layered CUDA mipmapped array, with the depth extent indicating the number of layers
- ▶ `cudaArrayCubemap`: Allocates a cubemap CUDA mipmapped array. Width must be equal to height, and depth must be six. If the `cudaArrayLayered` flag is also set, depth must be a multiple of six.
- ▶ `cudaArraySurfaceLoadStore`: This flag indicates that individual mipmap levels of the CUDA mipmapped array will be read from or written to using a surface reference.

- ▶ [cudaArrayTextureGather](#): This flag indicates that texture gather operations will be performed on the CUDA array. Texture gather can only be performed on 2D CUDA mipmapped arrays, and the gather operations are performed only on the most detailed mipmap level.
- ▶ [cudaArraySparse](#): Allocates a CUDA mipmapped array without physical backing memory. The subregions within this sparse array can later be mapped onto a physical memory allocation by calling [cuMemMapArrayAsync](#). This flag can only be used for creating 2D, 3D or 2D layered sparse CUDA mipmapped arrays. The physical backing memory must be allocated via [cuMemCreate](#).
- ▶ [cudaArrayDeferredMapping](#): Allocates a CUDA mipmapped array without physical backing memory. The entire array can later be mapped onto a physical memory allocation by calling [cuMemMapArrayAsync](#). The physical backing memory must be allocated via [cuMemCreate](#).

The width, height and depth extents must meet certain size requirements as listed in the following table. All values are specified in elements.

CUDA array type	Valid extents that must always be met {(width range in elements), (height range), (depth range)}	Valid extents with cudaArraySurfaceLoadStore set {(width range in elements), (height range), (depth range)}
1D	{ {1,maxTexture1DMipmap}, 0, 0 }	{ {1,maxSurface1D}, 0, 0 }
2D	{ {1,maxTexture2DMipmap[0]}, {1,maxTexture2DMipmap[1]}, 0 }	{ {1,maxSurface2D[0]}, {1,maxSurface2D[1]}, 0 }
3D	{ {1,maxTexture3D[0]}, {1,maxTexture3D[1]}, {1,maxTexture3D[2]} } OR { {1,maxTexture3DAlt[0]}, {1,maxTexture3DAlt[1]}, {1,maxTexture3DAlt[2]} }	{ {1,maxSurface3D[0]}, {1,maxSurface3D[1]}, {1,maxSurface3D[2]} }
1D Layered	{ {1,maxTexture1DLayered[0]}, 0, {1,maxTexture1DLayered[1]} }	{ {1,maxSurface1DLayered[0]}, 0, {1,maxSurface1DLayered[1]} }
2D Layered	{ {1,maxTexture2DLayered[0]}, {1,maxTexture2DLayered[1]}, {1,maxTexture2DLayered[2]} }	{ {1,maxSurface2DLayered[0]}, {1,maxSurface2DLayered[1]}, {1,maxSurface2DLayered[2]} }
Cubemap	{ {1,maxTextureCubemap}, {1,maxTextureCubemap}, 6 }	{ {1,maxSurfaceCubemap}, {1,maxSurfaceCubemap}, 6 }
Cubemap Layered	{ {1,maxTextureCubemapLayered[0]}, {1,maxTextureCubemapLayered[0]}, {1,maxTextureCubemapLayered[1]} }	{ {1,maxSurfaceCubemapLayered[0]}, {1,maxSurfaceCubemapLayered[0]}, {1,maxSurfaceCubemapLayered[1]} }

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc3D](#), [cudaMalloc](#), [cudaMallocPitch](#), [cudaFree](#), [cudaFreeArray](#), [cudaMallocHost](#) (C API), [cudaFreeHost](#), [cudaHostAlloc](#), [make_cudaExtent](#), [cuMipmappedArrayCreate](#)

__host__ cudaError_t cudaMallocPitch (void **devPtr, size_t *pitch, size_t width, size_t height)

Allocates pitched memory on the device.

Parameters

devPtr

- Pointer to allocated pitched device memory

pitch

- Pitch for allocation

width

- Requested pitched allocation width (in bytes)

height

- Requested pitched allocation height

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

Allocates at least `width` (in bytes) * `height` bytes of linear memory on the device and returns in `*devPtr` a pointer to the allocated memory. The function may pad the allocation to ensure that corresponding pointers in any given row will continue to meet the alignment requirements for coalescing as the address is updated from row to row. The pitch returned in `*pitch` by [cudaMallocPitch\(\)](#) is the width in bytes of the allocation. The intended usage of `pitch` is as a

separate parameter of the allocation, used to compute addresses within the 2D array. Given the row and column of an array element of type T, the address is computed as:

```
T* pElement = (T*) ((char*)BaseAddress + Row * pitch) + Column;
```

For allocations of 2D arrays, it is recommended that programmers consider performing pitch allocations using [cudaMallocPitch\(\)](#). Due to pitch alignment restrictions in the hardware, this is especially true if the application will be performing 2D memory copies between different regions of device memory (whether linear memory or CUDA arrays).

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc](#), [cudaFree](#), [cudaMallocArray](#), [cudaFreeArray](#), [cudaMallocHost](#) (C API),
[cudaFreeHost](#), [cudaMalloc3D](#), [cudaMalloc3DArray](#), [cudaHostAlloc](#), [cuMemAllocPitch](#)

__host__ cudaError_t cudaMemAdvise (const void *devPtr, size_t count, cudaMemoryAdvise advice, int device)

Advise about the usage of a given memory range.

Parameters

devPtr

- Pointer to memory to set the advice for

count

- Size in bytes of the memory range

advice

- Advice to be applied for the specified memory range

device

- Device to apply the advice for

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#)

Description

Advise the Unified Memory subsystem about the usage pattern for the memory range starting at `devPtr` with a size of `count` bytes. The start address and end address of the memory range will be rounded down and rounded up respectively to be aligned to CPU page size before the advice is applied. The memory range must refer to managed memory allocated via [cudaMallocManaged](#) or declared via `__managed__` variables. The memory range could also refer to system-allocated pageable memory provided it represents a valid, host-accessible region of memory and all additional constraints imposed by advice as outlined below are also satisfied. Specifying an invalid system-allocated pageable memory range results in an error being returned.

The `advice` parameter can take the following values:

- ▶ [cudaMemAdviseSetReadMostly](#): This implies that the data is mostly going to be read from and only occasionally written to. Any read accesses from any processor to this region will create a read-only copy of at least the accessed pages in that processor's memory. Additionally, if [cudaMemPrefetchAsync](#) is called on this region, it will create a read-only copy of the data on the destination processor. If any processor writes to this region, all copies of the corresponding page will be invalidated except for the one where the write occurred. The `device` argument is ignored for this advice. Note that for a page to be read-duplicated, the accessing processor must either be the CPU or a GPU that has a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#). Also, if a context is created on a device that does not have the device attribute [cudaDevAttrConcurrentManagedAccess](#) set, then read-duplication will not occur until all such contexts are destroyed. If the memory region refers to valid system-allocated pageable memory, then the accessing device must have a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#) for a read-only copy to be created on that device. Note however that if the accessing device also has a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccessUsesHostPageTables](#), then setting this advice will not create a read-only copy when that device accesses this memory region.
- ▶ `cudaMemAdviceUnsetReadMostly`: Undoes the effect of `cudaMemAdviceReadMostly` and also prevents the Unified Memory driver from attempting heuristic read-duplication on the memory range. Any read-duplicated copies of the data will be collapsed into a single copy. The location for the collapsed copy will be the preferred location if the page has a preferred location and one of the read-duplicated copies was resident at that location. Otherwise, the location chosen is arbitrary.
- ▶ [cudaMemAdviseSetPreferredLocation](#): This advice sets the preferred location for the data to be the memory belonging to `device`. Passing in `cudaCpuDeviceId` for `device` sets the preferred location as host memory. If `device` is a GPU, then it must have a non-zero value

for the device attribute [cudaDevAttrConcurrentManagedAccess](#). Setting the preferred location does not cause data to migrate to that location immediately. Instead, it guides the migration policy when a fault occurs on that memory region. If the data is already in its preferred location and the faulting processor can establish a mapping without requiring the data to be migrated, then data migration will be avoided. On the other hand, if the data is not in its preferred location or if a direct mapping cannot be established, then it will be migrated to the processor accessing it. It is important to note that setting the preferred location does not prevent data prefetching done using [cudaMemPrefetchAsync](#). Having a preferred location can override the page thrash detection and resolution logic in the Unified Memory driver. Normally, if a page is detected to be constantly thrashing between for example host and device memory, the page may eventually be pinned to host memory by the Unified Memory driver. But if the preferred location is set as device memory, then the page will continue to thrash indefinitely. If [cudaMemAdviseSetReadMostly](#) is also set on this memory region or any subset of it, then the policies associated with that advice will override the policies of this advice, unless read accesses from device will not result in a read-only copy being created on that device as outlined in description for the advice [cudaMemAdviseSetReadMostly](#). If the memory region refers to valid system-allocated pageable memory, then device must have a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#).

- ▶ [cudaMemAdviseUnsetPreferredLocation](#): Undoes the effect of [cudaMemAdviseSetPreferredLocation](#) and changes the preferred location to none.
- ▶ [cudaMemAdviseSetAccessedBy](#): This advice implies that the data will be accessed by device. Passing in [cudaCpuDeviceId](#) for device will set the advice for the CPU. If device is a GPU, then the device attribute [cudaDevAttrConcurrentManagedAccess](#) must be non-zero. This advice does not cause data migration and has no impact on the location of the data per se. Instead, it causes the data to always be mapped in the specified processor's page tables, as long as the location of the data permits a mapping to be established. If the data gets migrated for any reason, the mappings are updated accordingly. This advice is recommended in scenarios where data locality is not important, but avoiding faults is. Consider for example a system containing multiple GPUs with peer-to-peer access enabled, where the data located on one GPU is occasionally accessed by peer GPUs. In such scenarios, migrating data over to the other GPUs is not as important because the accesses are infrequent and the overhead of migration may be too high. But preventing faults can still help improve performance, and so having a mapping set up in advance is useful. Note that on CPU access of this data, the data may be migrated to host memory because the CPU typically cannot access device memory directly. Any GPU that had the [cudaMemAdviceSetAccessedBy](#) flag set for this data will now have its mapping updated to point to the page in host memory. If [cudaMemAdviseSetReadMostly](#) is also set on this memory region or any subset of it, then the policies associated with that advice will override the policies of this advice. Additionally, if the preferred location of this memory region or any subset of it is also device, then the policies associated with [cudaMemAdviseSetPreferredLocation](#) will

override the policies of this advice. If the memory region refers to valid system-allocated pageable memory, then device must have a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#). Additionally, if device has a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccessUsesHostPageTables](#), then this call has no effect.

- ▶ [cudaMemAdviseUnsetAccessedBy](#): Undoes the effect of [cudaMemAdviseSetAccessedBy](#). Any mappings to the data from device may be removed at any time causing accesses to result in non-fatal page faults. If the memory region refers to valid system-allocated pageable memory, then device must have a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#). Additionally, if device has a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccessUsesHostPageTables](#), then this call has no effect.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpyPeer](#), [cudaMemcpyAsync](#), [cudaMemcpy3DPeerAsync](#),
[cudaMemPrefetchAsync](#), [cuMemAdvise](#)

__host__ cudaError_t cudaMemAdvise_v2 (const void *devPtr, size_t count, cudaMemoryAdvise advice, cudaMemLocation location)

Advise about the usage of a given memory range.

Parameters**devPtr**

- Pointer to memory to set the advice for

count

- Size in bytes of the memory range

advice

- Advice to be applied for the specified memory range

location

- location to apply the advice for

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#)

Description

Advise the Unified Memory subsystem about the usage pattern for the memory range starting at `devPtr` with a size of `count` bytes. The start address and end address of the memory range will be rounded down and rounded up respectively to be aligned to CPU page size before the advice is applied. The memory range must refer to managed memory allocated via `cudaMemAllocManaged` or declared via `__managed__` variables. The memory range could also refer to system-allocated pageable memory provided it represents a valid, host-accessible region of memory and all additional constraints imposed by `advice` as outlined below are also satisfied. Specifying an invalid system-allocated pageable memory range results in an error being returned.

The `advice` parameter can take the following values:

- ▶ [cudaMemAdviseSetReadMostly](#): This implies that the data is mostly going to be read from and only occasionally written to. Any read accesses from any processor to this region will create a read-only copy of at least the accessed pages in that processor's memory. Additionally, if [cudaMemPrefetchAsync](#) or `cudaMemPrefetchAsync_v2` is called on this region, it will create a read-only copy of the data on the destination processor. If the target location for `cudaMemPrefetchAsync_v2` is a host NUMA node and a read-only copy already exists on another host NUMA node, that copy will be migrated to the targeted host NUMA node. If any processor writes to this region, all copies of the corresponding page will be invalidated except for the one where the write occurred. If the writing processor is the CPU and the preferred location of the page is a host NUMA node, then the page will also be migrated to that host NUMA node. The `location` argument is ignored for this advice. Note that for a page to be read-duplicated, the accessing processor must either be the CPU or a GPU that has a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#). Also, if a context is created on a device that does not have the device attribute [cudaDevAttrConcurrentManagedAccess](#) set, then read-duplication will not occur until all such contexts are destroyed. If the memory region refers to valid system-allocated pageable memory, then the accessing device must have a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#) for a read-only copy to be created on that device. Note however that if the accessing device also has a non-zero value for the device

attribute [cudaDevAttrPageableMemoryAccessUsesHostPageTables](#), then setting this advice will not create a read-only copy when that device accesses this memory region.

- ▶ `cudaMemAdviceUnsetReadMostly`: Undoes the effect of [cudaMemAdviseSetReadMostly](#) and also prevents the Unified Memory driver from attempting heuristic read-duplication on the memory range. Any read-duplicated copies of the data will be collapsed into a single copy. The location for the collapsed copy will be the preferred location if the page has a preferred location and one of the read-duplicated copies was resident at that location. Otherwise, the location chosen is arbitrary. Note: The `location` argument is ignored for this advice.
- ▶ [cudaMemAdviseSetPreferredLocation](#): This advice sets the preferred location for the data to be the memory belonging to `location`. When [cudaMemLocation::type](#) is [cudaMemLocationTypeHost](#), [cudaMemLocation::id](#) is ignored and the preferred location is set to be host memory. To set the preferred location to a specific host NUMA node, applications must set [cudaMemLocation::type](#) to [cudaMemLocationTypeHostNuma](#) and [cudaMemLocation::id](#) must specify the NUMA ID of the host NUMA node. If [cudaMemLocation::type](#) is set to [cudaMemLocationTypeHostNumaCurrent](#), [cudaMemLocation::id](#) will be ignored and the host NUMA node closest to the calling thread's CPU will be used as the preferred location. If [cudaMemLocation::type](#) is a [cudaMemLocationTypeDevice](#), then [cudaMemLocation::id](#) must be a valid device ordinal and the device must have a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#). Setting the preferred location does not cause data to migrate to that location immediately. Instead, it guides the migration policy when a fault occurs on that memory region. If the data is already in its preferred location and the faulting processor can establish a mapping without requiring the data to be migrated, then data migration will be avoided. On the other hand, if the data is not in its preferred location or if a direct mapping cannot be established, then it will be migrated to the processor accessing it. It is important to note that setting the preferred location does not prevent data prefetching done using [cudaMemPrefetchAsync](#). Having a preferred location can override the page thrash detection and resolution logic in the Unified Memory driver. Normally, if a page is detected to be constantly thrashing between for example host and device memory, the page may eventually be pinned to host memory by the Unified Memory driver. But if the preferred location is set as device memory, then the page will continue to thrash indefinitely. If [cudaMemAdviseSetReadMostly](#) is also set on this memory region or any subset of it, then the policies associated with that advice will override the policies of this advice, unless read accesses from `location` will not result in a read-only copy being created on that processor as outlined in description for the advice [cudaMemAdviseSetReadMostly](#). If the memory region refers to valid system-allocated pageable memory, and [cudaMemLocation::type](#) is [cudaMemLocationTypeDevice](#) then [cudaMemLocation::id](#) must be a valid device that has a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#).

- ▶ [cudaMemAdviseUnsetPreferredLocation](#): Undoes the effect of [cudaMemAdviseSetPreferredLocation](#) and changes the preferred location to none. The location argument is ignored for this advice.
- ▶ [cudaMemAdviseSetAccessedBy](#): This advice implies that the data will be accessed by processor location. The [cudaMemLocation::type](#) must be either [cudaMemLocationTypeDevice](#) with [cudaMemLocation::id](#) representing a valid device ordinal or [cudaMemLocationTypeHost](#) and [cudaMemLocation::id](#) will be ignored. All other location types are invalid. If [cudaMemLocation::id](#) is a GPU, then the device attribute [cudaDevAttrConcurrentManagedAccess](#) must be non-zero. This advice does not cause data migration and has no impact on the location of the data per se. Instead, it causes the data to always be mapped in the specified processor's page tables, as long as the location of the data permits a mapping to be established. If the data gets migrated for any reason, the mappings are updated accordingly. This advice is recommended in scenarios where data locality is not important, but avoiding faults is. Consider for example a system containing multiple GPUs with peer-to-peer access enabled, where the data located on one GPU is occasionally accessed by peer GPUs. In such scenarios, migrating data over to the other GPUs is not as important because the accesses are infrequent and the overhead of migration may be too high. But preventing faults can still help improve performance, and so having a mapping set up in advance is useful. Note that on CPU access of this data, the data may be migrated to host memory because the CPU typically cannot access device memory directly. Any GPU that had the [cudaMemAdviseSetAccessedBy](#) flag set for this data will now have its mapping updated to point to the page in host memory. If [cudaMemAdviseSetReadMostly](#) is also set on this memory region or any subset of it, then the policies associated with that advice will override the policies of this advice. Additionally, if the preferred location of this memory region or any subset of it is also location, then the policies associated with [CU_MEM_ADVISE_SET_PREFERRED_LOCATION](#) will override the policies of this advice. If the memory region refers to valid system-allocated pageable memory, and [cudaMemLocation::type](#) is [cudaMemLocationTypeDevice](#) then device in [cudaMemLocation::id](#) must have a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#). Additionally, if [cudaMemLocation::id](#) has a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccessUsesHostPageTables](#), then this call has no effect.
- ▶ [CU_MEM_ADVISE_UNSET_ACCESSED_BY](#): Undoes the effect of [cudaMemAdviseSetAccessedBy](#). Any mappings to the data from location may be removed at any time causing accesses to result in non-fatal page faults. If the memory region refers to valid system-allocated pageable memory, and [cudaMemLocation::type](#) is [cudaMemLocationTypeDevice](#) then device in [cudaMemLocation::id](#) must have a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#). Additionally, if [cudaMemLocation::id](#) has a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccessUsesHostPageTables](#), then this call has no effect.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpyPeer](#), [cudaMemcpyAsync](#), [cudaMemcpy3DPeerAsync](#),
[cudaMemPrefetchAsync](#), [cuMemAdvise](#), [cuMemAdvise_v2](#)

__host__ [cudaError_t](#) [cudaMemcpy](#) (void *dst, const void *src, size_t count, [cudaMemcpyKind](#) kind)

Copies data between host and device.

Parameters

dst

- Destination memory address

src

- Source memory address

count

- Size in bytes to copy

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidMemcpyDirection](#)

Description

Copies count bytes from the memory area pointed to by src to the memory area pointed to by dst, where kind specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is

recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing. Calling [cudaMemcpy\(\)](#) with dst and src pointers that do not match the direction of the copy results in an undefined behavior.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Memory regions requested must be either entirely registered with CUDA, or in the case of host pageable transfers, not registered at all. Memory regions spanning over allocations that are both registered and not registered with CUDA are not supported and will return CUDA_ERROR_INVALID_VALUE.

See also:

[cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpyDtoH](#), [cuMemcpyHtoD](#), [cuMemcpyDtoD](#),
[cuMemcpy](#)

__host __cudaError_t cudaMemcpy2D (void *dst, size_t dpitch, const void *src, size_t spitch, size_t width, size_t height, cudaMemcpyKind kind)

Copies data between host and device.

Parameters**dst**

- Destination memory address

dpitch

- Pitch of destination memory

src

- Source memory address

spitch

- Pitch of source memory

width

- Width of matrix transfer (columns in bytes)

height

- Height of matrix transfer (rows)

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidPitchValue](#),
[cudaErrorInvalidMemcpyDirection](#)

Description

Copies a matrix (`height` rows of `width` bytes each) from the memory area pointed to by `src` to the memory area pointed to by `dst`, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing. `dpitch` and `spitch` are the widths in memory in bytes of the 2D arrays pointed to by `dst` and `src`, including any padding added to the end of each row. The memory areas may not overlap. `width` must not exceed either `dpitch` or `spitch`. Calling [cudaMemcpy2D\(\)](#) with `dst` and `src` pointers that do not match the direction of the copy results in an undefined behavior. [cudaMemcpy2D\(\)](#) returns an error if `dpitch` or `spitch` exceeds the maximum allowed.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Memory regions requested must be either entirely registered with CUDA, or in the case of host pageable transfers, not registered at all. Memory regions spanning over allocations

that are both registered and not registered with CUDA are not supported and will return CUDA_ERROR_INVALID_VALUE.

See also:

[cudaMemcpy](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpy2D](#), [cuMemcpy2DUnaligned](#)

```
__host__ cudaError_t cudaMemcpy2DArrayToArray
(cudaArray_t dst, size_t wOffsetDst, size_t
hOffsetDst, cudaArray_const_t src, size_t wOffsetSrc,
size_t hOffsetSrc, size_t width, size_t height,
cudaMemcpyKind kind)
```

Copies data between host and device.

Parameters

dst

- Destination memory address

wOffsetDst

- Destination starting X offset (columns in bytes)

hOffsetDst

- Destination starting Y offset (rows)

src

- Source memory address

wOffsetSrc

- Source starting X offset (columns in bytes)

hOffsetSrc

- Source starting Y offset (rows)

width

- Width of matrix transfer (columns in bytes)

height

- Height of matrix transfer (rows)

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidMemcpyDirection](#)

Description

Copies a matrix (height rows of width bytes each) from the CUDA array `src` starting at `hOffsetSrc` rows and `wOffsetSrc` bytes from the upper left corner to the CUDA array `dst` starting at `hOffsetDst` rows and `wOffsetDst` bytes from the upper left corner, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing. `wOffsetDst + width` must not exceed the width of the CUDA array `dst`. `wOffsetSrc + width` must not exceed the width of the CUDA array `src`.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#), [cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#),
[cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpy2D](#), [cuMemcpy2DUnaligned](#)

```
__host__ __device__ cudaError_t
cudaMemcpy2DAsync (void *dst, size_t dpitch, const void *src, size_t spitch, size_t width, size_t height,
cudaMemcpyKind kind, cudaStream_t stream)
```

Copies data between host and device.

Parameters

dst

- Destination memory address

dpitch

- Pitch of destination memory

src

- Source memory address

spitch

- Pitch of source memory

width

- Width of matrix transfer (columns in bytes)

height

- Height of matrix transfer (rows)

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidPitchValue](#),
[cudaErrorInvalidMemcpyDirection](#)

Description

Copies a matrix (**height** rows of **width** bytes each) from the memory area pointed to by **src** to the memory area pointed to by **dst**, where **kind** specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing. **dpitch** and **spitch** are the widths in memory in bytes of the 2D arrays pointed to by **dst** and **src**, including any padding added to the end of each row. The memory areas may not overlap. **width** must not exceed either **dpitch** or **spitch**.

Calling `cudaMemcpy2DAsync()` with `dst` and `src` pointers that do not match the direction of the copy results in an undefined behavior. `cudaMemcpy2DAsync()` returns an error if `dpitch` or `spitch` is greater than the maximum allowed.

`cudaMemcpy2DAsync()` is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero `stream` argument. If `kind` is `cudaMemcpyHostToDevice` or `cudaMemcpyDeviceToHost` and `stream` is non-zero, the copy may overlap with operations in other streams.

The device version of this function only handles device to device copies and cannot be given local or shared pointers.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Memory regions requested must be either entirely registered with CUDA, or in the case of host pageable transfers, not registered at all. Memory regions spanning over allocations that are both registered and not registered with CUDA are not supported and will return `CUDA_ERROR_INVALID_VALUE`.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#),
[cudaMemcpyToSymbolAsync](#), [cudaMemcpyFromSymbolAsync](#), [cuMemcpy2DAsync](#)

```
_host_ cudaError_t cudaMemcpy2DFromArray (void
*dst, size_t dpitch, cudaArray_const_t src, size_t
wOffset, size_t hOffset, size_t width, size_t height,
cudaMemcpyKind kind)
```

Copies data between host and device.

Parameters

dst

- Destination memory address

dpitch

- Pitch of destination memory

src

- Source memory address

wOffset

- Source starting X offset (columns in bytes)

hOffset

- Source starting Y offset (rows)

width

- Width of matrix transfer (columns in bytes)

height

- Height of matrix transfer (rows)

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidPitchValue](#),
[cudaErrorInvalidMemcpyDirection](#)

Description

Copies a matrix (**height** rows of **width** bytes each) from the CUDA array **src** starting at **hOffset** rows and **wOffset** bytes from the upper left corner to the memory area pointed to by **dst**, where **kind** specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing. **dpitch** is the width in memory in bytes of the 2D array pointed to by **dst**, including any padding added to the end of each row. **wOffset** + **width** must not exceed the width of the CUDA array **src**. **width** must not exceed **dpitch**. [cudaMemcpy2DFromArray\(\)](#) returns an error if **dpitch** exceeds the maximum allowed.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Memory regions requested must be either entirely registered with CUDA, or in the case of host pageable transfers, not registered at all. Memory regions spanning over allocations that are both registered and not registered with CUDA are not supported and will return CUDA_ERROR_INVALID_VALUE.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#), [cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#), [cudaMemcpyFromSymbolAsync](#), [cuMemcpy2D](#), [cuMemcpy2DUnaligned](#)

__host__cudaError_t
cudaMemcpy2DFromArrayAsync (**void *dst**, **size_t dpitch**, **cudaArray_const_t src**, **size_t wOffset**, **size_t hOffset**, **size_t width**, **size_t height**, **cudaMemcpyKind kind**, **cudaStream_t stream**)

Copies data between host and device.

Parameters**dst**

- Destination memory address

dpitch

- Pitch of destination memory

src

- Source memory address

wOffset

- Source starting X offset (columns in bytes)

hOffset

- Source starting Y offset (rows)

width

- Width of matrix transfer (columns in bytes)

height

- Height of matrix transfer (rows)

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidPitchValue](#),
[cudaErrorInvalidMemcpyDirection](#)

Description

Copies a matrix (height rows of width bytes each) from the CUDA array `src` starting at `hOffset` rows and `wOffset` bytes from the upper left corner to the memory area pointed to by `dst`, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing. `dpitch` is the width in memory in bytes of the 2D array pointed to by `dst`, including any padding added to the end of each row. `wOffset + width` must not exceed the width of the CUDA array `src`. `width` must not exceed `dpitch`. [cudaMemcpy2DFromArrayAsync\(\)](#) returns an error if `dpitch` exceeds the maximum allowed.

[cudaMemcpy2DFromArrayAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero `stream` argument. If `kind` is [cudaMemcpyHostToDevice](#) or [cudaMemcpyDeviceToHost](#) and `stream` is non-zero, the copy may overlap with operations in other streams.

**Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Memory regions requested must be either entirely registered with CUDA, or in the case of host pageable transfers, not registered at all. Memory regions spanning over allocations that are both registered and not registered with CUDA are not supported and will return CUDA_ERROR_INVALID_VALUE.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpyToSymbolAsync](#), [cudaMemcpyFromSymbolAsync](#), [cuMemcpy2DAsync](#)

```
__host__ cudaError_t cudaMemcpy2DToArray
{cudaArray_t dst, size_t wOffset, size_t hOffset, const
void *src, size_t spitch, size_t width, size_t height,
cudaMemcpyKind kind}
```

Copies data between host and device.

Parameters**dst**

- Destination memory address

wOffset

- Destination starting X offset (columns in bytes)

hOffset

- Destination starting Y offset (rows)

src

- Source memory address

spitch

- Pitch of source memory

width

- Width of matrix transfer (columns in bytes)

height

- Height of matrix transfer (rows)

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidPitchValue](#),
[cudaErrorInvalidMemcpyDirection](#)

Description

Copies a matrix (height rows of width bytes each) from the memory area pointed to by `src` to the CUDA array `dst` starting at `hOffset` rows and `wOffset` bytes from the upper left corner, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing. `spitch` is the width in memory in bytes of the 2D array pointed to by `src`, including any padding added to the end of each row. `wOffset + width` must not exceed the width of the CUDA array `dst`. `width` must not exceed `spitch`. [cudaMemcpy2DToArray\(\)](#) returns an error if `spitch` exceeds the maximum allowed.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Memory regions requested must be either entirely registered with CUDA, or in the case of host pageable transfers, not registered at all. Memory regions spanning over allocations that are both registered and not registered with CUDA are not supported and will return CUDA_ERROR_INVALID_VALUE.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DFromArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DToArray](#), [cudaMemcpy2DToSymbol](#), [cudaMemcpyFromSymbol](#), [cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#),
[cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpy2D](#), [cuMemcpy2DUnaligned](#)

```
__host__ cudaError_t cudaMemcpy2DToArrayAsync
(cudaArray_t dst, size_t wOffset, size_t hOffset, const
void *src, size_t spitch, size_t width, size_t height,
cudaMemcpyKind kind, cudaStream_t stream)
```

Copies data between host and device.

Parameters

dst

- Destination memory address

wOffset

- Destination starting X offset (columns in bytes)

hOffset

- Destination starting Y offset (rows)

src

- Source memory address

spitch

- Pitch of source memory

width

- Width of matrix transfer (columns in bytes)

height

- Height of matrix transfer (rows)

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidPitchValue](#),
[cudaErrorInvalidMemcpyDirection](#)

Description

Copies a matrix (`height` rows of `width` bytes each) from the memory area pointed to by `src` to the CUDA array `dst` starting at `hOffset` rows and `wOffset` bytes from the upper left corner, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing. `spitch` is the width in memory in bytes of the 2D array pointed to by `src`, including any padding added to the end of each row. `wOffset + width` must not exceed the width of the

CUDA array dst. width must not exceed spitch. [cudaMemcpy2DToArrayAsync\(\)](#) returns an error if spitch exceeds the maximum allowed.

[cudaMemcpy2DToArrayAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero stream argument. If kind is [cudaMemcpyHostToDevice](#) or [cudaMemcpyDeviceToHost](#) and stream is non-zero, the copy may overlap with operations in other streams.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Memory regions requested must be either entirely registered with CUDA, or in the case of host pageable transfers, not registered at all. Memory regions spanning over allocations that are both registered and not registered with CUDA are not supported and will return CUDA_ERROR_INVALID_VALUE.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#),
[cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpy2DAsync](#)

__host__ cudaError_t cudaMemcpy3D (const cudaMemcpy3DParms *p)

Copies data between 3D objects.

Parameters

p

- 3D memory copy parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidPitchValue](#),
[cudaErrorInvalidMemcpyDirection](#)

Description

```
/*struct cudaExtent {
    size_t width;
    size_t height;
    size_t depth;
};

struct cudaExtent
    make\_cudaExtent(size_t w, size_t h, size_t d);

struct cudaPos {
    size_t x;
    size_t y;
    size_t z;
};

struct cudaPos
    make\_cudaPos(size_t x, size_t y, size_t z);

struct cudaMemcpy3DParms {
    cudaArray\_t
        srcArray;
    struct cudaPos
        srcPos;
    struct cudaPitchedPtr
        srcPtr;
    cudaArray\_t
        dstArray;
    struct cudaPos
        dstPos;
    struct cudaPitchedPtr
        dstPtr;
    struct cudaExtent
        extent;
    enum cudaMemcpyKind
        kind;
};
```

[cudaMemcpy3D\(\)](#) copies data between two 3D objects. The source and destination objects may be in either host memory, device memory, or a CUDA array. The source, destination, extent, and kind of copy performed is specified by the [cudaMemcpy3DParms](#) struct which should be initialized to zero before use:

```
/*cudaMemcpy3DParms myParms = {0};
```

The struct passed to [cudaMemcpy3D\(\)](#) must specify one of [srcArray](#) or [srcPtr](#) and one of [dstArray](#) or [dstPtr](#). Passing more than one non-zero source or destination will cause [cudaMemcpy3D\(\)](#) to return an error.

The [srcPos](#) and [dstPos](#) fields are optional offsets into the source and destination objects and are defined in units of each object's elements. The element for a host or device pointer is assumed to be **unsigned char**.

The `extent` field defines the dimensions of the transferred area in elements. If a CUDA array is participating in the copy, the extent is defined in terms of that array's elements. If no CUDA array is participating in the copy then the extents are defined in elements of `unsigned char`.

The `kind` field defines the direction of the copy. It must be one of `cudaMemcpyHostToHost`, `cudaMemcpyHostToDevice`, `cudaMemcpyDeviceToHost`, `cudaMemcpyDeviceToDevice`, or `cudaMemcpyDefault`. Passing `cudaMemcpyDefault` is recommended, in which case the type of transfer is inferred from the pointer values. However, `cudaMemcpyDefault` is only allowed on systems that support unified virtual addressing. For `cudaMemcpyHostToHost` or `cudaMemcpyHostToDevice` or `cudaMemcpyDeviceToHost` passed as kind and `cudaArray` type passed as source or destination, if the kind implies `cudaArray` type to be present on the host, `cudaMemcpy3D()` will disregard that implication and silently correct the kind based on the fact that `cudaArray` type can only be present on the device.

If the source and destination are both arrays, `cudaMemcpy3D()` will return an error if they do not have the same element size.

The source and destination object may not overlap. If overlapping source and destination objects are specified, undefined behavior will result.

The source object must entirely contain the region defined by `srcPos` and `extent`. The destination object must entirely contain the region defined by `dstPos` and `extent`.

`cudaMemcpy3D()` returns an error if the pitch of `srcPtr` or `dstPtr` exceeds the maximum allowed. The pitch of a `cudaPitchedPtr` allocated with `cudaMalloc3D()` will always be valid.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits `synchronous` behavior for most use cases.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

`cudaMalloc3D`, `cudaMalloc3DArray`, `cudaMemset3D`, `cudaMemcpy3DAsync`,
`cudaMemcpy`, `cudaMemcpy2D`, `cudaMemcpy2DToArray`, `cudaMemcpy2DFromArray`,
`cudaMemcpy2DArrayToArray`, `cudaMemcpyToSymbol`, `cudaMemcpyFromSymbol`,
`cudaMemcpyAsync`, `cudaMemcpy2DAsync`, `cudaMemcpy2DToArrayAsync`,
`cudaMemcpy2DFromArrayAsync`, `cudaMemcpyToSymbolAsync`,
`cudaMemcpyFromSymbolAsync`, `make_cudaExtent`, `make_cudaPos`, `cuMemcpy3D`

```
_host____device__cudaError_t
cudaMemcpy3DAsync (const cudaMemcpy3DParms
*p, cudaStream_t stream)
```

Copies data between 3D objects.

Parameters

p

- 3D memory copy parameters

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidPitchValue](#),
[cudaErrorInvalidMemcpyDirection](#)

Description

```
/*struct cudaExtent {
    size_t width;
    size_t height;
    size_t depth;
};

struct cudaExtent
    make_cudaExtent(size_t w, size_t h, size_t d);

struct cudaPos {
    size_t x;
    size_t y;
    size_t z;
};
struct cudaPos
    make_cudaPos(size_t x, size_t y, size_t z);

struct cudaMemcpy3DParms {
    cudaArray_t
        srcArray;
    struct cudaPos
        srcPos;
    struct cudaPitchedPtr
        srcPtr;
    cudaArray_t
        dstArray;
    struct cudaPos
        dstPos;
    struct cudaPitchedPtr
        dstPtr;
    struct cudaExtent
        extent;
    enum cudaMemcpyKind
        kind;
};
```

`cudaMemcpy3DAsync()` copies data between two 3D objects. The source and destination objects may be in either host memory, device memory, or a CUDA array. The source, destination, extent, and kind of copy performed is specified by the `cudaMemcpy3DParms` struct which should be initialized to zero before use:

```
/*cudaMemcpy3DParms*/ myParms = {0};
```

The struct passed to `cudaMemcpy3DAsync()` must specify one of `srcArray` or `srcPtr` and one of `dstArray` or `dstPtr`. Passing more than one non-zero source or destination will cause `cudaMemcpy3DAsync()` to return an error.

The `srcPos` and `dstPos` fields are optional offsets into the source and destination objects and are defined in units of each object's elements. The element for a host or device pointer is assumed to be **unsigned char**. For CUDA arrays, positions must be in the range [0, 2048] for any dimension.

The `extent` field defines the dimensions of the transferred area in elements. If a CUDA array is participating in the copy, the extent is defined in terms of that array's elements. If no CUDA array is participating in the copy then the extents are defined in elements of **unsigned char**.

The `kind` field defines the direction of the copy. It must be one of `cudaMemcpyHostToHost`, `cudaMemcpyHostToDevice`, `cudaMemcpyDeviceToHost`, `cudaMemcpyDeviceToDevice`, or `cudaMemcpyDefault`. Passing `cudaMemcpyDefault` is recommended, in which case the type of transfer is inferred from the pointer values. However, `cudaMemcpyDefault` is only allowed on systems that support unified virtual addressing. For `cudaMemcpyHostToHost` or `cudaMemcpyHostToDevice` or `cudaMemcpyDeviceToHost` passed as kind and `cudaArray` type passed as source or destination, if the kind implies `cudaArray` type to be present on the host, `cudaMemcpy3DAsync()` will disregard that implication and silently correct the kind based on the fact that `cudaArray` type can only be present on the device.

If the source and destination are both arrays, `cudaMemcpy3DAsync()` will return an error if they do not have the same element size.

The source and destination object may not overlap. If overlapping source and destination objects are specified, undefined behavior will result.

The source object must lie entirely within the region defined by `srcPos` and `extent`. The destination object must lie entirely within the region defined by `dstPos` and `extent`.

`cudaMemcpy3DAsync()` returns an error if the pitch of `srcPtr` or `dstPtr` exceeds the maximum allowed. The pitch of a `cudaPitchedPtr` allocated with `cudaMalloc3D()` will always be valid.

`cudaMemcpy3DAsync()` is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero `stream` argument. If `kind` is `cudaMemcpyHostToDevice` or `cudaMemcpyDeviceToHost` and `stream` is non-zero, the copy may overlap with operations in other streams.

The device version of this function only handles device to device copies and cannot be given local or shared pointers.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMalloc3D](#), [cudaMalloc3DArray](#), [cudaMemset3D](#), [cudaMemcpy3D](#), [cudaMemcpy](#),
[cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [:cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [make_cudaExtent](#), [make_cudaPos](#), [cuMemcpy3DAsync](#)

__host__ [cudaError_t](#) [cudaMemcpy3DPeer](#) ([const](#) [cudaMemcpy3DPeerParms](#) **p*)

Copies memory between devices.

Parameters

p

- Parameters for the memory copy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidPitchValue](#)

Description

Perform a 3D memory copy according to the parameters specified in *p*. See the definition of the [cudaMemcpy3DPeerParms](#) structure for documentation of its parameters.

Note that this function is synchronous with respect to the host only if the source or destination of the transfer is host memory. Note also that this copy is serialized with respect to all pending

and future asynchronous work in to the current device, the copy's source device, and the copy's destination device (use [cudaMemcpy3DPeerAsync](#) to avoid this synchronization).

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpyPeer](#), [cudaMemcpyAsync](#), [cudaMemcpyPeerAsync](#),
[cudaMemcpy3DPeerAsync](#), [cuMemcpy3DPeer](#)

__host__ cudaError_t cudaMemcpy3DPeerAsync
(const cudaMemcpy3DPeerParms *p, cudaStream_t stream)

Copies memory between devices asynchronously.

Parameters**p**

- Parameters for the memory copy

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidPitchValue](#)

Description

Perform a 3D memory copy according to the parameters specified in p. See the definition of the [cudaMemcpy3DPeerParms](#) structure for documentation of its parameters.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpyPeer](#), [cudaMemcpyAsync](#), [cudaMemcpyPeerAsync](#),
[cudaMemcpy3DPeerAsync](#), [cuMemcpy3DPeerAsync](#)

__host__ __device__ cudaError_t cudaMemcpyAsync
(void *dst, const void *src, size_t count,
cudaMemcpyKind kind, cudaStream_t stream)

Copies data between host and device.

Parameters**dst**

- Destination memory address

src

- Source memory address

count

- Size in bytes to copy

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidMemcpyDirection](#)

Description

Copies count bytes from the memory area pointed to by `src` to the memory area pointed to by `dst`, where `kind` specifies the direction of the copy, and must be one of `cudaMemcpyHostToHost`, `cudaMemcpyHostToDevice`, `cudaMemcpyDeviceToHost`, `cudaMemcpyDeviceToDevice`, or `cudaMemcpyDefault`. Passing `cudaMemcpyDefault` is recommended, in which case the type of transfer is inferred from the pointer values. However, `cudaMemcpyDefault` is only allowed on systems that support unified virtual addressing.

The memory areas may not overlap. Calling `cudaMemcpyAsync()` with `dst` and `src` pointers that do not match the direction of the copy results in an undefined behavior.

`cudaMemcpyAsync()` is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero `stream` argument. If `kind` is `cudaMemcpyHostToDevice` or `cudaMemcpyDeviceToHost` and the `stream` is non-zero, the copy may overlap with operations in other streams.

The device version of this function only handles device to device copies and cannot be given local or shared pointers.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Memory regions requested must be either entirely registered with CUDA, or in the case of host pageable transfers, not registered at all. Memory regions spanning over allocations that are both registered and not registered with CUDA are not supported and will return `CUDA_ERROR_INVALID_VALUE`.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#), [cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#),

[cudaMemcpyToSymbolAsync](#), [cudaMemcpyFromSymbolAsync](#), [cuMemcpyAsync](#),
[cuMemcpyDtoHAsync](#), [cuMemcpyHtoDAsync](#), [cuMemcpyDtoDAsync](#)

`__host__ cudaError_t cudaMemcpyFromSymbol (void *dst, const void *symbol, size_t count, size_t offset, cudaMemcpyKind kind)`

Copies data from the given symbol on the device.

Parameters

dst

- Destination memory address

symbol

- Device symbol address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidSymbol](#),
[cudaErrorInvalidMemcpyDirection](#), [cudaErrorNoKernelImageForDevice](#)

Description

Copies count bytes from the memory area pointed to by `offset` bytes from the start of symbol `symbol` to the memory area pointed to by `dst`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Use of a string naming a variable as the `symbol` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyAsync](#),
[cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#),
[cudaMemcpyToSymbolAsync](#), [cudaMemcpyFromSymbolAsync](#), [cuMemcpy](#), [cuMemcpyDtoH](#),
[cuMemcpyDtoD](#)

**__host__cudaError_t cudaMemcpyFromSymbolAsync
(void *dst, const void *symbol, size_t count, size_t
offset, cudaMemcpyKind kind, cudaStream_t stream)**

Copies data from the given symbol on the device.

Parameters**dst**

- Destination memory address

symbol

- Device symbol address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidSymbol](#),
[cudaErrorInvalidMemcpyDirection](#), [cudaErrorNoKernelImageForDevice](#)

Description

Copies count bytes from the memory area pointed to by offset bytes from the start of symbol symbol to the memory area pointed to by dst. The memory areas may not overlap.

`symbol` is a variable that resides in global or constant memory space. `kind` can be either `cudaMemcpyDeviceToHost`, `cudaMemcpyDeviceToDevice`, or `cudaMemcpyDefault`. Passing `cudaMemcpyDefault` is recommended, in which case the type of transfer is inferred from the pointer values. However, `cudaMemcpyDefault` is only allowed on systems that support unified virtual addressing.

`cudaMemcpyFromSymbolAsync()` is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero `stream` argument. If `kind` is `cudaMemcpyDeviceToHost` and `stream` is non-zero, the copy may overlap with operations in other streams.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Use of a string naming a variable as the `symbol` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#), [cuMemcpyAsync](#),
[cuMemcpyDtoHAsync](#), [cuMemcpyDtoDAsync](#)

__host__ cudaError_t cudaMemcpyPeer (void *dst, int dstDevice, const void *src, int srcDevice, size_t count)

Copies memory between two devices.

Parameters

dst

- Destination device pointer

dstDevice

- Destination device

src

- Source device pointer

srcDevice

- Source device

count

- Size of memory copy in bytes

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#)

Description

Copies memory from one device to memory on another device. `dst` is the base device pointer of the destination memory and `dstDevice` is the destination device. `src` is the base device pointer of the source memory and `srcDevice` is the source device. `count` specifies the number of bytes to copy.

Note that this function is asynchronous with respect to the host, but serialized with respect all pending and future asynchronous work in to the current device, `srcDevice`, and `dstDevice` (use [cudaMemcpyPeerAsync](#) to avoid this synchronization).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpyAsync](#), [cudaMemcpyPeerAsync](#), [cudaMemcpy3DPeerAsync](#), [cuMemcpyPeer](#)

```
_host_ cudaError_t cudaMemcpyPeerAsync (void  
*dst, int dstDevice, const void *src, int srcDevice,  
size_t count, cudaStream_t stream)
```

Copies memory between two devices asynchronously.

Parameters

dst

- Destination device pointer

dstDevice

- Destination device

src

- Source device pointer

srcDevice

- Source device

count

- Size of memory copy in bytes

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#)

Description

Copies memory from one device to memory on another device. **dst** is the base device pointer of the destination memory and **dstDevice** is the destination device. **src** is the base device pointer of the source memory and **srcDevice** is the source device. **count** specifies the number of bytes to copy.

Note that this function is asynchronous with respect to the host and all work on other devices.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpyPeer](#), [cudaMemcpyAsync](#), [cudaMemcpy3DPeerAsync](#), [cuMemcpyPeerAsync](#)

`__host__ cudaError_t cudaMemcpyToSymbol (const void *symbol, const void *src, size_t count, size_t offset, cudaMemcpyKind kind)`

Copies data to the given symbol on the device.

Parameters

symbol

- Device symbol address

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidSymbol](#),
[cudaErrorInvalidMemcpyDirection](#), [cudaErrorNoKernelImageForDevice](#)

Description

Copies `count` bytes from the memory area pointed to by `src` to the memory area pointed to by `offset` bytes from the start of symbol `symbol`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Use of a string naming a variable as the `symbol` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyFromSymbol](#), [cudaMemcpyAsync](#),
[cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#),
[cudaMemcpyToSymbolAsync](#), [cudaMemcpyFromSymbolAsync](#), [cuMemcpy](#), [cuMemcpyHtoD](#),
[cuMemcpyDtoD](#)

```
__host__ cudaError_t cudaMemcpyToSymbolAsync
(const void *symbol, const void *src, size_t count,
size_t offset, cudaMemcpyKind kind, cudaStream_t
stream)
```

Copies data to the given symbol on the device.

Parameters**symbol**

- Device symbol address

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidSymbol](#),
[cudaErrorInvalidMemcpyDirection](#), [cudaErrorNoKernelImageForDevice](#)

Description

Copies count bytes from the memory area pointed to by `src` to the memory area pointed to by `offset` bytes from the start of symbol `symbol`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

[cudaMemcpyToSymbolAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero `stream` argument. If `kind` is [cudaMemcpyHostToDevice](#) and `stream` is non-zero, the copy may overlap with operations in other streams.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Use of a string naming a variable as the `symbol` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#),

[cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyFromSymbolAsync](#), [cuMemcpyAsync](#),
[cuMemcpyHtoDAsync](#), [cuMemcpyDtoDAsync](#)

__host__ cudaError_t cudaMemGetInfo (size_t *free, size_t *total)

Gets free and total device memory.

Parameters

free

- Returned free memory in bytes

total

- Returned total memory in bytes

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorLaunchFailure](#)

Description

Returns in *total the total amount of memory available to the the current context. Returns in *free the amount of memory on the device that is free according to the OS. CUDA is not guaranteed to be able to allocate all of the memory that the OS reports as free. In a multi-tenet situation, free estimate returned is prone to race condition where a new allocation/free done by a different process or a different thread in the same process between the time when free memory was estimated and reported, will result in deviation in free value reported and actual free memory.

The integrated GPU on Tegra shares memory with CPU and other component of the SoC. The free and total values returned by the API excludes the SWAP memory space maintained by the OS on some platforms. The OS may move some of the memory pages into swap area as the GPU or CPU allocate or access memory. See Tegra app note on how to calculate total and free memory on Tegra.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:[cuMemGetInfo](#)

```
_host_ cudaError_t cudaMemPrefetchAsync  
(const void *devPtr, size_t count, int dstDevice,  
cudaStream_t stream)
```

Prefetches memory to the specified destination device.

Parameters

devPtr

- Pointer to be prefetched

count

- Size in bytes

dstDevice

- Destination device to prefetch to

stream

- Stream to enqueue prefetch operation

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#)

Description

Prefetches memory to the specified destination device. `devPtr` is the base device pointer of the memory to be prefetched and `dstDevice` is the destination device. `count` specifies the number of bytes to copy. `stream` is the stream in which the operation is enqueued. The memory range must refer to managed memory allocated via [cudaMallocManaged](#) or declared via `__managed__` variables.

Passing in `cudaCpuDeviceId` for `dstDevice` will prefetch the data to host memory. If `dstDevice` is a GPU, then the device attribute [cudaDevAttrConcurrentManagedAccess](#) must be non-zero. Additionally, `stream` must be associated with a device that has a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#).

The start address and end address of the memory range will be rounded down and rounded up respectively to be aligned to CPU page size before the prefetch operation is enqueued in the stream.

If no physical memory has been allocated for this region, then this memory region will be populated and mapped on the destination device. If there's insufficient memory to prefetch the desired region, the Unified Memory driver may evict pages from other [cudaMallocManaged](#) allocations to host memory in order to make room. Device memory allocated using [cudaMalloc](#) or [cudaMallocArray](#) will not be evicted.

By default, any mappings to the previous location of the migrated pages are removed and mappings for the new location are only setup on `dstDevice`. The exact behavior however also depends on the settings applied to this memory range via [cudaMemAdvise](#) as described below:

If [cudaMemAdviseSetReadMostly](#) was set on any subset of this memory range, then that subset will create a read-only copy of the pages on `dstDevice`.

If [cudaMemAdviseSetPreferredLocation](#) was called on any subset of this memory range, then the pages will be migrated to `dstDevice` even if `dstDevice` is not the preferred location of any pages in the memory range.

If [cudaMemAdviseSetAccessedBy](#) was called on any subset of this memory range, then mappings to those pages from all the appropriate processors are updated to refer to the new location if establishing such a mapping is possible. Otherwise, those mappings are cleared.

Note that this API is not required for functionality and only serves to improve performance by allowing the application to migrate data to a suitable location before it is accessed. Memory accesses to this range are always coherent and are allowed even when the data is actively being migrated.

Note that this function is asynchronous with respect to the host and all work on other devices.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpyPeer](#), [cudaMemcpyAsync](#), [cudaMemcpy3DPeerAsync](#),
[cudaMemAdvise](#), [cudaMemAdvise_v2](#) [cuMemPrefetchAsync](#)

```
__host__ cudaError_t cudaMemRangeGetAttribute  
(void *data, size_t dataSize, cudaMemRangeAttribute  
attribute, const void *devPtr, size_t count)
```

Query an attribute of a given memory range.

Parameters

data

- A pointers to a memory location where the result of each attribute query will be written to.

dataSize

- Array containing the size of data

attribute

- The attribute to query

devPtr

- Start of the range to query

count

- Size of the range to query

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Query an attribute about the memory range starting at **devPtr** with a size of **count** bytes. The memory range must refer to managed memory allocated via [cudaMallocManaged](#) or declared via **__managed__** variables.

The attribute parameter can take the following values:

- ▶ [cudaMemRangeAttributeReadMostly](#): If this attribute is specified, **data** will be interpreted as a 32-bit integer, and **dataSize** must be 4. The result returned will be 1 if all pages in the given memory range have read-duplication enabled, or 0 otherwise.
- ▶ [cudaMemRangeAttributePreferredLocation](#): If this attribute is specified, **data** will be interpreted as a 32-bit integer, and **dataSize** must be 4. The result returned will be a GPU device id if all pages in the memory range have that GPU as their preferred location, or it will be **cudaCpuDeviceId** if all pages in the memory range have the CPU as their preferred location, or it will be **cudaInvalidDeviceId** if either all the pages don't have the same preferred location or some of the pages don't have a preferred location at all. Note that the actual location of the pages in the memory range at the time of the query may be different from the preferred location.
- ▶ [cudaMemRangeAttributeAccessedBy](#): If this attribute is specified, **data** will be interpreted as an array of 32-bit integers, and **dataSize** must be a non-zero multiple of 4. The result

returned will be a list of device ids that had `cudaMemAdviceSetAccessedBy` set for that entire memory range. If any device does not have that advice set for the entire memory range, that device will not be included. If data is larger than the number of devices that have that advice set for that memory range, `cudaInvalidDeviceld` will be returned in all the extra space provided. For ex., if `dataSize` is 12 (i.e. data has 3 elements) and only device 0 has the advice set, then the result returned will be { 0, `cudaInvalidDeviceld`, `cudaInvalidDeviceld` }. If data is smaller than the number of devices that have that advice set, then only as many devices will be returned as can fit in the array. There is no guarantee on which specific devices will be returned, however.

- ▶ [`cudaMemRangeAttributeLastPrefetchLocation`](#): If this attribute is specified, data will be interpreted as a 32-bit integer, and `dataSize` must be 4. The result returned will be the last location to which all pages in the memory range were prefetched explicitly via [`cudaMemPrefetchAsync`](#). This will either be a GPU id or `cudaCpuDeviceld` depending on whether the last location for prefetch was a GPU or the CPU respectively. If any page in the memory range was never explicitly prefetched or if all pages were not prefetched to the same location, `cudaInvalidDeviceld` will be returned. Note that this simply returns the last location that the application requested to prefetch the memory range to. It gives no indication as to whether the prefetch operation to that location has completed or even begun.
- ▶ [`cudaMemRangeAttributePreferredLocationType`](#): If this attribute is specified, data will be interpreted as a [`cudaMemLocationType`](#), and `dataSize` must be `sizeof(cudaMemLocationType)`. The [`cudaMemLocationType`](#) returned will be [`cudaMemLocationTypeDevice`](#) if all pages in the memory range have the same GPU as their preferred location, or [`cudaMemLocationType`](#) will be [`cudaMemLocationTypeHost`](#) if all pages in the memory range have the CPU as their preferred location, or it will be [`cudaMemLocationTypeHostNuma`](#) if all the pages in the memory range have the same host NUMA node ID as their preferred location or it will be `cudaMemLocationTypeInvalid` if either all the pages don't have the same preferred location or some of the pages don't have a preferred location at all. Note that the actual location type of the pages in the memory range at the time of the query may be different from the preferred location type.
 - ▶ [`cudaMemRangeAttributePreferredLocationId`](#): If this attribute is specified, data will be interpreted as a 32-bit integer, and `dataSize` must be 4. If the [`cudaMemRangeAttributePreferredLocationType`](#) query for the same address range returns [`cudaMemLocationTypeDevice`](#), it will be a valid device ordinal or if it returns [`cudaMemLocationTypeHostNuma`](#), it will be a valid host NUMA node ID or if it returns any other location type, the id should be ignored.
 - ▶ [`cudaMemRangeAttributeLastPrefetchLocationType`](#): If this attribute is specified, data will be interpreted as a [`cudaMemLocationType`](#), and `dataSize` must be `sizeof(cudaMemLocationType)`. The result returned will be the last location type to which all pages in the memory range were prefetched explicitly via [`cuMemPrefetchAsync`](#). The [`cudaMemLocationType`](#) returned will be [`cudaMemLocationTypeDevice`](#) if the last prefetch location was the GPU or [`cudaMemLocationTypeHost`](#) if it was the CPU or

[cudaMemLocationTypeHostNuma](#) if the last prefetch location was a specific host NUMA node. If any page in the memory range was never explicitly prefetched or if all pages were not prefetched to the same location, [CUmemLocationType](#) will be `cudaMemLocationTypeInvalid`. Note that this simply returns the last location type that the application requested to prefetch the memory range to. It gives no indication as to whether the prefetch operation to that location has completed or even begun.

- ▶ [cudaMemRangeAttributeLastPrefetchLocationId](#): If this attribute is specified, data will be interpreted as a 32-bit integer, and `dataSize` must be 4. If the [cudaMemRangeAttributeLastPrefetchLocationType](#) query for the same address range returns [cudaMemLocationTypeDevice](#), it will be a valid device ordinal or if it returns [cudaMemLocationTypeHostNuma](#), it will be a valid host NUMA node ID or if it returns any other location type, the id should be ignored.

**Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemRangeGetAttributes](#), [cudaMemPrefetchAsync](#), [cudaMemAdvise](#),
[cuMemRangeGetAttribute](#)

```
_host_ cudaError_t cudaMemRangeGetAttributes  
(void **data, size_t *dataSizes,  
cudaMemRangeAttribute *attributes, size_t  
numAttributes, const void *devPtr, size_t count)
```

Query attributes of a given memory range.

Parameters

data

- A two-dimensional array containing pointers to memory locations where the result of each attribute query will be written to.

dataSizes

- Array containing the sizes of each result

attributes

- An array of attributes to query [numAttributes and the number of attributes in this array should match]

numAttributes

- Number of attributes to query

devPtr

- Start of the range to query

count

- Size of the range to query

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Query attributes of the memory range starting at `devPtr` with a size of `count` bytes. The memory range must refer to managed memory allocated via [cudaMallocManaged](#) or declared via `__managed__` variables. The `attributes` array will be interpreted to have `numAttributes` entries. The `dataSizes` array will also be interpreted to have `numAttributes` entries. The results of the query will be stored in `data`.

The list of supported attributes are given below. Please refer to [cudaMemRangeGetAttribute](#) for attribute descriptions and restrictions.

- ▶ [cudaMemRangeAttributeReadMostly](#)
- ▶ [cudaMemRangeAttributePreferredLocation](#)
- ▶ [cudaMemRangeAttributeAccessedBy](#)
- ▶ [cudaMemRangeAttributeLastPrefetchLocation](#)

- ▶ :: cudaMemRangeAttributePreferredLocationType
- ▶ :: cudaMemRangeAttributePreferredLocationId
- ▶ :: cudaMemRangeAttributeLastPrefetchLocationType
- ▶ :: cudaMemRangeAttributeLastPrefetchLocationId

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemRangeGetAttribute](#), [cudaMemAdvise](#), [cudaMemPrefetchAsync](#),
[cuMemRangeGetAttributes](#)

__host__ cudaError_t cudaMemset (void *devPtr, int value, size_t count)

Initializes or sets device memory to a value.

Parameters

devPtr

- Pointer to device memory

value

- Value to set for each byte of specified memory

count

- Size in bytes to set

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Fills the first `count` bytes of the memory area pointed to by `devPtr` with the constant byte value `value`.

Note that this function is asynchronous with respect to the host unless `devPtr` refers to pinned host memory.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ See also [memset synchronization details](#).
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cuMemsetD8](#), [cuMemsetD16](#), [cuMemsetD32](#)

host `cudaError_t cudaMemset2D (void *devPtr, size_t pitch, int value, size_t width, size_t height)`

Initializes or sets device memory to a value.

Parameters

devPtr

- Pointer to 2D device memory

pitch

- Pitch in bytes of 2D device memory(Unused if `height` is 1)

value

- Value to set for each byte of specified memory

width

- Width of matrix set (columns in bytes)

height

- Height of matrix set (rows)

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Sets to the specified value `value` a matrix (`height` rows of `width` bytes each) pointed to by `dstPtr`. `pitch` is the width in bytes of the 2D array pointed to by `dstPtr`, including any

padding added to the end of each row. This function performs fastest when the pitch is one that has been passed back by [cudaMallocPitch\(\)](#).

Note that this function is asynchronous with respect to the host unless devPtr refers to pinned host memory.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ See also [memset synchronization details](#).
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemset](#), [cudaMemset3D](#), [cudaMemsetAsync](#), [cudaMemset2DAsync](#),
[cudaMemset3DAsync](#), [cuMemsetD2D8](#), [cuMemsetD2D16](#), [cuMemsetD2D32](#)

```
_host __device __cudaError_t
cudaMemset2DAsync (void *devPtr, size_t pitch,
int value, size_t width, size_t height, cudaStream_t
stream)
```

Initializes or sets device memory to a value.

Parameters

devPtr

- Pointer to 2D device memory

pitch

- Pitch in bytes of 2D device memory(Unused if height is 1)

value

- Value to set for each byte of specified memory

width

- Width of matrix set (columns in bytes)

height

- Height of matrix set (rows)

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Sets to the specified value `value` a matrix (`height` rows of `width` bytes each) pointed to by `dstPtr`. `pitch` is the width in bytes of the 2D array pointed to by `dstPtr`, including any padding added to the end of each row. This function performs fastest when the pitch is one that has been passed back by [cudaMallocPitch\(\)](#).

[cudaMemset2DAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the memset is complete. The operation can optionally be associated to a stream by passing a non-zero `stream` argument. If `stream` is non-zero, the operation may overlap with operations in other streams.

The device version of this function only handles device to device copies and cannot be given local or shared pointers.

**Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ See also [memset synchronization details](#).
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemset](#), [cudaMemset2D](#), [cudaMemset3D](#), [cudaMemsetAsync](#), [cudaMemset3DAsync](#),
[cuMemsetD2D8Async](#), [cuMemsetD2D16Async](#), [cuMemsetD2D32Async](#)

`_host_ cudaError_t cudaMemcpy3D (cudaPitchedPtr pitchedDevPtr, int value, cudaExtent extent)`

Initializes or sets device memory to a value.

Parameters

pitchedDevPtr

- Pointer to pitched device memory

value

- Value to set for each byte of specified memory

extent

- Size parameters for where to set device memory (width field in bytes)

Returns

`cudaSuccess`, `cudaErrorInvalidValue`,

Description

Initializes each element of a 3D array to the specified value `value`. The object to initialize is defined by `pitchedDevPtr`. The `pitch` field of `pitchedDevPtr` is the width in memory in bytes of the 3D array pointed to by `pitchedDevPtr`, including any padding added to the end of each row. The `xsize` field specifies the logical width of each row in bytes, while the `ysize` field specifies the height of each 2D slice in rows. The `pitch` field of `pitchedDevPtr` is ignored when `height` and `depth` are both equal to 1.

The extents of the initialized region are specified as a `width` in bytes, a `height` in rows, and a `depth` in slices.

Extents with `width` greater than or equal to the `xsize` of `pitchedDevPtr` may perform significantly faster than extents narrower than the `xsize`. Secondarily, extents with `height` equal to the `ysize` of `pitchedDevPtr` will perform faster than when the `height` is shorter than the `ysize`.

This function performs fastest when the `pitchedDevPtr` has been allocated by [cudaMalloc3D\(\)](#).

Note that this function is asynchronous with respect to the host unless `pitchedDevPtr` refers to pinned host memory.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ See also [memset synchronization details](#).

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemset](#), [cudaMemset2D](#), [cudaMemsetAsync](#), [cudaMemset2DAsync](#),
[cudaMemset3DAsync](#), [cudaMalloc3D](#), [make_cudaPitchedPtr](#), [make_cudaExtent](#)

**`__host____device__cudaError_t
cudaMemset3DAsync (cudaPitchedPtr pitchedDevPtr,
int value, cudaExtent extent, cudaStream_t stream)`**

Initializes or sets device memory to a value.

Parameters**pitchedDevPtr**

- Pointer to pitched device memory

value

- Value to set for each byte of specified memory

extent

- Size parameters for where to set device memory [width field in bytes]

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Initializes each element of a 3D array to the specified value `value`. The object to initialize is defined by `pitchedDevPtr`. The `pitch` field of `pitchedDevPtr` is the width in memory in bytes of the 3D array pointed to by `pitchedDevPtr`, including any padding added to the end of each row. The `xsize` field specifies the logical width of each row in bytes, while the `ysize` field specifies the height of each 2D slice in rows. The `pitch` field of `pitchedDevPtr` is ignored when `height` and `depth` are both equal to 1.

The extents of the initialized region are specified as a `width` in bytes, a `height` in rows, and a `depth` in slices.

Extents with `width` greater than or equal to the `xsize` of `pitchedDevPtr` may perform significantly faster than extents narrower than the `xsize`. Secondarily, extents with `height` equal to the `ysize` of `pitchedDevPtr` will perform faster than when the `height` is shorter than the `ysize`.

This function performs fastest when the `pitchedDevPtr` has been allocated by [cudaMalloc3D\(\)](#).

[cudaMemset3DAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the memset is complete. The operation can optionally be associated to a stream by passing a non-zero `stream` argument. If `stream` is non-zero, the operation may overlap with operations in other streams.

The device version of this function only handles device to device copies and cannot be given local or shared pointers.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ See also [memset synchronization details](#).
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemset](#), [cudaMemset2D](#), [cudaMemset3D](#), [cudaMemsetAsync](#), [cudaMemset2DAsync](#), [cudaMalloc3D](#), [make_cudaPitchedPtr](#), [make_cudaExtent](#)

__host__ __device__ cudaError_t cudaMemsetAsync
(void *devPtr, int value, size_t count, cudaStream_t stream)

Initializes or sets device memory to a value.

Parameters**devPtr**

- Pointer to device memory

value

- Value to set for each byte of specified memory

count

- Size in bytes to set

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Fills the first `count` bytes of the memory area pointed to by `devPtr` with the constant byte value `value`.

[cudaMemsetAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the memset is complete. The operation can optionally be associated to a stream by passing a non-zero `stream` argument. If `stream` is non-zero, the operation may overlap with operations in other streams.

The device version of this function only handles device to device copies and cannot be given local or shared pointers.

**Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ See also [memset synchronization details](#).
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemset](#), [cudaMemset2D](#), [cudaMemset3D](#), [cudaMemset2DAsync](#), [cudaMemset3DAsync](#),
[cuMemsetD8Async](#), [cuMemsetD16Async](#), [cuMemsetD32Async](#)

```
__host__ cudaError_t
cudaMipmappedArrayGetMemoryRequirements
(cudaArrayMemoryRequirements
*memoryRequirements, cudaMipmappedArray_t
mipmap, int device)
```

Returns the memory requirements of a CUDA mipmapped array.

Parameters

memoryRequirements

- Pointer to [cudaArrayMemoryRequirements](#)

mipmap

- CUDA mipmapped array to get the memory requirements of

device

- Device to get the memory requirements for

Returns

[cudaSuccess](#) [cudaErrorInvalidValue](#)

Description

Returns the memory requirements of a CUDA mipmapped array in `memoryRequirements`. If the CUDA mipmapped array is not allocated with flag [cudaArrayDeferredMapping](#), [cudaErrorInvalidValue](#) will be returned.

The returned value in [cudaArrayMemoryRequirements::size](#) represents the total size of the CUDA mipmapped array. The returned value in [cudaArrayMemoryRequirements::alignment](#) represents the alignment necessary for mapping the CUDA mipmapped array.

See also:

[cudaArrayGetMemoryRequirements](#)

```
_host_ cudaError_t
cudaMipmappedArrayGetSparseProperties
(cudaArraySparseProperties *sparseProperties,
cudaMipmappedArray_t mipmap)
```

Returns the layout properties of a sparse CUDA mipmapped array.

Parameters

sparseProperties

- Pointer to return [cudaArraySparseProperties](#)

mipmap

- The CUDA mipmapped array to get the sparse properties of

Returns

[cudaSuccess](#) [cudaErrorInvalidValue](#)

Description

Returns the sparse array layout properties in **sparseProperties**. If the CUDA mipmapped array is not allocated with flag [cudaArraySparse cudaErrorInvalidValue](#) will be returned.

For non-layered CUDA mipmapped arrays, [cudaArraySparseProperties::mipTailSize](#) returns the size of the mip tail region. The mip tail region includes all mip levels whose width, height or depth is less than that of the tile. For layered CUDA mipmapped arrays, if [cudaArraySparseProperties::flags](#) contains [cudaArraySparsePropertiesSingleMipTail](#), then [cudaArraySparseProperties::mipTailSize](#) specifies the size of the mip tail of all layers combined. Otherwise, [cudaArraySparseProperties::mipTailSize](#) specifies mip tail size per layer. The returned value of [cudaArraySparseProperties::mipTailFirstLevel](#) is valid only if [cudaArraySparseProperties::mipTailSize](#) is non-zero.

See also:

[cudaArrayGetSparseProperties](#), [cuMemMapArrayAsync](#)

__host__make_cudaExtent (size_t w, size_t h, size_t d)

Returns a cudaExtent based on input parameters.

Parameters

w

- Width in elements when referring to array memory, in bytes when referring to linear memory

h

- Height in elements

d

- Depth in elements

Returns

cudaExtent specified by w, h, and d

Description

Returns a cudaExtent based on the specified input parameters w, h, and d.

See also:

make_cudaPitchedPtr, make_cudaPos

__host__make_cudaPitchedPtr (void *d, size_t p, size_t xsz, size_t ysz)

Returns a cudaPitchedPtr based on input parameters.

Parameters

d

- Pointer to allocated memory

p

- Pitch of allocated memory in bytes

xsz

- Logical width of allocation in elements

ysz

- Logical height of allocation in elements

Returns

cudaPitchedPtr specified by d, p, xsz, and ysz

Description

Returns a [cudaPitchedPtr](#) based on the specified input parameters `d`, `p`, `xsz`, and `ysz`.

See also:

[make_cudaExtent](#), [make_cudaPos](#)

host make cudaPos (size_t x, size_t y, size_t z)

Returns a `cudaPos` based on input parameters.

Parameters

x

- X position

y

- Y position

z

- Z position

Returns

`cudaPos` specified by `x`, `y`, and `z`

Description

Returns a [cudaPos](#) based on the specified input parameters `x`, `y`, and `z`.

See also:

[make_cudaExtent](#), [make_cudaPitchedPtr](#)

6.10. Memory Management [DEPRECATED]

This section describes deprecated memory management functions of the CUDA runtime application programming interface.

Some functions have overloaded C++ API template versions documented separately in the [C++ API Routines](#) module.

```
_host_ cudaError_t cudaMemcpyArrayToArray  
(cudaArray_t dst, size_t wOffsetDst, size_t hOffsetDst,  
cudaArray_const_t src, size_t wOffsetSrc, size_t  
hOffsetSrc, size_t count, cudaMemcpyKind kind)
```

Copies data between host and device.

Parameters

dst

- Destination memory address

wOffsetDst

- Destination starting X offset (columns in bytes)

hOffsetDst

- Destination starting Y offset (rows)

src

- Source memory address

wOffsetSrc

- Source starting X offset (columns in bytes)

hOffsetSrc

- Source starting Y offset (rows)

count

- Size in bytes to copy

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidMemcpyDirection](#)

Description

Deprecated

Copies count bytes from the CUDA array `src` starting at `hOffsetSrc` rows and `wOffsetSrc` bytes from the upper left corner to the CUDA array `dst` starting at `hOffsetDst` rows and `wOffsetDst` bytes from the upper left corner, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpyToArray](#), [cudaMemcpy2DToArray](#),
[cudaMemcpyFromArray](#), [cudaMemcpy2DFromArray](#), [cudaMemcpy2DArrayToArray](#),
[cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#), [cudaMemcpyAsync](#),
[cudaMemcpy2DAsync](#), [cudaMemcpyToArrayAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpyFromArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpyAtoA](#)

```
_host_ cudaError_t cudaMemcpyFromArray (void
*dst, cudaArray_const_t src, size_t wOffset, size_t
hOffset, size_t count, cudaMemcpyKind kind)
```

Copies data between host and device.

Parameters**dst**

- Destination memory address

src

- Source memory address

wOffset

- Source starting X offset (columns in bytes)

hOffset

- Source starting Y offset (rows)

count

- Size in bytes to copy

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidMemcpyDirection](#)

Description

Deprecated

Copies count bytes from the CUDA array `src` starting at `hOffset` rows and `wOffset` bytes from the upper left corner to the memory area pointed to by `dst`, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpyToArray](#), [cudaMemcpy2DToArray](#),
[cudaMemcpy2DFromArray](#), [cudaMemcpyArrayToArray](#), [cudaMemcpy2DArrayToArray](#),
[cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#), [cudaMemcpyAsync](#),
[cudaMemcpy2DAsync](#), [cudaMemcpyToArrayAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpyFromArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpyAtoH](#), [cuMemcpyAtoD](#)

```
_host_ cudaError_t cudaMemcpyFromArrayAsync  
(void *dst, cudaArray_const_t src, size_t wOffset,  
size_t hOffset, size_t count, cudaMemcpyKind kind,  
cudaStream_t stream)
```

Copies data between host and device.

Parameters

dst

- Destination memory address

src

- Source memory address

wOffset

- Source starting X offset (columns in bytes)

hOffset

- Source starting Y offset (rows)

count

- Size in bytes to copy

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidMemcpyDirection](#)

Description

Deprecated

Copies count bytes from the CUDA array **src** starting at **hOffset** rows and **wOffset** bytes from the upper left corner to the memory area pointed to by **dst**, where **kind** specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

[cudaMemcpyFromArrayAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero **stream** argument. If **kind** is [cudaMemcpyHostToDevice](#) or [cudaMemcpyDeviceToHost](#) and **stream** is non-zero, the copy may overlap with operations in other streams.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpyToArray](#), [cudaMemcpy2DToArray](#),
[cudaMemcpyFromArray](#), [cudaMemcpy2DFromArray](#), [cudaMemcpyArrayToArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpyToArrayAsync](#),
[cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpyAtoHAsync](#), [cuMemcpy2DAsync](#)

```
__host__ cudaError_t cudaMemcpyToArray
(cudaArray_t dst, size_t wOffset, size_t hOffset, const
void *src, size_t count, cudaMemcpyKind kind)
```

Copies data between host and device.

Parameters**dst**

- Destination memory address

wOffset

- Destination starting X offset (columns in bytes)

hOffset

- Destination starting Y offset (rows)

src

- Source memory address

count

- Size in bytes to copy

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidMemcpyDirection](#)

Description

Deprecated

Copies count bytes from the memory area pointed to by `src` to the CUDA array `dst` starting at `hOffset` rows and `wOffset` bytes from the upper left corner, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpyFromArray](#),
[cudaMemcpy2DFromArray](#), [cudaMemcpyArrayToArray](#), [cudaMemcpy2DArrayToArray](#),
[cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#), [cudaMemcpyAsync](#),
[cudaMemcpy2DAsync](#), [cudaMemcpyToArrayAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpyFromArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpyHtoA](#), [cuMemcpyDtoA](#)

```
__host__ cudaError_t cudaMemcpyToArrayAsync
(cudaArray_t dst, size_t wOffset, size_t hOffset,
const void *src, size_t count, cudaMemcpyKind kind,
cudaStream_t stream)
```

Copies data between host and device.

Parameters

dst

- Destination memory address

wOffset

- Destination starting X offset (columns in bytes)

hOffset

- Destination starting Y offset (rows)

src

- Source memory address

count

- Size in bytes to copy

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidMemcpyDirection](#)

Description

Deprecated

Copies count bytes from the memory area pointed to by `src` to the CUDA array `dst` starting at `hOffset` rows and `wOffset` bytes from the upper left corner, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

[cudaMemcpyToArrayAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero `stream` argument. If `kind` is [cudaMemcpyHostToDevice](#) or [cudaMemcpyDeviceToHost](#) and `stream` is non-zero, the copy may overlap with operations in other streams.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpyToArray](#), [cudaMemcpy2DToArray](#),
[cudaMemcpyFromArray](#), [cudaMemcpy2DFromArray](#), [cudaMemcpyArrayToArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpyFromArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#),
[cudaMemcpyFromSymbolAsync](#), [cuMemcpyHtoAAsync](#), [cuMemcpy2DAsync](#)

6.11. Stream Ordered Memory Allocator

overview

The asynchronous allocator allows the user to allocate and free in stream order. All asynchronous accesses of the allocation must happen between the stream executions of the allocation and the free. If the memory is accessed outside of the promised stream order, a use before allocation / use after free error will cause undefined behavior.

The allocator is free to reallocate the memory as long as it can guarantee that compliant memory accesses will not overlap temporally. The allocator may refer to internal stream ordering as well as inter-stream dependencies (such as CUDA events and null stream dependencies) when establishing the temporal guarantee. The allocator may also insert inter-stream dependencies to establish the temporal guarantee.

Supported Platforms

Whether or not a device supports the integrated stream ordered memory allocator may be queried by calling [cudaDeviceGetAttribute\(\)](#) with the device attribute [cudaDevAttrMemoryPoolsSupported](#).

__host__ cudaError_t cudaFreeAsync (void *devPtr, cudaStream_t hStream)

Frees memory with stream ordered semantics.

Parameters

devPtr

hStream

- The stream establishing the stream ordering promise

Returns

cudaSuccess, cudaErrorInvalidValue, cudaErrorNotSupported

Description

Inserts a free operation into hStream. The allocation must not be accessed after stream execution reaches the free. After this API returns, accessing the memory from any subsequent work launched on the GPU or querying its pointer attributes results in undefined behavior.



Note:

During stream capture, this function results in the creation of a free node and must therefore be passed the address of a graph allocation.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function uses standard default stream semantics.
- ▶ Note that this function may also return cudaErrorInitializationError, cudaErrorInsufficientDriver or cudaErrorNoDevice if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by cudaStreamAddCallback no CUDA function may be called from callback. cudaErrorNotPermitted may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

cuMemFreeAsync, cudaMallocAsync

```
_host_cudaError_t cudaMallocAsync (void  
*devPtr, size_t size, cudaStream_t hStream)
```

Allocates memory with stream ordered semantics.

Parameters

devPtr

- Returned device pointer

size

- Number of bytes to allocate

hStream

- The stream establishing the stream ordering contract and the memory pool to allocate from

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorNotSupported](#), [cudaErrorOutOfMemory](#),

Description

Inserts an allocation operation into **hStream**. A pointer to the allocated memory is returned immediately in ***dptr**. The allocation must not be accessed until the the allocation operation completes. The allocation comes from the memory pool associated with the stream's device.

Note:

- ▶ The default memory pool of a device contains device memory from that device.
- ▶ Basic stream ordering allows future work submitted into the same stream to use the allocation. Stream query, stream synchronize, and CUDA events can be used to guarantee that the allocation operation completes before work submitted in a separate stream runs.
- ▶ During stream capture, this function results in the creation of an allocation node. In this case, the allocation is owned by the graph instead of the memory pool. The memory pool's properties are used to set the node's creation parameters.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cuMemAllocAsync](#), [cudaMallocAsync \[C++ API\]](#), [cudaMallocFromPoolAsync](#), [cudaFreeAsync](#), [cudaDeviceSetMemPool](#), [cudaDeviceGetDefaultMemPool](#), [cudaDeviceGetMemPool](#), [cudaMemPoolSetAccess](#), [cudaMemPoolSetAttribute](#), [cudaMemPoolGetAttribute](#)

**`__host__ cudaError_t cudaMallocFromPoolAsync
(void **ptr, size_t size, cudaMemPool_t memPool,
cudaStream_t stream)`**

Allocates memory from a specified pool with stream ordered semantics.

Parameters

ptr

- Returned device pointer

size

memPool

- The pool to allocate from

stream

- The stream establishing the stream ordering semantic

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorNotSupported](#), [cudaErrorOutOfMemory](#)

Description

Inserts an allocation operation into `hStream`. A pointer to the allocated memory is returned immediately in `*dptr`. The allocation must not be accessed until the the allocation operation completes. The allocation comes from the specified memory pool.



Note:

- ▶ The specified memory pool may be from a device different than that of the specified `hStream`.

- ▶ Basic stream ordering allows future work submitted into the same stream to use the allocation. Stream query, stream synchronize, and CUDA events can be used to guarantee that the allocation operation completes before work submitted in a separate stream runs.

**Note:**

During stream capture, this function results in the creation of an allocation node. In this case, the allocation is owned by the graph instead of the memory pool. The memory pool's properties are used to set the node's creation parameters.

See also:

[cuMemAllocFromPoolAsync](#), [cudaMallocAsync \(C++ API\)](#), [cudaMallocAsync](#), [cudaFreeAsync](#),
[cudaDeviceGetDefaultMemPool](#), [cudaMemPoolCreate](#), [cudaMemPoolSetAccess](#),
[cudaMemPoolSetAttribute](#)

**__host__ cudaError_t cudaMemPoolCreate
(cudaMemPool_t *memPool, const
cudaMemPoolProps *poolProps)**

Creates a memory pool.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorNotSupported](#)

Description

Creates a CUDA memory pool and returns the handle in `pool`. The `poolProps` determines the properties of the pool such as the backing device and IPC capabilities.

To create a memory pool targeting a specific host NUMA node, applications must set `cudaMemPoolProps::cudaMemLocation::type` to [cudaMemLocationTypeHostNuma](#) and `cudaMemPoolProps::cudaMemLocation::id` must specify the NUMA ID of the host memory node. By default, the pool's memory will be accessible from the device it is allocated on. In the case of pools created with [cudaMemLocationTypeHostNuma](#), their default accessibility will be from the host CPU. Applications can control the maximum size of the pool by specifying a non-zero value for `cudaMemPoolProps::maxSize`. If set to 0, the maximum size of the pool will default to a system dependent value.

**Note:**

Specifying `cudaMemHandleTypeNone` creates a memory pool that will not support IPC.

See also:

[cuMemPoolCreate](#), [cudaDeviceSetMemPool](#), [cudaMallocFromPoolAsync](#),
[cudaMemPoolExportToShareableHandle](#), [cudaDeviceGetDefaultMemPool](#),
[cudaDeviceGetMemPool](#)

__host__ cudaError_t cudaMemPoolDestroy (cudaMemPool_t memPool)

Destroys the specified memory pool.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

If any pointers obtained from this pool haven't been freed or the pool has free operations that haven't completed when [cudaMemPoolDestroy](#) is invoked, the function will return immediately and the resources associated with the pool will be released automatically once there are no more outstanding allocations.

Destroying the current mempool of a device sets the default mempool of that device as the current mempool for that device.



Note:

A device's default memory pool cannot be destroyed.

See also:

[cuMemPoolDestroy](#), [cudaFreeAsync](#), [cudaDeviceSetMemPool](#),
[cudaDeviceGetDefaultMemPool](#), [cudaDeviceGetMemPool](#), [cudaMemPoolCreate](#)

__host__ cudaError_t cudaMemPoolExportPointer (cudaMemPoolPtrExportData *exportData, void *ptr)

Export data to share a memory pool allocation between processes.

Parameters

exportData

ptr

- pointer to memory being exported

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorOutOfMemory](#)

Description

Constructs `shareData_out` for sharing a specific allocation from an already shared memory pool. The recipient process can import the allocation with the [cudaMemPoolImportPointer](#) api. The data is not a handle and may be shared through any IPC mechanism.

See also:

[cuMemPoolExportPointer](#), [cudaMemPoolExportToShareableHandle](#),
[cudaMemPoolImportFromShareableHandle](#), [cudaMemPoolImportPointer](#)

**`__host__ cudaError_t
cudaMemPoolExportToShareableHandle (void
*shareableHandle, cudaMemPool_t memPool,
cudaMemAllocationHandleType handleType, unsigned
int flags)`**

Exports a memory pool to the requested handle type.

Parameters

shareableHandle

memPool

handleType

- the type of handle to create

flags

- must be 0

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorOutOfMemory](#)

Description

Given an IPC capable mempool, create an OS handle to share the pool with another process. A recipient process can convert the shareable handle into a mempool with [cudaMemPoolImportFromShareableHandle](#). Individual pointers can then be shared with the [cudaMemPoolExportPointer](#) and [cudaMemPoolImportPointer](#) APIs. The implementation of what the shareable handle is and how it can be transferred is defined by the requested handle type.



Note:

: To create an IPC capable mempool, create a mempool with a CUmemAllocationHandleType other than cudaMemHandleTypeNone.

See also:

[cuMemPoolExportToShareableHandle](#), [cudaMemPoolImportFromShareableHandle](#),
[cudaMemPoolExportPointer](#), [cudaMemPoolImportPointer](#)

`__host__ cudaError_t cudaMemPoolGetAccess`
`{cudaMemAccessFlags *flags, cudaMemPool_t`
`memPool, cudaMemLocation *location}`

Returns the accessibility of a pool from a device.

Parameters

flags

- the accessibility of the pool from the specified location

memPool

- the pool being queried

location

- the location accessing the pool

Description

Returns the accessibility of the pool's memory from the specified location.

See also:

[cuMemPoolGetAccess](#), [cudaMemPoolSetAccess](#)

`__host__ cudaError_t cudaMemPoolGetAttribute`
`{cudaMemPool_t memPool, cudaMemPoolAttr attr,`
`void *value}`

Gets attributes of a memory pool.

Parameters

memPool

attr

- The attribute to get

value

- Retrieved value

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Supported attributes are:

- ▶ [cudaMemPoolAttrReleaseThreshold](#): (value type = cuuint64_t) Amount of reserved memory in bytes to hold onto before trying to release memory back to the OS. When more than the release threshold bytes of memory are held by the memory pool, the allocator will try to release memory back to the OS on the next call to stream, event or context synchronize. (default 0)
- ▶ [cudaMemPoolReuseFollowEventDependencies](#): (value type = int) Allow [cudaMallocAsync](#) to use memory asynchronously freed in another stream as long as a stream ordering dependency of the allocating stream on the free action exists. Cuda events and null stream interactions can create the required stream ordered dependencies. (default enabled)
- ▶ [cudaMemPoolReuseAllowOpportunistic](#): (value type = int) Allow reuse of already completed frees when there is no dependency between the free and allocation. (default enabled)
- ▶ [cudaMemPoolReuseAllowInternalDependencies](#): (value type = int) Allow [cudaMallocAsync](#) to insert new stream dependencies in order to establish the stream ordering required to reuse a piece of memory released by [cudaFreeAsync](#) (default enabled).
- ▶ [cudaMemPoolAttrReservedMemCurrent](#): (value type = cuuint64_t) Amount of backing memory currently allocated for the mempool.
- ▶ [cudaMemPoolAttrReservedMemHigh](#): (value type = cuuint64_t) High watermark of backing memory allocated for the mempool since the last time it was reset.
- ▶ [cudaMemPoolAttrUsedMemCurrent](#): (value type = cuuint64_t) Amount of memory from the pool that is currently in use by the application.
- ▶ [cudaMemPoolAttrUsedMemHigh](#): (value type = cuuint64_t) High watermark of the amount of memory from the pool that was in use by the application since the last time it was reset.



Note:

Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cuMemPoolGetAttribute](#), [cudaMallocAsync](#), [cudaFreeAsync](#), [cudaDeviceGetDefaultMemPool](#),
[cudaDeviceGetMemPool](#), [cudaMemPoolCreate](#)

```
_host_ cudaError_t
cudaMemPoolImportFromShareableHandle
(cudaMemPool_t *memPool, void *shareableHandle,
cudaMemAllocationHandleType handleType, unsigned int flags)
```

imports a memory pool from a shared handle.

Parameters

memPool

shareableHandle

handleType

- The type of handle being imported

flags

- must be 0

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorOutOfMemory](#)

Description

Specific allocations can be imported from the imported pool with [cudaMemPoolImportPointer](#).



Note:

Imported memory pools do not support creating new allocations. As such imported memory pools may not be used in [cudaDeviceSetMemPool](#) or [cudaMallocFromPoolAsync](#) calls.

See also:

[cuMemPoolImportFromShareableHandle](#), [cudaMemPoolExportToShareableHandle](#),
[cudaMemPoolExportPointer](#), [cudaMemPoolImportPointer](#)

```
__host__ cudaError_t cudaMemPoolImportPointer  
(void **ptr, cudaMemPool_t memPool,  
cudaMemPoolPtrExportData *exportData)
```

Import a memory pool allocation from another process.

Returns

[CUDA_SUCCESS](#), [CUDA_ERROR_INVALID_VALUE](#), [CUDA_ERROR_NOT_INITIALIZED](#),
[CUDA_ERROR_OUT_OF_MEMORY](#)

Description

Returns in `ptr_out` a pointer to the imported memory. The imported memory must not be accessed before the allocation operation completes in the exporting process. The imported memory must be freed from all importing processes before being freed in the exporting process. The pointer may be freed with `cudaFree` or `cudaFreeAsync`. If `cudaFreeAsync` is used, the free must be completed on the importing process before the free operation on the exporting process.



Note:

The `cudaFreeAsync` api may be used in the exporting process before the `cudaFreeAsync` operation completes in its stream as long as the `cudaFreeAsync` in the exporting process specifies a stream with a stream dependency on the importing process's `cudaFreeAsync`.

See also:

[cuMemPoolImportPointer](#), [cudaMemPoolExportToShareableHandle](#),
[cudaMemPoolImportFromShareableHandle](#), [cudaMemPoolExportPointer](#)

```
__host__ cudaError_t cudaMemPoolSetAccess  
(cudaMemPool_t memPool, const  
cudaMemAccessDesc *descList, size_t count)
```

Controls visibility of pools between devices.

Parameters

memPool
descList
count

- Number of descriptors in the map array.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

See also:

[cuMemPoolSetAccess](#), [cudaMemPoolGetAccess](#), [cudaMallocAsync](#), [cudaFreeAsync](#)

`__host__ cudaError_t cudaMemPoolSetAttribute`
`(cudaMemPool_t memPool, cudaMemPoolAttr attr,`
`void *value)`

Sets attributes of a memory pool.

Parameters

memPool

attr

- The attribute to modify

value

- Pointer to the value to assign

Returns


[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Supported attributes are:

- ▶ [cudaMemPoolAttrReleaseThreshold](#): (value type = cuint64_t) Amount of reserved memory in bytes to hold onto before trying to release memory back to the OS. When more than the release threshold bytes of memory are held by the memory pool, the allocator will try to release memory back to the OS on the next call to stream, event or context synchronize. (default 0)
- ▶ [cudaMemPoolReuseFollowEventDependencies](#): (value type = int) Allow [cudaMallocAsync](#) to use memory asynchronously freed in another stream as long as a stream ordering dependency of the allocating stream on the free action exists. Cuda events and null stream interactions can create the required stream ordered dependencies. (default enabled)
- ▶ [cudaMemPoolReuseAllowOpportunistic](#): (value type = int) Allow reuse of already completed frees when there is no dependency between the free and allocation. (default enabled)

- ▶ [cudaMemPoolReuseAllowInternalDependencies](#): (value type = int) Allow [cudaMallocAsync](#) to insert new stream dependencies in order to establish the stream ordering required to reuse a piece of memory released by [cudaFreeAsync](#) (default enabled).
- ▶ [cudaMemPoolAttrReservedMemHigh](#): (value type = cuuint64_t) Reset the high watermark that tracks the amount of backing memory that was allocated for the memory pool. It is illegal to set this attribute to a non-zero value.
- ▶ [cudaMemPoolAttrUsedMemHigh](#): (value type = cuuint64_t) Reset the high watermark that tracks the amount of used memory that was allocated for the memory pool. It is illegal to set this attribute to a non-zero value.

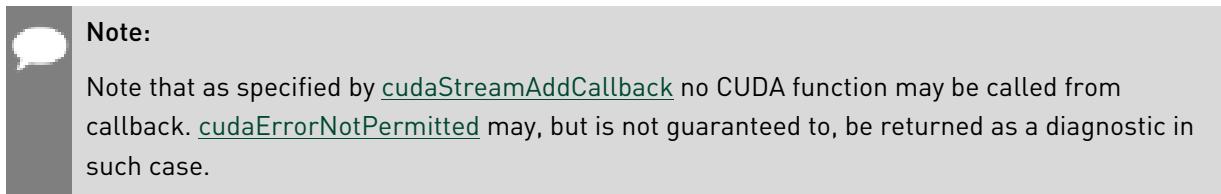

See also:

[cuMemPoolSetAttribute](#), [cudaMallocAsync](#), [cudaFreeAsync](#), [cudaDeviceGetDefaultMemPool](#), [cudaDeviceGetMemPool](#), [cudaMemPoolCreate](#)

__host__ [cudaError_t](#) [cudaMemPoolTrimTo](#) ([cudaMemPool_t](#) memPool, [size_t](#) minBytesToKeep)

Tries to release memory back to the OS.

Parameters

memPool

minBytesToKeep

- If the pool has less than minBytesToKeep reserved, the TrimTo operation is a no-op.
- Otherwise the pool will be guaranteed to have at least minBytesToKeep bytes reserved after the operation.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Releases memory back to the OS until the pool contains fewer than minBytesToKeep reserved bytes, or there is no more memory that the allocator can safely release. The allocator cannot

release OS allocations that back outstanding asynchronous allocations. The OS allocations may happen at different granularity from the user allocations.

Note:

- ▶ : Allocations that have not been freed count as outstanding.
- ▶ : Allocations that have been asynchronously freed but whose completion has not been observed on the host (eg. by a synchronize) can count as outstanding.

Note:

Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cuMemPoolTrimTo](#), [cudaMallocAsync](#), [cudaFreeAsync](#), [cudaDeviceGetDefaultMemPool](#),
[cudaDeviceGetMemPool](#), [cudaMemPoolCreate](#)

6.12. Unified Addressing

This section describes the unified addressing functions of the CUDA runtime application programming interface.

Overview

CUDA devices can share a unified address space with the host. For these devices there is no distinction between a device pointer and a host pointer -- the same pointer value may be used to access memory from the host program and from a kernel running on the device (with exceptions enumerated below).

Supported Platforms

Whether or not a device supports unified addressing may be queried by calling [cudaGetDeviceProperties\(\)](#) with the device property [cudaDeviceProp::unifiedAddressing](#).

Unified addressing is automatically enabled in 64-bit processes .

Looking Up Information from Pointer Values

It is possible to look up information about the memory which backs a pointer value.

For instance, one may want to know if a pointer points to host or device memory.

As another example, in the case of device memory, one may want to know on which

CUDA device the memory resides. These properties may be queried using the function [cudaPointerGetAttributes\(\)](#)

Since pointers are unique, it is not necessary to specify information about the pointers specified to [cudaMemcpy\(\)](#) and other copy functions. The copy direction [cudaMemcpyDefault](#) may be used to specify that the CUDA runtime should infer the location of the pointer from its value.

Automatic Mapping of Host Allocated Host Memory

All host memory allocated through all devices using [cudaMallocHost\(\)](#) and [cudaHostAlloc\(\)](#) is always directly accessible from all devices that support unified addressing. This is the case regardless of whether or not the flags [cudaHostAllocPortable](#) and [cudaHostAllocMapped](#) are specified.

The pointer value through which allocated host memory may be accessed in kernels on all devices that support unified addressing is the same as the pointer value through which that memory is accessed on the host. It is not necessary to call [cudaHostGetDevicePointer\(\)](#) to get the device pointer for these allocations.

Note that this is not the case for memory allocated using the flag [cudaHostAllocWriteCombined](#), as discussed below.

Direct Access of Peer Memory

Upon enabling direct access from a device that supports unified addressing to another peer device that supports unified addressing using [cudaDeviceEnablePeerAccess\(\)](#) all memory allocated in the peer device using [cudaMalloc\(\)](#) and [cudaMallocPitch\(\)](#) will immediately be accessible by the current device. The device pointer value through which any peer's memory may be accessed in the current device is the same pointer value through which that memory may be accessed from the peer device.

Exceptions, Disjoint Addressing

Not all memory may be accessed on devices through the same pointer value through which they are accessed on the host. These exceptions are host memory registered using [cudaHostRegister\(\)](#) and host memory allocated using the flag [cudaHostAllocWriteCombined](#). For these exceptions, there exists a distinct host and device address for the memory. The device address is guaranteed to not overlap any valid host pointer range and is guaranteed to have the same value across all devices that support unified addressing.

This device address may be queried using [cudaHostGetDevicePointer\(\)](#) when a device using unified addressing is current. Either the host or the unified device pointer value may be used to refer to this memory in [cudaMemcpy\(\)](#) and similar functions using the [cudaMemcpyDefault](#) memory direction.

__host__ cudaError_t cudaPointerGetAttributes (cudaPointerAttributes *attributes, const void *ptr)

Returns attributes about a specified pointer.

Parameters

attributes

- Attributes for the specified pointer

ptr

- Pointer to get attributes for

Returns

cudaSuccess, cudaErrorInvalidDevice, cudaErrorInvalidValue

Description

Returns in *attributes the attributes of the pointer ptr. If pointer was not allocated in, mapped by or registered with context supporting unified addressing cudaErrorInvalidValue is returned.



Note:

In CUDA 11.0 forward passing host pointer will return cudaMemoryTypeUnregistered in cudaPointerAttributes::type and call will return cudaSuccess.

The cudaPointerAttributes structure is defined as:

```
/* struct cudaPointerAttributes {
    enum cudaMemoryType
        type;
    int device;
    void *devicePointer;
    void *hostPointer;
}
```

In this structure, the individual fields mean

- ▶ cudaPointerAttributes::type identifies type of memory. It can be cudaMemoryTypeUnregistered for unregistered host memory, cudaMemoryTypeHost for registered host memory, cudaMemoryTypeDevice for device memory or cudaMemoryTypeManaged for managed memory.
- ▶ device is the device against which ptr was allocated. If ptr has memory type cudaMemoryTypeDevice then this identifies the device on which the memory referred to by ptr physically resides. If ptr has memory type cudaMemoryTypeHost then this identifies the device which was current when the allocation was made (and if that device is deinitialized then this allocation will vanish with that device's state).

- ▶ `devicePointer` is the device pointer alias through which the memory referred to by `ptr` may be accessed on the current device. If the memory referred to by `ptr` cannot be accessed directly by the current device then this is NULL.
- ▶ `hostPointer` is the host pointer alias through which the memory referred to by `ptr` may be accessed on the host. If the memory referred to by `ptr` cannot be accessed directly by the host then this is NULL.

**Note:**

- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetDeviceCount](#), [cudaGetDevice](#), [cudaSetDevice](#), [cudaChooseDevice](#), [cudaInitDevice](#), [cuPointerGetAttributes](#)

6.13. Peer Device Memory Access

This section describes the peer device memory access functions of the CUDA runtime application programming interface.

`__host__ cudaError_t cudaDeviceCanAccessPeer (int *canAccessPeer, int device, int peerDevice)`

Queries if a device may directly access a peer device's memory.

Parameters

canAccessPeer

- Returned access capability

device

- Device from which allocations on `peerDevice` are to be directly accessed.

peerDevice

- Device on which the allocations to be directly accessed by `device` reside.

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#)

Description

Returns in `*canAccessPeer` a value of 1 if device `device` is capable of directly accessing memory from `peerDevice` and 0 otherwise. If direct access of `peerDevice` from `device` is possible, then access may be enabled by calling [cudaDeviceEnablePeerAccess\(\)](#).

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceEnablePeerAccess](#), [cudaDeviceDisablePeerAccess](#), [cuDeviceCanAccessPeer](#)

__host__ [cudaError_t](#) [cudaDeviceDisablePeerAccess](#) (int peerDevice)

Disables direct access to memory allocations on a peer device.

Parameters

peerDevice

- Peer device to disable direct access to

Returns

[cudaSuccess](#), [cudaErrorPeerAccessNotEnabled](#), [cudaErrorInvalidDevice](#)

Description

Returns [cudaErrorPeerAccessNotEnabled](#) if direct access to memory on `peerDevice` has not yet been enabled from the current device.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceCanAccessPeer](#), [cudaDeviceEnablePeerAccess](#), [cuCtxDisablePeerAccess](#)

__host__ cudaError_t cudaDeviceEnablePeerAccess (int peerDevice, unsigned int flags)

Enables direct access to memory allocations on a peer device.

Parameters

peerDevice

- Peer device to enable direct access to from the current device

flags

- Reserved for future use and must be set to 0

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorPeerAccessAlreadyEnabled](#),
[cudaErrorInvalidValue](#)

Description

On success, all allocations from `peerDevice` will immediately be accessible by the current device. They will remain accessible until access is explicitly disabled using [cudaDeviceDisablePeerAccess\(\)](#) or either device is reset using [cudaDeviceReset\(\)](#).

Note that access granted by this call is unidirectional and that in order to access memory on the current device from `peerDevice`, a separate symmetric call to [cudaDeviceEnablePeerAccess\(\)](#) is required.

Note that there are both device-wide and system-wide limitations per system configuration, as noted in the CUDA Programming Guide under the section "Peer-to-Peer Memory Access".

Returns [cudaErrorInvalidDevice](#) if [cudaDeviceCanAccessPeer\(\)](#) indicates that the current device cannot directly access memory from `peerDevice`.

Returns [cudaErrorPeerAccessAlreadyEnabled](#) if direct access of `peerDevice` from the current device has already been enabled.

Returns [cudaErrorInvalidValue](#) if `flags` is not 0.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceCanAccessPeer](#), [cudaDeviceDisablePeerAccess](#), [cuCtxEnablePeerAccess](#)

6.14. OpenGL Interoperability

This section describes the OpenGL interoperability functions of the CUDA runtime application programming interface. Note that mapping of OpenGL resources is performed with the graphics API agnostic, resource mapping interface described in [Graphics Interopability](#).

enum cudaGLDeviceList

CUDA devices corresponding to the current OpenGL context

Values

cudaGLDeviceListAll = 1

The CUDA devices for all GPUs used by the current OpenGL context

cudaGLDeviceListCurrentFrame = 2

The CUDA devices for the GPUs used by the current OpenGL context in its currently rendering frame

cudaGLDeviceListNextFrame = 3

The CUDA devices for the GPUs to be used by the current OpenGL context in the next frame

```
_host_ cudaError_t cudaGLGetDevices (unsigned int
*pCudaDeviceCount, int *pCudaDevices, unsigned int
cudaDeviceCount, cudaGLDeviceList deviceList)
```

Gets the CUDA devices associated with the current OpenGL context.

Parameters

pCudaDeviceCount

- Returned number of CUDA devices corresponding to the current OpenGL context

pCudaDevices

- Returned CUDA devices corresponding to the current OpenGL context

cudaDeviceCount

- The size of the output device array **pCudaDevices**

deviceList

- The set of devices to return. This set may be [cudaGLDeviceListAll](#) for all devices, [cudaGLDeviceListCurrentFrame](#) for the devices used to render the current frame (in SLI), or [cudaGLDeviceListNextFrame](#) for the devices used to render the next frame (in SLI).

Returns

[cudaSuccess](#), [cudaErrorNoDevice](#), [cudaErrorInvalidGraphicsContext](#),
[cudaErrorOperatingSystem](#), [cudaErrorUnknown](#)

Description

Returns in ***pCudaDeviceCount** the number of CUDA-compatible devices corresponding to the current OpenGL context. Also returns in ***pCudaDevices** at most **cudaDeviceCount** of the CUDA-compatible devices corresponding to the current OpenGL context. If any of the GPUs being used by the current OpenGL context are not CUDA capable then the call will return [cudaErrorNoDevice](#).



Note:

- ▶ This function is not supported on Mac OS X.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#), [cudaGraphicsMapResources](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cudaGraphicsResourceGetMappedPointer](#),
[cuGLGetDevices](#)

__host__ cudaError_t cudaGraphicsGLRegisterBuffer(cudaGraphicsResource **resource, GLuint buffer, unsigned int flags)

Registers an OpenGL buffer object.

Parameters

resource

- Pointer to the returned object handle

buffer

- name of buffer object to be registered

flags

- Register flags

Returns

cudaSuccess, cudaErrorInvalidDevice, cudaErrorInvalidValue,
cudaErrorInvalidResourceHandle, cudaErrorOperatingSystem, cudaErrorUnknown

Description

Registers the buffer object specified by `buffer` for access by CUDA. A handle to the registered object is returned as `resource`. The register flags `flags` specify the intended usage, as follows:

- ▶ cudaGraphicsRegisterFlagsNone: Specifies no hints about how this resource will be used. It is therefore assumed that this resource will be read from and written to by CUDA. This is the default value.
- ▶ cudaGraphicsRegisterFlagsReadOnly: Specifies that CUDA will not write to this resource.
- ▶ cudaGraphicsRegisterFlagsWriteDiscard: Specifies that CUDA will not read from this resource and will write over the entire contents of the resource, so none of the data previously stored in the resource will be preserved.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

cudaGraphicsUnregisterResource, cudaGraphicsMapResources,
cudaGraphicsResourceGetMappedPointer, cuGraphicsGLRegisterBuffer

__host__ `cudaError_t cudaGraphicsGLRegisterImage` (`cudaGraphicsResource **resource`, `GLuint image`, `GLenum target`, `unsigned int flags`)

Register an OpenGL texture or renderbuffer object.

Parameters

resource

- Pointer to the returned object handle

image

- name of texture or renderbuffer object to be registered

target

- Identifies the type of object specified by `image`

flags

- Register flags

Returns

`cudaSuccess`, `cudaErrorInvalidDevice`, `cudaErrorInvalidValue`,
`cudaErrorInvalidResourceHandle`, `cudaErrorOperatingSystem`, `cudaErrorUnknown`

Description

Registers the texture or renderbuffer object specified by `image` for access by CUDA. A handle to the registered object is returned as `resource`.

`target` must match the type of the object, and must be one of `GL_TEXTURE_2D`, `GL_TEXTURE_RECTANGLE`, `GL_TEXTURE_CUBE_MAP`, `GL_TEXTURE_3D`, `GL_TEXTURE_2D_ARRAY`, or `GL_RENDERBUFFER`.

The register flags `flags` specify the intended usage, as follows:

- ▶ `cudaGraphicsRegisterFlagsNone`: Specifies no hints about how this resource will be used. It is therefore assumed that this resource will be read from and written to by CUDA. This is the default value.
- ▶ `cudaGraphicsRegisterFlagsReadOnly`: Specifies that CUDA will not write to this resource.
- ▶ `cudaGraphicsRegisterFlagsWriteDiscard`: Specifies that CUDA will not read from this resource and will write over the entire contents of the resource, so none of the data previously stored in the resource will be preserved.
- ▶ `cudaGraphicsRegisterFlagsSurfaceLoadStore`: Specifies that CUDA will bind this resource to a surface reference.
- ▶ `cudaGraphicsRegisterFlagsTextureGather`: Specifies that CUDA will perform texture gather operations on this resource.

The following image formats are supported. For brevity's sake, the list is abbreviated. For ex., {GL_R, GL_RG} X {8, 16} would expand to the following 4 formats {GL_R8, GL_R16, GL_RG8, GL_RG16} :

- ▶ GL_RED, GL_RG, GL_RGBA, GL_LUMINANCE, GL_ALPHA, GL_LUMINANCE_ALPHA, GL_INTENSITY
- ▶ {GL_R, GL_RG, GL_RGBA} X {8, 16, 16F, 32F, 8UI, 16UI, 32UI, 8I, 16I, 32I}
- ▶ {GL_LUMINANCE, GL_ALPHA, GL_LUMINANCE_ALPHA, GL_INTENSITY} X {8, 16, 16FARB, 32FARB, 8UIEXT, 16UIEXT, 32UIEXT, 8IEXT, 16IEXT, 32IEXT}

The following image classes are currently disallowed:

- ▶ Textures with borders
- ▶ Multisampled renderbuffers



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#), [cudaGraphicsMapResources](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cuGraphicsGLRegisterImage](#)

__host__ cudaError_t cudaWGLGetDevice (int *device, HGPUNV hGpu)

Gets the CUDA device associated with hGpu.

Parameters

device

- Returns the device associated with hGpu, or -1 if hGpu is not a compute device.

hGpu

- Handle to a GPU, as queried via WGL_NV_gpu_affinity

Returns

[cudaSuccess](#)

Description

Returns the CUDA device associated with a hGpu, if applicable.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

`WGL_NV_gpu_affinity`, [cuWGLGetDevice](#)

6.15. OpenGL Interoperability [DEPRECATED]

This section describes deprecated OpenGL interoperability functionality.

enum cudaGLMapFlags

CUDA GL Map Flags

Values

cudaGLMapFlagsNone = 0

Default; Assume resource can be read/written

cudaGLMapFlagsReadOnly = 1

CUDA kernels will not write to this resource

cudaGLMapFlagsWriteDiscard = 2

CUDA kernels will only write to and will not read from this resource

```
__host__ cudaError_t cudaGLMapBufferObject (void  
**devPtr, GLuint bufObj)
```

Maps a buffer object for access by CUDA.

Parameters

devPtr

- Returned device pointer to CUDA object

bufObj

- Buffer object ID to map

Returns

`cudaSuccess`, `cudaErrorMapBufferObjectFailed`

Description

Deprecated This function is deprecated as of CUDA 3.0.

Maps the buffer object of ID `bufObj` into the address space of CUDA and returns in `*devPtr` the base pointer of the resulting mapping. The buffer must have previously been registered by calling `cudaGLRegisterBufferObject()`. While a buffer is mapped by CUDA, any OpenGL operation which references the buffer will result in undefined behavior. The OpenGL context used to create the buffer, or another context from the same share group, must be bound to the current thread when this is called.

All streams in the current thread are synchronized with the current GL context.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsMapResources](#)

**__host__ cudaError_t cudaGLMapBufferObjectAsync
(void **devPtr, GLuint bufObj, cudaStream_t stream)**

Maps a buffer object for access by CUDA.

Parameters

devPtr

- Returned device pointer to CUDA object

bufObj

- Buffer object ID to map

stream

- Stream to synchronize

Returns

[cudaSuccess](#), [cudaErrorMapBufferObjectFailed](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Maps the buffer object of ID `bufObj` into the address space of CUDA and returns in `*devPtr` the base pointer of the resulting mapping. The buffer must have previously been registered by calling `cudaGLRegisterBufferObject()`. While a buffer is mapped by CUDA, any OpenGL operation which references the buffer will result in undefined behavior. The OpenGL context

used to create the buffer, or another context from the same share group, must be bound to the current thread when this is called.

Stream /p stream is synchronized with the current GL context.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsMapResources](#)

__host__ cudaError_t cudaGLRegisterBufferObject (GLuint bufObj)

Registers a buffer object for access by CUDA.

Parameters

bufObj

- Buffer object ID to register

Returns

[cudaSuccess](#), [cudaErrorInitializationError](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Registers the buffer object of ID bufObj for access by CUDA. This function must be called before CUDA can map the buffer object. The OpenGL context used to create the buffer, or another context from the same share group, must be bound to the current thread when this is called.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsGLRegisterBuffer](#)

__host__ `cudaError_t` `cudaGLSetBufferObjectMapFlags(GLuint bufObj,` `unsigned int flags)`

Set usage flags for mapping an OpenGL buffer.

Parameters

bufObj

- Registered buffer object to set flags for

flags

- Parameters for buffer mapping

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorInvalidResourceHandle`, `cudaErrorUnknown`

Description

Deprecated This function is deprecated as of CUDA 3.0.

Set flags for mapping the OpenGL buffer `bufObj`

Changes to flags will take effect the next time `bufObj` is mapped. The `flags` argument may be any of the following:

- ▶ `cudaGLMapFlagsNone`: Specifies no hints about how this buffer will be used. It is therefore assumed that this buffer will be read from and written to by CUDA kernels. This is the default value.
- ▶ `cudaGLMapFlagsReadOnly`: Specifies that CUDA kernels which access this buffer will not write to the buffer.
- ▶ `cudaGLMapFlagsWriteDiscard`: Specifies that CUDA kernels which access this buffer will not read from the buffer and will write over the entire contents of the buffer, so none of the data previously stored in the buffer will be preserved.

If `bufObj` has not been registered for use with CUDA, then `cudaErrorInvalidResourceHandle` is returned. If `bufObj` is presently mapped for access by CUDA, then `cudaErrorUnknown` is returned.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsResourceSetMapFlags](#)

__host__ cudaError_t cudaGLSetGLDevice (int device)

Sets a CUDA device to use OpenGL interoperability.

Parameters

device

- Device to use for OpenGL interoperability

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorSetOnActiveProcess](#)

Description

Deprecated This function is deprecated as of CUDA 5.0.

This function is deprecated and should no longer be used. It is no longer necessary to associate a CUDA device with an OpenGL context in order to achieve maximum interoperability performance.

This function will immediately initialize the primary context on device if needed.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsGLRegisterBuffer](#), [cudaGraphicsGLRegisterImage](#)

__host__ cudaError_t cudaGLUnmapBufferObject (GLuint bufObj)

Unmaps a buffer object for access by CUDA.

Parameters

bufObj

- Buffer object to unmap

Returns

[cudaSuccess](#), [cudaErrorUnmapBufferObjectFailed](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Unmaps the buffer object of ID `bufObj` for access by CUDA. When a buffer is unmapped, the base address returned by `cudaGLMapBufferObject()` is invalid and subsequent references to the address result in undefined behavior. The OpenGL context used to create the buffer, or another context from the same share group, must be bound to the current thread when this is called.

All streams in the current thread are synchronized with the current GL context.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnmapResources](#)

__host__cudaError_t

cudaGLUnmapBufferObjectAsync (GLuint bufObj, cudaStream_t stream)

Unmaps a buffer object for access by CUDA.

Parameters

bufObj

- Buffer object to unmap

stream

- Stream to synchronize

Returns

[cudaSuccess](#), [cudaErrorUnmapBufferObjectFailed](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Unmaps the buffer object of ID `bufObj` for access by CUDA. When a buffer is unmapped, the base address returned by `cudaGLMapBufferObject()` is invalid and subsequent references to the address result in undefined behavior. The OpenGL context used to create the buffer, or another context from the same share group, must be bound to the current thread when this is called.

Stream /p stream is synchronized with the current GL context.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnmapResources](#)

__host__ cudaError_t cudaGLUnregisterBufferObject (GLuint bufObj)

Registers a buffer object for access by CUDA.

Parameters

bufObj

- Buffer object to unregister

Returns

[cudaSuccess](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Registers the buffer object of ID bufObj for access by CUDA and releases any CUDA resources associated with the buffer. Once a buffer is registered, it may no longer be mapped by CUDA. The GL context used to create the buffer, or another context from the same share group, must be bound to the current thread when this is called.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#)

6.16. Direct3D 9 Interoperability

This section describes the Direct3D 9 interoperability functions of the CUDA runtime application programming interface. Note that mapping of Direct3D 9 resources is performed

with the graphics API agnostic, resource mapping interface described in [Graphics Interopability](#).

enum cudaD3D9DeviceList

CUDA devices corresponding to a D3D9 device

Values

cudaD3D9DeviceListAll = 1

The CUDA devices for all GPUs used by a D3D9 device

cudaD3D9DeviceListCurrentFrame = 2

The CUDA devices for the GPUs used by a D3D9 device in its currently rendering frame

cudaD3D9DeviceListNextFrame = 3

The CUDA devices for the GPUs to be used by a D3D9 device in the next frame

```
__host__ cudaError_t cudaD3D9GetDevice (int  
*device, const char *pszAdapterName)
```

Gets the device number for an adapter.

Parameters

device

- Returns the device corresponding to pszAdapterName

pszAdapterName

- D3D9 adapter to get device for

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Returns in *device the CUDA-compatible device corresponding to the adapter name pszAdapterName obtained from `EnumDisplayDevices` or `IDirect3D9::GetAdapterIdentifier()`. If no device on the adapter with name pszAdapterName is CUDA-compatible then the call will fail.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaD3D9SetDirect3DDevice](#), [cudaGraphicsD3D9RegisterResource](#), [cuD3D9GetDevice](#)

```
_host_ cudaError_t cudaD3D9GetDevices (unsigned int *pCudaDeviceCount, int *pCudaDevices, unsigned int cudaDeviceCount, IDirect3DDevice9 *pD3D9Device, cudaD3D9DeviceList deviceList)
```

Gets the CUDA devices corresponding to a Direct3D 9 device.

Parameters

pCudaDeviceCount

- Returned number of CUDA devices corresponding to **pD3D9Device**

pCudaDevices

- Returned CUDA devices corresponding to **pD3D9Device**

cudaDeviceCount

- The size of the output device array **pCudaDevices**

pD3D9Device

- Direct3D 9 device to query for CUDA devices

deviceList

- The set of devices to return. This set may be [cudaD3D9DeviceListAll](#) for all devices, [cudaD3D9DeviceListCurrentFrame](#) for the devices used to render the current frame (in SLI), or [cudaD3D9DeviceListNextFrame](#) for the devices used to render the next frame (in SLI).

Returns

[cudaSuccess](#), [cudaErrorNoDevice](#), [cudaErrorUnknown](#)

Description

Returns in ***pCudaDeviceCount** the number of CUDA-compatible devices corresponding to the Direct3D 9 device **pD3D9Device**. Also returns in ***pCudaDevices** at most **cudaDeviceCount** of the the CUDA-compatible devices corresponding to the Direct3D 9 device **pD3D9Device**.

If any of the GPUs being used to render **pDevice** are not CUDA capable then the call will return [cudaErrorNoDevice](#).



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#), [cudaGraphicsMapResources](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cudaGraphicsResourceGetMappedPointer](#),
[cuD3D9GetDevices](#)

__host__ cudaError_t cudaD3D9GetDirect3DDevice (IDirect3DDevice9 **ppD3D9Device)

Gets the Direct3D device against which the current CUDA context was created.

Parameters

ppD3D9Device

- Returns the Direct3D device for this thread

Returns

[cudaSuccess](#), [cudaErrorInvalidGraphicsContext](#), [cudaErrorUnknown](#)

Description

Returns in *ppD3D9Device the Direct3D device against which this CUDA context was created in [cudaD3D9SetDirect3DDevice\(\)](#).



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaD3D9SetDirect3DDevice](#), [cuD3D9GetDirect3DDevice](#)

__host__ cudaError_t cudaD3D9SetDirect3DDevice (IDirect3DDevice9 *pD3D9Device, int device)

Sets the Direct3D 9 device to use for interoperability with a CUDA device.

Parameters

pD3D9Device

- Direct3D device to use for this thread

device

- The CUDA device to use. This device must be among the devices returned when querying [cudaD3D9DeviceListAll](#) from [cudaD3D9GetDevices](#), may be set to -1 to automatically select an appropriate CUDA device.

Returns

[cudaSuccess](#), [cudaErrorInitializationError](#), [cudaErrorInvalidValue](#),
[cudaErrorSetOnActiveProcess](#)

Description

Records `pD3D9Device` as the Direct3D 9 device to use for Direct3D 9 interoperability with the CUDA device `device` and sets `device` as the current device for the calling host thread.

This function will immediately initialize the primary context on `device` if needed.

If `device` has already been initialized then this call will fail with the error [cudaErrorSetOnActiveProcess](#). In this case it is necessary to reset `device` using [cudaDeviceReset\(\)](#) before Direct3D 9 interoperability on `device` may be enabled.

Successfully initializing CUDA interoperability with `pD3D9Device` will increase the internal reference count on `pD3D9Device`. This reference count will be decremented when `device` is reset using [cudaDeviceReset\(\)](#).

Note that this function is never required for correct functionality. Use of this function will result in accelerated interoperability only when the operating system is Windows Vista or Windows 7, and the device `pD3DDdevice` is not an `IDirect3DDevice9Ex`. In all other circumstances, this function is not necessary.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaD3D9GetDevice](#), [cudaGraphicsD3D9RegisterResource](#), [cudaDeviceReset](#)

**`__host__ cudaError_t
cudaGraphicsD3D9RegisterResource
(cudaGraphicsResource **resource,
IDirect3DResource9 *pD3DResource, unsigned int
flags)`**

Register a Direct3D 9 resource for access by CUDA.

Parameters

resource

- Pointer to returned resource handle

pD3DResource

- Direct3D resource to register

flags

- Parameters for resource registration

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#),
[cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Registers the Direct3D 9 resource `pD3DResource` for access by CUDA.

If this call is successful then the application will be able to map and unmap this resource until it is unregistered through [cudaGraphicsUnregisterResource\(\)](#). Also on success, this call will increase the internal reference count on `pD3DResource`. This reference count will be decremented when this resource is unregistered through [cudaGraphicsUnregisterResource\(\)](#).

This call potentially has a high-overhead and should not be called every frame in interactive applications.

The type of `pD3DResource` must be one of the following.

- ▶ `IDirect3DVertexBuffer9`: may be accessed through a device pointer
- ▶ `IDirect3DIndexBuffer9`: may be accessed through a device pointer
- ▶ `IDirect3DSurface9`: may be accessed through an array. Only stand-alone objects of type `IDirect3DSurface9` may be explicitly shared. In particular, individual mipmap levels and faces of cube maps may not be registered directly. To access individual surfaces associated with a texture, one must register the base texture object.
- ▶ `IDirect3DBaseTexture9`: individual surfaces on this texture may be accessed through an array.

The `flags` argument may be used to specify additional parameters at register time. The valid values for this parameter are

- ▶ [cudaGraphicsRegisterFlagsNone](#): Specifies no hints about how this resource will be used.
- ▶ [cudaGraphicsRegisterFlagsSurfaceLoadStore](#): Specifies that CUDA will bind this resource to a surface reference.
- ▶ [cudaGraphicsRegisterFlagsTextureGather](#): Specifies that CUDA will perform texture gather operations on this resource.

Not all Direct3D resources of the above types may be used for interoperability with CUDA. The following are some limitations.

- ▶ The primary rendertarget may not be registered with CUDA.

- ▶ Resources allocated as shared may not be registered with CUDA.
- ▶ Textures which are not of a format which is 1, 2, or 4 channels of 8, 16, or 32-bit integer or floating-point data cannot be shared.
- ▶ Surfaces of depth or stencil formats cannot be shared.

A complete list of supported formats is as follows:

- ▶ D3DFMT_L8
- ▶ D3DFMT_L16
- ▶ D3DFMT_A8R8G8B8
- ▶ D3DFMT_X8R8G8B8
- ▶ D3DFMT_G16R16
- ▶ D3DFMT_A8B8G8R8
- ▶ D3DFMT_A8
- ▶ D3DFMT_A8L8
- ▶ D3DFMT_Q8W8V8U8
- ▶ D3DFMT_V16U16
- ▶ D3DFMT_A16B16G16R16F
- ▶ D3DFMT_A16B16G16R16
- ▶ D3DFMT_R32F
- ▶ D3DFMT_G16R16F
- ▶ D3DFMT_A32B32G32R32F
- ▶ D3DFMT_G32R32F
- ▶ D3DFMT_R16F

If `pD3DResource` is of incorrect type or is already registered, then `cudaErrorInvalidResourceHandle` is returned. If `pD3DResource` cannot be registered, then `cudaErrorUnknown` is returned.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaD3D9SetDirect3DDevice](#), [cudaGraphicsUnregisterResource](#), [cudaGraphicsMapResources](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cudaGraphicsResourceGetMappedPointer](#),
[cuGraphicsD3D9RegisterResource](#)

6.17. Direct3D 9 Interoperability [DEPRECATED]

This section describes deprecated Direct3D 9 interoperability functions.

enum cudaD3D9MapFlags

CUDA D3D9 Map Flags

Values

cudaD3D9MapFlagsNone = 0

Default; Assume resource can be read/written

cudaD3D9MapFlagsReadOnly = 1

CUDA kernels will not write to this resource

cudaD3D9MapFlagsWriteDiscard = 2

CUDA kernels will only write to and will not read from this resource

enum cudaD3D9RegisterFlags

CUDA D3D9 Register Flags

Values

cudaD3D9RegisterFlagsNone = 0

Default; Resource can be accessed through a void*

cudaD3D9RegisterFlagsArray = 1

Resource can be accessed through a CUarray*

__host__ cudaError_t cudaD3D9MapResources (int count, IDirect3DResource9 **ppResources)

Map Direct3D resources for access by CUDA.

Parameters

count

- Number of resources to map for CUDA

ppResources

- Resources to map for CUDA

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Maps the count Direct3D resources in ppResources for access by CUDA.

The resources in ppResources may be accessed in CUDA kernels until they are unmapped. Direct3D should not access any resources while they are mapped by CUDA. If an application does so, the results are undefined.

This function provides the synchronization guarantee that any Direct3D calls issued before [cudaD3D9MapResources\(\)](#) will complete before any CUDA kernels issued after [cudaD3D9MapResources\(\)](#) begin.

If any of ppResources have not been registered for use with CUDA or if ppResources contains any duplicate entries then [cudaErrorInvalidResourceHandle](#) is returned. If any of ppResources are presently mapped for access by CUDA then [cudaErrorUnknown](#) is returned.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsMapResources](#)

[__host__ cudaError_t cudaD3D9RegisterResource](#)
(IDirect3DResource9 *pResource, unsigned int flags)

Registers a Direct3D resource for access by CUDA.

Parameters

pResource

- Resource to register

flags

- Parameters for resource registration

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Registers the Direct3D resource `pResource` for access by CUDA.

If this call is successful, then the application will be able to map and unmap this resource until it is unregistered through `cudaD3D9UnregisterResource()`. Also on success, this call will increase the internal reference count on `pResource`. This reference count will be decremented when this resource is unregistered through `cudaD3D9UnregisterResource()`.

This call potentially has a high-overhead and should not be called every frame in interactive applications.

The type of `pResource` must be one of the following.

- ▶ `IDirect3DVertexBuffer9`: No notes.
- ▶ `IDirect3DIndexBuffer9`: No notes.
- ▶ `IDirect3DSurface9`: Only stand-alone objects of type `IDirect3DSurface9` may be explicitly shared. In particular, individual mipmap levels and faces of cube maps may not be registered directly. To access individual surfaces associated with a texture, one must register the base texture object.
- ▶ `IDirect3DBaseTexture9`: When a texture is registered, all surfaces associated with all mipmap levels of all faces of the texture will be accessible to CUDA.

The `fFlags` argument specifies the mechanism through which CUDA will access the Direct3D resource. The following value is allowed:

- ▶ `cudaD3D9RegisterFlagsNone`: Specifies that CUDA will access this resource through a `void*`. The pointer, size, and pitch for each subresource of this resource may be queried through `cudaD3D9ResourceGetMappedPointer()`, `cudaD3D9ResourceGetMappedSize()`, and `cudaD3D9ResourceGetMappedPitch()` respectively. This option is valid for all resource types.

Not all Direct3D resources of the above types may be used for interoperability with CUDA. The following are some limitations:

- ▶ The primary rendertarget may not be registered with CUDA.
- ▶ Resources allocated as shared may not be registered with CUDA.
- ▶ Any resources allocated in D3DPOOL_SYSTEMMEM or D3DPOOL_MANAGED may not be registered with CUDA.
- ▶ Textures which are not of a format which is 1, 2, or 4 channels of 8, 16, or 32-bit integer or floating-point data cannot be shared.
- ▶ Surfaces of depth or stencil formats cannot be shared.

If Direct3D interoperability is not initialized on this context, then `cudaErrorInvalidDevice` is returned. If `pResource` is of incorrect type (e.g. is a non-stand-alone `IDirect3DSurface9`) or is already registered, then `cudaErrorInvalidResourceHandle` is returned. If `pResource` cannot be registered then `cudaErrorUnknown` is returned.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsD3D9RegisterResource](#)

**`_host_ cudaError_t
cudaD3D9ResourceGetMappedArray (cudaArray
**ppArray, IDirect3DResource9 *pResource, unsigned
int face, unsigned int level)`**

Get an array through which to access a subresource of a Direct3D resource which has been mapped for access by CUDA.

Parameters

ppArray

- Returned array corresponding to subresource

pResource

- Mapped resource to access

face

- Face of resource to access

level

- Level of resource to access

Returns

`cudaSuccess`, `cudaErrorInvalidResourceHandle`, `cudaErrorUnknown`

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in `*pArray` an array through which the subresource of the mapped Direct3D resource `pResource`, which corresponds to `face` and `level` may be accessed. The value set in `pArray` may change every time that `pResource` is mapped.

If `pResource` is not registered then `cudaErrorInvalidResourceHandle` is returned. If `pResource` was not registered with usage flags `cudaD3D9RegisterFlagsArray`, then

`cudaErrorInvalidResourceHandle` is returned. If `pResource` is not mapped, then `cudaErrorUnknown` is returned.

For usage requirements of `face` and `level` parameters, see `cudaD3D9ResourceGetMappedPointer()`.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

`cudaGraphicsSubResourceGetMappedArray`

**`_host__cudaError_t
cudaD3D9ResourceGetMappedPitch (size_t *pPitch,
size_t *pPitchSlice, IDirect3DResource9 *pResource,
unsigned int face, unsigned int level)`**

Get the pitch of a subresource of a Direct3D resource which has been mapped for access by CUDA.

Parameters

`pPitch`

- Returned pitch of subresource

`pPitchSlice`

- Returned Z-slice pitch of subresource

`pResource`

- Mapped resource to access

`face`

- Face of resource to access

`level`

- Level of resource to access

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorInvalidResourceHandle`, `cudaErrorUnknown`

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in `*pPitch` and `*pPitchSlice` the pitch and Z-slice pitch of the subresource of the mapped Direct3D resource `pResource`, which corresponds to `face` and `level`. The values set in `pPitch` and `pPitchSlice` may change every time that `pResource` is mapped.

The pitch and Z-slice pitch values may be used to compute the location of a sample on a surface as follows.

For a 2D surface, the byte offset of the sample at position **x**, **y** from the base pointer of the surface is:

y * pitch + (bytes per pixel) * x

For a 3D surface, the byte offset of the sample at position **x**, **y**, **z** from the base pointer of the surface is:

z* slicePitch + y * pitch + (bytes per pixel) * x

Both parameters **pPitch** and **pPitchSlice** are optional and may be set to NULL.

If **pResource** is not of type **IDirect3DBaseTexture9** or one of its sub-types or if **pResource** has not been registered for use with CUDA, then [cudaErrorInvalidResourceHandle](#) is returned. If **pResource** was not registered with usage flags [cudaD3D9RegisterFlagsNone](#), then [cudaErrorInvalidResourceHandle](#) is returned. If **pResource** is not mapped for access by CUDA then [cudaErrorUnknown](#) is returned.

For usage requirements of **face** and **level** parameters, see [cudaD3D9ResourceGetMappedPointer\(\)](#).



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsResourceGetMappedPointer](#)

```
__host__ cudaError_t
cudaD3D9ResourceGetMappedPointer (void
**pPointer, IDirect3DResource9 *pResource,
unsigned int face, unsigned int level)
```

Get a pointer through which to access a subresource of a Direct3D resource which has been mapped for access by CUDA.

Parameters

pPointer

- Returned pointer corresponding to subresource

pResource

- Mapped resource to access

face

- Face of resource to access

level

- Level of resource to access

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in *pPointer the base pointer of the subresource of the mapped Direct3D resource pResource, which corresponds to face and level. The value set in pPointer may change every time that pResource is mapped.

If pResource is not registered, then [cudaErrorInvalidResourceHandle](#) is returned.

If pResource was not registered with usage flags [cudaD3D9RegisterFlagsNone](#), then [cudaErrorInvalidResourceHandle](#) is returned. If pResource is not mapped, then [cudaErrorUnknown](#) is returned.

If pResource is of type IDirect3DCubeTexture9, then face must one of the values enumerated by type D3DCUBEMAP_FACES. For all other types, face must be 0. If face is invalid, then [cudaErrorInvalidValue](#) is returned.

If pResource is of type IDirect3DBaseTexture9, then level must correspond to a valid mipmap level. Only mipmap level 0 is supported for now. For all other types level must be 0. If level is invalid, then [cudaErrorInvalidValue](#) is returned.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsResourceGetMappedPointer](#)

```
_host_ cudaError_t
cudaD3D9ResourceGetMappedSize (size_t *pSize,
IDirect3DResource9 *pResource, unsigned int face,
unsigned int level)
```

Get the size of a subresource of a Direct3D resource which has been mapped for access by CUDA.

Parameters

pSize

- Returned size of subresource

pResource

- Mapped resource to access

face

- Face of resource to access

level

- Level of resource to access

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in ***pSize** the size of the subresource of the mapped Direct3D resource **pResource**, which corresponds to **face** and **level**. The value set in **pSize** may change every time that **pResource** is mapped.

If **pResource** has not been registered for use with CUDA then [cudaErrorInvalidResourceHandle](#) is returned. If **pResource** was not registered with usage flags [cudaD3D9RegisterFlagsNone](#), then [cudaErrorInvalidResourceHandle](#) is returned. If **pResource** is not mapped for access by CUDA then [cudaErrorUnknown](#) is returned.

For usage requirements of **face** and **level** parameters, see [cudaD3D9ResourceGetMappedPointer\(\)](#).



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsResourceGetMappedPointer](#)

```
_host_ cudaError_t
cudaD3D9ResourceGetSurfaceDimensions
(size_t *pWidth, size_t *pHeight, size_t *pDepth,
IDirect3DResource9 *pResource, unsigned int face,
unsigned int level)
```

Get the dimensions of a registered Direct3D surface.

Parameters

pWidth

- Returned width of surface

pHeight

- Returned height of surface

pDepth

- Returned depth of surface

pResource

- Registered resource to access

face

- Face of resource to access

level

- Level of resource to access

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#),

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in ***pWidth**, ***pHeight**, and ***pDepth** the dimensions of the subresource of the mapped Direct3D resource **pResource** which corresponds to **face** and **level**.

Since anti-aliased surfaces may have multiple samples per pixel, it is possible that the dimensions of a resource will be an integer factor larger than the dimensions reported by the Direct3D runtime.

The parameters **pWidth**, **pHeight**, and **pDepth** are optional. For 2D surfaces, the value returned in ***pDepth** will be 0.

If **pResource** is not of type **IDirect3DBaseTexture9** or **IDirect3DSurface9** or if **pResource** has not been registered for use with CUDA, then [cudaErrorInvalidResourceHandle](#) is returned.

For usage requirements of **face** and **level** parameters, see [cudaD3D9ResourceGetMappedPointer](#).

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsSubResourceGetMappedArray](#)

`__host__ cudaError_t`

`cudaD3D9ResourceSetMapFlags (IDirect3DResource9 *pResource, unsigned int flags)`

Set usage flags for mapping a Direct3D resource.

Parameters

pResource

- Registered resource to set flags for

flags

- Parameters for resource mapping

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorInvalidResourceHandle`, `cudaErrorUnknown`

Description

Deprecated This function is deprecated as of CUDA 3.0.

Set flags for mapping the Direct3D resource `pResource`.

Changes to flags will take effect the next time `pResource` is mapped. The `flags` argument may be any of the following:

- ▶ `cudaD3D9MapFlagsNone`: Specifies no hints about how this resource will be used. It is therefore assumed that this resource will be read from and written to by CUDA kernels. This is the default value.
- ▶ `cudaD3D9MapFlagsReadOnly`: Specifies that CUDA kernels which access this resource will not write to this resource.
- ▶ `cudaD3D9MapFlagsWriteDiscard`: Specifies that CUDA kernels which access this resource will not read from this resource and will write over the entire contents of the resource, so none of the data previously stored in the resource will be preserved.

If `pResource` has not been registered for use with CUDA, then `cudaErrorInvalidResourceHandle` is returned. If `pResource` is presently mapped for access by CUDA, then `cudaErrorUnknown` is returned.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaInteropResourceSetMapFlags](#)

__host__ cudaError_t cudaD3D9UnmapResources (int count, IDirect3DResource9 **ppResources)

Unmap Direct3D resources for access by CUDA.

Parameters

count

- Number of resources to unmap for CUDA

ppResources

- Resources to unmap for CUDA

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Unmaps the count Direct3D resources in ppResources.

This function provides the synchronization guarantee that any CUDA kernels issued before [cudaD3D9UnmapResources\(\)](#) will complete before any Direct3D calls issued after [cudaD3D9UnmapResources\(\)](#) begin.

If any of ppResources have not been registered for use with CUDA or if ppResources contains any duplicate entries, then [cudaErrorInvalidResourceHandle](#) is returned. If any of ppResources are not presently mapped for access by CUDA then [cudaErrorUnknown](#) is returned.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnmapResources](#)

`__host__ cudaError_t cudaD3D9UnregisterResource (IDirect3DResource9 *pResource)`

Registers a Direct3D resource for access by CUDA.

Parameters

pResource

- Resource to unregister

Returns

`cudaSuccess`, `cudaErrorInvalidResourceHandle`, `cudaErrorUnknown`

Description

Deprecated This function is deprecated as of CUDA 3.0.

Registers the Direct3D resource `pResource` so it is not accessible by CUDA unless registered again.

If `pResource` is not registered, then `cudaErrorInvalidResourceHandle` is returned.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#)

6.18. Direct3D 10 Interoperability

This section describes the Direct3D 10 interoperability functions of the CUDA runtime application programming interface. Note that mapping of Direct3D 10 resources is performed with the graphics API agnostic, resource mapping interface described in [Graphics Interopability](#).

enum cudaD3D10DeviceList

CUDA devices corresponding to a D3D10 device

Values

cudaD3D10DeviceListAll = 1

The CUDA devices for all GPUs used by a D3D10 device

cudaD3D10DeviceListCurrentFrame = 2

The CUDA devices for the GPUs used by a D3D10 device in its currently rendering frame

cudaD3D10DeviceListNextFrame = 3

The CUDA devices for the GPUs to be used by a D3D10 device in the next frame

`_host__cudaError_t cudaD3D10GetDevice (int *device, IDXGIAdapter *pAdapter)`

Gets the device number for an adapter.

Parameters

device

- Returns the device corresponding to pAdapter

pAdapter

- D3D10 adapter to get device for

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Returns in *device the CUDA-compatible device corresponding to the adapter pAdapter obtained from IDXGIFactory::EnumAdapters. This call will succeed only if a device on adapter pAdapter is CUDA-compatible.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsD3D10RegisterResource](#), [cuD3D10GetDevice](#)

```
__host__ cudaError_t cudaD3D10GetDevices
(unsigned int *pCudaDeviceCount, int *pCudaDevices,
unsigned int cudaDeviceCount, ID3D10Device
*pD3D10Device, cudaD3D10DeviceList deviceList)
```

Gets the CUDA devices corresponding to a Direct3D 10 device.

Parameters

pCudaDeviceCount

- Returned number of CUDA devices corresponding to pD3D10Device

pCudaDevices

- Returned CUDA devices corresponding to pD3D10Device

cudaDeviceCount

- The size of the output device array pCudaDevices

pD3D10Device

- Direct3D 10 device to query for CUDA devices

deviceList

- The set of devices to return. This set may be [cudaD3D10DeviceListAll](#) for all devices, [cudaD3D10DeviceListCurrentFrame](#) for the devices used to render the current frame (in SLI), or [cudaD3D10DeviceListNextFrame](#) for the devices used to render the next frame (in SLI).

Returns

[cudaSuccess](#), [cudaErrorNoDevice](#), [cudaErrorUnknown](#)

Description

Returns in *pCudaDeviceCount the number of CUDA-compatible devices corresponding to the Direct3D 10 device pD3D10Device. Also returns in *pCudaDevices at most cudaDeviceCount of the the CUDA-compatible devices corresponding to the Direct3D 10 device pD3D10Device.

If any of the GPUs being used to render pDevice are not CUDA capable then the call will return [cudaErrorNoDevice](#).



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#), [cudaGraphicsMapResources](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cudaGraphicsResourceGetMappedPointer](#),
[cuD3D10GetDevices](#)

__host__ cudaError_t
cudaGraphicsD3D10RegisterResource
(cudaGraphicsResource **resource, ID3D10Resource
***pD3DResource, unsigned int flags)**

Registers a Direct3D 10 resource for access by CUDA.

Parameters

resource

- Pointer to returned resource handle

pD3DResource

- Direct3D resource to register

flags

- Parameters for resource registration

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#),
[cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Registers the Direct3D 10 resource pD3DResource for access by CUDA.

If this call is successful, then the application will be able to map and unmap this resource until it is unregistered through [cudaGraphicsUnregisterResource\(\)](#). Also on success, this call will increase the internal reference count on pD3DResource. This reference count will be decremented when this resource is unregistered through [cudaGraphicsUnregisterResource\(\)](#).

This call potentially has a high-overhead and should not be called every frame in interactive applications.

The type of pD3DResource must be one of the following.

- ▶ ID3D10Buffer: may be accessed via a device pointer
- ▶ ID3D10Texture1D: individual subresources of the texture may be accessed via arrays
- ▶ ID3D10Texture2D: individual subresources of the texture may be accessed via arrays
- ▶ ID3D10Texture3D: individual subresources of the texture may be accessed via arrays

The flags argument may be used to specify additional parameters at register time. The valid values for this parameter are

- ▶ [cudaGraphicsRegisterFlagsNone](#): Specifies no hints about how this resource will be used.
- ▶ [cudaGraphicsRegisterFlagsSurfaceLoadStore](#): Specifies that CUDA will bind this resource to a surface reference.
- ▶ [cudaGraphicsRegisterFlagsTextureGather](#): Specifies that CUDA will perform texture gather operations on this resource.

Not all Direct3D resources of the above types may be used for interoperability with CUDA. The following are some limitations.

- ▶ The primary rendertarget may not be registered with CUDA.
- ▶ Textures which are not of a format which is 1, 2, or 4 channels of 8, 16, or 32-bit integer or floating-point data cannot be shared.
- ▶ Surfaces of depth or stencil formats cannot be shared.

A complete list of supported DXGI formats is as follows. For compactness the notation A_{B,C,D} represents A_B, A_C, and A_D.

- ▶ DXGI_FORMAT_A8_UNORM
- ▶ DXGI_FORMAT_B8G8R8A8_UNORM
- ▶ DXGI_FORMAT_B8G8R8X8_UNORM
- ▶ DXGI_FORMAT_R16_FLOAT
- ▶ DXGI_FORMAT_R16G16B16A16_{FLOAT,SINT,SNORM,UINT,UNORM}
- ▶ DXGI_FORMAT_R16G16_{FLOAT,SINT,SNORM,UINT,UNORM}
- ▶ DXGI_FORMAT_R16_{SINT,SNORM,UINT,UNORM}
- ▶ DXGI_FORMAT_R32_FLOAT
- ▶ DXGI_FORMAT_R32G32B32A32_{FLOAT,SINT,UINT}
- ▶ DXGI_FORMAT_R32G32_{FLOAT,SINT,UINT}
- ▶ DXGI_FORMAT_R32_{SINT,UINT}
- ▶ DXGI_FORMAT_R8G8B8A8_{SINT,SNORM,UINT,UNORM,UNORM_SRGB}
- ▶ DXGI_FORMAT_R8G8_{SINT,SNORM,UINT,UNORM}
- ▶ DXGI_FORMAT_R8_{SINT,SNORM,UINT,UNORM}

If `pD3DResource` is of incorrect type or is already registered, then [cudaErrorInvalidResourceHandle](#) is returned. If `pD3DResource` cannot be registered, then [cudaErrorUnknown](#) is returned.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#), [cudaGraphicsMapResources](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cudaGraphicsResourceGetMappedPointer](#),
[cuGraphicsD3D10RegisterResource](#)

6.19. Direct3D 10 Interoperability [DEPRECATED]

This section describes deprecated Direct3D 10 interoperability functions.

enum cudaD3D10MapFlags

CUDA D3D10 Map Flags

Values

cudaD3D10MapFlagsNone = 0

Default; Assume resource can be read/written

cudaD3D10MapFlagsReadOnly = 1

CUDA kernels will not write to this resource

cudaD3D10MapFlagsWriteDiscard = 2

CUDA kernels will only write to and will not read from this resource

enum cudaD3D10RegisterFlags

CUDA D3D10 Register Flags

Values

cudaD3D10RegisterFlagsNone = 0

Default; Resource can be accessed through a void*

cudaD3D10RegisterFlagsArray = 1

Resource can be accessed through a CUarray*

__host__cudaError_t cudaD3D10GetDirect3DDevice (ID3D10Device **ppD3D10Device)

Gets the Direct3D device against which the current CUDA context was created.

Parameters

ppD3D10Device

- Returns the Direct3D device for this thread

Returns

[cudaSuccess](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 5.0.

This function is deprecated and should no longer be used. It is no longer necessary to associate a CUDA device with a D3D10 device in order to achieve maximum interoperability performance.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaD3D10SetDirect3DDevice](#)

__host__cudaError_t cudaD3D10MapResources (int count, ID3D10Resource **ppResources)

Maps Direct3D Resources for access by CUDA.

Parameters

count

- Number of resources to map for CUDA

ppResources

- Resources to map for CUDA

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Maps the count Direct3D resources in ppResources for access by CUDA.

The resources in ppResources may be accessed in CUDA kernels until they are unmapped. Direct3D should not access any resources while they are mapped by CUDA. If an application does so, the results are undefined.

This function provides the synchronization guarantee that any Direct3D calls issued before [cudaD3D10MapResources\(\)](#) will complete before any CUDA kernels issued after [cudaD3D10MapResources\(\)](#) begin.

If any of ppResources have not been registered for use with CUDA or if ppResources contains any duplicate entries then [cudaErrorInvalidResourceHandle](#) is returned. If any of ppResources are presently mapped for access by CUDA then [cudaErrorUnknown](#) is returned.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsMapResources](#)

**__host__ cudaError_t cudaD3D10RegisterResource
(ID3D10Resource *pResource, unsigned int flags)**

Registers a Direct3D 10 resource for access by CUDA.

Parameters

pResource

- Resource to register

flags

- Parameters for resource registration

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#),
[cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Registers the Direct3D resource `pResource` for access by CUDA.

If this call is successful, then the application will be able to map and unmap this resource until it is unregistered through `cudaD3D10UnregisterResource()`. Also on success, this call will increase the internal reference count on `pResource`. This reference count will be decremented when this resource is unregistered through `cudaD3D10UnregisterResource()`.

This call potentially has a high-overhead and should not be called every frame in interactive applications.

The type of `pResource` must be one of the following:

- ▶ `ID3D10Buffer`: Cannot be used with `flags` set to `cudaD3D10RegisterFlagsArray`.
- ▶ `ID3D10Texture1D`: No restrictions.
- ▶ `ID3D10Texture2D`: No restrictions.
- ▶ `ID3D10Texture3D`: No restrictions.

The `flags` argument specifies the mechanism through which CUDA will access the Direct3D resource. The following values are allowed.

- ▶ `cudaD3D10RegisterFlagsNone`: Specifies that CUDA will access this resource through a `void*`. The pointer, size, and pitch for each subresource of this resource may be queried through `cudaD3D10ResourceGetMappedPointer()`, `cudaD3D10ResourceGetMappedSize()`, and `cudaD3D10ResourceGetMappedPitch()` respectively. This option is valid for all resource types.
- ▶ `cudaD3D10RegisterFlagsArray`: Specifies that CUDA will access this resource through a `CUarray` queried on a sub-resource basis through `cudaD3D10ResourceGetMappedArray()`. This option is only valid for resources of type `ID3D10Texture1D`, `ID3D10Texture2D`, and `ID3D10Texture3D`.

Not all Direct3D resources of the above types may be used for interoperability with CUDA. The following are some limitations.

- ▶ The primary rendertarget may not be registered with CUDA.
- ▶ Resources allocated as shared may not be registered with CUDA.
- ▶ Textures which are not of a format which is 1, 2, or 4 channels of 8, 16, or 32-bit integer or floating-point data cannot be shared.
- ▶ Surfaces of depth or stencil formats cannot be shared.

If Direct3D interoperability is not initialized on this context then `cudaErrorInvalidDevice` is returned. If `pResource` is of incorrect type or is already registered then `cudaErrorInvalidResourceHandle` is returned. If `pResource` cannot be registered then `cudaErrorUnknown` is returned.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsD3D10RegisterResource](#)

**`__host__ cudaError_t
cudaD3D10ResourceGetMappedArray (cudaArray
**ppArray, ID3D10Resource *pResource, unsigned int
subResource)`**

Gets an array through which to access a subresource of a Direct3D resource which has been mapped for access by CUDA.

Parameters

ppArray

- Returned array corresponding to subresource

pResource

- Mapped resource to access

subResource

- Subresource of pResource to access

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in *ppArray an array through which the subresource of the mapped Direct3D resource pResource which corresponds to subResource may be accessed. The value set in ppArray may change every time that pResource is mapped.

If pResource is not registered, then [cudaErrorInvalidResourceHandle](#) is returned.

If pResource was not registered with usage flags [cudaD3D10RegisterFlagsArray](#), then [cudaErrorInvalidResourceHandle](#) is returned. If pResource is not mapped then [cudaErrorUnknown](#) is returned.

For usage requirements of the subResource parameter, see [cudaD3D10ResourceGetMappedPointer\(\)](#).

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsSubResourceGetMappedArray](#)

`__host__ cudaError_t`

**`cudaD3D10ResourceGetMappedPitch (size_t *pPitch,
size_t *pPitchSlice, ID3D10Resource *pResource,
unsigned int subResource)`**

Gets the pitch of a subresource of a Direct3D resource which has been mapped for access by CUDA.

Parameters**pPitch**

- Returned pitch of subresource

pPitchSlice

- Returned Z-slice pitch of subresource

pResource

- Mapped resource to access

subResource

- Subresource of pResource to access

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in *pPitch and *pPitchSlice the pitch and Z-slice pitch of the subresource of the mapped Direct3D resource pResource, which corresponds to subResource. The values set in pPitch and pPitchSlice may change every time that pResource is mapped.

The pitch and Z-slice pitch values may be used to compute the location of a sample on a surface as follows.

For a 2D surface, the byte offset of the sample at position **x**, **y** from the base pointer of the surface is:

y * pitch + (bytes per pixel) * x

For a 3D surface, the byte offset of the sample at position **x**, **y**, **z** from the base pointer of the surface is:

z* slicePitch + y * pitch + (bytes per pixel) * x

Both parameters **pPitch** and **pPitchSlice** are optional and may be set to NULL.

If **pResource** is not of type **ID3D10Texture1D**, **ID3D10Texture2D**, or **ID3D10Texture3D**, or if **pResource** has not been registered for use with CUDA, then [cudaErrorInvalidResourceHandle](#) is returned. If **pResource** was not registered with usage flags [cudaD3D10RegisterFlagsNone](#), then [cudaErrorInvalidResourceHandle](#) is returned. If **pResource** is not mapped for access by CUDA then [cudaErrorUnknown](#) is returned.

For usage requirements of the **subResource** parameter see [cudaD3D10ResourceGetMappedPointer\(\)](#).



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsSubResourceGetMappedArray](#)

```
_host_cudaError_t
cudaD3D10ResourceGetMappedPointer (void
**pPointer, ID3D10Resource *pResource, unsigned
int subResource)
```

Gets a pointer through which to access a subresource of a Direct3D resource which has been mapped for access by CUDA.

Parameters

pPointer

- Returned pointer corresponding to subresource

pResource

- Mapped resource to access

subResource

- Subresource of pResource to access

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in `*pPointer` the base pointer of the subresource of the mapped Direct3D resource `pResource` which corresponds to `subResource`. The value set in `pPointer` may change every time that `pResource` is mapped.

If `pResource` is not registered, then `cudaErrorInvalidResourceHandle` is returned.

If `pResource` was not registered with usage flags `cudaD3D9RegisterFlagsNone`, then `cudaErrorInvalidResourceHandle` is returned. If `pResource` is not mapped then `cudaErrorUnknown` is returned.

If `pResource` is of type `ID3D10Buffer` then `subResource` must be 0. If `pResource` is of any other type, then the value of `subResource` must come from the subresource calculation in `D3D10CalcSubResource()`.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsResourceGetMappedPointer](#)

```
__host__ cudaError_t
cudaD3D10ResourceGetMappedSize(size_t
*pSize, ID3D10Resource *pResource, unsigned int
subResource)
```

Gets the size of a subresource of a Direct3D resource which has been mapped for access by CUDA.

Parameters

pSize

- Returned size of subresource

pResource

- Mapped resource to access

subResource

- Subresource of `pResource` to access

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorInvalidResourceHandle`, `cudaErrorUnknown`

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in *pSize the size of the subresource of the mapped Direct3D resource pResource which corresponds to subResource. The value set in pSize may change every time that pResource is mapped.

If pResource has not been registered for use with CUDA then cudaErrorInvalidHandle is returned. If pResource was not registered with usage flags [cudaD3D10RegisterFlagsNone](#), then [cudaErrorInvalidResourceHandle](#) is returned. If pResource is not mapped for access by CUDA then [cudaErrorUnknown](#) is returned.

For usage requirements of the subResource parameter see [cudaD3D10ResourceGetMappedPointer\(\)](#).



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsResourceGetMappedPointer](#)

```
__host__ cudaError_t  
cudaD3D10ResourceGetSurfaceDimensions  
(size_t *pWidth, size_t *pHeight, size_t *pDepth,  
ID3D10Resource *pResource, unsigned int  
subResource)
```

Gets the dimensions of a registered Direct3D surface.

Parameters

pWidth

- Returned width of surface

pHeight

- Returned height of surface

pDepth

- Returned depth of surface

pResource

- Registered resource to access

subResource

- Subresource of pResource to access

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#),

Description

Deprecated This function is deprecated as of CUDA 3.0.

Returns in *pWidth, *pHeight, and *pDepth the dimensions of the subresource of the mapped Direct3D resource pResource which corresponds to subResource.

Since anti-aliased surfaces may have multiple samples per pixel, it is possible that the dimensions of a resource will be an integer factor larger than the dimensions reported by the Direct3D runtime.

The parameters pWidth, pHeight, and pDepth are optional. For 2D surfaces, the value returned in *pDepth will be 0.

If pResource is not of type ID3D10Texture1D, ID3D10Texture2D, or ID3D10Texture3D, or if pResource has not been registered for use with CUDA, then cudaErrorInvalidHandle is returned.

For usage requirements of subResource parameters see [cudaD3D10ResourceGetMappedPointer\(\)](#).



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsSubResourceGetMappedArray](#)

**__host__cudaError_t
cudaD3D10ResourceSetMapFlags (ID3D10Resource
*pResource, unsigned int flags)**

Set usage flags for mapping a Direct3D resource.

Parameters

pResource

- Registered resource to set flags for

flags

- Parameters for resource mapping

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#),

Description

[Deprecated](#) This function is deprecated as of CUDA 3.0.

Set usage flags for mapping the Direct3D resource `pResource`.

Changes to flags will take effect the next time `pResource` is mapped. The `flags` argument may be any of the following:

- ▶ [cudaD3D10MapFlagsNone](#): Specifies no hints about how this resource will be used. It is therefore assumed that this resource will be read from and written to by CUDA kernels. This is the default value.
- ▶ [cudaD3D10MapFlagsReadOnly](#): Specifies that CUDA kernels which access this resource will not write to this resource.
- ▶ [cudaD3D10MapFlagsWriteDiscard](#): Specifies that CUDA kernels which access this resource will not read from this resource and will write over the entire contents of the resource, so none of the data previously stored in the resource will be preserved.

If `pResource` has not been registered for use with CUDA then `cudaErrorInvalidHandle` is returned. If `pResource` is presently mapped for access by CUDA then [cudaErrorUnknown](#) is returned.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsResourceSetMapFlags](#)

__host__ `cudaError_t cudaD3D10SetDirect3DDevice`(`ID3D10Device *pD3D10Device`, `int device`)

Sets the Direct3D 10 device to use for interoperability with a CUDA device.

Parameters

pD3D10Device

- Direct3D device to use for interoperability

device

- The CUDA device to use. This device must be among the devices returned when querying [cudaD3D10DeviceListAll](#) from [cudaD3D10GetDevices](#), may be set to -1 to automatically select an appropriate CUDA device.

Returns

[cudaSuccess](#), [cudaErrorInitializationError](#), [cudaErrorInvalidValue](#),
[cudaErrorSetOnActiveProcess](#)

Description

[Deprecated](#) This function is deprecated as of CUDA 5.0.

This function is deprecated and should no longer be used. It is no longer necessary to associate a CUDA device with a D3D10 device in order to achieve maximum interoperability performance.

This function will immediately initialize the primary context on device if needed.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaD3D10GetDevice](#), [cudaGraphicsD3D10RegisterResource](#), [cudaDeviceReset](#)

host cudaError_t cudaD3D10UnmapResources (int count, ID3D10Resource **ppResources)

Unmaps Direct3D resources.

Parameters**count**

- Number of resources to unmap for CUDA

ppResources

- Resources to unmap for CUDA

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

[Deprecated](#) This function is deprecated as of CUDA 3.0.

Unmaps the count Direct3D resource in ppResources.

This function provides the synchronization guarantee that any CUDA kernels issued before [cudaD3D10UnmapResources\(\)](#) will complete before any Direct3D calls issued after [cudaD3D10UnmapResources\(\)](#) begin.

If any of `ppResources` have not been registered for use with CUDA or if `ppResources` contains any duplicate entries, then [cudaErrorInvalidResourceHandle](#) is returned. If any of `ppResources` are not presently mapped for access by CUDA then [cudaErrorUnknown](#) is returned.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:[cudaGraphicsUnmapResources](#)

__host__ `cudaError_t cudaD3D10UnregisterResource` `(ID3D10Resource *pResource)`

Unregisters a Direct3D resource.

Parameters

pResource

- Resource to unregister

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

[Deprecated](#) This function is deprecated as of CUDA 3.0.

Unregisters the Direct3D resource `resource` so it is not accessible by CUDA unless registered again.

If `pResource` is not registered, then [cudaErrorInvalidResourceHandle](#) is returned.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:[cudaGraphicsUnregisterResource](#)

6.20. Direct3D 11 Interoperability

This section describes the Direct3D 11 interoperability functions of the CUDA runtime application programming interface. Note that mapping of Direct3D 11 resources is performed with the graphics API agnostic, resource mapping interface described in [Graphics Interopability](#).

enum cudaD3D11DeviceList

CUDA devices corresponding to a D3D11 device

Values

cudaD3D11DeviceListAll = 1

The CUDA devices for all GPUs used by a D3D11 device

cudaD3D11DeviceListCurrentFrame = 2

The CUDA devices for the GPUs used by a D3D11 device in its currently rendering frame

cudaD3D11DeviceListNextFrame = 3

The CUDA devices for the GPUs to be used by a D3D11 device in the next frame

```
__host__ cudaError_t cudaD3D11GetDevice (int
*device, IDXGIAdapter *pAdapter)
```

Gets the device number for an adapter.

Parameters

device

- Returns the device corresponding to pAdapter

pAdapter

- D3D11 adapter to get device for

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Returns in *device the CUDA-compatible device corresponding to the adapter pAdapter obtained from IDXGIFactory::EnumAdapters. This call will succeed only if a device on adapter pAdapter is CUDA-compatible.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#), [cudaGraphicsMapResources](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cudaGraphicsResourceGetMappedPointer](#),
[cuD3D11GetDevice](#)

```
__host__ cudaError_t cudaD3D11GetDevices
(unsigned int *pCudaDeviceCount, int *pCudaDevices,
unsigned int cudaDeviceCount, ID3D11Device
*pD3D11Device, cudaD3D11DeviceList deviceList)
```

Gets the CUDA devices corresponding to a Direct3D 11 device.

Parameters

pCudaDeviceCount

- Returned number of CUDA devices corresponding to pD3D11Device

pCudaDevices

- Returned CUDA devices corresponding to pD3D11Device

cudaDeviceCount

- The size of the output device array pCudaDevices

pD3D11Device

- Direct3D 11 device to query for CUDA devices

deviceList

- The set of devices to return. This set may be [cudaD3D11DeviceListAll](#) for all devices, [cudaD3D11DeviceListCurrentFrame](#) for the devices used to render the current frame (in SLI), or [cudaD3D11DeviceListNextFrame](#) for the devices used to render the next frame (in SLI).

Returns

[cudaSuccess](#), [cudaErrorNoDevice](#), [cudaErrorUnknown](#)

Description

Returns in *pCudaDeviceCount the number of CUDA-compatible devices corresponding to the Direct3D 11 device pD3D11Device. Also returns in *pCudaDevices at most cudaDeviceCount of the the CUDA-compatible devices corresponding to the Direct3D 11 device pD3D11Device.

If any of the GPUs being used to render pDevice are not CUDA capable then the call will return [cudaErrorNoDevice](#).

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#), [cudaGraphicsMapResources](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cudaGraphicsResourceGetMappedPointer](#),
[cuD3D11GetDevices](#)

```
__host__ cudaError_t
cudaGraphicsD3D11RegisterResource
(cudaGraphicsResource **resource, ID3D11Resource
*pD3DResource, unsigned int flags)
```

Register a Direct3D 11 resource for access by CUDA.

Parameters**resource**

- Pointer to returned resource handle

pD3DResource

- Direct3D resource to register

flags

- Parameters for resource registration

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#),
[cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Registers the Direct3D 11 resource `pD3DResource` for access by CUDA.

If this call is successful, then the application will be able to map and unmap this resource until it is unregistered through [cudaGraphicsUnregisterResource\(\)](#). Also on success, this call will increase the internal reference count on `pD3DResource`. This reference count will be decremented when this resource is unregistered through [cudaGraphicsUnregisterResource\(\)](#).

This call potentially has a high-overhead and should not be called every frame in interactive applications.

The type of `pD3DResource` must be one of the following.

- ▶ ID3D11Buffer: may be accessed via a device pointer

- ▶ ID3D11Texture1D: individual subresources of the texture may be accessed via arrays
- ▶ ID3D11Texture2D: individual subresources of the texture may be accessed via arrays
- ▶ ID3D11Texture3D: individual subresources of the texture may be accessed via arrays

The `flags` argument may be used to specify additional parameters at register time. The valid values for this parameter are

- ▶ [`cudaGraphicsRegisterFlagsNone`](#): Specifies no hints about how this resource will be used.
- ▶ [`cudaGraphicsRegisterFlagsSurfaceLoadStore`](#): Specifies that CUDA will bind this resource to a surface reference.
- ▶ [`cudaGraphicsRegisterFlagsTextureGather`](#): Specifies that CUDA will perform texture gather operations on this resource.

Not all Direct3D resources of the above types may be used for interoperability with CUDA. The following are some limitations.

- ▶ The primary rendertarget may not be registered with CUDA.
- ▶ Textures which are not of a format which is 1, 2, or 4 channels of 8, 16, or 32-bit integer or floating-point data cannot be shared.
- ▶ Surfaces of depth or stencil formats cannot be shared.

A complete list of supported DXGI formats is as follows. For compactness the notation $A_{\{B,C,D\}}$ represents A_B , A_C , and A_D .

- ▶ `DXGI_FORMAT_A8_UNORM`
- ▶ `DXGI_FORMAT_B8G8R8A8_UNORM`
- ▶ `DXGI_FORMAT_B8G8R8X8_UNORM`
- ▶ `DXGI_FORMAT_R16_FLOAT`
- ▶ `DXGI_FORMAT_R16G16B16A16_{FLOAT,SINT,SNORM,UINT,UNORM}`
- ▶ `DXGI_FORMAT_R16G16_{FLOAT,SINT,SNORM,UINT,UNORM}`
- ▶ `DXGI_FORMAT_R16_{SINT,SNORM,UINT,UNORM}`
- ▶ `DXGI_FORMAT_R32_FLOAT`
- ▶ `DXGI_FORMAT_R32G32B32A32_{FLOAT,SINT,UINT}`
- ▶ `DXGI_FORMAT_R32G32_{FLOAT,SINT,UINT}`
- ▶ `DXGI_FORMAT_R32_{SINT,UINT}`
- ▶ `DXGI_FORMAT_R8G8B8A8_{SINT,SNORM,UINT,UNORM,UNORM_SRGB}`
- ▶ `DXGI_FORMAT_R8G8_{SINT,SNORM,UINT,UNORM}`
- ▶ `DXGI_FORMAT_R8_{SINT,SNORM,UINT,UNORM}`

If `pD3DResource` is of incorrect type or is already registered, then `cudaErrorInvalidResourceHandle` is returned. If `pD3DResource` cannot be registered, then `cudaErrorUnknown` is returned.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsUnregisterResource](#), [cudaGraphicsMapResources](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cudaGraphicsResourceGetMappedPointer](#),
[cuGraphicsD3D11RegisterResource](#)

6.21. Direct3D 11 Interoperability [DEPRECATED]

This section describes deprecated Direct3D 11 interoperability functions.

`_host_ cudaError_t cudaD3D11GetDirect3DDevice` (`ID3D11Device **ppD3D11Device`)

Gets the Direct3D device against which the current CUDA context was created.

Parameters

ppD3D11Device

- Returns the Direct3D device for this thread

Returns

[cudaSuccess](#), [cudaErrorUnknown](#)

Description

Deprecated This function is deprecated as of CUDA 5.0.

This function is deprecated and should no longer be used. It is no longer necessary to associate a CUDA device with a D3D11 device in order to achieve maximum interoperability performance.

**Note:**

 Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaD3D11SetDirect3DDevice](#)

__host__ cudaError_t cudaD3D11SetDirect3DDevice **(ID3D11Device *pD3D11Device, int device)**

Sets the Direct3D 11 device to use for interoperability with a CUDA device.

Parameters

pD3D11Device

- Direct3D device to use for interoperability

device

- The CUDA device to use. This device must be among the devices returned when querying [cudaD3D11DeviceListAll](#) from [cudaD3D11GetDevices](#), may be set to -1 to automatically select an appropriate CUDA device.

Returns

[cudaSuccess](#), [cudaErrorInitializationError](#), [cudaErrorInvalidValue](#),
[cudaErrorSetOnActiveProcess](#)

Description

Deprecated This function is deprecated as of CUDA 5.0.

This function is deprecated and should no longer be used. It is no longer necessary to associate a CUDA device with a D3D11 device in order to achieve maximum interoperability performance.

This function will immediately initialize the primary context on device if needed.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaD3D11GetDevice](#), [cudaGraphicsD3D11RegisterResource](#), [cudaDeviceReset](#)

6.22. VDPAU Interoperability

This section describes the VDPAU interoperability functions of the CUDA runtime application programming interface.

```
_host_ cudaError_t
cudaGraphicsVDPAURegisterOutputSurface
(cudaGraphicsResource **resource,
VdpOutputSurface vdpSurface, unsigned int flags)
```

Register a VdpOutputSurface object.

Parameters

resource

- Pointer to the returned object handle

vdpSurface

- VDPAU object to be registered

flags

- Map flags

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#),
[cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Registers the VdpOutputSurface specified by `vdpSurface` for access by CUDA. A handle to the registered object is returned as `resource`. The surface's intended usage is specified using `flags`, as follows:

- ▶ [cudaGraphicsMapFlagsNone](#): Specifies no hints about how this resource will be used. It is therefore assumed that this resource will be read from and written to by CUDA. This is the default value.
- ▶ [cudaGraphicsMapFlagsReadOnly](#): Specifies that CUDA will not write to this resource.
- ▶ [cudaGraphicsMapFlagsWriteDiscard](#): Specifies that CUDA will not read from this resource and will write over the entire contents of the resource, so none of the data previously stored in the resource will be preserved.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaVDPAUSetVDPAUDevice](#), [cudaGraphicsUnregisterResource](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cuGraphicsVDPAURegisterOutputSurface](#)

**__host__cudaError_t
cudaGraphicsVDPAURegisterVideoSurface
(cudaGraphicsResource **resource, VdpVideoSurface
vdpSurface, unsigned int flags)**

Register a VdpVideoSurface object.

Parameters**resource**

- Pointer to the returned object handle

vdpSurface

- VDPAU object to be registered

flags

- Map flags

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidValue](#),
[cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Registers the VdpVideoSurface specified by `vdpSurface` for access by CUDA. A handle to the registered object is returned as `resource`. The surface's intended usage is specified using `flags`, as follows:

- ▶ [cudaGraphicsMapFlagsNone](#): Specifies no hints about how this resource will be used. It is therefore assumed that this resource will be read from and written to by CUDA. This is the default value.
- ▶ [cudaGraphicsMapFlagsReadOnly](#): Specifies that CUDA will not write to this resource.
- ▶ [cudaGraphicsMapFlagsWriteDiscard](#): Specifies that CUDA will not read from this resource and will write over the entire contents of the resource, so none of the data previously stored in the resource will be preserved.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaVDPAUSetVDPAUDevice](#), [cudaGraphicsUnregisterResource](#),
[cudaGraphicsSubResourceGetMappedArray](#), [cuGraphicsVDPAURegisterVideoSurface](#)

__host__ cudaError_t cudaVDPAUGetDevice (int *device, VdpDevice vdpDevice, VdpGetProcAddress *vdpGetProcAddress)

Gets the CUDA device associated with a VdpDevice.

Parameters**device**

- Returns the device associated with vdpDevice, or -1 if the device associated with vdpDevice is not a compute device.

vdpDevice

- A VdpDevice handle

vdpGetProcAddress

- VDPAU's VdpGetProcAddress function pointer

Returns

[cudaSuccess](#)

Description

Returns the CUDA device associated with a VdpDevice, if applicable.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaVDPAUSetVDPAUDevice](#), [cuVDPAUGetDevice](#)

```
__host__ cudaError_t cudaVDPAUSetVDPAUDevice
(int device, VdpDevice vdpDevice, VdpGetProcAddress
*vdpGetProcAddress)
```

Sets a CUDA device to use VDPAU interoperability.

Parameters

device

- Device to use for VDPAU interoperability

vdpDevice

- The VdpDevice to interoperate with

vdpGetProcAddress

- VDPAU's VdpGetProcAddress function pointer

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorSetOnActiveProcess](#)

Description

Records `vdpDevice` as the `VdpDevice` for VDPAU interoperability with the CUDA device `device` and sets `device` as the current device for the calling host thread.

This function will immediately initialize the primary context on `device` if needed.

If `device` has already been initialized then this call will fail with the error [cudaErrorSetOnActiveProcess](#). In this case it is necessary to reset `device` using [cudaDeviceReset\(\)](#) before VDPAU interoperability on `device` may be enabled.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphicsVDPAURegisterVideoSurface](#), [cudaGraphicsVDPAURegisterOutputSurface](#),
[cudaDeviceReset](#)

6.23. EGL Interoperability

This section describes the EGL interoperability functions of the CUDA runtime application programming interface.

```
_host_ cudaError_t
cudaEGLStreamConsumerAcquireFrame
(cudaEglStreamConnection *conn,
cudaGraphicsResource_t *pCudaResource,
cudaStream_t *pStream, unsigned int timeout)
```

Acquire an image frame from the EGLStream with CUDA as a consumer.

Parameters

conn

- Connection on which to acquire

pCudaResource

- CUDA resource on which the EGLStream frame will be mapped for use.

pStream

- CUDA stream for synchronization and any data migrations implied by [cudaEglResourceLocationFlags](#).

timeout

- Desired timeout in usec.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#), [cudaErrorLaunchTimeout](#)

Description

Acquire an image frame from EGLStreamKHR. [cudaGraphicsResourceGetMappedEglFrame](#) can be called on pCudaResource to get [cudaEglFrame](#).

See also:

[cudaEGLStreamConsumerConnect](#), [cudaEGLStreamConsumerDisconnect](#),
[cudaEGLStreamConsumerReleaseFrame](#), [cuEGLStreamConsumerAcquireFrame](#)

```
__host__ cudaError_t  
cudaEGLStreamConsumerConnect  
(cudaEglStreamConnection *conn, EGLStreamKHR  
eglStream)
```

Connect CUDA to EGLStream as a consumer.

Parameters

conn

- Pointer to the returned connection handle

eglStream

- EGLStreamKHR handle

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Connect CUDA as a consumer to EGLStreamKHR specified by eglStream.

The EGLStreamKHR is an EGL object that transfers a sequence of image frames from one API to another.

See also:

[cudaEGLStreamConsumerDisconnect](#), [cudaEGLStreamConsumerAcquireFrame](#),
[cudaEGLStreamConsumerReleaseFrame](#), [cuEGLStreamConsumerConnect](#)

```
__host__ cudaError_t  
cudaEGLStreamConsumerConnectWithFlags  
(cudaEglStreamConnection *conn, EGLStreamKHR  
eglStream, unsigned int flags)
```

Connect CUDA to EGLStream as a consumer with given flags.

Parameters

conn

- Pointer to the returned connection handle

eglStream

- EGLStreamKHR handle

flags

- Flags denote intended location - system or video.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Connect CUDA as a consumer to EGLStreamKHR specified by `stream` with specified `flags` defined by [cudaEglResourceLocationFlags](#).

The flags specify whether the consumer wants to access frames from system memory or video memory. Default is [cudaEglResourceLocationVidmem](#).

See also:

[cudaEGLStreamConsumerDisconnect](#), [cudaEGLStreamConsumerAcquireFrame](#),
[cudaEGLStreamConsumerReleaseFrame](#), [cuEGLStreamConsumerConnectWithFlags](#)

**__host__cudaError_t
cudaEGLStreamConsumerDisconnect
(cudaEglStreamConnection *conn)**

Disconnect CUDA as a consumer to EGLStream .

Parameters**conn**

- Connection to disconnect.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Disconnect CUDA as a consumer to EGLStreamKHR.

See also:

[cudaEGLStreamConsumerConnect](#), [cudaEGLStreamConsumerAcquireFrame](#),
[cudaEGLStreamConsumerReleaseFrame](#), [cuEGLStreamConsumerDisconnect](#)

```
_host__cudaError_t
cudaEGLStreamConsumerReleaseFrame
(cudaEglStreamConnection *conn,
 cudaGraphicsResource_t pCudaResource,
 cudaStream_t *pStream)
```

Releases the last frame acquired from the EGLStream.

Parameters

conn

- Connection on which to release

pCudaResource

- CUDA resource whose corresponding frame is to be released

pStream

- CUDA stream on which release will be done.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Release the acquired image frame specified by pCudaResource to EGLStreamKHR.

See also:

[cudaEGLStreamConsumerConnect](#), [cudaEGLStreamConsumerDisconnect](#),
[cudaEGLStreamConsumerAcquireFrame](#), [cuEGLStreamConsumerReleaseFrame](#)

```
_host__cudaError_t
cudaEGLStreamProducerConnect
(cudaEglStreamConnection *conn, EGLStreamKHR
 eglStream, EGLint width, EGLint height)
```

Connect CUDA to EGLStream as a producer.

Parameters

conn

- Pointer to the returned connection handle

eglStream

- EGLStreamKHR handle

width

- width of the image to be submitted to the stream

height

- height of the image to be submitted to the stream

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Connect CUDA as a producer to EGLStreamKHR specified by `stream`.

The EGLStreamKHR is an EGL object that transfers a sequence of image frames from one API to another.

See also:

[cudaEGLStreamProducerDisconnect](#), [cudaEGLStreamProducerPresentFrame](#),
[cudaEGLStreamProducerReturnFrame](#), [cuEGLStreamProducerConnect](#)

`__host__cudaError_t
cudaEGLStreamProducerDisconnect
(cudaEglStreamConnection *conn)`

Disconnect CUDA as a producer to EGLStream .

Parameters**conn**

- Conection to disconnect.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Disconnect CUDA as a producer to EGLStreamKHR.

See also:

[cudaEGLStreamProducerConnect](#), [cudaEGLStreamProducerPresentFrame](#),
[cudaEGLStreamProducerReturnFrame](#), [cuEGLStreamProducerDisconnect](#)

```
_host_ cudaError_t
cudaEGLStreamProducerPresentFrame
(cudaEglStreamConnection *conn, cudaEglFrame
eglframe, cudaStream_t *pStream)
```

Present a CUDA eglFrame to the EGLStream with CUDA as a producer.

Parameters

conn

- Connection on which to present the CUDA array

eglframe

- CUDA Eglstream Proucer Frame handle to be sent to the consumer over EglStream.

pStream

- CUDA stream on which to present the frame.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

The [cudaEglFrame](#) is defined as:

```
#include <cudaEgl.h>
typedef struct cudaEglFrame_st {
    union {
        cudaArray_t pArray[CUDA_EGL_MAX_PLANES];
        struct cudaPitchedPtr pPitch[CUDA_EGL_MAX_PLANES];
    } frame;
    cudaEglPlaneDesc planeDesc[CUDA_EGL_MAX_PLANES];
    unsigned int planeCount;
    cudaEglFrameType frameType;
    cudaEglColorFormat eglColorFormat;
} cudaEglFrame;
```

For [cudaEglFrame](#) of type [cudaEglFrameTypePitch](#), the application may present sub-region of a memory allocation. In that case, [cudaPitchedPtr::ptr](#) will specify the start address of the sub-region in the allocation and [cudaEglPlaneDesc](#) will specify the dimensions of the sub-region.

See also:

[cudaEGLStreamProducerConnect](#), [cudaEGLStreamProducerDisconnect](#),
[cudaEGLStreamProducerReturnFrame](#), [cuEGLStreamProducerPresentFrame](#)

```
_host__cudaError_t
cudaEGLStreamProducerReturnFrame
(cudaEglStreamConnection *conn, cudaEglFrame
*eglframe, cudaStream_t *pStream)
```

Return the CUDA eglFrame to the EGLStream last released by the consumer.

Parameters

conn

- Connection on which to present the CUDA array

eglframe

- CUDA Eglstream Proucer Frame handle returned from the consumer over EglStream.

pStream

- CUDA stream on which to return the frame.

Returns

[cudaSuccess](#), [cudaErrorLaunchTimeout](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

This API can potentially return cudaErrorLaunchTimeout if the consumer has not returned a frame to EGL stream. If timeout is returned the application can retry.

See also:

[cudaEGLStreamProducerConnect](#), [cudaEGLStreamProducerDisconnect](#),
[cudaEGLStreamProducerPresentFrame](#), [cuEGLStreamProducerReturnFrame](#)

```
_host__cudaError_t cudaEventCreateFromEGLSync
(cudaEvent_t *phEvent, EGLSyncKHR eglSync,
unsigned int flags)
```

Creates an event from EGLSync object.

Parameters

phEvent

- Returns newly created event

eglSync

- Opaque handle to EGLSync object

flags

- Event creation flags

Returns

[cudaSuccess](#), [cudaErrorInitializationError](#), [cudaErrorInvalidValue](#), [cudaErrorLaunchFailure](#), [cudaErrorMemoryAllocation](#)

Description

Creates an event *phEvent from an EGLSyncKHR eglSync with the flags specified via flags.
Valid flags include:

- ▶ [cudaEventDefault](#): Default event creation flag.
- ▶ [cudaEventBlockingSync](#): Specifies that the created event should use blocking synchronization. A CPU thread that uses [cudaEventSynchronize\(\)](#) to wait on an event created with this flag will block until the event has actually been completed.

[cudaEventRecord](#) and TimingData are not supported for events created from EGLSync.

The EGLSyncKHR is an opaque handle to an EGL sync object. `typedef void* EGLSyncKHR`

See also:

[cudaEventQuery](#), [cudaEventSynchronize](#), [cudaEventDestroy](#)

**`__host__ cudaError_t
cudaGraphicsEGLRegisterImage
(cudaGraphicsResource **pCudaResource,
EGLImageKHR image, unsigned int flags)`**

Registers an EGL image.

Parameters

pCudaResource

- Pointer to the returned object handle

image

- An EGLImageKHR image which can be used to create target resource.

flags

- Map flags

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Registers the EGLImageKHR specified by `image` for access by CUDA. A handle to the registered object is returned as `pCudaResource`. Additional Mapping/Unmapping is not required for the registered resource and `cudaGraphicsResourceGetMappedEglFrame` can be directly called on the `pCudaResource`.

The application will be responsible for synchronizing access to shared objects. The application must ensure that any pending operation which access the objects have completed before passing control to CUDA. This may be accomplished by issuing and waiting for `glFinish` command on all GLcontexts (for OpenGL and likewise for other APIs). The application will be also responsible for ensuring that any pending operation on the registered CUDA resource has completed prior to executing subsequent commands in other APIs accesing the same memory objects. This can be accomplished by calling `cuCtxSynchronize` or `cuEventSynchronize` (preferably).

The surface's intended usage is specified using `flags`, as follows:

- ▶ `cudaGraphicsRegisterFlagsNone`: Specifies no hints about how this resource will be used. It is therefore assumed that this resource will be read from and written to by CUDA. This is the default value.
- ▶ `cudaGraphicsRegisterFlagsReadOnly`: Specifies that CUDA will not write to this resource.
- ▶ `cudaGraphicsRegisterFlagsWriteDiscard`: Specifies that CUDA will not read from this resource and will write over the entire contents of the resource, so none of the data previously stored in the resource will be preserved.

The EGLImageKHR is an object which can be used to create EGLImage target resource. It is defined as a void pointer. `typedef void* EGLImageKHR`

See also:

`cudaGraphicsUnregisterResource`, `cudaGraphicsResourceGetMappedEglFrame`,
`cuGraphicsEGLRegisterImage`

```
_host_ cudaError_t
cudaGraphicsResourceGetMappedEglFrame
(cudaEglFrame *eglFrame, cudaGraphicsResource_t
resource, unsigned int index, unsigned int mipLevel)
```

Get an eglFrame through which to access a registered EGL graphics resource.

Parameters

eglFrame

- Returned eglFrame.

resource

- Registered resource to access.

index

- Index for cubemap surfaces.

mipLevel

- Mipmap level for the subresource to access.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorUnknown](#)

Description

Returns in *eglFrame an eglFrame pointer through which the registered graphics resource resource may be accessed. This API can only be called for EGL graphics resources.

The [cudaEglFrame](#) is defined as

```
/* typedef struct cudaEglFrame_st {
    union {
        cudaArray_t          pArray[CUDA_EGL_MAX_PLANES];
        struct cudaPitchedPtr pPitch[CUDA_EGL_MAX_PLANES];
    } frame;
    cudaEglPlaneDesc planeDesc[CUDA_EGL_MAX_PLANES];
    unsigned int planeCount;
    cudaEglFrameType frameType;
    cudaEglColorFormat eglColorFormat;
} cudaEglFrame;
```



Note:

Note that in case of multiplanar *eglFrame, pitch of only first plane ([unsigned int cudaEglPlaneDesc::pitch](#)) is to be considered by the application.

See also:

[cudaGraphicsSubResourceGetMappedArray](#), [cudaGraphicsResourceGetMappedPointer](#),
[cuGraphicsResourceGetMappedEglFrame](#)

6.24. Graphics Interoperability

This section describes the graphics interoperability functions of the CUDA runtime application programming interface.

**`_host__cudaError_t cudaGraphicsMapResources
(int count, cudaGraphicsResource_t *resources,
cudaStream_t stream)`**

Map graphics resources for access by CUDA.

Parameters

count

- Number of resources to map

resources

- Resources to map for CUDA

stream

- Stream for synchronization

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Maps the `count` graphics resources in `resources` for access by CUDA.

The resources in `resources` may be accessed by CUDA until they are unmapped. The graphics API from which `resources` were registered should not access any resources while they are mapped by CUDA. If an application does so, the results are undefined.

This function provides the synchronization guarantee that any graphics calls issued before [cudaGraphicsMapResources\(\)](#) will complete before any subsequent CUDA work issued in `stream` begins.

If `resources` contains any duplicate entries then [cudaErrorInvalidResourceHandle](#) is returned. If any of `resources` are presently mapped for access by CUDA then [cudaErrorUnknown](#) is returned.



Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphicsResourceGetMappedPointer](#), [cudaGraphicsSubResourceGetMappedArray](#),
[cudaGraphicsUnmapResources](#), [cuGraphicsMapResources](#)

__host__ [cudaError_t](#)

[cudaGraphicsResourceGetMappedMipmappedArray](#)
 ([cudaMipmappedArray_t](#) *[mipmappedArray](#),
[cudaGraphicsResource_t](#) [resource](#))

Get a mipmapped array through which to access a mapped graphics resource.

Parameters

mipmappedArray

- Returned mipmapped array through which [resource](#) may be accessed

resource

- Mapped resource to access

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Returns in [*mipmappedArray](#) a mipmapped array through which the mapped graphics resource [resource](#) may be accessed. The value set in [mipmappedArray](#) may change every time that [resource](#) is mapped.

If [resource](#) is not a texture then it cannot be accessed via an array and [cudaErrorUnknown](#) is returned. If [resource](#) is not mapped then [cudaErrorUnknown](#) is returned.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphicsResourceGetMappedPointer](#), [cuGraphicsResourceGetMappedMipmappedArray](#)

__host__ cudaError_t

```
cudaGraphicsResourceGetMappedPointer (void
**devPtr, size_t *size, cudaGraphicsResource_t
resource)
```

Get an device pointer through which to access a mapped graphics resource.

Parameters

devPtr

- Returned pointer through which **resource** may be accessed

size

- Returned size of the buffer accessible starting at ***devPtr**

resource

- Mapped resource to access

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Returns in ***devPtr** a pointer through which the mapped graphics resource **resource** may be accessed. Returns in ***size** the size of the memory in bytes which may be accessed from that pointer. The value set in **devPtr** may change every time that **resource** is mapped.

If **resource** is not a buffer then it cannot be accessed via a pointer and [cudaErrorUnknown](#) is returned. If **resource** is not mapped then [cudaErrorUnknown](#) is returned. *



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphicsMapResources](#), [cudaGraphicsSubResourceGetMappedArray](#),
[cuGraphicsResourceGetMappedPointer](#)

**`_host__cudaError_t
cudaGraphicsResourceSetMapFlags
(cudaGraphicsResource_t resource, unsigned int
flags)`**

Set usage flags for mapping a graphics resource.

Parameters**resource**

- Registered resource to set flags for

flags

- Parameters for resource mapping

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#),

Description

Set `flags` for mapping the graphics resource `resource`.

Changes to `flags` will take effect the next time `resource` is mapped. The `flags` argument may be any of the following:

- ▶ [cudaGraphicsMapFlagsNone](#): Specifies no hints about how `resource` will be used. It is therefore assumed that CUDA may read from or write to `resource`.
- ▶ [cudaGraphicsMapFlagsReadOnly](#): Specifies that CUDA will not write to `resource`.
- ▶ [cudaGraphicsMapFlagsWriteDiscard](#): Specifies CUDA will not read from `resource` and will write over the entire contents of `resource`, so none of the data previously stored in `resource` will be preserved.

If `resource` is presently mapped for access by CUDA then `cudaErrorUnknown` is returned. If `flags` is not one of the above values then `cudaErrorInvalidValue` is returned.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphicsMapResources](#), [cuGraphicsResourceSetMapFlags](#)

**`_host__cudaError_t
cudaGraphicsSubResourceGetMappedArray
(cudaArray_t *array, cudaGraphicsResource_t
resource, unsigned int arrayIndex, unsigned int
mipLevel)`**

Get an array through which to access a subresource of a mapped graphics resource.

Parameters

array

- Returned array through which a subresource of `resource` may be accessed

resource

- Mapped resource to access

arrayIndex

- Array index for array textures or cubemap face index as defined by [cudaGraphicsCubeFace](#) for cubemap textures for the subresource to access

mipLevel

- Mipmap level for the subresource to access

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorInvalidResourceHandle`, `cudaErrorUnknown`

Description

Returns in `*array` an array through which the subresource of the mapped graphics resource resource which corresponds to array index `arrayIndex` and mipmap level `mipLevel` may be accessed. The value set in `array` may change every time that `resource` is mapped.

If `resource` is not a texture then it cannot be accessed via an array and [cudaErrorUnknown](#) is returned. If `arrayIndex` is not a valid array index for `resource` then [cudaErrorInvalidValue](#) is returned. If `mipLevel` is not a valid mipmap level for `resource` then [cudaErrorInvalidValue](#) is returned. If `resource` is not mapped then [cudaErrorUnknown](#) is returned.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphicsResourceGetMappedPointer](#), [cuGraphicsSubResourceGetMappedArray](#)

```
__host__ cudaError_t cudaGraphicsUnmapResources
(int count, cudaGraphicsResource_t *resources,
cudaStream_t stream)
```

Unmap graphics resources.

Parameters

count

- Number of resources to unmap

resources

- Resources to unmap

stream

- Stream for synchronization

Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Unmaps the `count` graphics resources in `resources`.

Once unmapped, the resources in `resources` may not be accessed by CUDA until they are mapped again.

This function provides the synchronization guarantee that any CUDA work issued in `stream` before [cudaGraphicsUnmapResources\(\)](#) will complete before any subsequently issued graphics work begins.

If `resources` contains any duplicate entries then [cudaErrorInvalidResourceHandle](#) is returned. If any of `resources` are not presently mapped for access by CUDA then [cudaErrorUnknown](#) is returned.

Note:

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphicsMapResources](#), [cuGraphicsUnmapResources](#)

**`__host__ cudaError_t
cudaGraphicsUnregisterResource
(cudaGraphicsResource_t resource)`**

Registers a graphics resource for access by CUDA.

Parameters

resource

- Resource to unregister


Returns

[cudaSuccess](#), [cudaErrorInvalidResourceHandle](#), [cudaErrorUnknown](#)

Description

Unregisters the graphics resource `resource` so it is not accessible by CUDA unless registered again.

If `resource` is invalid then [cudaErrorInvalidResourceHandle](#) is returned.

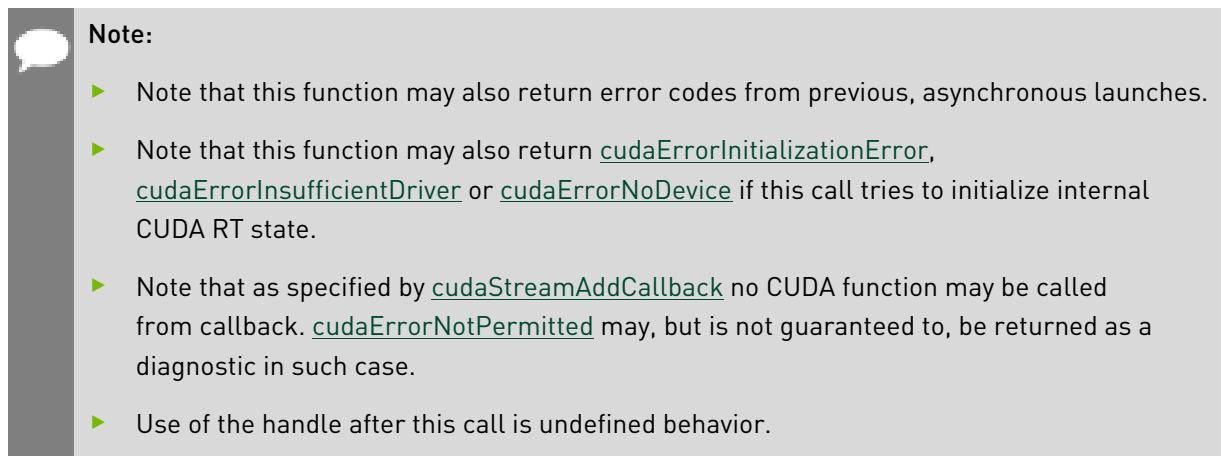

See also:

[cudaGraphicsD3D9RegisterResource](#), [cudaGraphicsD3D10RegisterResource](#),
[cudaGraphicsD3D11RegisterResource](#), [cudaGraphicsGLRegisterBuffer](#),
[cudaGraphicsGLRegisterImage](#), [cuGraphicsUnregisterResource](#)

6.25. Texture Object Management

This section describes the low level texture object management functions of the CUDA runtime application programming interface. The texture object API is only supported on devices of compute capability 3.0 or higher.

__host__ `cudaCreateChannelDesc` (int x, int y, int z, int w, `cudaChannelFormatKind` f)

Returns a channel descriptor using the specified format.

Parameters

x

- X component

y

- Y component

z

- Z component

w

- W component

f

- Channel format

Returns

Channel descriptor with format f

Description

Returns a channel descriptor with format f and number of bits of each component x, y, z, and w. The `cudaChannelFormatDesc` is defined as:

```
struct cudaChannelFormatDesc {
    int x, y, z, w;
    enum cudaChannelFormatKind
        f;
};
```

where `cudaChannelFormatKind` is one of `cudaChannelFormatKindSigned`, `cudaChannelFormatKindUnsigned`, or `cudaChannelFormatKindFloat`.

See also:

[cudaCreateChannelDesc \(C++ API\)](#), [cudaGetChannelDesc](#), [cudaCreateTextureObject](#),
[cudaCreateSurfaceObject](#)

```
__host__ cudaError_t cudaCreateTextureObject
(cudaTextureObject_t *pTexObject, const
cudaResourceDesc *pResDesc, const
cudaTextureDesc *pTexDesc, const
cudaResourceViewDesc *pResViewDesc)
```

Creates a texture object.

Parameters

pTexObject

- Texture object to create

pResDesc

- Resource descriptor

pTexDesc

- Texture descriptor

pResViewDesc

- Resource view descriptor

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a texture object and returns it in pTexObject. pResDesc describes the data to texture from. pTexDesc describes how the data should be sampled. pResViewDesc is an optional argument that specifies an alternate format for the data described by pResDesc, and also describes the subresource region to restrict access to when texturing. pResViewDesc can only be specified if the type of resource is a CUDA array or a CUDA mipmapped array.

Texture objects are only supported on devices of compute capability 3.0 or higher. Additionally, a texture object is an opaque value, and, as such, should only be accessed through CUDA API calls.

The [cudaResourceDesc](#) structure is defined as:

```
struct cudaResourceDesc {
    enum cudaResourceType
        resType;

    union {
        struct {
            cudaArray_t
                array;
        } array;
        struct {
            cudaMipmappedArray_t
                mipmap;
        } mipmap;
    };
}
```

```

        } mipmap;
        struct {
            void *devPtr;
            struct cudaChannelFormatDesc
            desc;
            size_t sizeInBytes;
        } linear;
        struct {
            void *devPtr;
            struct cudaChannelFormatDesc
            desc;
            size_t width;
            size_t height;
            size_t pitchInBytes;
        } pitch2D;
    } res;
};

```

where:

- ▶ [cudaResourceDesc::resType](#) specifies the type of resource to texture from. CUresourceType is defined as:

```

enum cudaResourceType {
    cudaResourceTypeArray = 0x00,
    cudaResourceTypeMipmappedArray = 0x01,
    cudaResourceTypeLinear = 0x02,
    cudaResourceTypePitch2D = 0x03
};

```

If [cudaResourceDesc::resType](#) is set to [cudaResourceTypeArray](#), [cudaResourceDesc::res::array](#) must be set to a valid CUDA array handle.

If [cudaResourceDesc::resType](#) is set to [cudaResourceTypeMipmappedArray](#), [cudaResourceDesc::res::mipmap::mipmap](#) must be set to a valid CUDA mipmapped array handle and [cudaTextureDesc::normalizedCoords](#) must be set to true.

If [cudaResourceDesc::resType](#) is set to [cudaResourceTypeLinear](#), [cudaResourceDesc::res::linear::devPtr](#) must be set to a valid device pointer, that is aligned to [cudaDeviceProp::textureAlignment](#). [cudaResourceDesc::res::linear::desc](#) describes the format and the number of components per array element. [cudaResourceDesc::res::linear::sizeInBytes](#) specifies the size of the array in bytes. The total number of elements in the linear address range cannot exceed [cudaDeviceProp::maxTexture1DLinear](#). The number of elements is computed as ([sizeInBytes / sizeof\(desc\)](#)).

If [cudaResourceDesc::resType](#) is set to [cudaResourceTypePitch2D](#), [cudaResourceDesc::res::pitch2D::devPtr](#) must be set to a valid device pointer, that is aligned to [cudaDeviceProp::textureAlignment](#). [cudaResourceDesc::res::pitch2D::desc](#) describes the format and the number of components per array element. [cudaResourceDesc::res::pitch2D::width](#) and [cudaResourceDesc::res::pitch2D::height](#) specify the width and height of the array in elements, and cannot exceed [cudaDeviceProp::maxTexture2DLinear\[0\]](#) and [cudaDeviceProp::maxTexture2DLinear\[1\]](#) respectively. [cudaResourceDesc::res::pitch2D::pitchInBytes](#) specifies the pitch between two

rows in bytes and has to be aligned to `cudaDeviceProp::texturePitchAlignment`. Pitch cannot exceed `cudaDeviceProp::maxTexture2DLinear[2]`.

The `cudaTextureDesc` struct is defined as

```
struct cudaTextureDesc {
    enum cudaTextureAddressMode
        addressMode[3];
    enum cudaTextureFilterMode
        filterMode;
    enum cudaTextureReadMode
        readMode;
    int
    float
    int
    unsigned int
    enum cudaTextureFilterMode
        mipmapFilterMode;
    float
    float
    float
    int
    int
    sRGB;
    borderColor[4];
    normalizedCoords;
    maxAnisotropy;
    mipmapLevelBias;
    minMipmapLevelClamp;
    maxMipmapLevelClamp;
    disableTrilinearOptimization;
    seamlessCubemap;
};
```

where

- ▶ `cudaTextureDesc::addressMode` specifies the addressing mode for each dimension of the texture data. `cudaTextureAddressMode` is defined as:

```
enum cudaTextureAddressMode {
    cudaAddressModeWrap = 0,
    cudaAddressModeClamp = 1,
    cudaAddressModeMirror = 2,
    cudaAddressModeBorder = 3
};
```

This is ignored if `cudaResourceDesc::resType` is `cudaResourceTypeLinear`. Also, if `cudaTextureDesc::normalizedCoords` is set to zero, `cudaAddressModeWrap` and `cudaAddressModeMirror` won't be supported and will be switched to `cudaAddressModeClamp`.

- ▶ `cudaTextureDesc::filterMode` specifies the filtering mode to be used when fetching from the texture. `cudaTextureFilterMode` is defined as:

```
enum cudaTextureFilterMode {
    cudaFilterModePoint = 0,
    cudaFilterModeLinear = 1
};
```

This is ignored if `cudaResourceDesc::resType` is `cudaResourceTypeLinear`.

- ▶ `cudaTextureDesc::readMode` specifies whether integer data should be converted to floating point or not. `cudaTextureReadMode` is defined as:

```
enum cudaTextureReadMode {
    cudaReadModeElementType = 0,
    cudaReadModeNormalizedFloat = 1
};
```

Note that this applies only to 8-bit and 16-bit integer formats. 32-bit integer format would not be promoted, regardless of whether or not this [cudaTextureDesc::readMode](#) is set [cudaReadModeNormalizedFloat](#) is specified.

- ▶ [cudaTextureDesc::sRGB](#) specifies whether sRGB to linear conversion should be performed during texture fetch.
- ▶ [cudaTextureDesc::borderColor](#) specifies the float values of color. where:
`cudaTextureDesc::borderColor[0]` contains value of 'R', `cudaTextureDesc::borderColor[1]` contains value of 'G', `cudaTextureDesc::borderColor[2]` contains value of 'B', `cudaTextureDesc::borderColor[3]` contains value of 'A' Note that application using integer border color values will need to `<reinterpret_cast>` these values to float. The values are set only when the addressing mode specified by [cudaTextureDesc::addressMode](#) is `cudaAddressModeBorder`.
- ▶ [cudaTextureDesc::normalizedCoords](#) specifies whether the texture coordinates will be normalized or not.
- ▶ [cudaTextureDesc::maxAnisotropy](#) specifies the maximum anisotropy ratio to be used when doing anisotropic filtering. This value will be clamped to the range [1,16].
- ▶ [cudaTextureDesc::mipmapFilterMode](#) specifies the filter mode when the calculated mipmap level lies between two defined mipmap levels.
- ▶ [cudaTextureDesc::mipmapLevelBias](#) specifies the offset to be applied to the calculated mipmap level.
- ▶ [cudaTextureDesc::minMipmapLevelClamp](#) specifies the lower end of the mipmap level range to clamp access to.
- ▶ [cudaTextureDesc::maxMipmapLevelClamp](#) specifies the upper end of the mipmap level range to clamp access to.
- ▶ [cudaTextureDesc::disableTrilinearOptimization](#) specifies whether the trilinear filtering optimizations will be disabled.
- ▶ [cudaTextureDesc::seamlessCubemap](#) specifies whether seamless cube map filtering is enabled. This flag can only be specified if the underlying resource is a CUDA array or a CUDA mipmapped array that was created with the flag [cudaArrayCubemap](#). When seamless cube map filtering is enabled, texture address modes specified by [cudaTextureDesc::addressMode](#) are ignored. Instead, if the [cudaTextureDesc::filterMode](#) is set to [cudaFilterModePoint](#) the address mode [cudaAddressModeClamp](#) will be applied for all dimensions. If the [cudaTextureDesc::filterMode](#) is set to [cudaFilterModeLinear](#) seamless cube map filtering will be performed when sampling along the cube face borders.

The [cudaResourceViewDesc](#) struct is defined as

```
struct cudaResourceViewDesc {
```

```

enum cudaResourceViewFormat
{
    format;
    size_t width;
    size_t height;
    size_t depth;
    unsigned int firstMipmapLevel;
    unsigned int lastMipmapLevel;
    unsigned int firstLayer;
    unsigned int lastLayer;
};

```

where:

- ▶ cudaResourceViewDesc::format specifies how the data contained in the CUDA array or CUDA mipmapped array should be interpreted. Note that this can incur a change in size of the texture data. If the resource view format is a block compressed format, then the underlying CUDA array or CUDA mipmapped array has to have a 32-bit unsigned integer format with 2 or 4 channels, depending on the block compressed format. For ex., BC1 and BC4 require the underlying CUDA array to have a 32-bit unsigned int with 2 channels. The other BC formats require the underlying resource to have the same 32-bit unsigned int format but with 4 channels.
- ▶ cudaResourceViewDesc::width specifies the new width of the texture data. If the resource view format is a block compressed format, this value has to be 4 times the original width of the resource. For non block compressed formats, this value has to be equal to that of the original resource.
- ▶ cudaResourceViewDesc::height specifies the new height of the texture data. If the resource view format is a block compressed format, this value has to be 4 times the original height of the resource. For non block compressed formats, this value has to be equal to that of the original resource.
- ▶ cudaResourceViewDesc::depth specifies the new depth of the texture data. This value has to be equal to that of the original resource.
- ▶ cudaResourceViewDesc::firstMipmapLevel specifies the most detailed mipmap level. This will be the new mipmap level zero. For non-mipmapped resources, this value has to be zero. cudaTextureDesc::minMipmapLevelClamp and cudaTextureDesc::maxMipmapLevelClamp will be relative to this value. For ex., if the firstMipmapLevel is set to 2, and a minMipmapLevelClamp of 1.2 is specified, then the actual minimum mipmap level clamp will be 3.2.
- ▶ cudaResourceViewDesc::lastMipmapLevel specifies the least detailed mipmap level. For non-mipmapped resources, this value has to be zero.
- ▶ cudaResourceViewDesc::firstLayer specifies the first layer index for layered textures. This will be the new layer zero. For non-layered resources, this value has to be zero.
- ▶ cudaResourceViewDesc::lastLayer specifies the last layer index for layered textures. For non-layered resources, this value has to be zero.

 **Note:**

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDestroyTextureObject](#), [cuTexObjectCreate](#)

__host__ [cudaError_t](#) [cudaDestroyTextureObject](#)([cudaTextureObject_t](#) **texObject**)

Destroys a texture object.

Parameters

texObject

- Texture object to destroy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Destroys the texture object specified by **texObject**.

 **Note:**

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Use of the handle after this call is undefined behavior.

See also:

[cudaCreateTextureObject](#), [cuTexObjectDestroy](#)

```
__host__ cudaError_t cudaGetChannelDesc
(cudaChannelFormatDesc *desc, cudaArray_const_t
array)
```

Get the channel descriptor of an array.

Parameters

desc

- Channel format

array

- Memory array on device

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns in *desc the channel descriptor of the CUDA array array.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaCreateChannelDesc \(C API\)](#), [cudaCreateTextureObject](#), [cudaCreateSurfaceObject](#)

```
_host_ cudaError_t
cudaGetTextureObjectResourceDesc
(cudaResourceDesc *pResDesc, cudaTextureObject_t
texObject)
```

Returns a texture object's resource descriptor.

Parameters

pResDesc

- Resource descriptor

texObject

- Texture object

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the resource descriptor for the texture object specified by **texObject**.



Note:

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaCreateTextureObject](#), [cuTexObjectGetResourceDesc](#)

```
_host_ cudaError_t
cudaGetTextureObjectResourceViewDesc
(cudaResourceViewDesc *pResViewDesc,
cudaTextureObject_t texObject)
```

Returns a texture object's resource view descriptor.

Parameters

pResViewDesc

- Resource view descriptor

texObject

- Texture object

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the resource view descriptor for the texture object specified by **texObject**. If no resource view was specified, [cudaErrorInvalidValue](#) is returned.

Note:

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaCreateTextureObject](#), [cuTexObjectGetResourceViewDesc](#)

```
_host_ cudaError_t
cudaGetTextureObjectTextureDesc (cudaTextureDesc
*pTexDesc, cudaTextureObject_t texObject)
```

Returns a texture object's texture descriptor.

Parameters

pTexDesc

- Texture descriptor

texObject

- Texture object

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the texture descriptor for the texture object specified by **texObject**.

Note:

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaCreateTextureObject](#), [cuTexObjectGetTextureDesc](#)

6.26. Surface Object Management

This section describes the low level texture object management functions of the CUDA runtime application programming interface. The surface object API is only supported on devices of compute capability 3.0 or higher.

```
_host_ cudaError_t cudaCreateSurfaceObject  
(cudaSurfaceObject_t *pSurfObject, const  
cudaResourceDesc *pResDesc)
```

Creates a surface object.

Parameters

pSurfObject

- Surface object to create

pResDesc

- Resource descriptor

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidChannelDescriptor](#),
[cudaErrorInvalidResourceHandle](#)

Description

Creates a surface object and returns it in **pSurfObject**. **pResDesc** describes the data to perform surface load/stores on. [cudaResourceDesc::resType](#) must be [cudaResourceTypeArray](#) and [cudaResourceDesc::res::array::array](#) must be set to a valid CUDA array handle.

Surface objects are only supported on devices of compute capability 3.0 or higher. Additionally, a surface object is an opaque value, and, as such, should only be accessed through CUDA API calls.



Note:

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDestroySurfaceObject](#), [cuSurfObjectCreate](#)

__host__ cudaError_t cudaDestroySurfaceObject (cudaSurfaceObject_t surfObject)

Destroys a surface object.

Parameters

surfObject

- Surface object to destroy

Returns

cudaSuccess, cudaErrorInvalidValue

Description

Destroys the surface object specified by `surfObject`.

Note:

- ▶ Note that this function may also return cudaErrorInitializationError, cudaErrorInsufficientDriver or cudaErrorNoDevice if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by cudaStreamAddCallback no CUDA function may be called from callback. cudaErrorNotPermitted may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Use of the handle after this call is undefined behavior.

See also:

cudaCreateSurfaceObject, cuSurfObjectDestroy

```
_host_ cudaError_t
cudaGetSurfaceObjectResourceDesc
(cudaResourceDesc *pResDesc, cudaSurfaceObject_t
surfObject)
```

Returns a surface object's resource descriptor Returns the resource descriptor for the surface object specified by **surfObject**.

Parameters

pResDesc

- Resource descriptor

surfObject

- Surface object

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description



Note:

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaCreateSurfaceObject](#), [cuSurfObjectGetResourceDesc](#)

6.27. Version Management

__host__ cudaError_t cudaDriverGetVersion (int *driverVersion)

Returns the latest version of CUDA supported by the driver.

Parameters

driverVersion

- Returns the CUDA driver version.

Returns

cudaSuccess, cudaErrorInvalidValue

Description

Returns in *driverVersion the latest version of CUDA supported by the driver. The version is returned as (1000 major + 10 minor). For example, CUDA 9.2 would be represented by 9020. If no driver is installed, then 0 is returned as the driver version.

This function automatically returns cudaErrorInvalidValue if driverVersion is NULL.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return cudaErrorInitializationError, cudaErrorInsufficientDriver or cudaErrorNoDevice if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by cudaStreamAddCallback no CUDA function may be called from callback. cudaErrorNotPermitted may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

cudaRuntimeGetVersion, cuDriverGetVersion

__host__ __device__ cudaError_t cudaRuntimeGetVersion (int *runtimeVersion)

Returns the CUDA Runtime version.

Parameters

runtimeVersion

- Returns the CUDA Runtime version.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns in `*runtimeVersion` the version number of the current CUDA Runtime instance. The version is returned as (1000 major + 10 minor). For example, CUDA 9.2 would be represented by 9020.

As of CUDA 12.0, this function no longer initializes CUDA. The purpose of this API is solely to return a compile-time constant stating the CUDA Toolkit version in the above format.

This function automatically returns [cudaErrorInvalidValue](#) if the `runtimeVersion` argument is NULL.



Note:

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDriverGetVersion](#), [cuDriverGetVersion](#)

6.28. Graph Management

This section describes the graph management functions of CUDA runtime application programming interface.

```
_host_ cudaError_t
cudaDeviceGetGraphMemAttribute (int device,
cudaGraphMemAttributeType attr, void *value)
```

Query asynchronous allocation attributes related to graphs.

Parameters

device

- Specifies the scope of the query

attr

- attribute to get

value

- retrieved value

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#)

Description

Valid attributes are:

- ▶ [cudaGraphMemAttrUsedMemCurrent](#): Amount of memory, in bytes, currently associated with graphs
- ▶ [cudaGraphMemAttrUsedMemHigh](#): High watermark of memory, in bytes, associated with graphs since the last time it was reset. High watermark can only be reset to zero.
- ▶ [cudaGraphMemAttrReservedMemCurrent](#): Amount of memory, in bytes, currently allocated for use by the CUDA graphs asynchronous allocator.
- ▶ [cudaGraphMemAttrReservedMemHigh](#): High watermark of memory, in bytes, currently allocated for use by the CUDA graphs asynchronous allocator.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceSetGraphMemAttribute](#), [cudaGraphAddMemAllocNode](#),
[cudaGraphAddMemFreeNode](#), [cudaDeviceGraphMemTrim](#), [cudaMallocAsync](#), [cudaFreeAsync](#)

__host__ [cudaError_t](#) [cudaDeviceGraphMemTrim](#) (int device)

Free unused memory that was cached on the specified device for use with graphs back to the OS.

Parameters

device

- The device for which cached memory should be freed.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Blocks which are not in use by a graph that is either currently executing or scheduled to execute are freed back to the operating system.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddMemAllocNode](#), [cudaGraphAddMemFreeNode](#),
[cudaDeviceGetGraphMemAttribute](#), [cudaDeviceSetGraphMemAttribute](#), [cudaMallocAsync](#),
[cudaFreeAsync](#)

__host__ cudaError_t

cudaDeviceSetGraphMemAttribute (int device,
cudaGraphMemAttributeType attr, void *value)

Set asynchronous allocation attributes related to graphs.

Parameters

device

- Specifies the scope of the query

attr

- attribute to get

value

- pointer to value to set

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#)

Description

Valid attributes are:

- ▶ [cudaGraphMemAttrUsedMemHigh](#): High watermark of memory, in bytes, associated with graphs since the last time it was reset. High watermark can only be reset to zero.
- ▶ [cudaGraphMemAttrReservedMemHigh](#): High watermark of memory, in bytes, currently allocated for use by the CUDA graphs asynchronous allocator.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaDeviceGetGraphMemAttribute](#), [cudaGraphAddMemAllocNode](#),
[cudaGraphAddMemFreeNode](#), [cudaDeviceGraphMemTrim](#), [cudaMallocAsync](#), [cudaFreeAsync](#)

__device__cudaGraphExec_t cudaGetCurrentGraphExec (void)

Get the currently running device graph id.

Returns

Returns the current device graph id, 0 if the call is outside of a device graph.

Description

Get the currently running device graph id.

See also:

[cudaGraphLaunch](#)

__host__cudaError_t cudaGraphAddChildGraphNode (cudaGraphNode_t *pGraphNode, cudaGraph_t graph, const cudaGraphNode_t *pDependencies, size_t numDependencies, cudaGraph_t childGraph)

Creates a child graph node and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

childGraph

- The graph to clone into this node

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new node which executes an embedded graph, and adds it to graph with numDependencies dependencies specified via pDependencies. It is possible for numDependencies to be 0, in which case the node will be placed at the root of the graph. pDependencies may not have any duplicate entries. A handle to the new node will be returned in pGraphNode.

If hGraph contains allocation or free nodes, this call will return an error.

The node executes an embedded child graph. The child graph is cloned in this call.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaGraphChildGraphNodeGetGraph](#), [cudaGraphCreate](#),
[cudaGraphDestroyNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddHostNode](#), [cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#),
[cudaGraphClone](#)

```
__host__ cudaError_t cudaGraphAddDependencies
(cudaGraph_t graph, const cudaGraphNode_t
*from, const cudaGraphNode_t *to, size_t
numDependencies)
```

Adds dependency edges to a graph.

Parameters

graph

- Graph to which dependencies are added

from

- Array of nodes that provide the dependencies

to

- Array of dependent nodes

numDependencies

- Number of dependencies to be added

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

The number of dependencies to be added is defined by numDependencies. Elements in pFrom and pTo at corresponding indices define a dependency. Each node in pFrom and pTo must belong to graph.

If numDependencies is 0, elements in pFrom and pTo will be ignored. Specifying an existing dependency will return an error.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphRemoveDependencies](#), [cudaGraphGetEdges](#), [cudaGraphNodeGetDependencies](#), [cudaGraphNodeGetDependentNodes](#)

```
__host__ cudaError_t cudaGraphAddDependencies_v2
(cudaGraph_t graph, const cudaGraphNode_t
*from, const cudaGraphNode_t *to, const
cudaGraphEdgeData *edgeData, size_t
numDependencies)
```

Adds dependency edges to a graph. (12.3+).

Parameters

graph

- Graph to which dependencies are added

from

- Array of nodes that provide the dependencies

to

- Array of dependent nodes

edgeData

- Optional array of edge data. If NULL, default (zeroed) edge data is assumed.

numDependencies

- Number of dependencies to be added

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

The number of dependencies to be added is defined by numDependencies. Elements in pFrom and pTo at corresponding indices define a dependency. Each node in pFrom and pTo must belong to graph.

If numDependencies is 0, elements in pFrom and pTo will be ignored. Specifying an existing dependency will return an error.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#),
[cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphRemoveDependencies](#), [cudaGraphGetEdges](#), [cudaGraphNodeGetDependencies](#), [cudaGraphNodeGetDependentNodes](#)

```
_host_ cudaError_t cudaGraphAddEmptyNode  
(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,  
const cudaGraphNode_t *pDependencies, size_t  
numDependencies)
```

Creates an empty node and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new node which performs no operation, and adds it to **graph** with **numDependencies** dependencies specified via **pDependencies**. It is possible for **numDependencies** to be 0, in which case the node will be placed at the root of the graph. **pDependencies** may not have any duplicate entries. A handle to the new node will be returned in **pGraphNode**.

An empty node performs no operation during execution, but can be used for transitive ordering. For example, a phased execution graph with 2 groups of n nodes with a barrier between them can be represented using an empty node and $2 \times n$ dependency edges, rather than no empty node and n^2 dependency edges.

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddKernelNode](#), [cudaGraphAddHostNode](#),
[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

`_host_` `cudaError_t`
`cudaGraphAddEventRecordNode (cudaGraphNode_t`
`*pGraphNode, cudaGraph_t graph, const`
`cudaGraphNode_t *pDependencies, size_t`
`numDependencies, cudaEvent_t event)`

Creates an event record node and adds it to a graph.

Parameters

pGraphNode

graph

pDependencies

numDependencies

- Number of dependencies

event

- Event for the node

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new event record node and adds it to hGraph with numDependencies dependencies specified via dependencies and event specified in event. It is possible for

`numDependencies` to be 0, in which case the node will be placed at the root of the graph. `dependencies` may not have any duplicate entries. A handle to the new node will be returned in `phGraphNode`.

Each launch of the graph will record event to capture execution of the node's dependencies.

These nodes may not be used in loops or conditionals.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaGraphAddEventWaitNode](#), [cudaEventRecordWithFlags](#),
[cudaStreamWaitEvent](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

`_host__cudaError_t cudaGraphAddEventWaitNode`
`(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,`
`const cudaGraphNode_t *pDependencies, size_t`
`numDependencies, cudaEvent_t event)`

Creates an event wait node and adds it to a graph.

Parameters

pGraphNode

graph

pDependencies

numDependencies

- Number of dependencies

event

- Event for the node

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new event wait node and adds it to hGraph with numDependencies dependencies specified via dependencies and event specified in event. It is possible for numDependencies to be 0, in which case the node will be placed at the root of the graph. dependencies may not have any duplicate entries. A handle to the new node will be returned in phGraphNode.

The graph node will wait for all work captured in event. See [cuEventRecord\(\)](#) for details on what is captured by an event. The synchronization will be performed efficiently on the device when applicable. event may be from a different context or device than the launch stream.

These nodes may not be used in loops or conditionals.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaGraphAddEventRecordNode](#), [cudaEventRecordWithFlags](#),
[cudaStreamWaitEvent](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

```
_host_ cudaError_t
cudaGraphAddExternalSemaphoresSignalNode
(cudaGraphNode_t *pGraphNode,
 cudaGraph_t graph, const cudaGraphNode_t
 *pDependencies, size_t numDependencies, const
 cudaExternalSemaphoreSignalNodeParams
 *nodeParams)
```

Creates an external semaphore signal node and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

nodeParams

- Parameters for the node

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new external semaphore signal node and adds it to graph with numDependencies dependencies specified via dependencies and arguments specified in nodeParams. It is possible for numDependencies to be 0, in which case the node will be placed at the root of the graph. dependencies may not have any duplicate entries. A handle to the new node will be returned in pGraphNode.

Performs a signal operation on a set of externally allocated semaphore objects when the node is launched. The operation(s) will occur after all of the node's dependencies have completed.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaGraphExternalSemaphoresSignalNodeGetParams](#),
[cudaGraphExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphAddExternalSemaphoresWaitNode](#), [cudaImportExternalSemaphore](#),
[cudaSignalExternalSemaphoresAsync](#), [cudaWaitExternalSemaphoresAsync](#),
[cudaGraphCreate](#), [cudaGraphDestroyNode](#), [cudaGraphAddEventRecordNode](#),
[cudaGraphAddEventWaitNode](#), [cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#),
[cudaGraphAddKernelNode](#), [cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

`_host_``cudaError_t`
`cudaGraphAddExternalSemaphoresWaitNode`
(`cudaGraphNode_t *pGraphNode,`
`cudaGraph_t graph, const cudaGraphNode_t`
`*pDependencies, size_t numDependencies,`
`const cudaExternalSemaphoreWaitNodeParams`
`*nodeParams)`

Creates an external semaphore wait node and adds it to a graph.

Parameters**pGraphNode**

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

nodeParams

- Parameters for the node

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new external semaphore wait node and adds it to graph with numDependencies dependencies specified via dependencies and arguments specified in nodeParams. It is possible for numDependencies to be 0, in which case the node will be placed at the root of the graph. dependencies may not have any duplicate entries. A handle to the new node will be returned in pGraphNode.

Performs a wait operation on a set of externally allocated semaphore objects when the node is launched. The node's dependencies will not be launched until the wait operation has completed.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaGraphExternalSemaphoresWaitNodeGetParams](#),
[cudaGraphExternalSemaphoresWaitNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#),
[cudaGraphAddExternalSemaphoresSignalNode](#), [cudaImportExternalSemaphore](#),
[cudaSignalExternalSemaphoresAsync](#), [cudaWaitExternalSemaphoresAsync](#),
[cudaGraphCreate](#), [cudaGraphDestroyNode](#), [cudaGraphAddEventRecordNode](#),
[cudaGraphAddEventWaitNode](#), [cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#),
[cudaGraphAddKernelNode](#), [cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

```
_host_ cudaError_t cudaGraphAddHostNode  
(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,  
const cudaGraphNode_t *pDependencies, size_t  
numDependencies, const cudaHostNodeParams  
*pNodeParams)
```

Creates a host execution node and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

pNodeParams

- Parameters for the host node

Returns

`cudaSuccess`, `cudaErrorNotSupported`, `cudaErrorInvalidValue`

Description

Creates a new CPU execution node and adds it to `graph` with `numDependencies` dependencies specified via `pDependencies` and arguments specified in `pNodeParams`. It is possible for `numDependencies` to be 0, in which case the node will be placed at the root of the graph. `pDependencies` may not have any duplicate entries. A handle to the new node will be returned in `pGraphNode`.

When the graph is launched, the node will invoke the specified CPU function. Host nodes are not supported under MPS with pre-Volta GPUs.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaLaunchHostFunc](#), [cudaGraphHostNodeGetParams](#),
[cudaGraphHostNodeSetParams](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

```
_host_ cudaError_t cudaGraphAddKernelNode  

(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,  

const cudaGraphNode_t *pDependencies, size_t  

numDependencies, const cudaKernelNodeParams  

*pNodeParams)
```

Creates a kernel execution node and adds it to a graph.

Parameters**pGraphNode**

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

pNodeParams

- Parameters for the GPU execution node

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDeviceFunction](#)

Description

Creates a new kernel execution node and adds it to graph with numDependencies dependencies specified via pDependencies and arguments specified in pNodeParams. It is possible for numDependencies to be 0, in which case the node will be placed at the root of

the graph. `pDependencies` may not have any duplicate entries. A handle to the new node will be returned in `pGraphNode`.

The `cudaKernelNodeParams` structure is defined as:

```
' struct cudaKernelNodeParams
{
    void* func;
    dim3 gridDim;
    dim3 blockDim;
    unsigned int sharedMemBytes;
    void **kernelParams;
    void **extra;
};
```

When the graph is launched, the node will invoke kernel `func` on a (`gridDim.x` × `gridDim.y` × `gridDim.z`) grid of blocks. Each block contains (`blockDim.x` × `blockDim.y` × `blockDim.z`) threads.

`sharedMem` sets the amount of dynamic shared memory that will be available to each thread block.

Kernel parameters to `func` can be specified in one of two ways:



1] Kernel parameters can be specified via `kernelParams`. If the kernel has N parameters, then `kernelParams` needs to be an array of N pointers. Each pointer, from `kernelParams[0]` to `kernelParams[N-1]`, points to the region of memory from which the actual parameter will be copied. The number of kernel parameters and their offsets and sizes do not need to be specified as that information is retrieved directly from the kernel's image.

2) Kernel parameters can also be packaged by the application into a single buffer that is passed in via `extra`. This places the burden on the application of knowing each kernel parameter's size and alignment/padding within the buffer. The `extra` parameter exists to allow this function to take additional less commonly used arguments. `extra` specifies a list of names of extra settings and their corresponding values. Each extra setting name is immediately followed by the corresponding value. The list must be terminated with either NULL or CU_LAUNCH_PARAM_END.

- ▶ `CU_LAUNCH_PARAM_END`, which indicates the end of the `extra` array;
- ▶ `CU_LAUNCH_PARAM_BUFFER_POINTER`, which specifies that the next value in `extra` will be a pointer to a buffer containing all the kernel parameters for launching kernel `func`;
- ▶ `CU_LAUNCH_PARAM_BUFFER_SIZE`, which specifies that the next value in `extra` will be a pointer to a `size_t` containing the size of the buffer specified with `CU_LAUNCH_PARAM_BUFFER_POINTER`;

The error `cudaErrorInvalidValue` will be returned if kernel parameters are specified with both `kernelParams` and `extra` (i.e. both `kernelParams` and `extra` are non-NULL).

The `kernelParams` or `extra` array, as well as the argument values it points to, are copied during this call.

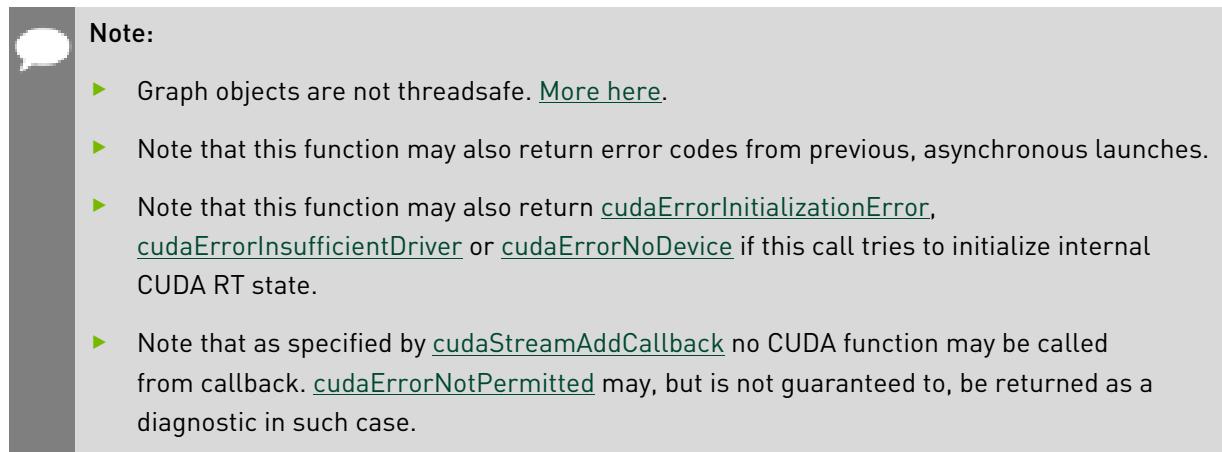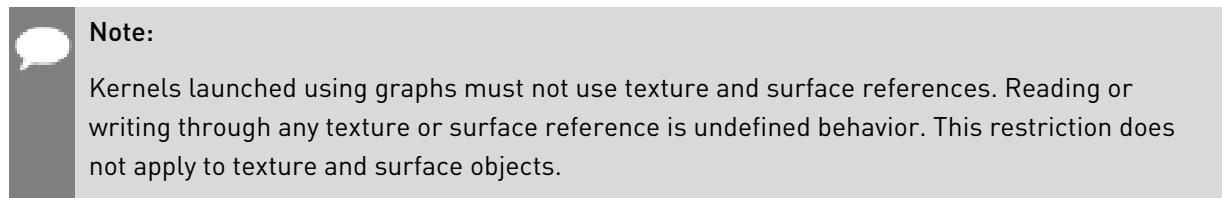

See also:

[cudaGraphAddNode](#), [cudaLaunchKernel](#), [cudaGraphKernelNodeGetParams](#),
[cudaGraphKernelNodeSetParams](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddHostNode](#),
[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

```
__host__ cudaError_t cudaGraphAddMemAllocNode
(
    cudaGraphNode_t *pGraphNode,
    cudaGraph_t graph,
    const cudaGraphNode_t *pDependencies,
    size_t numDependencies,
    cudaMemAllocNodeParams
    *nodeParams)
```

Creates an allocation node and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

nodeParams

- Parameters for the node

Returns

[cudaSuccess](#), [cudaErrorCudartUnloading](#), [cudaErrorInitializationError](#),
[cudaErrorNotSupported](#), [cudaErrorInvalidValue](#), [cudaErrorOutOfMemory](#)

Description

Creates a new allocation node and adds it to `graph` with `numDependencies` dependencies specified via `pDependencies` and arguments specified in `nodeParams`. It is possible for `numDependencies` to be 0, in which case the node will be placed at the root of the graph. `pDependencies` may not have any duplicate entries. A handle to the new node will be returned in `pGraphNode`.

When [cudaGraphAddMemAllocNode](#) creates an allocation node, it returns the address of the allocation in `nodeParams.dptr`. The allocation's address remains fixed across instantiations and launches.

If the allocation is freed in the same graph, by creating a free node using [cudaGraphAddMemFreeNode](#), the allocation can be accessed by nodes ordered after the allocation node but before the free node. These allocations cannot be freed outside the owning graph, and they can only be freed once in the owning graph.

If the allocation is not freed in the same graph, then it can be accessed not only by nodes in the graph which are ordered after the allocation node, but also by stream operations ordered after the graph's execution but before the allocation is freed.

Allocations which are not freed in the same graph can be freed by:

- ▶ passing the allocation to `cudaMemFreeAsync` or `cudaMemFree`;
- ▶ launching a graph with a free node for that allocation; or
- ▶ specifying [cudaGraphInstantiateFlagAutoFreeOnLaunch](#) during instantiation, which makes each launch behave as though it called `cudaMemFreeAsync` for every unfreed allocation.

It is not possible to free an allocation in both the owning graph and another graph. If the allocation is freed in the same graph, a free node cannot be added to another graph. If the allocation is freed in another graph, a free node can no longer be added to the owning graph.

The following restrictions apply to graphs which contain allocation and/or memory free nodes:

- ▶ Nodes and edges of the graph cannot be deleted.
- ▶ The graph cannot be used in a child node.

- ▶ Only one instantiation of the graph may exist at any point in time.
- ▶ The graph cannot be cloned.

**Note:**

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphAddNode](#), [cudaGraphAddMemFreeNode](#), [cudaGraphMemAllocNodeGetParams](#),
[cudaDeviceGraphMemTrim](#), [cudaDeviceGetGraphMemAttribute](#),
[cudaDeviceSetGraphMemAttribute](#), [cudaMallocAsync](#), [cudaFreeAsync](#),
[cudaGraphCreate](#), [cudaGraphDestroyNode](#), [cudaGraphAddChildGraphNode](#),
[cudaGraphAddEmptyNode](#), [cudaGraphAddEventRecordNode](#), [cudaGraphAddEventWaitNode](#),
[cudaGraphAddExternalSemaphoresSignalNode](#), [cudaGraphAddExternalSemaphoresWaitNode](#),
[cudaGraphAddKernelNode](#), [cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

```
__host__ cudaError_t cudaGraphAddMemcpyNode
(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,
const cudaGraphNode_t *pDependencies, size_t
numDependencies, const cudaMemcpy3DParms
*pCopyParams)
```

Creates a memcpy node and adds it to a graph.

Parameters**pGraphNode**

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

pCopyParams

- Parameters for the memory copy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new memcpy node and adds it to graph with numDependencies dependencies specified via pDependencies. It is possible for numDependencies to be 0, in which case the node will be placed at the root of the graph. pDependencies may not have any duplicate entries. A handle to the new node will be returned in pGraphNode.

When the graph is launched, the node will perform the memcpy described by pCopyParams. See [cudaMemcpy3D\(\)](#) for a description of the structure and its restrictions.

Memcpy nodes have some additional restrictions with regards to managed memory, if the system contains at least one device which has a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#).

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaMemcpy3D](#), [cudaGraphAddMemcpyNodeToSymbol](#),
[cudaGraphAddMemcpyNodeFromSymbol](#), [cudaGraphAddMemcpyNode1D](#),
[cudaGraphMemcpyNodeGetParams](#), [cudaGraphMemcpyNodeSetParams](#), [cudaGraphCreate](#),
[cudaGraphDestroyNode](#), [cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#),
[cudaGraphAddKernelNode](#), [cudaGraphAddHostNode](#), [cudaGraphAddMemsetNode](#)

```
_host_ cudaError_t cudaGraphAddMemcpyNode1D  
(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,  
const cudaGraphNode_t *pDependencies, size_t  
numDependencies, void *dst, const void *src, size_t  
count, cudaMemcpyKind kind)
```

Creates a 1D memcpy node and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

dst

- Destination memory address

src

- Source memory address

count

- Size in bytes to copy

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new 1D memcpy node and adds it to graph with numDependencies dependencies specified via pDependencies. It is possible for numDependencies to be 0, in which case the node will be placed at the root of the graph. pDependencies may not have any duplicate entries. A handle to the new node will be returned in pGraphNode.

When the graph is launched, the node will copy count bytes from the memory area pointed to by src to the memory area pointed to by dst, where kind specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified

virtual addressing. Launching a memcpy node with dst and src pointers that do not match the direction of the copy results in an undefined behavior.

Memcpy nodes have some additional restrictions with regards to managed memory, if the system contains at least one device which has a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#).

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaGraphAddMemcpyNode](#), [cudaGraphMemcpyNodeGetParams](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParams1D](#),
[cudaGraphCreate](#), [cudaGraphDestroyNode](#), [cudaGraphAddChildGraphNode](#),
[cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#), [cudaGraphAddHostNode](#),
[cudaGraphAddMemsetNode](#)

```
_host__cudaError_t
cudaGraphAddMemcpyNodeFromSymbol
(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,
const cudaGraphNode_t *pDependencies, size_t
numDependencies, void *dst, const void *symbol,
size_t count, size_t offset, cudaMemcpyKind kind)
```

Creates a memcpy node to copy from a symbol on the device and adds it to a graph.

Parameters**pGraphNode**

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

dst

- Destination memory address

symbol

- Device symbol address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new memcpy node to copy from `symbol` and adds it to `graph` with `numDependencies` dependencies specified via `pDependencies`. It is possible for `numDependencies` to be 0, in which case the node will be placed at the root of the graph. `pDependencies` may not have any duplicate entries. A handle to the new node will be returned in `pGraphNode`.

When the graph is launched, the node will copy `count` bytes from the memory area pointed to by `offset` bytes from the start of symbol `symbol` to the memory area pointed to by `dst`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

Memcpy nodes have some additional restrictions with regards to managed memory, if the system contains at least one device which has a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#).

**Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpyFromSymbol](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphAddMemcpyNodeToSymbol](#), [cudaGraphMemcpyNodeGetParams](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParamsFromSymbol](#),
[cudaGraphMemcpyNodeSetParamsToSymbol](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddHostNode](#), [cudaGraphAddMemsetNode](#)

```
__host__ cudaError_t
cudaGraphAddMemcpyNodeToSymbol
(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,
const cudaGraphNode_t *pDependencies, size_t
numDependencies, const void *symbol, const void
*src, size_t count, size_t offset, cudaMemcpyKind
kind)
```

Creates a memcpy node to copy to a symbol on the device and adds it to a graph.

Parameters**pGraphNode**

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

symbol

- Device symbol address

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new memcpy node to copy to `symbol` and adds it to `graph` with `numDependencies` dependencies specified via `pDependencies`. It is possible for `numDependencies` to be 0, in which case the node will be placed at the root of the graph. `pDependencies` may not have any duplicate entries. A handle to the new node will be returned in `pGraphNode`.

When the graph is launched, the node will copy `count` bytes from the memory area pointed to by `src` to the memory area pointed to by `offset` bytes from the start of symbol `symbol`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

Memcpy nodes have some additional restrictions with regards to managed memory, if the system contains at least one device which has a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#).

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpyToSymbol](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphAddMemcpyNodeFromSymbol](#), [cudaGraphMemcpyNodeGetParams](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParamsToSymbol](#),
[cudaGraphMemcpyNodeSetParamsFromSymbol](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddHostNode](#), [cudaGraphAddMemsetNode](#)

`__host__ cudaError_t cudaGraphAddMemFreeNode`
`(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,`
`const cudaGraphNode_t *pDependencies, size_t`
`numDependencies, void *dptr)`

Creates a memory free node and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

dptr

- Address of memory to free

Returns

[cudaSuccess](#), [cudaErrorCudartUnloading](#), [cudaErrorInitializationError](#),
[cudaErrorNotSupported](#), [cudaErrorInvalidValue](#), [cudaErrorOutOfMemory](#)

Description

Creates a new memory free node and adds it to `graph` with `numDependencies` dependencies specified via `pDependencies` and address specified in `dptr`. It is possible for `numDependencies` to be 0, in which case the node will be placed at the root of the graph. `pDependencies` may not have any duplicate entries. A handle to the new node will be returned in `pGraphNode`.

`cudaGraphAddMemFreeNode` will return [cudaErrorInvalidValue](#) if the user attempts to free:

- ▶ an allocation twice in the same graph.
- ▶ an address that was not returned by an allocation node.

- ▶ an invalid address.

The following restrictions apply to graphs which contain allocation and/or memory free nodes:

- ▶ Nodes and edges of the graph cannot be deleted.
- ▶ The graph cannot be used in a child node.
- ▶ Only one instantiation of the graph may exist at any point in time.
- ▶ The graph cannot be cloned.



Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaGraphAddNode](#), [cudaGraphAddMemAllocNode](#), [cudaGraphMemFreeNodeGetParams](#),
[cudaDeviceGraphMemTrim](#), [cudaDeviceGetGraphMemAttribute](#),
[cudaDeviceSetGraphMemAttribute](#), [cudaMallocAsync](#), [cudaFreeAsync](#),
[cudaGraphCreate](#), [cudaGraphDestroyNode](#), [cudaGraphAddChildGraphNode](#),
[cudaGraphAddEmptyNode](#), [cudaGraphAddEventRecordNode](#), [cudaGraphAddEventWaitNode](#),
[cudaGraphAddExternalSemaphoresSignalNode](#), [cudaGraphAddExternalSemaphoresWaitNode](#),
[cudaGraphAddKernelNode](#), [cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

```
__host__ cudaError_t cudaGraphAddMemsetNode
(cudaGraphNode_t *pGraphNode, cudaGraph_t
graph, const cudaGraphNode_t *pDependencies,
size_t numDependencies, const cudaMemsetParams
*pMemsetParams)
```

Creates a memset node and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

pMemsetParams

- Parameters for the memory set

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDevice](#)

Description

Creates a new memset node and adds it to graph with numDependencies dependencies specified via pDependencies. It is possible for numDependencies to be 0, in which case the node will be placed at the root of the graph. pDependencies may not have any duplicate entries. A handle to the new node will be returned in pGraphNode.

The element size must be 1, 2, or 4 bytes. When the graph is launched, the node will perform the memset described by pMemsetParams.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaMemset2D](#), [cudaGraphMemsetNodeGetParams](#),
[cudaGraphMemsetNodeSetParams](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddHostNode](#), [cudaGraphAddMemcpyNode](#)

```
__host__ cudaError_t cudaGraphAddNode
(cudaGraphNode_t *pGraphNode, cudaGraph_t
graph, const cudaGraphNode_t *pDependencies,
size_t numDependencies, cudaGraphNodeParams
*nodeParams)
```

Adds a node of arbitrary type to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

nodeParams

- Specification of the node

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorNotSupported](#)

Description

Creates a new node in `graph` described by `nodeParams` with `numDependencies` dependencies specified via `pDependencies`. `numDependencies` may be 0. `pDependencies` may be null if `numDependencies` is 0. `pDependencies` may not have any duplicate entries.

`nodeParams` is a tagged union. The node type should be specified in the `type` field, and type-specific parameters in the corresponding union member. All unused bytes - that is, `reserved0` and all bytes past the utilized union member - must be set to zero. It is recommended to use brace initialization or `memset` to ensure all bytes are initialized.

Note that for some node types, `nodeParams` may contain "out parameters" which are modified during the call, such as `nodeParams->alloc.dptr`.

A handle to the new node will be returned in `phGraphNode`.

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphCreate](#), [cudaGraphNodeSetParams](#), [cudaGraphExecNodeSetParams](#)

```
__host__ cudaError_t cudaGraphAddNode_v2
(cudaGraphNode_t *pGraphNode, cudaGraph_t
graph, const cudaGraphNode_t *pDependencies,
const cudaGraphEdgeData *dependencyData,
size_t numDependencies, cudaGraphNodeParams
*nodeParams)
```

Adds a node of arbitrary type to a graph (12.3+).

Parameters**pGraphNode**

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

dependencyData

- Optional edge data for the dependencies. If NULL, the data is assumed to be default (zeroed) for all dependencies.

numDependencies

- Number of dependencies

nodeParams

- Specification of the node

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorNotSupported](#)

Description

Creates a new node in graph described by nodeParams with numDependencies dependencies specified via pDependencies. numDependencies may be 0. pDependencies may be null if numDependencies is 0. pDependencies may not have any duplicate entries.

nodeParams is a tagged union. The node type should be specified in the type field, and type-specific parameters in the corresponding union member. All unused bytes - that is, reserved0 and all bytes past the utilized union member - must be set to zero. It is recommended to use brace initialization or memset to ensure all bytes are initialized.

Note that for some node types, nodeParams may contain "out parameters" which are modified during the call, such as nodeParams->alloc.dptr.

A handle to the new node will be returned in phGraphNode.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphCreate](#), [cudaGraphNodeSetParams](#), [cudaGraphExecNodeSetParams](#)

```
_host_ cudaError_t
cudaGraphChildGraphNodeGetGraph
(cudaGraphNode_t node, cudaGraph_t *pGraph)
```

Gets a handle to the embedded graph of a child graph node.

Parameters

node

- Node to get the embedded graph for

pGraph

- Location to store a handle to the graph

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Gets a handle to the embedded graph in a child graph node. This call does not clone the graph. Changes to the graph will be reflected in the node, and the node retains ownership of the graph.

Allocation and free nodes cannot be added to the returned graph. Attempting to do so will return an error.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddChildGraphNode](#), [cudaGraphNodeFindInClone](#)

`_host__cudaError_t cudaGraphClone (cudaGraph_t *pGraphClone, cudaGraph_t originalGraph)`

Clones a graph.

Parameters

pGraphClone

- Returns newly created cloned graph

originalGraph

- Graph to clone

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

This function creates a copy of `originalGraph` and returns it in `pGraphClone`. All parameters are copied into the cloned graph. The original graph may be modified after this call without affecting the clone.

Child graph nodes in the original graph are recursively copied into the clone.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphCreate](#), [cudaGraphNodeFindInClone](#)

```
_host_cudaError_t
cudaGraphConditionalHandleCreate
(cudaGraphConditionalHandle *pHandle_out,
cudaGraph_t graph, unsigned int defaultLaunchValue,
unsigned int flags)
```

Create a conditional handle.

Parameters

pHandle_out

- Pointer used to return the handle to the caller.

graph

defaultLaunchValue

- Optional initial value for the conditional variable.

flags

- Currently must be `cudaGraphCondAssignDefault` or 0.

Returns

`CUDA_SUCCESS`, `CUDA_ERROR_INVALID_VALUE`, `CUDA_ERROR_NOT_SUPPORTED`

Description

Creates a conditional handle associated with `hGraph`.

The conditional handle can be associated with conditional nodes in this graph or its children.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cuGraphAddNode](#),

`__host__ cudaError_t cudaGraphCreate (cudaGraph_t *pGraph, unsigned int flags)`

Creates a graph.

Parameters

pGraph

- Returns newly created graph

flags

- Graph creation flags, must be 0

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorMemoryAllocation](#)

Description

Creates an empty graph, which is returned via pGraph.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#), [cudaGraphAddHostNode](#), [cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#), [cudaGraphInstantiate](#), [cudaGraphDestroy](#), [cudaGraphGetNodes](#), [cudaGraphGetRootNodes](#), [cudaGraphGetEdges](#), [cudaGraphClone](#)

```
__host__ cudaError_t cudaGraphDebugDotPrint  
(cudaGraph_t graph, const char *path, unsigned int  
flags)
```

Write a DOT file describing graph structure.

Parameters

graph

- The graph to create a DOT file from

path

- The path to write the DOT file to

flags

- Flags from `cudaGraphDebugDotFlags` for specifying which additional node information to write

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorOperatingSystem](#)

Description

Using the provided `graph`, write to `path` a DOT formatted description of the graph. By default this includes the graph topology, node types, node id, kernel names and `memcpy` direction. `flags` can be specified to write more detailed information about each node type such as parameter values, kernel attributes, node and function handles.

```
__host__ cudaError_t cudaGraphDestroy  
(cudaGraph_t graph)
```

Destroys a graph.

Parameters

graph

- Graph to destroy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Destroys the graph specified by `graph`, as well as all of its nodes.

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Use of the handle after this call is undefined behavior.

See also:[cudaGraphCreate](#)

__host__ `cudaError_t cudaGraphDestroyNode` (`cudaGraphNode_t` node)

Remove a node from the graph.

Parameters

node

- Node to remove

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Removes node from its graph. This operation also severs any dependencies of other nodes on node and vice versa.

Dependencies cannot be removed from graphs which contain allocation or free nodes. Any attempt to do so will return an error.

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.
- ▶ Use of the handle after this call is undefined behavior.

See also:

[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddHostNode](#), [cudaGraphAddMemcpyNode](#), [cudaGraphAddMemsetNode](#)

__host__cudaError_t
cudaGraphEventRecordNodeGetEvent
(cudaGraphNode_t node, cudaEvent_t *event_out)

Returns the event associated with an event record node.

Parameters

node
event_out

- Pointer to return the event

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the event of event record node hNode in event_out.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddEventRecordNode](#), [cudaGraphEventRecordNodeSetEvent](#),
[cudaGraphEventWaitNodeGetEvent](#), [cudaEventRecordWithFlags](#), [cudaStreamWaitEvent](#)

**`_host_ cudaError_t
cudaGraphEventRecordNodeSetEvent
(cudaGraphNode_t node, cudaEvent_t event)`**

Sets an event record node's event.

Parameters

node

event

- Event to use

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the event of event record node hNode to event.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeSetParams](#), [cudaGraphAddEventRecordNode](#),
[cudaGraphEventRecordNodeGetEvent](#), [cudaGraphEventWaitNodeSetEvent](#),
[cudaEventRecordWithFlags](#), [cudaStreamWaitEvent](#)

**`_host__cudaError_t
cudaGraphEventWaitNodeGetEvent
(cudaGraphNode_t node, cudaEvent_t *event_out)`**

Returns the event associated with an event wait node.

Parameters

node

event_out

- Pointer to return the event

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the event of event wait node hNode in event_out.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddEventWaitNode](#), [cudaGraphEventWaitNodeSetEvent](#),
[cudaGraphEventRecordNodeGetEvent](#), [cudaEventRecordWithFlags](#), [cudaStreamWaitEvent](#)

__host__cudaError_t cudaGraphEventWaitNodeSetEvent (cudaGraphNode_t node, cudaEvent_t event)

Sets an event wait node's event.

Parameters

node

event

- Event to use

Returns

cudaSuccess, cudaErrorInvalidValue

Description

Sets the event of event wait node hNode to event.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeSetParams](#), [cudaGraphAddEventWaitNode](#),
[cudaGraphEventWaitNodeGetEvent](#), [cudaGraphEventRecordNodeSetEvent](#),
[cudaEventRecordWithFlags](#), [cudaStreamWaitEvent](#)

```
_host_ cudaError_t
cudaGraphExecChildGraphNodeSetParams
(cudaGraphExec_t hGraphExec, cudaGraphNode_t
node, cudaGraph_t childGraph)
```

Updates node parameters in the child graph node in the given graphExec.

Parameters

hGraphExec

- The executable graph in which to set the specified node

node

- Host node from the graph which was used to instantiate graphExec

childGraph

- The graph supplying the updated parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Updates the work represented by node in hGraphExec as though the nodes contained in node's graph had the parameters contained in childGraph's nodes at instantiation. node must remain in the graph which was used to instantiate hGraphExec. Changed edges to and from node are ignored.

The modifications only affect future launches of hGraphExec. Already enqueued or running launches of hGraphExec are not affected by this call. node is also not modified by this call.

The topology of childGraph, as well as the node insertion order, must match that of the graph contained in node. See [cudaGraphExecUpdate\(\)](#) for a list of restrictions on what can be updated in an instantiated graph. The update is recursive, so child graph nodes contained within the top level child graph will also be updated.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphExecNodeSetParams](#), [cudaGraphAddChildGraphNode](#),
[cudaGraphChildGraphNodeGetGraph](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemcpyNodeSetParams](#), [cudaGraphExecMemsetNodeSetParams](#),
[cudaGraphExecHostNodeSetParams](#), [cudaGraphExecEventRecordNodeSetEvent](#),
[cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

__host__ cudaError_t cudaGraphExecDestroy (cudaGraphExec_t graphExec)

Destroys an executable graph.

Parameters

graphExec

- Executable graph to destroy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Destroys the executable graph specified by `graphExec`.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

- ▶ Use of the handle after this call is undefined behavior.

See also:

[cudaGraphInstantiate](#), [cudaGraphUpload](#), [cudaGraphLaunch](#)

`_host_``cudaError_t`

`cudaGraphExecEventRecordNodeSetEvent`

`(cudaGraphExec_t hGraphExec, cudaGraphNode_t hNode, cudaEvent_t event)`

Sets the event for an event record node in the given graphExec.

Parameters

hGraphExec

- The executable graph in which to set the specified node

hNode

- Event record node from the graph from which graphExec was instantiated

event

- Updated event to use

Returns

`cudaSuccess`, [cudaErrorInvalidValue](#),

Description

Sets the event of an event record node in an executable graph `hGraphExec`. The node is identified by the corresponding node `hNode` in the non-executable graph, from which the executable graph was instantiated.

The modifications only affect future launches of `hGraphExec`. Already enqueued or running launches of `hGraphExec` are not affected by this call. `hNode` is also not modified by this call.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphExecNodeSetParams](#), [cudaGraphAddEventRecordNode](#),
[cudaGraphEventRecordNodeGetEvent](#), [cudaGraphEventWaitNodeSetEvent](#),
[cudaEventRecordWithFlags](#), [cudaStreamWaitEvent](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemcpyNodeSetParams](#), [cudaGraphExecMemsetNodeSetParams](#),
[cudaGraphExecHostNodeSetParams](#), [cudaGraphExecChildGraphNodeSetParams](#),
[cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

**`_host__cudaError_t
cudaGraphExecEventWaitNodeSetEvent
(cudaGraphExec_t hGraphExec, cudaGraphNode_t
hNode, cudaEvent_t event)`**

Sets the event for an event wait node in the given graphExec.

Parameters

hGraphExec

- The executable graph in which to set the specified node

hNode

- Event wait node from the graph from which graphExec was instantiated

event

- Updated event to use

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Sets the event of an event wait node in an executable graph hGraphExec. The node is identified by the corresponding node hNode in the non-executable graph, from which the executable graph was instantiated.

The modifications only affect future launches of hGraphExec. Already enqueued or running launches of hGraphExec are not affected by this call. hNode is also not modified by this call.

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphExecNodeSetParams](#), [cudaGraphAddEventWaitNode](#),
[cudaGraphEventWaitNodeGetEvent](#), [cudaGraphEventRecordNodeSetEvent](#),
[cudaEventRecordWithFlags](#), [cudaStreamWaitEvent](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemcpyNodeSetParams](#), [cudaGraphExecMemsetNodeSetParams](#),
[cudaGraphExecHostNodeSetParams](#), [cudaGraphExecChildGraphNodeSetParams](#),
[cudaGraphExecEventRecordNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

__host__cudaError_t

cudaGraphExecExternalSemaphoresSignalNodeSetParams
(cudaGraphExec_t hGraphExec,
cudaGraphNode_t hNode, const
cudaExternalSemaphoreSignalNodeParams
***nodeParams)**

Sets the parameters for an external semaphore signal node in the given graphExec.

Parameters**hGraphExec**

- The executable graph in which to set the specified node

hNode

- semaphore signal node from the graph from which graphExec was instantiated

nodeParams

- Updated Parameters to set

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Sets the parameters of an external semaphore signal node in an executable graph `hGraphExec`. The node is identified by the corresponding node `hNode` in the non-executable graph, from which the executable graph was instantiated.

`hNode` must not have been removed from the original graph.

The modifications only affect future launches of `hGraphExec`. Already enqueued or running launches of `hGraphExec` are not affected by this call. `hNode` is also not modified by this call.

Changing `nodeParams->numExtSems` is not supported.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphExecNodeSetParams](#), [cudaGraphAddExternalSemaphoresSignalNode](#),
[cudaImportExternalSemaphore](#), [cudaSignalExternalSemaphoresAsync](#),
[cudaWaitExternalSemaphoresAsync](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemcpyNodeSetParams](#), [cudaGraphExecMemsetNodeSetParams](#),
[cudaGraphExecHostNodeSetParams](#), [cudaGraphExecChildGraphNodeSetParams](#),
[cudaGraphExecEventRecordNodeSetEvent](#), [cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

```
__host__ cudaError_t
cudaGraphExecExternalSemaphoresWaitNodeSetParams
(cudaGraphExec_t hGraphExec,
cudaGraphNode_t hNode, const
cudaExternalSemaphoreWaitNodeParams
*nodeParams)
```

Sets the parameters for an external semaphore wait node in the given graphExec.

Parameters

hGraphExec

- The executable graph in which to set the specified node

hNode

- semaphore wait node from the graph from which graphExec was instantiated

nodeParams

- Updated Parameters to set

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Sets the parameters of an external semaphore wait node in an executable graph

`hGraphExec`. The node is identified by the corresponding node `hNode` in the non-executable graph, from which the executable graph was instantiated.

`hNode` must not have been removed from the original graph.

The modifications only affect future launches of `hGraphExec`. Already enqueued or running launches of `hGraphExec` are not affected by this call. `hNode` is also not modified by this call.

Changing `nodeParams->numExtSems` is not supported.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphExecNodeSetParams](#), [cudaGraphAddExternalSemaphoresWaitNode](#),
[cudaImportExternalSemaphore](#), [cudaSignalExternalSemaphoresAsync](#),
[cudaWaitExternalSemaphoresAsync](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemcpyNodeSetParams](#), [cudaGraphExecMemsetNodeSetParams](#),
[cudaGraphExecHostNodeSetParams](#), [cudaGraphExecChildGraphNodeSetParams](#),
[cudaGraphExecEventRecordNodeSetEvent](#), [cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

**`__host__ cudaError_t cudaGraphExecGetFlags
(cudaGraphExec_t graphExec, unsigned long long
*flags)`**

Query the instantiation flags of an executable graph.

Parameters

graphExec

- The executable graph to query

flags

- Returns the instantiation flags

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the flags that were passed to instantiation for the given executable graph.

[cudaGraphInstantiateFlagUpload](#) will not be returned by this API as it does not affect the resulting executable graph.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphInstantiate](#), [cudaGraphInstantiateWithFlags](#), [cudaGraphInstantiateWithParams](#)

__host__ cudaError_t

cudaGraphExecHostNodeSetParams

(cudaGraphExec_t hGraphExec, cudaGraphNode_t node, const cudaHostNodeParams *pNodeParams)

Sets the parameters for a host node in the given graphExec.

Parameters**hGraphExec**

- The executable graph in which to set the specified node

node

- Host node from the graph which was used to instantiate graphExec

pNodeParams

- Updated Parameters to set

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Updates the work represented by node in hGraphExec as though node had contained pNodeParams at instantiation. node must remain in the graph which was used to instantiate hGraphExec. Changed edges to and from node are ignored.

The modifications only affect future launches of hGraphExec. Already enqueued or running launches of hGraphExec are not affected by this call. node is also not modified by this call.

**Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphExecNodeSetParams](#), [cudaGraphAddHostNode](#), [cudaGraphHostNodeSetParams](#),
[cudaGraphExecKernelNodeSetParams](#), [cudaGraphExecMemcpyNodeSetParams](#),
[cudaGraphExecMemsetNodeSetParams](#), [cudaGraphExecChildGraphNodeSetParams](#),
[cudaGraphExecEventRecordNodeSetEvent](#), [cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

__host__ cudaError_t
cudaGraphExecKernelNodeSetParams
(cudaGraphExec_t hGraphExec, cudaGraphNode_t node, const cudaKernelNodeParams *pNodeParams)

Sets the parameters for a kernel node in the given graphExec.

Parameters**hGraphExec**

- The executable graph in which to set the specified node

node

- kernel node from the graph from which graphExec was instantiated

pNodeParams

- Updated Parameters to set

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Sets the parameters of a kernel node in an executable graph `hGraphExec`. The node is identified by the corresponding node `node` in the non-executable graph, from which the executable graph was instantiated.

`hNode` must not have been removed from the original graph. All `nodeParams` fields may change, but the following restrictions apply to `func` updates:

- ▶ The owning device of the function cannot change.
- ▶ A node whose function originally did not use CUDA dynamic parallelism cannot be updated to a function which uses CDP
- ▶ If `hGraphExec` was not instantiated for device launch, a node whose function originally did not use device-side `cudaGraphLaunch()` cannot be updated to a function which uses device-side `cudaGraphLaunch()` unless the node resides on the same device as nodes which contained such calls at instantiate-time. If no such calls were present at instantiation, these updates cannot be performed at all.

The modifications only affect future launches of `hGraphExec`. Already enqueued or running launches of `hGraphExec` are not affected by this call. `node` is also not modified by this call.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphExecNodeSetParams](#), [cudaGraphAddKernelNode](#),
[cudaGraphKernelNodeSetParams](#), [cudaGraphExecMemcpyNodeSetParams](#),
[cudaGraphExecMemsetNodeSetParams](#), [cudaGraphExecHostNodeSetParams](#),
[cudaGraphExecChildGraphNodeSetParams](#), [cudaGraphExecEventRecordNodeSetEvent](#),
[cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

```
_host_ cudaError_t
cudaGraphExecMemcpyNodeSetParams
(cudaGraphExec_t hGraphExec, cudaGraphNode_t
node, const cudaMemcpy3DParms *pNodeParams)
```

Sets the parameters for a memcpy node in the given graphExec.

Parameters

hGraphExec

- The executable graph in which to set the specified node

node

- Memcpy node from the graph which was used to instantiate graphExec

pNodeParams

- Updated Parameters to set

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),


Description

Updates the work represented by node in hGraphExec as though node had contained pNodeParams at instantiation. node must remain in the graph which was used to instantiate hGraphExec. Changed edges to and from node are ignored.

The source and destination memory in pNodeParams must be allocated from the same contexts as the original source and destination memory. Both the instantiation-time memory operands and the memory operands in pNodeParams must be 1-dimensional. Zero-length operations are not supported.

The modifications only affect future launches of hGraphExec. Already enqueued or running launches of hGraphExec are not affected by this call. node is also not modified by this call.

Returns [cudaErrorInvalidValue](#) if the memory operands' mappings changed or either the original or new memory operands are multidimensional.

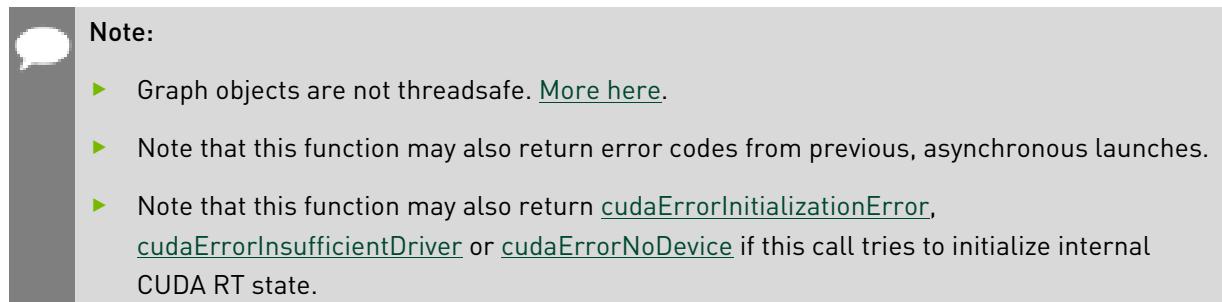

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphExecNodeSetParams](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphExecMemcpyNodeSetParamsToSymbol](#),
[cudaGraphExecMemcpyNodeSetParamsFromSymbol](#),
[cudaGraphExecMemcpyNodeSetParams1D](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemsetNodeSetParams](#), [cudaGraphExecHostNodeSetParams](#),
[cudaGraphExecChildGraphNodeSetParams](#), [cudaGraphExecEventRecordNodeSetEvent](#),
[cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

```
__host__ cudaError_t
cudaGraphExecMemcpyNodeSetParams1D
(cudaGraphExec_t hGraphExec, cudaGraphNode_t
node, void *dst, const void *src, size_t count,
cudaMemcpyKind kind)
```

Sets the parameters for a memcpy node in the given graphExec to perform a 1-dimensional copy.

Parameters

hGraphExec

- The executable graph in which to set the specified node

node

- Memcpy node from the graph which was used to instantiate graphExec

dst

- Destination memory address

src

- Source memory address

count

- Size in bytes to copy

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Updates the work represented by node in hGraphExec as though node had contained the given params at instantiation. node must remain in the graph which was used to instantiate hGraphExec. Changed edges to and from node are ignored.

src and dst must be allocated from the same contexts as the original source and destination memory. The instantiation-time memory operands must be 1-dimensional. Zero-length operations are not supported.

The modifications only affect future launches of hGraphExec. Already enqueued or running launches of hGraphExec are not affected by this call. node is also not modified by this call.

Returns [cudaErrorInvalidValue](#) if the memory operands' mappings changed or the original memory operands are multidimensional.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemcpyNode1D](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParams1D](#),
[cudaGraphExecMemcpyNodeSetParams](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemsetNodeSetParams](#), [cudaGraphExecHostNodeSetParams](#),
[cudaGraphExecChildGraphNodeSetParams](#), [cudaGraphExecEventRecordNodeSetEvent](#),
[cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

```
__host__ cudaError_t
cudaGraphExecMemcpyNodeSetParamsFromSymbol
(cudaGraphExec_t hGraphExec, cudaGraphNode_t
node, void *dst, const void *symbol, size_t count,
size_t offset, cudaMemcpyKind kind)
```

Sets the parameters for a memcpy node in the given graphExec to copy from a symbol on the device.

Parameters

hGraphExec

- The executable graph in which to set the specified node

node

- Memcpy node from the graph which was used to instantiate graphExec

dst

- Destination memory address

symbol

- Device symbol address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Updates the work represented by `node` in `hGraphExec` as though `node` had contained the given params at instantiation. `node` must remain in the graph which was used to instantiate `hGraphExec`. Changed edges to and from `node` are ignored.

`symbol` and `dst` must be allocated from the same contexts as the original source and destination memory. The instantiation-time memory operands must be 1-dimensional. Zero-length operations are not supported.

The modifications only affect future launches of `hGraphExec`. Already enqueued or running launches of `hGraphExec` are not affected by this call. `node` is also not modified by this call.

Returns [cudaErrorInvalidValue](#) if the memory operands' mappings changed or the original memory operands are multidimensional.

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemcpyNodeFromSymbol](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParamsFromSymbol](#),
[cudaGraphExecMemcpyNodeSetParams](#), [cudaGraphExecMemcpyNodeSetParamsToSymbol](#),
[cudaGraphExecKernelNodeSetParams](#), [cudaGraphExecMemsetNodeSetParams](#),
[cudaGraphExecHostNodeSetParams](#), [cudaGraphExecChildGraphNodeSetParams](#),
[cudaGraphExecEventRecordNodeSetEvent](#), [cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

__host__ cudaError_t
cudaGraphExecMemcpyNodeSetParamsToSymbol
 (cudaGraphExec_t hGraphExec, cudaGraphNode_t node, const void *symbol, const void *src, size_t count, size_t offset, cudaMemcpyKind kind)

Sets the parameters for a memcpy node in the given graphExec to copy to a symbol on the device.

Parameters**hGraphExec**

- The executable graph in which to set the specified node

node

- Memcpy node from the graph which was used to instantiate graphExec

symbol

- Device symbol address

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Updates the work represented by node in hGraphExec as though node had contained the given params at instantiation. node must remain in the graph which was used to instantiate hGraphExec. Changed edges to and from node are ignored.

src and symbol must be allocated from the same contexts as the original source and destination memory. The instantiation-time memory operands must be 1-dimensional. Zero-length operations are not supported.

The modifications only affect future launches of hGraphExec. Already enqueued or running launches of hGraphExec are not affected by this call. node is also not modified by this call.

Returns [cudaErrorInvalidValue](#) if the memory operands' mappings changed or the original memory operands are multidimensional.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemcpyNodeToSymbol](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParamsToSymbol](#),
[cudaGraphExecMemcpyNodeSetParams](#),

[cudaGraphExecMemcpyNodeSetParamsFromSymbol](#),
[cudaGraphExecKernelNodeSetParams](#), [cudaGraphExecMemsetNodeSetParams](#),
[cudaGraphExecHostNodeSetParams](#), [cudaGraphExecChildGraphNodeSetParams](#),
[cudaGraphExecEventRecordNodeSetEvent](#), [cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

__host__ cudaError_t
cudaGraphExecMemsetNodeSetParams
{cudaGraphExec_t hGraphExec, cudaGraphNode_t node, const cudaMemcpyParams *pNodeParams}

Sets the parameters for a memset node in the given graphExec.

Parameters

hGraphExec

- The executable graph in which to set the specified node

node

- Memset node from the graph which was used to instantiate graphExec

pNodeParams

- Updated Parameters to set

Returns

`cudaSuccess`, `cudaErrorInvalidValue`,

Description

Updates the work represented by node in hGraphExec as though node had contained pNodeParams at instantiation. node must remain in the graph which was used to instantiate hGraphExec. Changed edges to and from node are ignored.

The destination memory in pNodeParams must be allocated from the same context as the original destination memory. Both the instantiation-time memory operand and the memory operand in pNodeParams must be 1-dimensional. Zero-length operations are not supported.

The modifications only affect future launches of hGraphExec. Already enqueued or running launches of hGraphExec are not affected by this call. node is also not modified by this call.

Returns `cudaErrorInvalidValue` if the memory operand's mappings changed or either the original or new memory operand are multidimensional.

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphExecNodeSetParams](#), [cudaGraphAddMemsetNode](#),
[cudaGraphMemsetNodeSetParams](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemcpyNodeSetParams](#), [cudaGraphExecHostNodeSetParams](#),
[cudaGraphExecChildGraphNodeSetParams](#), [cudaGraphExecEventRecordNodeSetEvent](#),
[cudaGraphExecEventWaitNodeSetEvent](#),
[cudaGraphExecExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphExecExternalSemaphoresWaitNodeSetParams](#), [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

__host__ cudaError_t cudaGraphExecNodeSetParams
(cudaGraphExec_t graphExec, cudaGraphNode_t node, cudaGraphNodeParams *nodeParams)

Update's a graph node's parameters in an instantiated graph.

Parameters**graphExec**

- The executable graph in which to update the specified node

node

- Corresponding node from the graph from which graphExec was instantiated

nodeParams

- Updated Parameters to set

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorNotSupported](#)

Description

Sets the parameters of a node in an executable graph `graphExec`. The node is identified by the corresponding node `node` in the non-executable graph from which the executable graph was instantiated. `node` must not have been removed from the original graph.

The modifications only affect future launches of `graphExec`. Already enqueued or running launches of `graphExec` are not affected by this call. `node` is also not modified by this call.

Allowed changes to parameters on executable graphs are as follows:

Node type	Allowed changes
kernel	See cudaGraphExecKernelNodeSetParams
memcpy	Addresses for 1-dimensional copies if allocated in same context; see cudaGraphExecMemcpyNodeSetParams
memset	Addresses for 1-dimensional memsets if allocated in same context; see cudaGraphExecMemsetNodeSetParams
host	Unrestricted
child graph	Topology must match and restrictions apply recursively; see cudaGraphExecUpdate
event wait	Unrestricted
event record	Unrestricted
external semaphore signal	Number of semaphore operations cannot change
external semaphore wait	Number of semaphore operations cannot change
memory allocation	API unsupported
memory free	API unsupported

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaGraphNodeSetParams](#) [cudaGraphExecUpdate](#),
[cudaGraphInstantiate](#)

**`_host_ cudaError_t cudaGraphExecUpdate
(cudaGraphExec_t hGraphExec, cudaGraph_t hGraph,
cudaGraphExecUpdateResultInfo *resultInfo)`**

Check whether an executable graph can be updated with a graph and perform the update if possible.

Parameters

hGraphExec

The instantiated graph to be updated

hGraph

The graph containing the updated parameters

resultInfo

the error info structure

Returns

[cudaSuccess](#), [cudaErrorGraphExecUpdateFailure](#),

Description

Updates the node parameters in the instantiated graph specified by `hGraphExec` with the node parameters in a topologically identical graph specified by `hGraph`.

Limitations:

- ▶ Kernel nodes:
 - ▶ The owning context of the function cannot change.
 - ▶ A node whose function originally did not use CUDA dynamic parallelism cannot be updated to a function which uses CDP.
 - ▶ A cooperative node cannot be updated to a non-cooperative node, and vice-versa.
 - ▶ If the graph was instantiated with `cudaGraphInstantiateFlagUseNodePriority`, the priority attribute cannot change. Equality is checked on the originally requested priority values, before they are clamped to the device's supported range.

- ▶ If `hGraphExec` was not instantiated for device launch, a node whose function originally did not use device-side `cudaGraphLaunch()` cannot be updated to a function which uses device-side `cudaGraphLaunch()` unless the node resides on the same device as nodes which contained such calls at instantiate-time. If no such calls were present at instantiation, these updates cannot be performed at all.
- ▶ Memset and memcpy nodes:
 - ▶ The CUDA device(s) to which the operand(s) was allocated/mapped cannot change.
 - ▶ The source/destination memory must be allocated from the same contexts as the original source/destination memory.
 - ▶ Only 1D memsets can be changed.
- ▶ Additional memcpy node restrictions:
 - ▶ Changing either the source or destination memory type(i.e. `CU_MEMORYTYPE_DEVICE`, `CU_MEMORYTYPE_ARRAY`, etc.) is not supported.
- ▶ Conditional nodes:
 - ▶ Changing node parameters is not supported.
 - ▶ Changeing parameters of nodes within the conditional body graph is subject to the rules above.
 - ▶ Conditional handle flags and default values are updated as part of the graph update.

Note: The API may add further restrictions in future releases. The return code should always be checked.

`cudaGraphExecUpdate` sets the result member of `resultInfo` to `cudaGraphExecUpdateErrorTopologyChanged` under the following conditions:

- ▶ The count of nodes directly in `hGraphExec` and `hGraph` differ, in which case `resultInfo->errorNode` is set to `NULL`.
- ▶ `hGraph` has more exit nodes than `hGraph`, in which case `resultInfo->errorNode` is set to one of the exit nodes in `hGraph`.
- ▶ A node in `hGraph` has a different number of dependencies than the node from `hGraphExec` it is paired with, in which case `resultInfo->errorNode` is set to the node from `hGraph`.
- ▶ A node in `hGraph` has a dependency that does not match with the corresponding dependency of the paired node from `hGraphExec`. `resultInfo->errorNode` will be set to the node from `hGraph`. `resultInfo->errorFromNode` will be set to the mismatched dependency. The dependencies are paired based on edge order and a dependency does not match when the nodes are already paired based on other edges examined in the graph.

`cudaGraphExecUpdate` sets the result member of `resultInfo` to:

- ▶ cudaGraphExecUpdateError if passed an invalid value.
- ▶ cudaGraphExecUpdateErrorTopologyChanged if the graph topology changed
- ▶ cudaGraphExecUpdateErrorNodeTypeChanged if the type of a node changed, in which case `hErrorNode_out` is set to the node from `hGraph`.
- ▶ cudaGraphExecUpdateErrorFunctionChanged if the function of a kernel node changed (CUDA driver < 11.2)
- ▶ cudaGraphExecUpdateErrorUnsupportedFunctionChange if the `func` field of a kernel changed in an unsupported way (see note above), in which case `hErrorNode_out` is set to the node from `hGraph`
- ▶ cudaGraphExecUpdateErrorParametersChanged if any parameters to a node changed in a way that is not supported, in which case `hErrorNode_out` is set to the node from `hGraph`
- ▶ cudaGraphExecUpdateErrorAttributesChanged if any attributes of a node changed in a way that is not supported, in which case `hErrorNode_out` is set to the node from `hGraph`
- ▶ cudaGraphExecUpdateErrorNotSupported if something about a node is unsupported, like the node's type or configuration, in which case `hErrorNode_out` is set to the node from `hGraph`

If the update fails for a reason not listed above, the `resultInfo` member of `resultInfo` will be set to `cudaGraphExecUpdateError`. If the update succeeds, the `result` member will be set to `cudaGraphExecUpdateSuccess`.

`cudaGraphExecUpdate` returns `cudaSuccess` when the update was performed successfully. It returns `cudaErrorGraphExecUpdateFailure` if the graph update was not performed because it included changes which violated constraints specific to instantiated graph update.

**Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphInstantiate](#)

```
_host_ cudaError_t
cudaGraphExternalSemaphoresSignalNodeGetParams
(cudaGraphNode_t hNode,
cudaExternalSemaphoreSignalNodeParams
*params_out)
```

Returns an external semaphore signal node's parameters.

Parameters

hNode

- Node to get the parameters for

params_out

- Pointer to return the parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the parameters of an external semaphore signal node hNode in params_out. The extSemArray and paramsArray returned in params_out, are owned by the node. This memory remains valid until the node is destroyed or its parameters are modified, and should not be modified directly. Use [cudaGraphExternalSemaphoresSignalNodeSetParams](#) to update the parameters of this node.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaLaunchKernel](#), [cudaGraphAddExternalSemaphoresSignalNode](#),
[cudaGraphExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphAddExternalSemaphoresWaitNode](#), [cudaSignalExternalSemaphoresAsync](#),
[cudaWaitExternalSemaphoresAsync](#)

**`__host__ cudaError_t
cudaGraphExternalSemaphoresSignalNodeSetParams
(cudaGraphNode_t hNode, const
cudaExternalSemaphoreSignalNodeParams
*nodeParams)`**

Sets an external semaphore signal node's parameters.

Parameters

hNode

- Node to set the parameters for

nodeParams

- Parameters to copy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the parameters of an external semaphore signal node `hNode` to `nodeParams`.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeSetParams](#), [cudaGraphAddExternalSemaphoresSignalNode](#),
[cudaGraphExternalSemaphoresSignalNodeSetParams](#),
[cudaGraphAddExternalSemaphoresWaitNode](#), [cudaSignalExternalSemaphoresAsync](#),
[cudaWaitExternalSemaphoresAsync](#)

```
__host__ cudaError_t
cudaGraphExternalSemaphoresWaitNodeGetParams
(cudaGraphNode_t hNode,
cudaExternalSemaphoreWaitNodeParams
*params_out)
```

Returns an external semaphore wait node's parameters.

Parameters

hNode

- Node to get the parameters for

params_out

- Pointer to return the parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the parameters of an external semaphore wait node `hNode` in `params_out`. The `extSemArray` and `paramsArray` returned in `params_out`, are owned by the node. This memory remains valid until the node is destroyed or its parameters are modified, and should not be modified directly. Use [cudaGraphExternalSemaphoresSignalNodeSetParams](#) to update the parameters of this node.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#),
[cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaLaunchKernel](#), [cudaGraphAddExternalSemaphoresWaitNode](#),
[cudaGraphExternalSemaphoresWaitNodeSetParams](#),
[cudaGraphAddExternalSemaphoresWaitNode](#), [cudaSignalExternalSemaphoresAsync](#),
[cudaWaitExternalSemaphoresAsync](#)

**`_host__cudaError_t
cudaGraphExternalSemaphoresWaitNodeSetParams
(cudaGraphNode_t hNode, const
cudaExternalSemaphoreWaitNodeParams
*nodeParams)`**

Sets an external semaphore wait node's parameters.

Parameters

hNode

- Node to set the parameters for

nodeParams

- Parameters to copy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the parameters of an external semaphore wait node `hNode` to `nodeParams`.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeSetParams](#), [cudaGraphAddExternalSemaphoresWaitNode](#),
[cudaGraphExternalSemaphoresWaitNodeSetParams](#),
[cudaGraphAddExternalSemaphoresWaitNode](#), [cudaSignalExternalSemaphoresAsync](#),
[cudaWaitExternalSemaphoresAsync](#)

```
_host_ cudaError_t cudaGraphGetEdges  

(cudaGraph_t graph, cudaGraphNode_t *from,  

cudaGraphNode_t *to, size_t *numEdges)
```

Returns a graph's dependency edges.

Parameters

graph

- Graph to get the edges from

from

- Location to return edge endpoints

to

- Location to return edge endpoints

numEdges

- See description

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns a list of graph's dependency edges. Edges are returned via corresponding indices in **from** and **to**; that is, the node in **to**[*i*] has a dependency on the node in **from**[*i*]. **from** and **to** may both be NULL, in which case this function only returns the number of edges in **numEdges**. Otherwise, **numEdges** entries will be filled in. If **numEdges** is higher than the actual number of edges, the remaining entries in **from** and **to** will be set to NULL, and the number of edges actually returned will be written to **numEdges**.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphGetNodes](#), [cudaGraphGetRootNodes](#), [cudaGraphAddDependencies](#),
[cudaGraphRemoveDependencies](#), [cudaGraphNodeGetDependencies](#),
[cudaGraphNodeGetDependentNodes](#)

```
_host_ cudaError_t cudaGraphGetEdges_v2  

(cudaGraph_t graph, cudaGraphNode_t *from,  

cudaGraphNode_t *to, cudaGraphEdgeData  

*edgeData, size_t *numEdges)
```

Returns a graph's dependency edges (12.3+).

Parameters

graph

- Graph to get the edges from

from

- Location to return edge endpoints

to

- Location to return edge endpoints

edgeData

- Optional location to return edge data

numEdges

- See description

Returns

[cudaSuccess](#), [cudaErrorLossyQuery](#), [cudaErrorInvalidValue](#)

Description

Returns a list of **graph**'s dependency edges. Edges are returned via corresponding indices in **from**, **to** and **edgeData**; that is, the node in **to[i]** has a dependency on the node in **from[i]** with data **edgeData[i]**. **from** and **to** may both be NULL, in which case this function only returns the number of edges in **numEdges**. Otherwise, **numEdges** entries will be filled in. If

`numEdges` is higher than the actual number of edges, the remaining entries in `from` and `to` will be set to `NULL`, and the number of edges actually returned will be written to `numEdges`. `edgeData` may alone be `NULL`, in which case the edges must all have default (zeroed) edge data. Attempting a losst query via `NULL` `edgeData` will result in [cudaErrorLossyQuery](#). If `edgeData` is non-`NULL` then `from` and `to` must be as well.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphGetNodes](#), [cudaGraphGetRootNodes](#), [cudaGraphAddDependencies](#),
[cudaGraphRemoveDependencies](#), [cudaGraphNodeGetDependencies](#),
[cudaGraphNodeGetDependentNodes](#)

__host__ cudaError_t cudaGraphGetNodes
(cudaGraph_t graph, cudaGraphNode_t *nodes, size_t *numNodes)

Returns a graph's nodes.

Parameters**graph**

- Graph to query

nodes

- Pointer to return the nodes

numNodes

- See description

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns a list of graph's nodes. nodes may be NULL, in which case this function will return the number of nodes in numNodes. Otherwise, numNodes entries will be filled in. If numNodes is higher than the actual number of nodes, the remaining entries in nodes will be set to NULL, and the number of nodes actually obtained will be returned in numNodes.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphCreate](#), [cudaGraphGetRootNodes](#), [cudaGraphGetEdges](#), [cudaGraphNodeGetType](#), [cudaGraphNodeGetDependencies](#), [cudaGraphNodeGetDependentNodes](#)

```
__host__ cudaError_t cudaGraphGetRootNodes
(cudaGraph_t graph, cudaGraphNode_t *pRootNodes,
size_t *pNumRootNodes)
```

Returns a graph's root nodes.

Parameters

graph

- Graph to query

pRootNodes

- Pointer to return the root nodes

pNumRootNodes

- See description

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns a list of graph's root nodes. pRootNodes may be NULL, in which case this function will return the number of root nodes in pNumRootNodes. Otherwise, pNumRootNodes entries will be filled in. If pNumRootNodes is higher than the actual number of root nodes, the remaining entries in pRootNodes will be set to NULL, and the number of nodes actually obtained will be returned in pNumRootNodes.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphCreate](#), [cudaGraphGetNodes](#), [cudaGraphGetEdges](#), [cudaGraphNodeGetType](#), [cudaGraphNodeGetDependencies](#), [cudaGraphNodeGetDependentNodes](#)

__host__ cudaError_t cudaGraphNodeGetParams
(cudaGraphNode_t node, cudaHostNodeParams
***pNodeParams)**

Returns a host node's parameters.

Parameters

node

- Node to get the parameters for

pNodeParams

- Pointer to return the parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the parameters of host node node in pNodeParams.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaLaunchHostFunc](#), [cudaGraphAddHostNode](#), [cudaGraphHostNodeSetParams](#)

`__host__ cudaError_t cudaGraphHostNodeSetParams
(cudaGraphNode_t node, const cudaHostNodeParams
*pNodeParams)`

Sets a host node's parameters.

Parameters

node

- Node to set the parameters for

pNodeParams

- Parameters to copy

Returns

`cudaSuccess`, `cudaErrorInvalidValue`

Description

Sets the parameters of host node node to nodeParams.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeSetParams](#), [cudaLaunchHostFunc](#), [cudaGraphAddHostNode](#),
[cudaGraphHostNodeGetParams](#)

**`__host__ cudaError_t cudaGraphInstantiate
 (cudaGraphExec_t *pGraphExec, cudaGraph_t graph,
 unsigned long long flags)`**

Creates an executable graph from a graph.

Parameters

pGraphExec

- Returns instantiated graph

graph

- Graph to instantiate

flags

- Flags to control instantiation. See [CUgraphInstantiate_flags](#).

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Instantiates graph as an executable graph. The graph is validated for any structural constraints or intra-node constraints which were not previously validated. If instantiation is successful, a handle to the instantiated graph is returned in pGraphExec.

The flags parameter controls the behavior of instantiation and subsequent graph launches. Valid flags are:

- ▶ [cudaGraphInstantiateFlagAutoFreeOnLaunch](#), which configures a graph containing memory allocation nodes to automatically free any unfreed memory allocations before the graph is relaunched.

- ▶ [cudaGraphInstantiateFlagDeviceLaunch](#), which configures the graph for launch from the device. If this flag is passed, the executable graph handle returned can be used to launch the graph from both the host and device. This flag cannot be used in conjunction with [cudaGraphInstantiateFlagAutoFreeOnLaunch](#).
- ▶ [cudaGraphInstantiateFlagUseNodePriority](#), which causes the graph to use the priorities from the per-node attributes rather than the priority of the launch stream during execution. Note that priorities are only available on kernel nodes, and are copied from stream priority during stream capture.

If `graph` contains any allocation or free nodes, there can be at most one executable graph in existence for that graph at a time. An attempt to instantiate a second executable graph before destroying the first with [cudaGraphExecDestroy](#) will result in an error.

Graphs instantiated for launch on the device have additional restrictions which do not apply to host graphs:

- ▶ The graph's nodes must reside on a single device.
- ▶ The graph can only contain kernel nodes, memcpy nodes, memset nodes, and child graph nodes.
- ▶ The graph cannot be empty and must contain at least one kernel, memcpy, or memset node. Operation-specific restrictions are outlined below.
- ▶ Kernel nodes:
 - ▶ Use of CUDA Dynamic Parallelism is not permitted.
 - ▶ Cooperative launches are permitted as long as MPS is not in use.
- ▶ Memcpy nodes:
 - ▶ Only copies involving device memory and/or pinned device-mapped host memory are permitted.
 - ▶ Copies involving CUDA arrays are not permitted.
 - ▶ Both operands must be accessible from the current device, and the current device must match the device of other nodes in the graph.

If `graph` is not instantiated for launch on the device but contains kernels which call device-side [cudaGraphLaunch\(\)](#) from multiple devices, this will result in an error.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphInstantiateWithFlags](#), [cudaGraphCreate](#), [cudaGraphUpload](#), [cudaGraphLaunch](#), [cudaGraphExecDestroy](#)

**`_host__cudaError_t cudaGraphInstantiateWithFlags
(cudaGraphExec_t *pGraphExec, cudaGraph_t graph,
unsigned long long flags)`**

Creates an executable graph from a graph.

Parameters**pGraphExec**

- Returns instantiated graph

graph

- Graph to instantiate

flags

- Flags to control instantiation. See [CUgraphInstantiate_flags](#).

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Instantiates graph as an executable graph. The graph is validated for any structural constraints or intra-node constraints which were not previously validated. If instantiation is successful, a handle to the instantiated graph is returned in pGraphExec.

The flags parameter controls the behavior of instantiation and subsequent graph launches. Valid flags are:

- ▶ [cudaGraphInstantiateFlagAutoFreeOnLaunch](#), which configures a graph containing memory allocation nodes to automatically free any unfreed memory allocations before the graph is relaunched.
- ▶ [cudaGraphInstantiateFlagDeviceLaunch](#), which configures the graph for launch from the device. If this flag is passed, the executable graph handle returned can be used

to launch the graph from both the host and device. This flag can only be used on platforms which support unified addressing. This flag cannot be used in conjunction with [cudaGraphInstantiateFlagAutoFreeOnLaunch](#).

- ▶ [cudaGraphInstantiateFlagUseNodePriority](#), which causes the graph to use the priorities from the per-node attributes rather than the priority of the launch stream during execution. Note that priorities are only available on kernel nodes, and are copied from stream priority during stream capture.

If graph contains any allocation or free nodes, there can be at most one executable graph in existence for that graph at a time. An attempt to instantiate a second executable graph before destroying the first with [cudaGraphExecDestroy](#) will result in an error.

If graph contains kernels which call device-side [cudaGraphLaunch\(\)](#) from multiple devices, this will result in an error.

Graphs instantiated for launch on the device have additional restrictions which do not apply to host graphs:

- ▶ The graph's nodes must reside on a single device.
- ▶ The graph can only contain kernel nodes, memcpy nodes, memset nodes, and child graph nodes.
- ▶ The graph cannot be empty and must contain at least one kernel, memcpy, or memset node. Operation-specific restrictions are outlined below.
- ▶ Kernel nodes:
 - ▶ Use of CUDA Dynamic Parallelism is not permitted.
 - ▶ Cooperative launches are permitted as long as MPS is not in use.
- ▶ Memcpy nodes:
 - ▶ Only copies involving device memory and/or pinned device-mapped host memory are permitted.
 - ▶ Copies involving CUDA arrays are not permitted.
 - ▶ Both operands must be accessible from the current device, and the current device must match the device of other nodes in the graph.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphInstantiate](#), [cudaGraphCreate](#), [cudaGraphUpload](#), [cudaGraphLaunch](#),
[cudaGraphExecDestroy](#)

__host__cudaError_t
cudaGraphInstantiateWithParams (cudaGraphExec_t *pGraphExec, cudaGraph_t graph, cudaGraphInstantiateParams *instantiateParams)

Creates an executable graph from a graph.

Parameters**pGraphExec**

- Returns instantiated graph

graph

- Graph to instantiate

instantiateParams

- Instantiation parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Instantiates graph as an executable graph according to the `instantiateParams` structure. The graph is validated for any structural constraints or intra-node constraints which were not previously validated. If instantiation is successful, a handle to the instantiated graph is returned in `pGraphExec`.

`instantiateParams` controls the behavior of instantiation and subsequent graph launches, as well as returning more detailed information in the event of an error.

[cudaGraphInstantiateParams](#) is defined as:

```
/* typedef struct {
    unsigned long long flags;
    cudaStream_t uploadStream;
```

```

        cudaGraphNode_t errNode_out;
        cudaGraphInstantiateResult result_out;
    } cudaGraphInstantiateParams;
}

```

The `flags` field controls the behavior of instantiation and subsequent graph launches. Valid flags are:

- ▶ [cudaGraphInstantiateFlagAutoFreeOnLaunch](#), which configures a graph containing memory allocation nodes to automatically free any unfreed memory allocations before the graph is relaunched.
- ▶ [cudaGraphInstantiateFlagUpload](#), which will perform an upload of the graph into `uploadStream` once the graph has been instantiated.
- ▶ [cudaGraphInstantiateFlagDeviceLaunch](#), which configures the graph for launch from the device. If this flag is passed, the executable graph handle returned can be used to launch the graph from both the host and device. This flag can only be used on platforms which support unified addressing. This flag cannot be used in conjunction with [cudaGraphInstantiateFlagAutoFreeOnLaunch](#).
- ▶ [cudaGraphInstantiateFlagUseNodePriority](#), which causes the graph to use the priorities from the per-node attributes rather than the priority of the launch stream during execution. Note that priorities are only available on kernel nodes, and are copied from stream priority during stream capture.

If `graph` contains any allocation or free nodes, there can be at most one executable graph in existence for that graph at a time. An attempt to instantiate a second executable graph before destroying the first with [cudaGraphExecDestroy](#) will result in an error.

If `graph` contains kernels which call device-side [cudaGraphLaunch\(\)](#) from multiple devices, this will result in an error.

Graphs instantiated for launch on the device have additional restrictions which do not apply to host graphs:

- ▶ The graph's nodes must reside on a single device.
- ▶ The graph can only contain kernel nodes, memcpy nodes, memset nodes, and child graph nodes.
- ▶ The graph cannot be empty and must contain at least one kernel, memcpy, or memset node. Operation-specific restrictions are outlined below.
- ▶ Kernel nodes:
 - ▶ Use of CUDA Dynamic Parallelism is not permitted.
 - ▶ Cooperative launches are permitted as long as MPS is not in use.
- ▶ Memcpy nodes:
 - ▶ Only copies involving device memory and/or pinned device-mapped host memory are permitted.

- ▶ Copies involving CUDA arrays are not permitted.
- ▶ Both operands must be accessible from the current device, and the current device must match the device of other nodes in the graph.

In the event of an error, the `result_out` and `errNode_out` fields will contain more information about the nature of the error. Possible error reporting includes:

- ▶ `cudaGraphInstantiateError`, if passed an invalid value or if an unexpected error occurred which is described by the return value of the function. `errNode_out` will be set to NULL.
- ▶ `cudaGraphInstantiateInvalidStructure`, if the graph structure is invalid. `errNode_out` will be set to one of the offending nodes.
- ▶ `cudaGraphInstantiateNodeOperationNotSupported`, if the graph is instantiated for device launch but contains a node of an unsupported node type, or a node which performs unsupported operations, such as use of CUDA dynamic parallelism within a kernel node. `errNode_out` will be set to this node.
- ▶ `cudaGraphInstantiateMultipleDevicesNotSupported`, if the graph is instantiated for device launch but a node's device differs from that of another node. This error can also be returned if a graph is not instantiated for device launch and it contains kernels which call device-side `cudaGraphLaunch()` from multiple devices. `errNode_out` will be set to this node.

If instantiation is successful, `result_out` will be set to `cudaGraphInstantiateSuccess`, and `hErrNode_out` will be set to NULL.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphCreate](#), [cudaGraphInstantiate](#), [cudaGraphInstantiateWithFlags](#),
[cudaGraphExecDestroy](#)

__host__cudaError_t cudaGraphKernelNodeCopyAttributes (cudaGraphNode_t hSrc, cudaGraphNode_t hDst)

Copies attributes from source node to destination node.

Returns

[cudaSuccess](#), [cudaErrorInvalidContext](#)

Description

Copies attributes from source node `src` to destination node `dst`. Both node must have the same context.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaAccessPolicyWindow](#)

__host__cudaError_t cudaGraphKernelNodeGetAttribute (cudaGraphNode_t hNode, cudaKernelNodeAttrID attr, cudaKernelNodeAttributeValue *value_out)

Queries node attribute.

Parameters

hNode
attr
value_out

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Queries attribute `attr` from node `hNode` and stores it in corresponding member of `value_out`.

**Note:**

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaAccessPolicyWindow](#)

__host__cudaError_t

cudaGraphKernelNodeGetParams (cudaGraphNode_t node, cudaKernelNodeParams *pNodeParams)

Returns a kernel node's parameters.

Parameters**node**

- Node to get the parameters for

pNodeParams

- Pointer to return the parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDeviceFunction](#)

Description

Returns the parameters of kernel node node in pNodeParams. The kernelParams or extra array returned in pNodeParams, as well as the argument values it points to, are owned by the node. This memory remains valid until the node is destroyed or its parameters are modified, and should not be modified directly. Use [cudaGraphKernelNodeSetParams](#) to update the parameters of this node.

The params will contain either kernelParams or extra, according to which of these was most recently set on the node.

**Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaLaunchKernel](#), [cudaGraphAddKernelNode](#), [cudaGraphKernelNodeSetParams](#)

**`__host__ cudaError_t
cudaGraphKernelNodeSetAttribute
(cudaGraphNode_t hNode, cudaKernelNodeAttrID
attr, const cudaKernelNodeAttributeValue *value)`**

Sets node attribute.

Parameters

hNode

attr

value

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Sets attribute attr on node hNode from corresponding attribute of value.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaAccessPolicyWindow](#)

`_host__cudaError_t
cudaGraphKernelNodeSetParams (cudaGraphNode_t
node, const cudaKernelNodeParams *pNodeParams)`

Sets a kernel node's parameters.

Parameters

node

- Node to set the parameters for

pNodeParams

- Parameters to copy

Returns

`cudaSuccess`, `cudaErrorInvalidValue`, `cudaErrorInvalidResourceHandle`,
`cudaErrorMemoryAllocation`

Description

Sets the parameters of kernel node node to pNodeParams.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`,
`cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal
CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called
from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a
diagnostic in such case.

See also:

[cudaGraphNodeSetParams](#), [cudaLaunchKernel](#), [cudaGraphAddKernelNode](#),
[cudaGraphKernelNodeGetParams](#)

__host____device__ cudaError_t cudaGraphLaunch (cudaGraphExec_t graphExec, cudaStream_t stream)

Launches an executable graph in a stream.

Parameters

graphExec

- Executable graph to launch

stream

- Stream in which to launch the graph

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Executes `graphExec` in `stream`. Only one instance of `graphExec` may be executing at a time. Each launch is ordered behind both any previous work in `stream` and any previous launches of `graphExec`. To execute a graph concurrently, it must be instantiated multiple times into multiple executable graphs.

If any allocations created by `graphExec` remain unfreed (from a previous launch) and `graphExec` was not instantiated with [cudaGraphInstantiateFlagAutoFreeOnLaunch](#), the launch will fail with [cudaErrorInvalidValue](#).

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphInstantiate](#), [cudaGraphUpload](#), [cudaGraphExecDestroy](#)

```
_host_ cudaError_t
cudaGraphMemAllocNodeGetParams
(cudaGraphNode_t node, cudaMemAllocNodeParams
*params_out)
```

Returns a memory alloc node's parameters.

Parameters

node

- Node to get the parameters for

params_out

- Pointer to return the parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the parameters of a memory alloc node hNode in params_out. The poolProps and accessDescs returned in params_out, are owned by the node. This memory remains valid until the node is destroyed. The returned parameters must not be modified.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddMemAllocNode](#), [cudaGraphMemFreeNodeGetParams](#)

```
_host_ cudaError_t
cudaGraphMemcpyNodeGetParams
(cudaGraphNode_t node, cudaMemcpy3DParms
*pNodeParams)
```

Returns a memcpy node's parameters.

Parameters

node

- Node to get the parameters for

pNodeParams

- Pointer to return the parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the parameters of memcpy node node in pNodeParams.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#),
[cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal
CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called
from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a
diagnostic in such case.

See also:

[cudaMemcpy3D](#), [cudaGraphAddMemcpyNode](#), [cudaGraphMemcpyNodeSetParams](#)

```
_host_ cudaError_t
cudaGraphMemcpyNodeSetParams
(cudaGraphNode_t node, const cudaMemcpy3DParms
*pNodeParams)
```

Sets a memcpy node's parameters.

Parameters

node

- Node to set the parameters for

pNodeParams

- Parameters to copy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Sets the parameters of memcpy node node to pNodeParams.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeSetParams](#), [cudaMemcpy3D](#), [cudaGraphMemcpyNodeSetParamsToSymbol](#), [cudaGraphMemcpyNodeSetParamsFromSymbol](#), [cudaGraphMemcpyNodeSetParams1D](#), [cudaGraphAddMemcpyNode](#), [cudaGraphMemcpyNodeGetParams](#)

```
_host_ cudaError_t
cudaGraphMemcpyNodeSetParams1D
(cudaGraphNode_t node, void *dst, const void *src,
size_t count, cudaMemcpyKind kind)
```

Sets a memcpy node's parameters to perform a 1-dimensional copy.

Parameters

node

- Node to set the parameters for

dst

- Destination memory address

src

- Source memory address

count

- Size in bytes to copy

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the parameters of memcpy node `node` to the copy described by the provided parameters.

When the graph is launched, the node will copy `count` bytes from the memory area pointed to by `src` to the memory area pointed to by `dst`, where `kind` specifies the direction of the copy, and must be one of [cudaMemcpyHostToHost](#), [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing. Launching a memcpy node with `dst` and `src` pointers that do not match the direction of the copy results in an undefined behavior.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaGraphMemcpyNodeSetParams](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphMemcpyNodeGetParams](#)

**`_host__cudaError_t
cudaGraphMemcpyNodeSetParamsFromSymbol
(cudaGraphNode_t node, void *dst, const void
*symbol, size_t count, size_t offset, cudaMemcpyKind
kind)`**

Sets a memcpy node's parameters to copy from a symbol on the device.

Parameters**node**

- Node to set the parameters for

dst

- Destination memory address

symbol

- Device symbol address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the parameters of memcpy node `node` to the copy described by the provided parameters.

When the graph is launched, the node will copy `count` bytes from the memory area pointed to by `offset` bytes from the start of symbol `symbol` to the memory area pointed to by `dst`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either `cudaMemcpyDeviceToHost`, `cudaMemcpyDeviceToDevice`, or `cudaMemcpyDefault`. Passing `cudaMemcpyDefault` is recommended, in which case the type of transfer is inferred from the pointer values. However, `cudaMemcpyDefault` is only allowed on systems that support unified virtual addressing.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpyFromSymbol](#), [cudaGraphMemcpyNodeSetParams](#),
[cudaGraphMemcpyNodeSetParamsToSymbol](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphMemcpyNodeGetParams](#)

__host__cudaError_t
cudaGraphMemcpyNodeSetParamsToSymbol
 (cudaGraphNode_t **node**, const void ***symbol**, const
 void ***src**, size_t **count**, size_t **offset**, cudaMemcpyKind
kind)

Sets a memcpy node's parameters to copy to a symbol on the device.

Parameters**node**

- Node to set the parameters for

symbol

- Device symbol address

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the parameters of memcpy node `node` to the copy described by the provided parameters.

When the graph is launched, the node will copy `count` bytes from the memory area pointed to by `src` to the memory area pointed to by `offset` bytes from the start of symbol `symbol`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpyToSymbol](#), [cudaGraphMemcpyNodeSetParams](#),
[cudaGraphMemcpyNodeSetParamsFromSymbol](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphMemcpyNodeGetParams](#)

```
_host_ cudaError_t
cudaGraphMemFreeNodeGetParams
(cudaGraphNode_t node, void *dptr_out)
```

Returns a memory free node's parameters.

Parameters

node

- Node to get the parameters for

dptr_out

- Pointer to return the device address

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the address of a memory free node hNode in dptr_out.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#),
[cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal
CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called
from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a
diagnostic in such case.

See also:

[cudaGraphAddMemFreeNode](#), [cudaGraphMemFreeNodeGetParams](#)

```
_host_ cudaError_t
cudaGraphMemsetNodeGetParams
(cudaGraphNode_t node, cudaMemsetParams
*pNodeParams)
```

Returns a memset node's parameters.

Parameters

node

- Node to get the parameters for

pNodeParams

- Pointer to return the parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the parameters of memset node node in pNodeParams.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemset2D](#), [cudaGraphAddMemsetNode](#), [cudaGraphMemsetNodeSetParams](#)

```
_host_ cudaError_t
cudaGraphMemsetNodeSetParams
(cudaGraphNode_t node, const cudaMemsetParams
*pNodeParams)
```

Sets a memset node's parameters.

Parameters

node

- Node to set the parameters for

pNodeParams

- Parameters to copy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the parameters of memset node node to pNodeParams.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeSetParams](#), [cudaMemset2D](#), [cudaGraphAddMemsetNode](#), [cudaGraphMemsetNodeGetParams](#)

```
_host_ cudaError_t cudaGraphNodeFindInClone  
(cudaGraphNode_t *pNode, cudaGraphNode_t  
originalNode, cudaGraph_t clonedGraph)
```

Finds a cloned version of a node.

Parameters

pNode

- Returns handle to the cloned node

originalNode

- Handle to the original node

clonedGraph

- Cloned graph to query

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

This function returns the node in `clonedGraph` corresponding to `originalNode` in the original graph.

`clonedGraph` must have been cloned from `originalGraph` via [cudaGraphClone](#). `originalNode` must have been in `originalGraph` at the time of the call to [cudaGraphClone](#), and the corresponding cloned node in `clonedGraph` must not have been removed. The cloned node is then returned via `pClonedNode`.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphClone](#)

```
_host_ cudaError_t
cudaGraphNodeGetDependencies (cudaGraphNode_t
node, cudaGraphNode_t *pDependencies, size_t
*pNumDependencies)
```

Returns a node's dependencies.

Parameters

node

- Node to query

pDependencies

- Pointer to return the dependencies

pNumDependencies

- See description

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns a list of node's dependencies. **pDependencies** may be NULL, in which case this function will return the number of dependencies in **pNumDependencies**. Otherwise, **pNumDependencies** entries will be filled in. If **pNumDependencies** is higher than the actual number of dependencies, the remaining entries in **pDependencies** will be set to NULL, and the number of nodes actually obtained will be returned in **pNumDependencies**.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeGetDependentNodes](#), [cudaGraphGetNodes](#), [cudaGraphGetRootNodes](#),
[cudaGraphGetEdges](#), [cudaGraphAddDependencies](#), [cudaGraphRemoveDependencies](#)

```
_host_ cudaError_t
cudaGraphNodeGetDependencies_v2
(cudaGraphNode_t node, cudaGraphNode_t
 *pDependencies, cudaGraphEdgeData *edgeData,
size_t *pNumDependencies)
```

Returns a node's dependencies (12.3+).

Parameters

node

- Node to query

pDependencies

- Pointer to return the dependencies

edgeData

- Optional array to return edge data for each dependency

pNumDependencies

- See description

Returns

[cudaSuccess](#), [cudaErrorLossyQuery](#), [cudaErrorInvalidValue](#)

Description

Returns a list of node 's dependencies. pDependencies may be NULL, in which case this function will return the number of dependencies in pNumDependencies. Otherwise, pNumDependencies entries will be filled in. If pNumDependencies is higher than the actual number of dependencies, the remaining entries in pDependencies will be set to NULL, and the number of nodes actually obtained will be returned in pNumDependencies.

Note that if an edge has non-zero (non-default) edge data and edgeData is NULL, this API will return [cudaErrorLossyQuery](#). If edgeData is non-NULL, then pDependencies must be as well.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeGetDependentNodes](#), [cudaGraphGetNodes](#), [cudaGraphGetRootNodes](#),
[cudaGraphGetEdges](#), [cudaGraphAddDependencies](#), [cudaGraphRemoveDependencies](#)

**`_host__cudaError_t
cudaGraphNodeGetDependentNodes
(cudaGraphNode_t node, cudaGraphNode_t
*pDependentNodes, size_t *pNumDependentNodes)`**

Returns a node's dependent nodes.

Parameters**node**

- Node to query

pDependentNodes

- Pointer to return the dependent nodes

pNumDependentNodes

- See description

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns a list of node's dependent nodes. pDependentNodes may be NULL, in which case this function will return the number of dependent nodes in pNumDependentNodes. Otherwise, pNumDependentNodes entries will be filled in. If pNumDependentNodes is higher than the actual number of dependent nodes, the remaining entries in pDependentNodes will be set to NULL, and the number of nodes actually obtained will be returned in pNumDependentNodes.

**Note:**

- ▶ Graph objects are not threadsafe. [More here.](#)

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeGetDependencies](#), [cudaGraphGetNodes](#), [cudaGraphGetRootNodes](#),
[cudaGraphGetEdges](#), [cudaGraphAddDependencies](#), [cudaGraphRemoveDependencies](#)

**`_host__cudaError_t
cudaGraphNodeGetDependentNodes_v2
(cudaGraphNode_t node, cudaGraphNode_t
*pDependentNodes, cudaGraphEdgeData *edgeData,
size_t *pNumDependentNodes)`**

Returns a node's dependent nodes (12.3+).

Parameters

node

- Node to query

pDependentNodes

- Pointer to return the dependent nodes

edgeData

- Optional pointer to return edge data for dependent nodes

pNumDependentNodes

- See description

Returns

[cudaSuccess](#), [cudaErrorLossyQuery](#), [cudaErrorInvalidValue](#)

Description

Returns a list of node's dependent nodes. pDependentNodes may be NULL, in which case this function will return the number of dependent nodes in pNumDependentNodes. Otherwise, pNumDependentNodes entries will be filled in. If pNumDependentNodes is higher than the actual number of dependent nodes, the remaining entries in

`pDependentNodes` will be set to `NULL`, and the number of nodes actually obtained will be returned in `pNumDependentNodes`.

Note that if an edge has non-zero (non-default) edge data and `edgeData` is `NULL`, this API will return `cudaErrorLossyQuery`. If `edgeData` is non-`NULL`, then `pDependentNodes` must be as well.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeGetDependencies](#), [cudaGraphGetNodes](#), [cudaGraphGetRootNodes](#), [cudaGraphGetEdges](#), [cudaGraphAddDependencies](#), [cudaGraphRemoveDependencies](#)

`__host__ cudaError_t cudaGraphNodeGetEnabled`
`(cudaGraphExec_t hGraphExec, cudaGraphNode_t hNode, unsigned int *isEnabled)`

Query whether a node in the given graphExec is enabled.

Parameters

`hGraphExec`

- The executable graph in which to set the specified node

`hNode`

- Node from the graph from which graphExec was instantiated

`isEnabled`

- Location to return the enabled status of the node

Returns

`cudaSuccess`, [cudaErrorInvalidValue](#),

Description

Sets isEnabled to 1 if hNode is enabled, or 0 if hNode is disabled.

The node is identified by the corresponding node hNode in the non-executable graph, from which the executable graph was instantiated.

hNode must not have been removed from the original graph.



Note:

Currently only kernel, memset and memcpy nodes are supported.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeSetEnabled](#), [cudaGraphExecUpdate](#), [cudaGraphInstantiate](#) [cudaGraphLaunch](#)

**`__host__ cudaError_t cudaGraphNodeGetType
(cudaGraphNode_t node, cudaGraphNodeType
*pType)`**

Returns a node's type.

Parameters

node

- Node to query

pType

- Pointer to return the node type

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Returns the node type of node in pType.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphGetNodes](#), [cudaGraphGetRootNodes](#), [cudaGraphChildGraphNodeGetGraph](#),
[cudaGraphKernelNodeGetParams](#), [cudaGraphKernelNodeSetParams](#),
[cudaGraphHostNodeGetParams](#), [cudaGraphHostNodeSetParams](#),
[cudaGraphMemcpyNodeGetParams](#), [cudaGraphMemcpyNodeSetParams](#),
[cudaGraphMemsetNodeGetParams](#), [cudaGraphMemsetNodeSetParams](#)

__host__ cudaError_t cudaGraphNodeSetEnabled
(cudaGraphExec_t hGraphExec, cudaGraphNode_t hNode, unsigned int isEnabled)

Enables or disables the specified node in the given graphExec.

Parameters

hGraphExec

- The executable graph in which to set the specified node

hNode

- Node from the graph from which graphExec was instantiated

isEnabled

- Node is enabled if != 0, otherwise the node is disabled

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Sets hNode to be either enabled or disabled. Disabled nodes are functionally equivalent to empty nodes until they are reenabled. Existing node parameters are not affected by disabling/enabling the node.

The node is identified by the corresponding node hNode in the non-executable graph, from which the executable graph was instantiated.

hNode must not have been removed from the original graph.

The modifications only affect future launches of hGraphExec. Already enqueued or running launches of hGraphExec are not affected by this call. hNode is also not modified by this call.



Note:

Currently only kernel, memset and memcpy nodes are supported.



Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphNodeGetEnabled](#), [cudaGraphExecUpdate](#), [cudaGraphInstantiate](#) [cudaGraphLaunch](#)

```
__host__ cudaError_t cudaGraphNodeSetParams  
(cudaGraphNode_t node, cudaGraphNodeParams  
*nodeParams)
```

Updates a graph node's parameters.

Parameters

node

- Node to set the parameters for

nodeParams

- Parameters to copy

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorNotSupported](#)

Description

Sets the parameters of graph node node to nodeParams. The node type specified by nodeParams->type must match the type of node. nodeParams must be fully initialized and all unused bytes (reserved, padding) zeroed.

Modifying parameters is not supported for node types `cudaNodeTypeMemAlloc` and `cudaNodeTypeMemFree`.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddNode](#), [cudaGraphExecNodeSetParams](#)

```
__host__ cudaError_t cudaGraphReleaseUserObject  
(cudaGraph_t graph, cudaUserObject_t object,  
unsigned int count)
```

Release a user object reference from a graph.

Parameters

graph

- The graph that will release the reference

object

- The user object to release a reference for

count

- The number of references to release, typically 1. Must be nonzero and not larger than INT_MAX.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Releases user object references owned by a graph.

See CUDA User Objects in the CUDA C++ Programming Guide for more information on user objects.

See also:

[cudaUserObjectCreate](#) [cudaUserObjectRetain](#), [cudaUserObjectRelease](#),
[cudaGraphRetainUserObject](#), [cudaGraphCreate](#)

```
__host__ cudaError_t  
cudaGraphRemoveDependencies (cudaGraph_t  
graph, const cudaGraphNode_t *from, const  
cudaGraphNode_t *to, size_t numDependencies)
```

Removes dependency edges from a graph.

Parameters

graph

- Graph from which to remove dependencies

from

- Array of nodes that provide the dependencies

to

- Array of dependent nodes

numDependencies

- Number of dependencies to be removed

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

The number of pDependencies to be removed is defined by numDependencies. Elements in pFrom and pTo at corresponding indices define a dependency. Each node in pFrom and pTo must belong to graph.

If numDependencies is 0, elements in pFrom and pTo will be ignored. Specifying a non-existing dependency will return an error.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddDependencies](#), [cudaGraphGetEdges](#), [cudaGraphNodeGetDependencies](#),
[cudaGraphNodeGetDependentNodes](#)

```
_host_ cudaError_t
cudaGraphRemoveDependencies_v2 (cudaGraph_t
graph, const cudaGraphNode_t *from, const
cudaGraphNode_t *to, const cudaGraphEdgeData
*edgeData, size_t numDependencies)
```

Removes dependency edges from a graph. (12.3+).

Parameters

graph

- Graph from which to remove dependencies

from

- Array of nodes that provide the dependencies

to

- Array of dependent nodes

edgeData

- Optional array of edge data. If NULL, edge data is assumed to be default (zeroed).

numDependencies

- Number of dependencies to be removed


Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

The number of pDependencies to be removed is defined by numDependencies. Elements in pFrom and pTo at corresponding indices define a dependency. Each node in pFrom and pTo must belong to graph.

If numDependencies is 0, elements in pFrom and pTo will be ignored. Specifying an edge that does not exist in the graph, with data matching edgeData, results in an error. edgeData is nullable, which is equivalent to passing default (zeroed) data for each edge.

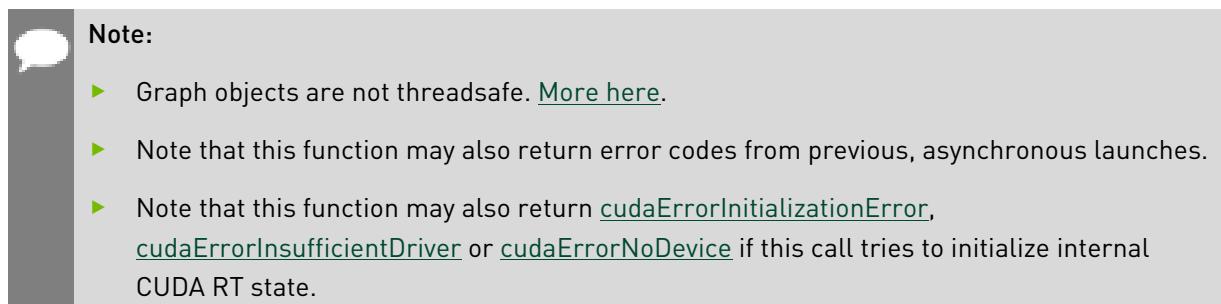

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddDependencies](#), [cudaGraphGetEdges](#), [cudaGraphNodeGetDependencies](#),
[cudaGraphNodeGetDependentNodes](#)

**`_host_ cudaError_t cudaGraphRetainUserObject
(cudaGraph_t graph, cudaUserObject_t object,
unsigned int count, unsigned int flags)`**

Retain a reference to a user object from a graph.

Parameters

graph

- The graph to associate the reference with

object

- The user object to retain a reference for

count

- The number of references to add to the graph, typically 1. Must be nonzero and not larger than INT_MAX.

flags

- The optional flag [cudaGraphUserObjectMove](#) transfers references from the calling thread, rather than create new references. Pass 0 to create new references.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates or moves user object references that will be owned by a CUDA graph.

See CUDA User Objects in the CUDA C++ Programming Guide for more information on user objects.

See also:

[cudaUserObjectCreate](#) [cudaUserObjectRetain](#), [cudaUserObjectRelease](#),
[cudaGraphReleaseUserObject](#), [cudaGraphCreate](#)

```
__device__ void cudaGraphSetConditional  
(cudaGraphConditionalHandle handle, unsigned int  
value)
```

Sets the condition value associated with a conditional node.

Description

Sets the condition value associated with a conditional node.

See also:

[cudaGraphConditionalHandleCreate](#)

```
__host__ cudaError_t cudaGraphUpload  
(cudaGraphExec_t graphExec, cudaStream_t stream)
```

Uploads an executable graph in a stream.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#),

Description

Uploads `hGraphExec` to the device in `hStream` without executing it. Uploads of the same `hGraphExec` will be serialized. Each upload is ordered behind both any previous work in `hStream` and any previous launches of `hGraphExec`. Uses memory cached by `stream` to back the allocations owned by `graphExec`.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

See also:

[cudaGraphInstantiate](#), [cudaGraphLaunch](#), [cudaGraphExecDestroy](#)

```
__host__ cudaError_t cudaUserObjectCreate  
(cudaUserObject_t *object_out, void *ptr,  
cudaHostFn_t destroy, unsigned int initialRefCount,  
unsigned int flags)
```

Create a user object.

Parameters

object_out

- Location to return the user object handle

ptr

- The pointer to pass to the destroy function

destroy

- Callback to free the user object when it is no longer in use

initialRefCount

- The initial refcount to create the object with, typically 1. The initial references are owned by the calling thread.

flags

- Currently it is required to pass [cudaUserObjectNoDestructorSync](#), which is the only defined flag. This indicates that the destroy callback cannot be waited on by any CUDA API. Users requiring synchronization of the callback should signal its completion manually.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Create a user object with the specified destructor callback and initial reference count. The initial references are owned by the caller.

Destructor callbacks cannot make CUDA API calls and should avoid blocking behavior, as they are executed by a shared internal thread. Another thread may be signaled to perform such actions, if it does not block forward progress of tasks scheduled through CUDA.

See CUDA User Objects in the CUDA C++ Programming Guide for more information on user objects.

See also:

[cudaUserObjectRetain](#), [cudaUserObjectRelease](#), [cudaGraphRetainUserObject](#),
[cudaGraphReleaseUserObject](#), [cudaGraphCreate](#)

__host__ cudaError_t cudaUserObjectRelease (cudaUserObject_t object, unsigned int count)

Release a reference to a user object.

Parameters

object

- The object to release

count

- The number of references to release, typically 1. Must be nonzero and not larger than INT_MAX.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Releases user object references owned by the caller. The object's destructor is invoked if the reference count reaches zero.

It is undefined behavior to release references not owned by the caller, or to use a user object handle after all references are released.

See CUDA User Objects in the CUDA C++ Programming Guide for more information on user objects.

See also:

[cudaUserObjectCreate](#), [cudaUserObjectRetain](#), [cudaGraphRetainUserObject](#),
[cudaGraphReleaseUserObject](#), [cudaGraphCreate](#)

__host__ cudaError_t cudaUserObjectRetain (cudaUserObject_t object, unsigned int count)

Retain a reference to a user object.

Parameters

object

- The object to retain

count

- The number of references to retain, typically 1. Must be nonzero and not larger than INT_MAX.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Retains new references to a user object. The new references are owned by the caller.

See CUDA User Objects in the CUDA C++ Programming Guide for more information on user objects.

See also:

[cudaUserObjectCreate](#), [cudaUserObjectRelease](#), [cudaGraphRetainUserObject](#),
[cudaGraphReleaseUserObject](#), [cudaGraphCreate](#)

6.29. Driver Entry Point Access

This section describes the driver entry point access functions of CUDA runtime application programming interface.

```
_host_ _cudaError_t cudaGetDriverEntryPoint  
(const char *symbol, void **funcPtr, unsigned long long flags, cudaDriverEntryPointQueryResult *driverStatus)
```

Returns the requested driver API function pointer.

Parameters

symbol

- The base name of the driver API function to look for. As an example, for the driver API `cuMemAlloc_v2`, `symbol` would be `cuMemAlloc`. Note that the API will use the CUDA runtime version to return the address to the most recent ABI compatible driver symbol, [cuMemAlloc](#) or [cuMemAlloc_v2](#).

funcPtr

- Location to return the function pointer to the requested driver function

flags

- Flags to specify search options.

driverStatus

- Optional location to store the status of finding the symbol from the driver. See [cudaDriverEntryPointQueryResult](#) for possible values.

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorNotSupported](#)

Description

Returns in `**funcPtr` the address of the CUDA driver function for the requested flags.

For a requested driver symbol, if the CUDA version in which the driver symbol was introduced is less than or equal to the CUDA runtime version, the API will return the function pointer to the corresponding versioned driver function.

The pointer returned by the API should be cast to a function pointer matching the requested driver function's definition in the API header file. The function pointer typedef can be picked up from the corresponding typedefs header file. For example, `cudaTypedefs.h` consists of function pointer typedefs for driver APIs defined in `cuda.h`.

The API will return [cudaSuccess](#) and set the returned `funcPtr` to NULL if the requested driver function is not supported on the platform, no ABI compatible driver function exists for the CUDA runtime version or if the driver symbol is invalid.

It will also set the optional `driverStatus` to one of the values in [cudaDriverEntryPointQueryResult](#) with the following meanings:

- ▶ [cudaDriverEntryPointSuccess](#) - The requested symbol was successfully found based on input arguments and `pfn` is valid
- ▶ [cudaDriverEntryPointSymbolNotFound](#) - The requested symbol was not found
- ▶ [cudaDriverEntryPointVersionNotSufficient](#) - The requested symbol was found but is not supported by the current runtime version (CUDART_VERSION)

The requested flags can be:

- ▶ [cudaEnableDefault](#): This is the default mode. This is equivalent to [cudaEnablePerThreadDefaultStream](#) if the code is compiled with --default-stream per-thread compilation flag or the macro CUDA_API_PER_THREAD_DEFAULT_STREAM is defined; [cudaEnableLegacyStream](#) otherwise.
- ▶ [cudaEnableLegacyStream](#): This will enable the search for all driver symbols that match the requested driver symbol name except the corresponding per-thread versions.
- ▶ [cudaEnablePerThreadDefaultStream](#): This will enable the search for all driver symbols that match the requested driver symbol name including the per-thread versions. If a per-thread version is not found, the API will return the legacy version of the driver function.



Note:

- ▶ Version mixing among CUDA-defined types and driver API versions is strongly discouraged and doing so can result in an undefined behavior. [More here.](#)
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:[cuGetProcAddress](#)

6.30. C++ API Routines

C++-style interface built on top of CUDA runtime API.

This section describes the C++ high level API functions of the CUDA runtime application programming interface. To use these functions, your application needs to be compiled with the nvcc compiler.

`_cudaOccupancyB2DHelper`

cppClassifierVisibility: visibility=public

`template < class T >`

`_host __cudaCreateChannelDesc (void)`

[C++ API] Returns a channel descriptor using the specified format

Returns

Channel descriptor with format `f`

Description

Returns a channel descriptor with format `f` and number of bits of each component `x`, `y`, `z`, and `w`. The `cudaChannelFormatDesc` is defined as:

```
/* struct cudaChannelFormatDesc {
    int x, y, z, w;
    enum cudaChannelFormatKind
        f;
};
```

where `cudaChannelFormatKind` is one of `cudaChannelFormatKindSigned`, `cudaChannelFormatKindUnsigned`, `cudaChannelFormatKindFloat`,

[cudaChannelFormatKindSignedNormalized8X1](#),
[cudaChannelFormatKindSignedNormalized8X2](#),
[cudaChannelFormatKindSignedNormalized8X4](#),
[cudaChannelFormatKindUnsignedNormalized8X1](#),
[cudaChannelFormatKindUnsignedNormalized8X2](#),
[cudaChannelFormatKindUnsignedNormalized8X4](#),
[cudaChannelFormatKindSignedNormalized16X1](#),
[cudaChannelFormatKindSignedNormalized16X2](#),
[cudaChannelFormatKindSignedNormalized16X4](#),
[cudaChannelFormatKindUnsignedNormalized16X1](#),
[cudaChannelFormatKindUnsignedNormalized16X2](#),
[cudaChannelFormatKindUnsignedNormalized16X4](#) or [cudaChannelFormatKindNV12](#).

The format is specified by the template specialization.

The template function specializes for the following scalar types: char, signed char, unsigned char, short, unsigned short, int, unsigned int, long, unsigned long, and float. The template function specializes for the following vector types: char{1|2|4}, uchar{1|2|4}, short{1|2|4}, ushort{1|2|4}, int{1|2|4}, uint{1|2|4}, long{1|2|4}, ulong{1|2|4}, float{1|2|4}. The template function specializes for following cudaChannelFormatKind enum values: [cudaChannelFormatKind{Uns|S}ignedNormalized{8|16}X{1|2|4}](#), and [cudaChannelFormatKindNV12](#).

Invoking the function on a type without a specialization defaults to creating a channel format of kind [cudaChannelFormatKindNone](#)

See also:

[cudaCreateChannelDesc \(Low level\)](#), [cudaGetChannelDesc](#),

`__host__ cudaError_t cudaEventCreate (cudaEvent_t *event, unsigned int flags)`

[C++ API] Creates an event object with the specified flags

Parameters

event

- Newly created event

flags

- Flags for new event


Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorLaunchFailure](#), [cudaErrorMemoryAllocation](#)

Description

Creates an event object with the specified flags. Valid flags include:

- ▶ [cudaEventDefault](#): Default event creation flag.
- ▶ [cudaEventBlockingSync](#): Specifies that event should use blocking synchronization. A host thread that uses [cudaEventSynchronize\(\)](#) to wait on an event created with this flag will block until the event actually completes.
- ▶ [cudaEventDisableTiming](#): Specifies that the created event does not need to record timing data. Events created with this flag specified and the [cudaEventBlockingSync](#) flag not specified will provide the best performance when used with [cudaStreamWaitEvent\(\)](#) and [cudaEventQuery\(\)](#).

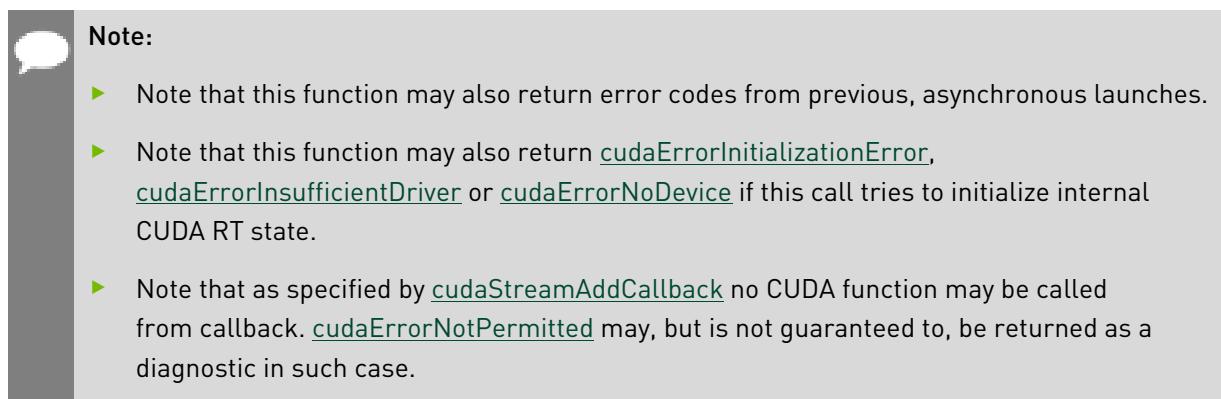

See also:

[cudaEventCreate \(C API\)](#), [cudaEventCreateWithFlags](#), [cudaEventRecord](#), [cudaEventQuery](#),
[cudaEventSynchronize](#), [cudaEventDestroy](#), [cudaEventElapsedTime](#), [cudaStreamWaitEvent](#)

**template < class T > __host__ cudaError_t
 cudaFuncGetAttributes (cudaFuncAttributes *attr, T
 *entry)**

[C++ API] Find out attributes for a given function

Parameters

attr

- Return pointer to function's attributes

entry

- Function to get attributes of


Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#)

Description

This function obtains the attributes of a function specified via `entry`. The parameter `entry` must be a pointer to a function that executes on the device. The parameter specified by `entry` must be declared as a `__global__` function. The fetched attributes are placed in `attr`. If the specified function does not exist, then [cudaErrorInvalidDeviceFunction](#) is returned.

Note that some function attributes such as [maxThreadsPerBlock](#) may vary based on the device that is currently being used.

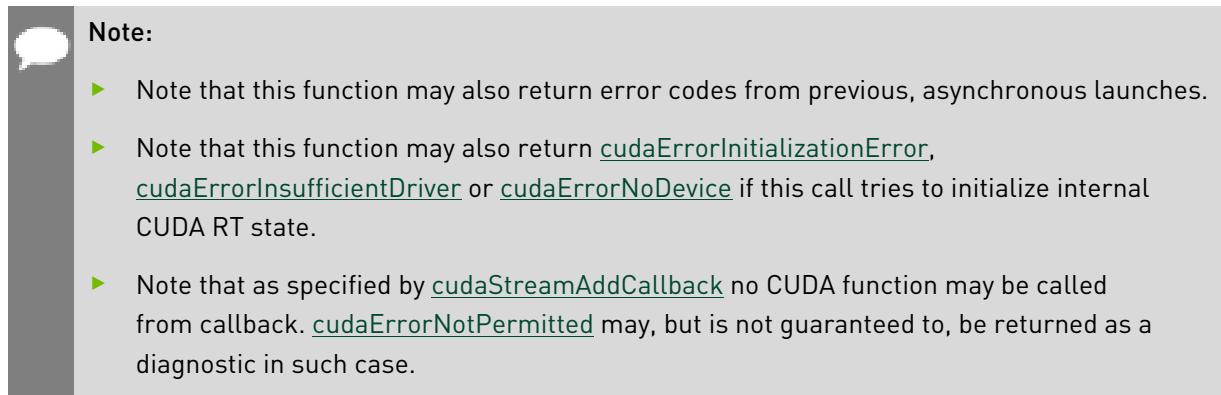

[cudaLaunchKernel](#) (C++ API), [cudaFuncSetCacheConfig](#) (C++ API), [cudaFuncGetAttributes](#) (C API), [cudaSetDoubleForDevice](#), [cudaSetDoubleForHost](#)

```
template < class T > __host__ cudaError_t
cudaFuncGetName (const char **name, const T
*func)
```

Returns the function name for a device entry function pointer.

Parameters

name

- The returned name of the function

func

- The function pointer to retrieve name for

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidDeviceFunction](#)

Description

Returns in `**name` the function name associated with the symbol `func`. The function name is returned as a null-terminated string. This API may return a mangled name if the function is not declared as having C linkage. If `**name` is NULL, `cudaErrorInvalidValue` is returned. If `func` is not a device entry function, `cudaErrorInvalidDeviceFunction` is returned.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

[cudaFuncGetName \(C API\)](#)

```
template < class T > __host__ cudaError_t
cudaFuncSetAttribute (T *entry, cudaFuncAttribute
attr, int value)
```

[C++ API] Set attributes for a given function

Parameters

entry

- Function to get attributes of

attr

- Attribute to set

value

- Value to set

Returns

`cudaSuccess`, `cudaErrorInvalidDeviceFunction`, `cudaErrorInvalidValue`

Description

This function sets the attributes of a function specified via `entry`. The parameter `entry` must be a pointer to a function that executes on the device. The parameter specified by `entry` must be declared as a `__global__` function. The enumeration defined by `attr` is set to the value

defined by `value`. If the specified function does not exist, then `cudaErrorInvalidDeviceFunction` is returned. If the specified attribute cannot be written, or if the value is incorrect, then `cudaErrorInvalidValue` is returned.

Valid values for `attr` are:

- ▶ `cudaFuncAttributeMaxDynamicSharedMemorySize` - The requested maximum size in bytes of dynamically-allocated shared memory. The sum of this value and the function attribute `sharedSizeBytes` cannot exceed the device attribute `cudaDevAttrMaxSharedMemoryPerBlockOptin`. The maximal size of requestable dynamic shared memory may differ by GPU architecture.
- ▶ `cudaFuncAttributePreferredSharedMemoryCarveout` - On devices where the L1 cache and shared memory use the same hardware resources, this sets the shared memory carveout preference, in percent of the total shared memory. See `cudaDevAttrMaxSharedMemoryPerMultiprocessor`. This is only a hint, and the driver can choose a different ratio if required to execute the function.
- ▶ `cudaFuncAttributeRequiredClusterWidth`: The required cluster width in blocks. The width, height, and depth values must either all be 0 or all be positive. The validity of the cluster dimensions is checked at launch time. If the value is set during compile time, it cannot be set at runtime. Setting it at runtime will return `cudaErrorNotPermitted`.
- ▶ `cudaFuncAttributeRequiredClusterHeight`: The required cluster height in blocks. The width, height, and depth values must either all be 0 or all be positive. The validity of the cluster dimensions is checked at launch time. If the value is set during compile time, it cannot be set at runtime. Setting it at runtime will return `cudaErrorNotPermitted`.
- ▶ `cudaFuncAttributeRequiredClusterDepth`: The required cluster depth in blocks. The width, height, and depth values must either all be 0 or all be positive. The validity of the cluster dimensions is checked at launch time. If the value is set during compile time, it cannot be set at runtime. Setting it at runtime will return `cudaErrorNotPermitted`.
- ▶ `cudaFuncAttributeClusterSchedulingPolicyPreference`: The block scheduling policy of a function. The value type is `cudaClusterSchedulingPolicy`.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

[cudaLaunchKernel](#) [C++ API], [cudaFuncSetCacheConfig](#) [C++ API], [cudaFuncGetAttributes](#) [C API], [cudaSetDoubleForDevice](#), [cudaSetDoubleForHost](#)

```
template < class T > __host__ cudaError_t  
cudaFuncSetCacheConfig (T *func, cudaFuncCache  
cacheConfig)
```

[C++ API] Sets the preferred cache configuration for a device function

Parameters

func

- device function pointer

cacheConfig

- Requested cache configuration

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#)

Description

On devices where the L1 cache and shared memory use the same hardware resources, this sets through `cacheConfig` the preferred cache configuration for the function specified via `func`. This is only a preference. The runtime will use the requested configuration if possible, but it is free to choose a different configuration if required to execute `func`.

`func` must be a pointer to a function that executes on the device. The parameter specified by `func` must be declared as a `__global__` function. If the specified function does not exist, then [cudaErrorInvalidDeviceFunction](#) is returned.

This setting does nothing on devices where the size of the L1 cache and shared memory are fixed.

Launching a kernel with a different preference than the most recent preference setting may insert a device-side synchronization point.

The supported cache configurations are:

- ▶ [cudaFuncCachePreferNone](#): no preference for shared memory or L1 (default)
- ▶ [cudaFuncCachePreferShared](#): prefer larger shared memory and smaller L1 cache
- ▶ [cudaFuncCachePreferL1](#): prefer larger L1 cache and smaller shared memory



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

[cudaLaunchKernel](#) [C++ API], [cudaFuncSetCacheConfig](#) [C API], [cudaFuncGetAttributes](#) [C++ API], [cudaSetDoubleForDevice](#), [cudaSetDoubleForHost](#), [cudaThreadGetCacheConfig](#), [cudaThreadSetCacheConfig](#)

```
template < class T > __host__ cudaError_t  
cudaGetKernel (cudaKernel_t *kernelPtr, const T  
*entryFuncAddr)
```

Get pointer to device kernel that matches entry function entryFuncAddr.

Parameters

kernelPtr

- Returns the device kernel

entryFuncAddr

- Address of device entry function to search kernel for

Returns

[cudaSuccess](#)

Description

Returns in kernelPtr the device kernel corresponding to the entry function entryFuncAddr.

See also:

[cudaGetKernel](#) [C API]

```
template < class T > __host__ cudaError_t  
cudaGetSymbolAddress (void **devPtr, const T  
symbol)
```

[C++ API] Finds the address associated with a CUDA symbol

Parameters

devPtr

- Return device pointer associated with symbol

symbol

- Device symbol reference

Returns

[cudaSuccess](#), [cudaErrorInvalidSymbol](#), [cudaErrorNoKernelImageForDevice](#)

Description

Returns in *devPtr the address of symbol symbol on the device. symbol can either be a variable that resides in global or constant memory space. If symbol cannot be found, or if symbol is not declared in the global or constant memory space, *devPtr is unchanged and the error [cudaErrorInvalidSymbol](#) is returned.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetSymbolAddress \(C API\)](#), [cudaGetSymbolSize \(C++ API\)](#)

**template < class T > __host__ cudaError_t
cudaGetSymbolSize (size_t *size, const T symbol)**

[C++ API] Finds the size of the object associated with a CUDA symbol

Parameters

size

- Size of object associated with symbol

symbol

- Device symbol reference

Returns

[cudaSuccess](#), [cudaErrorInvalidSymbol](#), [cudaErrorNoKernelImageForDevice](#)

Description

Returns in `*size` the size of symbol `symbol`. `symbol` must be a variable that resides in global or constant memory space. If `symbol` cannot be found, or if `symbol` is not declared in global or constant memory space, `*size` is unchanged and the error [cudaErrorInvalidSymbol](#) is returned.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGetSymbolAddress](#) (C++ API), [cudaGetSymbolSize](#) (C API)

```
template < class T > __host__ cudaError_t  
cudaGraphAddMemcpyNodeFromSymbol  
(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,  
const cudaGraphNode_t *pDependencies, size_t  
numDependencies, void *dst, const T symbol, size_t  
count, size_t offset, cudaMemcpyKind kind)
```

Creates a memcpy node to copy from a symbol on the device and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

dst

- Destination memory address

symbol

- Device symbol address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new memcpy node to copy from `symbol` and adds it to `graph` with `numDependencies` dependencies specified via `pDependencies`. It is possible for `numDependencies` to be 0, in which case the node will be placed at the root of the graph. `pDependencies` may not have any duplicate entries. A handle to the new node will be returned in `pGraphNode`.

When the graph is launched, the node will copy `count` bytes from the memory area pointed to by `offset` bytes from the start of symbol `symbol` to the memory area pointed to by `dst`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either `cudaMemcpyDeviceToHost`, `cudaMemcpyDeviceToDevice`, or `cudaMemcpyDefault`. Passing `cudaMemcpyDefault` is recommended, in which case the type of transfer is inferred from the pointer values. However, `cudaMemcpyDefault` is only allowed on systems that support unified virtual addressing.

Memcpy nodes have some additional restrictions with regards to managed memory, if the system contains at least one device which has a zero value for the device attribute `cudaDevAttrConcurrentManagedAccess`.

**Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpyFromSymbol](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphAddMemcpyNodeToSymbol](#), [cudaGraphMemcpyNodeGetParams](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParamsFromSymbol](#),
[cudaGraphMemcpyNodeSetParamsToSymbol](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddHostNode](#), [cudaGraphAddMemsetNode](#)

```
template < class T > __host__ cudaError_t  
cudaGraphAddMemcpyNodeToSymbol  
(cudaGraphNode_t *pGraphNode, cudaGraph_t graph,  
const cudaGraphNode_t *pDependencies, size_t  
numDependencies, const T symbol, const void *src,  
size_t count, size_t offset, cudaMemcpyKind kind)
```

Creates a memcpy node to copy to a symbol on the device and adds it to a graph.

Parameters

pGraphNode

- Returns newly created node

graph

- Graph to which to add the node

pDependencies

- Dependencies of the node

numDependencies

- Number of dependencies

symbol

- Device symbol address

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Creates a new memcpy node to copy to `symbol` and adds it to `graph` with `numDependencies` dependencies specified via `pDependencies`. It is possible for `numDependencies` to be 0, in which case the node will be placed at the root of the graph. `pDependencies` may not have any duplicate entries. A handle to the new node will be returned in `pGraphNode`.

When the graph is launched, the node will copy `count` bytes from the memory area pointed to by `src` to the memory area pointed to by `offset` bytes from the start of symbol `symbol`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either `cudaMemcpyHostToDevice`, `cudaMemcpyDeviceToDevice`, or `cudaMemcpyDefault`. Passing `cudaMemcpyDefault` is recommended, in which case the type of transfer is inferred from the pointer values. However, `cudaMemcpyDefault` is only allowed on systems that support unified virtual addressing.

Memcpy nodes have some additional restrictions with regards to managed memory, if the system contains at least one device which has a zero value for the device attribute `cudaDevAttrConcurrentManagedAccess`.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpyToSymbol](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphAddMemcpyNodeFromSymbol](#), [cudaGraphMemcpyNodeGetParams](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParamsToSymbol](#),
[cudaGraphMemcpyNodeSetParamsFromSymbol](#), [cudaGraphCreate](#), [cudaGraphDestroyNode](#),
[cudaGraphAddChildGraphNode](#), [cudaGraphAddEmptyNode](#), [cudaGraphAddKernelNode](#),
[cudaGraphAddHostNode](#), [cudaGraphAddMemsetNode](#)

```
template < class T > __host__ cudaError_t  
cudaGraphExecMemcpyNodeSetParamsFromSymbol  
(cudaGraphExec_t hGraphExec, cudaGraphNode_t  
node, void *dst, const T symbol, size_t count, size_t  
offset, cudaMemcpyKind kind)
```

Sets the parameters for a memcpy node in the given graphExec to copy from a symbol on the device.

Parameters

hGraphExec

- The executable graph in which to set the specified node

node

- Memcpy node from the graph which was used to instantiate graphExec

dst

- Destination memory address

symbol

- Device symbol address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

`cudaSuccess`, `cudaErrorInvalidValue`

Description

Updates the work represented by `node` in `hGraphExec` as though `node` had contained the given params at instantiation. `node` must remain in the graph which was used to instantiate `hGraphExec`. Changed edges to and from `node` are ignored.

`symbol` and `dst` must be allocated from the same contexts as the original source and destination memory. The instantiation-time memory operands must be 1-dimensional. Zero-length operations are not supported.

The modifications only affect future launches of `hGraphExec`. Already enqueued or running launches of `hGraphExec` are not affected by this call. `node` is also not modified by this call.

Returns `cudaErrorInvalidValue` if the memory operands' mappings changed or the original memory operands are multidimensional.

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemcpyNodeFromSymbol](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParamsFromSymbol](#),
[cudaGraphInstantiate](#), [cudaGraphExecMemcpyNodeSetParams](#),
[cudaGraphExecMemcpyNodeSetParamsToSymbol](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemsetNodeSetParams](#), [cudaGraphExecHostNodeSetParams](#)

```
template < class T > __host__ cudaError_t
cudaGraphExecMemcpyNodeSetParamsToSymbol
(cudaGraphExec_t hGraphExec, cudaGraphNode_t
node, const T symbol, const void *src, size_t count,
size_t offset, cudaMemcpyKind kind)
```

Sets the parameters for a memcpy node in the given graphExec to copy to a symbol on the device.

Parameters**hGraphExec**

- The executable graph in which to set the specified node

node

- Memcpy node from the graph which was used to instantiate graphExec

symbol

- Device symbol address

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Updates the work represented by node in hGraphExec as though node had contained the given params at instantiation. node must remain in the graph which was used to instantiate hGraphExec. Changed edges to and from node are ignored.

src and symbol must be allocated from the same contexts as the original source and destination memory. The instantiation-time memory operands must be 1-dimensional. Zero-length operations are not supported.

The modifications only affect future launches of hGraphExec. Already enqueued or running launches of hGraphExec are not affected by this call. node is also not modified by this call.

Returns [cudaErrorInvalidValue](#) if the memory operands' mappings changed or the original memory operands are multidimensional.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphAddMemcpyNode](#), [cudaGraphAddMemcpyNodeToSymbol](#),
[cudaGraphMemcpyNodeSetParams](#), [cudaGraphMemcpyNodeSetParamsToSymbol](#),
[cudaGraphInstantiate](#), [cudaGraphExecMemcpyNodeSetParams](#),
[cudaGraphExecMemcpyNodeSetParamsFromSymbol](#), [cudaGraphExecKernelNodeSetParams](#),
[cudaGraphExecMemsetNodeSetParams](#), [cudaGraphExecHostNodeSetParams](#)

```
__host__ cudaError_t cudaGraphInstantiate
(cudaGraphExec_t *pGraphExec, cudaGraph_t graph,
cudaGraphNode_t *pErrorNode, char *pLogBuffer,
size_t bufferSize)
```

Creates an executable graph from a graph.

Parameters

pGraphExec

- Returns instantiated graph

graph

- Graph to instantiate

pErrorNode

- In case of an instantiation error, this may be modified to indicate a node contributing to the error

pLogBuffer

- A character buffer to store diagnostic messages

bufferSize

- Size of the log buffer in bytes

Returns

`cudaSuccess`, `cudaErrorInvalidValue`

Description

Instantiates `graph` as an executable graph. The graph is validated for any structural constraints or intra-node constraints which were not previously validated. If instantiation is successful, a handle to the instantiated graph is returned in `pGraphExec`.

If there are any errors, diagnostic information may be returned in `pErrorNode` and `pLogBuffer`. This is the primary way to inspect instantiation errors. The output will be null terminated unless the diagnostics overflow the buffer. In this case, they will be truncated, and the last byte can be inspected to determine if truncation occurred.

Note:

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`,
`cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaGraphInstantiateWithFlags](#), [cudaGraphCreate](#), [cudaGraphUpload](#), [cudaGraphLaunch](#), [cudaGraphExecDestroy](#)

```
template < class T > __host__ cudaError_t
cudaGraphMemcpyNodeSetParamsFromSymbol
(cudaGraphNode_t node, void *dst, const T symbol,
size_t count, size_t offset, cudaMemcpyKind kind)
```

Sets a memcpy node's parameters to copy from a symbol on the device.

Parameters

node

- Node to set the parameters for

dst

- Destination memory address

symbol

- Device symbol address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the parameters of memcpy node `node` to the copy described by the provided parameters.

When the graph is launched, the node will copy `count` bytes from the memory area pointed to by `offset` bytes from the start of symbol `symbol` to the memory area pointed to by `dst`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyDeviceToHost](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type

of transfer is inferred from the pointer values. However, `cudaMemcpyDefault` is only allowed on systems that support unified virtual addressing.

Note:

- ▶ Graph objects are not threadsafe. [More here.](#)
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpyFromSymbol](#), [cudaGraphMemcpyNodeSetParams](#),
[cudaGraphMemcpyNodeSetParamsToSymbol](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphMemcpyNodeGetParams](#)

```
template < class T > __host__ cudaError_t
cudaGraphMemcpyNodeSetParamsToSymbol
(cudaGraphNode_t node, const T symbol, const void
 *src, size_t count, size_t offset, cudaMemcpyKind
 kind)
```

Sets a memcpy node's parameters to copy to a symbol on the device.

Parameters

node

- Node to set the parameters for

symbol

- Device symbol address

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#)

Description

Sets the parameters of memcpy node `node` to the copy described by the provided parameters.

When the graph is launched, the node will copy `count` bytes from the memory area pointed to by `src` to the memory area pointed to by `offset` bytes from the start of symbol `symbol`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyHostToDevice](#), [cudaMemcpyDeviceToDevice](#), or [cudaMemcpyDefault](#). Passing [cudaMemcpyDefault](#) is recommended, in which case the type of transfer is inferred from the pointer values. However, [cudaMemcpyDefault](#) is only allowed on systems that support unified virtual addressing.

 **Note:**

- ▶ Graph objects are not threadsafe. [More here](#).
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpyToSymbol](#), [cudaGraphMemcpyNodeSetParams](#),
[cudaGraphMemcpyNodeSetParamsFromSymbol](#), [cudaGraphAddMemcpyNode](#),
[cudaGraphMemcpyNodeGetParams](#)

```
template < class T > __host__ cudaError_t
cudaLaunchCooperativeKernel (const T *func,
dim3 gridDim, dim3 blockDim, void **args, size_t
sharedMem, cudaStream_t stream)
```

Launches a device function.

Parameters

func

- Device function symbol

gridDim

- Grid dimentions

blockDim

- Block dimentions

args

- Arguments

sharedMem

- Shared memory (defaults to 0)

stream

- Stream identifier (defaults to NULL)

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidConfiguration](#),
[cudaErrorLaunchFailure](#), [cudaErrorLaunchTimeout](#), [cudaErrorLaunchOutOfResources](#),
[cudaErrorSharedObjectInitFailed](#)

Description

The function invokes kernel `func` on `gridDim` (`gridDim.x` `gridDim.y` `gridDim.z`) grid of blocks. Each block contains `blockDim` (`blockDim.x` `blockDim.y` `blockDim.z`) threads.

The device on which this kernel is invoked must have a non-zero value for the device attribute [cudaDevAttrCooperativeLaunch](#).

The total number of blocks launched cannot exceed the maximum number of blocks per multiprocessor as returned by [cudaOccupancyMaxActiveBlocksPerMultiprocessor](#) (or [cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)) times the number of multiprocessors as specified by the device attribute [cudaDevAttrMultiProcessorCount](#).

The kernel cannot make use of CUDA dynamic parallelism.

If the kernel has N parameters the `args` should point to array of N pointers. Each pointer, from `args[0]` to `args[N - 1]`, point to the region of memory from which the actual parameter will be copied.

`sharedMem` sets the amount of dynamic shared memory that will be available to each thread block.

`stream` specifies a stream the invocation is associated to.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

[cudaLaunchCooperativeKernel \(C API\)](#)

```
template < class T > __host__ cudaError_t
cudaLaunchKernel (const T *func, dim3 gridDim,
dim3 blockDim, void **args, size_t sharedMem,
cudaStream_t stream)
```

Launches a device function.

Parameters

func

- Device function symbol

gridDim

- Grid dimentions

blockDim

- Block dimentions

args

- Arguments

sharedMem

- Shared memory (defaults to 0)

stream

- Stream identifier (defaults to NULL)

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidConfiguration](#),
[cudaErrorLaunchFailure](#), [cudaErrorLaunchTimeout](#), [cudaErrorLaunchOutOfResources](#),
[cudaErrorSharedObjectInitFailed](#), [cudaErrorInvalidPtx](#), [cudaErrorUnsupportedPtxVersion](#),
[cudaErrorNoKernelImageForDevice](#), [cudaErrorJitCompilerNotFound](#),
[cudaErrorJitCompilationDisabled](#)

Description

The function invokes kernel `func` on `gridDim.x` `gridDim.y` `gridDim.z` grid of blocks. Each block contains `blockDim.x` `blockDim.y` `blockDim.z` threads.

If the kernel has `N` parameters the `args` should point to array of `N` pointers. Each pointer, from `args[0]` to `args[N - 1]`, point to the region of memory from which the actual parameter will be copied.

`sharedMem` sets the amount of dynamic shared memory that will be available to each thread block.

`stream` specifies a stream the invocation is associated to.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

[cudaLaunchKernel \[C API\]](#)

```
template < typename... ExpTypes,
typename... ActTypes > __host__ cudaError_t
cudaLaunchKernelEx (const cudaLaunchConfig_t
*config, void(*)(ExpTypes...) kernel, ActTypes &&...
args)
```

Launches a CUDA function with launch-time configuration.

Parameters

config

- Launch configuration

kernel

args

- Parameter pack of kernel parameters

Returns

[cudaSuccess](#), [cudaErrorInvalidDeviceFunction](#), [cudaErrorInvalidConfiguration](#),
[cudaErrorLaunchFailure](#), [cudaErrorLaunchTimeout](#), [cudaErrorLaunchOutOfResources](#),
[cudaErrorSharedObjectInitFailed](#), [cudaErrorInvalidPtx](#), [cudaErrorUnsupportedPtxVersion](#),
[cudaErrorNoKernelImageForDevice](#), [cudaErrorJitCompilerNotFound](#),
[cudaErrorJitCompilationDisabled](#)

Description

Invokes the kernel func on config->gridDim[config->gridDim.x config->gridDim.y config->gridDim.z] grid of blocks. Each block contains config->blockDim[config->blockDim.x config->blockDim.y config->blockDim.z] threads.

config->dynamicSmemBytes sets the amount of dynamic shared memory that will be available to each thread block.

config->stream specifies a stream the invocation is associated to.

Configuration beyond grid and block dimensions, dynamic shared memory size, and stream can be provided with the following two fields of config:

config->attrs is an array of config->numAttrs contiguous [cudaLaunchAttribute](#) elements. The value of this pointer is not considered if config->numAttrs is zero. However, in that case, it is recommended to set the pointer to NULL. config->numAttrs is the number of attributes populating the first config->numAttrs positions of the config->attrs array.

The kernel arguments should be passed as arguments to this function via the `args` parameter pack.

The C API version of this function, `cudaLaunchKernelExC`, is also available for pre-C++11 compilers and for use cases where the ability to pass kernel parameters via `void*` array is preferable.

**Note:**

- ▶ This function uses standard [default stream](#) semantics.
- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaLaunchKernelEx \(C API\)](#), [cuLaunchKernelEx](#)

`__host__ cudaError_t cudaMallocAsync (void **ptr, size_t size, cudaMemPool_t memPool, cudaStream_t stream)`

Allocate from a pool.

Description

This is an alternate spelling for `cudaMallocFromPoolAsync` made available through operator overloading.

See also:

[cudaMallocFromPoolAsync](#), [cudaMallocAsync \(C API\)](#)

__host__ `cudaError_t cudaMallocHost (void **ptr, size_t size, unsigned int flags)`

[C++ API] Allocates page-locked memory on the host

Parameters

ptr

- Device pointer to allocated memory

size

- Requested allocation size in bytes

flags

- Requested properties of allocated memory

Returns

`cudaSuccess`, `cudaErrorMemoryAllocation`

Description

Allocates `size` bytes of host memory that is page-locked and accessible to the device. The driver tracks the virtual memory ranges allocated with this function and automatically accelerates calls to functions such as `cudaMemcpy()`. Since the memory can be accessed directly by the device, it can be read or written with much higher bandwidth than pageable memory obtained with functions such as `malloc()`. Allocating excessive amounts of pinned memory may degrade system performance, since it reduces the amount of memory available to the system for paging. As a result, this function is best used sparingly to allocate staging areas for data exchange between host and device.

The `flags` parameter enables different options to be specified that affect the allocation, as follows.

- ▶ [cudaHostAllocDefault](#): This flag's value is defined to be 0.
- ▶ [cudaHostAllocPortable](#): The memory returned by this call will be considered as pinned memory by all CUDA contexts, not just the one that performed the allocation.
- ▶ [cudaHostAllocMapped](#): Maps the allocation into the CUDA address space. The device pointer to the memory may be obtained by calling [cudaHostGetDevicePointer\(\)](#).
- ▶ [cudaHostAllocWriteCombined](#): Allocates the memory as write-combined (WC). WC memory can be transferred across the PCI Express bus more quickly on some system configurations, but cannot be read efficiently by most CPUs. WC memory is a good option for buffers that will be written by the CPU and read by the device via mapped pinned memory or host->device transfers.

All of these flags are orthogonal to one another: a developer may allocate memory that is portable, mapped and/or write-combined with no restrictions.

`cudaSetDeviceFlags()` must have been called with the `cudaDeviceMapHost` flag in order for the `cudaHostAllocMapped` flag to have any effect.

The `cudaHostAllocMapped` flag may be specified on CUDA contexts for devices that do not support mapped pinned memory. The failure is deferred to `cudaHostGetDevicePointer()` because the memory may be mapped into other CUDA contexts via the `cudaHostAllocPortable` flag.

Memory allocated by this function must be freed with `cudaFreeHost()`.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

`cudaSetDeviceFlags`, `cudaMallocHost` [C API], `cudaFreeHost`, `cudaHostAlloc`

**template < class T > __host__ cudaError_t
cudaMallocManaged (T **devPtr, size_t size, unsigned int flags)**

Allocates memory that will be automatically managed by the Unified Memory system.

Parameters

devPtr

- Pointer to allocated device memory

size

- Requested allocation size in bytes

flags

- Must be either `cudaMemAttachGlobal` or `cudaMemAttachHost` (defaults to `cudaMemAttachGlobal`)

Returns

`cudaSuccess`, `cudaErrorMemoryAllocation`, `cudaErrorNotSupported`, `cudaErrorInvalidValue`

Description

Allocates `size` bytes of managed memory on the device and returns in `*devPtr` a pointer to the allocated memory. If the device doesn't support allocating managed memory, [cudaErrorNotSupported](#) is returned. Support for managed memory can be queried using the device attribute [cudaDevAttrManagedMemory](#). The allocated memory is suitably aligned for any kind of variable. The memory is not cleared. If `size` is 0, [cudaMallocManaged](#) returns [cudaErrorInvalidValue](#). The pointer is valid on the CPU and on all GPUs in the system that support managed memory. All accesses to this pointer must obey the Unified Memory programming model.

`flags` specifies the default stream association for this allocation. `flags` must be one of [cudaMemAttachGlobal](#) or [cudaMemAttachHost](#). The default value for `flags` is [cudaMemAttachGlobal](#). If [cudaMemAttachGlobal](#) is specified, then this memory is accessible from any stream on any device. If [cudaMemAttachHost](#) is specified, then the allocation should not be accessed from devices that have a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#); an explicit call to [cudaStreamAttachMemAsync](#) will be required to enable access on such devices.

If the association is later changed via [cudaStreamAttachMemAsync](#) to a single stream, the default association, as specified during [cudaMallocManaged](#), is restored when that stream is destroyed. For `__managed__` variables, the default association is always [cudaMemAttachGlobal](#). Note that destroying a stream is an asynchronous operation, and as a result, the change to default association won't happen until all work in the stream has completed.

Memory allocated with [cudaMallocManaged](#) should be released with [cudaFree](#).

Device memory oversubscription is possible for GPUs that have a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#). Managed memory on such GPUs may be evicted from device memory to host memory at any time by the Unified Memory driver in order to make room for other allocations.

In a multi-GPU system where all GPUs have a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#), managed memory may not be populated when this API returns and instead may be populated on access. In such systems, managed memory can migrate to any processor's memory at any time. The Unified Memory driver will employ heuristics to maintain data locality and prevent excessive page faults to the extent possible. The application can also guide the driver about memory usage patterns via [cudaMemAdvise](#). The application can also explicitly migrate memory to a desired processor's memory via [cudaMemPrefetchAsync](#).

In a multi-GPU system where all of the GPUs have a zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#) and all the GPUs have peer-to-peer support with each other, the physical storage for managed memory is created on the GPU which is active at the time [cudaMallocManaged](#) is called. All other GPUs will reference the data at reduced

bandwidth via peer mappings over the PCIe bus. The Unified Memory driver does not migrate memory among such GPUs.

In a multi-GPU system where not all GPUs have peer-to-peer support with each other and where the value of the device attribute [cudaDevAttrConcurrentManagedAccess](#) is zero for at least one of those GPUs, the location chosen for physical storage of managed memory is system-dependent.

- ▶ On Linux, the location chosen will be device memory as long as the current set of active contexts are on devices that either have peer-to-peer support with each other or have a non-zero value for the device attribute [cudaDevAttrConcurrentManagedAccess](#). If there is an active context on a GPU that does not have a non-zero value for that device attribute and it does not have peer-to-peer support with the other devices that have active contexts on them, then the location for physical storage will be 'zero-copy' or host memory. Note that this means that managed memory that is located in device memory is migrated to host memory if a new context is created on a GPU that doesn't have a non-zero value for the device attribute and does not support peer-to-peer with at least one of the other devices that has an active context. This in turn implies that context creation may fail if there is insufficient host memory to migrate all managed allocations.
- ▶ On Windows, the physical storage is always created in 'zero-copy' or host memory. All GPUs will reference the data at reduced bandwidth over the PCIe bus. In these circumstances, use of the environment variable CUDA_VISIBLE_DEVICES is recommended to restrict CUDA to only use those GPUs that have peer-to-peer support. Alternatively, users can also set CUDA_MANAGED_FORCE_DEVICE_ALLOC to a non-zero value to force the driver to always use device memory for physical storage. When this environment variable is set to a non-zero value, all devices used in that process that support managed memory have to be peer-to-peer compatible with each other. The error [cudaErrorInvalidDevice](#) will be returned if a device that supports managed memory is used and it is not peer-to-peer compatible with any of the other managed memory supporting devices that were previously used in that process, even if [cudaDeviceReset](#) has been called on those devices. These environment variables are described in the CUDA programming guide under the "CUDA environment variables" section.
- ▶ On ARM, managed memory is not available on discrete gpu with Drive PX-2.

 **Note:**

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMallocPitch](#), [cudaFree](#), [cudaMallocArray](#), [cudaFreeArray](#), [cudaMalloc3D](#),
[cudaMalloc3DArray](#), [cudaMallocHost \[C API\]](#), [cudaFreeHost](#), [cudaHostAlloc](#),
[cudaDeviceGetAttribute](#), [cudaStreamAttachMemAsync](#)

template < class T > cudaError_t cudaMemAdvise (T *devPtr, size_t count, cudaMemcpyKind advice, cudaMemLocation location)

Advise about the usage of a given memory range.

Description

This is an alternate spelling for `cudaMemAdvise` made available through operator overloading.

See also:

[cudaMemAdvise](#), [cudaMemAdvise \[C API\]](#)

template < class T > __host__ cudaError_t cudaMemcpyFromSymbol (void *dst, const T symbol, size_t count, size_t offset, cudaMemcpyKind kind)

[C++ API] Copies data from the given symbol on the device

Parameters

dst

- Destination memory address

symbol

- Device symbol reference

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidSymbol](#),
[cudaErrorInvalidMemcpyDirection](#), [cudaErrorNoKernelImageForDevice](#)

Description

Copies count bytes from the memory area offset bytes from the start of symbol symbol to the memory area pointed to by dst. The memory areas may not overlap. symbol is a variable that resides in global or constant memory space. kind can be either [cudaMemcpyDeviceToHost](#) or [cudaMemcpyDeviceToDevice](#).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Use of a string naming a variable as the symbol parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyAsync](#),
[cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#),
[cudaMemcpyToSymbolAsync](#), [cudaMemcpyFromSymbolAsync](#)

**template < class T > __host__ cudaError_t
cudaMemcpyFromSymbolAsync (void *dst, const T
symbol, size_t count, size_t offset, cudaMemcpyKind
kind, cudaStream_t stream)**

[C++ API] Copies data from the given symbol on the device

Parameters

dst

- Destination memory address

symbol

- Device symbol reference

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidSymbol](#),
[cudaErrorInvalidMemcpyDirection](#), [cudaErrorNoKernelImageForDevice](#)

Description

Copies count bytes from the memory area offset bytes from the start of symbol symbol to the memory area pointed to by dst. The memory areas may not overlap. symbol is a variable that resides in global or constant memory space. kind can be either [cudaMemcpyDeviceToHost](#) or [cudaMemcpyDeviceToDevice](#).

[cudaMemcpyFromSymbolAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero stream argument. If kind is [cudaMemcpyDeviceToHost](#) and stream is non-zero, the copy may overlap with operations in other streams.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ Use of a string naming a variable as the symbol parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),

[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyToSymbolAsync](#)

```
template < class T > __host__ cudaError_t
cudaMemcpyToSymbol (const T symbol, const void
*src, size_t count, size_t offset, cudaMemcpyKind
kind)
```

[C++ API] Copies data to the given symbol on the device

Parameters

symbol

- Device symbol reference

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidSymbol](#),
[cudaErrorInvalidMemcpyDirection](#), [cudaErrorNoKernelImageForDevice](#)

Description

Copies count bytes from the memory area pointed to by `src` to the memory area `offset` bytes from the start of symbol `symbol`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyHostToDevice](#) or [cudaMemcpyDeviceToDevice](#).

►

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [synchronous](#) behavior for most use cases.
- ▶ Use of a string naming a variable as the `symbol` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.

- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyFromSymbol](#), [cudaMemcpyAsync](#),
[cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#), [cudaMemcpy2DFromArrayAsync](#),
[cudaMemcpyToSymbolAsync](#), [cudaMemcpyFromSymbolAsync](#)

```
template < class T > __host__ cudaError_t
cudaMemcpyToSymbolAsync (const T symbol, const
void *src, size_t count, size_t offset, cudaMemcpyKind
kind, cudaStream_t stream)
```

[C++ API] Copies data to the given symbol on the device

Parameters**symbol**

- Device symbol reference

src

- Source memory address

count

- Size in bytes to copy

offset

- Offset from start of symbol in bytes

kind

- Type of transfer

stream

- Stream identifier

Returns

[cudaSuccess](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidSymbol](#),
[cudaErrorInvalidMemcpyDirection](#), [cudaErrorNoKernelImageForDevice](#)

Description

Copies count bytes from the memory area pointed to by `src` to the memory area `offset` bytes from the start of symbol `symbol`. The memory areas may not overlap. `symbol` is a variable that resides in global or constant memory space. `kind` can be either [cudaMemcpyHostToDevice](#) or [cudaMemcpyDeviceToDevice](#).

[cudaMemcpyToSymbolAsync\(\)](#) is asynchronous with respect to the host, so the call may return before the copy is complete. The copy can optionally be associated to a stream by passing a non-zero `stream` argument. If `kind` is [cudaMemcpyHostToDevice](#) and `stream` is non-zero, the copy may overlap with operations in other streams.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ This function exhibits [asynchronous](#) behavior for most use cases.
- ▶ Use of a string naming a variable as the `symbol` parameter was deprecated in CUDA 4.1 and removed in CUDA 5.0.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaMemcpy](#), [cudaMemcpy2D](#), [cudaMemcpy2DToArray](#), [cudaMemcpy2DFromArray](#),
[cudaMemcpy2DArrayToArray](#), [cudaMemcpyToSymbol](#), [cudaMemcpyFromSymbol](#),
[cudaMemcpyAsync](#), [cudaMemcpy2DAsync](#), [cudaMemcpy2DToArrayAsync](#),
[cudaMemcpy2DFromArrayAsync](#), [cudaMemcpyFromSymbolAsync](#)

```
template < class T > __host__ cudaError_t
cudaOccupancyAvailableDynamicSMemPerBlock
(size_t *dynamicSmemSize, T func, int numBlocks, int
blockSize)
```

Returns dynamic shared memory available per block when launching numBlocks blocks on SM.

Parameters

dynamicSmemSize

- Returned maximum dynamic shared memory

func

- Kernel function for which occupancy is calculated

numBlocks

- Number of blocks to fit on SM

blockSize

- Size of the block

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

Returns in *dynamicSmemSize the maximum size of dynamic shared memory to allow numBlocks blocks per SM.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaOccupancyMaxPotentialBlockSize](#)

[cudaOccupancyMaxPotentialBlockSizeWithFlags](#)
[cudaOccupancyMaxActiveBlocksPerMultiprocessor](#)
[cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)
[cudaOccupancyMaxPotentialBlockSizeVariableSMem](#)
[cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags](#)

```
template < class T > __host__ cudaError_t
cudaOccupancyMaxActiveBlocksPerMultiprocessor
(int *numBlocks, T func, int blockSize, size_t
dynamicSMemSize)
```

Returns occupancy for a device function.

Parameters

numBlocks

- Returned occupancy

func

- Kernel function for which occupancy is calculated

blockSize

- Block size the kernel is intended to be launched with

dynamicSMemSize

- Per-block dynamic shared memory usage intended, in bytes

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

Returns in *numBlocks the maximum number of active blocks per streaming multiprocessor for the device function.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)
[cudaOccupancyMaxPotentialBlockSize](#)
[cudaOccupancyMaxPotentialBlockSizeWithFlags](#)
[cudaOccupancyMaxPotentialBlockSizeVariableSMem](#)
[cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags](#)
[cudaOccupancyAvailableDynamicSMemPerBlock](#)

```
template < class T > __host__ cudaError_t
cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags
(int *numBlocks, T func, int blockSize, size_t
dynamicSMemSize, unsigned int flags)
```

Returns occupancy for a device function with the specified flags.

Parameters

numBlocks

- Returned occupancy

func

- Kernel function for which occupancy is calculated

blockSize

- Block size the kernel is intended to be launched with

dynamicSMemSize

- Per-block dynamic shared memory usage intended, in bytes

flags

- Requested behavior for the occupancy calculator

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

Returns in *numBlocks the maximum number of active blocks per streaming multiprocessor for the device function.

The `flags` parameter controls how special cases are handled. Valid flags include:

- ▶ [`cudaOccupancyDefault`](#): keeps the default behavior as [`cudaOccupancyMaxActiveBlocksPerMultiprocessor`](#)
- ▶ [`cudaOccupancyDisableCachingOverride`](#): suppresses the default behavior on platform where global caching affects occupancy. On such platforms, if caching is enabled, but per-block SM resource usage would result in zero occupancy, the occupancy calculator will calculate the occupancy as if caching is disabled. Setting this flag makes the occupancy calculator to return 0 in such cases. More information can be found about this feature in the "Unified L1/Texture Cache" section of the Maxwell tuning guide.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [`cudaErrorInitializationError`](#), [`cudaErrorInsufficientDriver`](#) or [`cudaErrorNoDevice`](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [`cudaStreamAddCallback`](#) no CUDA function may be called from callback. [`cudaErrorNotPermitted`](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[`cudaOccupancyMaxActiveBlocksPerMultiprocessor`](#)

[`cudaOccupancyMaxPotentialBlockSize`](#)

[`cudaOccupancyMaxPotentialBlockSizeWithFlags`](#)

[`cudaOccupancyMaxPotentialBlockSizeVariableSMem`](#)

[`cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags`](#)

[`cudaOccupancyAvailableDynamicSMemPerBlock`](#)

```
template < class T > __host__ cudaError_t  
cudaOccupancyMaxActiveClusters (int *numClusters,  
T *func, const cudaLaunchConfig_t *config)
```

Given the kernel function (`func`) and launch configuration (`config`), return the maximum number of clusters that could co-exist on the target device in `*numClusters`.

Parameters

numClusters

- Returned maximum number of clusters that could co-exist on the target device

func

- Kernel function for which maximum number of clusters are calculated

config

- Launch configuration for the given kernel function

Returns

`cudaSuccess`, `cudaErrorInvalidDeviceFunction`, `cudaErrorInvalidValue`,
`cudaErrorInvalidClusterSize`, `cudaErrorUnknown`,

Description

If the function has required cluster size already set (see `cudaFuncGetAttributes`), the cluster size from config must either be unspecified or match the required size. Without required sizes, the cluster size must be specified in config, else the function will return an error.

Note that various attributes of the kernel function may affect occupancy calculation. Runtime environment may affect how the hardware schedules the clusters, so the calculated occupancy is not guaranteed to be achievable.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaFuncGetAttributes](#)

```
template < class T > __host__ cudaError_t
cudaOccupancyMaxPotentialBlockSize (int
*minGridSize, int *blockSize, T func, size_t
dynamicSMemSize, int blockSizeLimit)
```

Returns grid and block size that achieves maximum potential occupancy for a device function.

Parameters

minGridSize

- Returned minimum grid size needed to achieve the best potential occupancy

blockSize

- Returned block size

func

- Device function symbol

dynamicSMemSize

- Per-block dynamic shared memory usage intended, in bytes

blockSizeLimit

- The maximum block size `func` is designed to work with. 0 means no limit.

Returns

`cudaSuccess`, `cudaErrorInvalidDevice`, `cudaErrorInvalidDeviceFunction`,
`cudaErrorInvalidValue`, `cudaErrorUnknown`,

Description

Returns in `*minGridSize` and `*blocksize` a suggested grid / block size pair that achieves the best potential occupancy (i.e. the maximum number of active warps with the smallest number of blocks).

Use

See also:

`cudaOccupancyMaxPotentialBlockSizeVariableSMem` if the amount of per-block dynamic shared memory changes with different block sizes.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`,
`cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.

- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaOccupancyMaxPotentialBlockSizeWithFlags](#)
[cudaOccupancyMaxActiveBlocksPerMultiprocessor](#)
[cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)
[cudaOccupancyMaxPotentialBlockSizeVariableSMem](#)
[cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags](#)
[cudaOccupancyAvailableDynamicSMemPerBlock](#)

```
template < typename UnaryFunction,
class T > __host__ cudaError_t
cudaOccupancyMaxPotentialBlockSizeVariableSMem
(int *minGridSize, int *blockSize, T func,
UnaryFunction blockSizeToDynamicSMemSize, int
blockSizeLimit)
```

Returns grid and block size that achieves maximum potential occupancy for a device function.

Parameters

minGridSize

- Returned minimum grid size needed to achieve the best potential occupancy

blockSize

- Returned block size

func

- Device function symbol

blockSizeToDynamicSMemSize

- A unary function / functor that takes block size, and returns the size, in bytes, of dynamic shared memory needed for a block

blockSizeLimit

- The maximum block size `func` is designed to work with. 0 means no limit.

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

Returns in *minGridSize and *blocksize a suggested grid / block size pair that achieves the best potential occupancy (i.e. the maximum number of active warps with the smallest number of blocks).

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags](#)

[cudaOccupancyMaxActiveBlocksPerMultiprocessor](#)

[cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)

[cudaOccupancyMaxPotentialBlockSize](#)

[cudaOccupancyMaxPotentialBlockSizeWithFlags](#)

[cudaOccupancyAvailableDynamicSMemPerBlock](#)

```
template < typename UnaryFunction,
class T > __host__ cudaError_t
cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags
(int *minGridSize, int *blockSize, T func,
UnaryFunction blockSizeToDynamicSMemSize, int
blockSizeLimit, unsigned int flags)
```

Returns grid and block size that achieves maximum potential occupancy for a device function.

Parameters

minGridSize

- Returned minimum grid size needed to achieve the best potential occupancy

blockSize

- Returned block size

func

- Device function symbol

blockSizeToDynamicSMemSize

- A unary function / functor that takes block size, and returns the size, in bytes, of dynamic shared memory needed for a block

blockSizeLimit

- The maximum block size func is designed to work with. 0 means no limit.

flags

- Requested behavior for the occupancy calculator

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

Returns in *minGridSize and *blocksize a suggested grid / block size pair that achieves the best potential occupancy (i.e. the maximum number of active warps with the smallest number of blocks).

The flags parameter controls how special cases are handled. Valid flags include:

- ▶ [cudaOccupancyDefault](#): keeps the default behavior as [cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags](#)
- ▶ [cudaOccupancyDisableCachingOverride](#): This flag suppresses the default behavior on platform where global caching affects occupancy. On such platforms, if caching is enabled, but per-block SM resource usage would result in zero occupancy, the occupancy calculator will calculate the occupancy as if caching is disabled. Setting this flag makes the occupancy calculator to return 0 in such cases. More information can be found about this feature in the "Unified L1/Texture Cache" section of the Maxwell tuning guide.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaOccupancyMaxPotentialBlockSizeVariableSMem](#)
[cudaOccupancyMaxActiveBlocksPerMultiprocessor](#)
[cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)
[cudaOccupancyMaxPotentialBlockSize](#)
[cudaOccupancyMaxPotentialBlockSizeWithFlags](#)
[cudaOccupancyAvailableDynamicSMemPerBlock](#)

```
template < class T > __host__ cudaError_t
cudaOccupancyMaxPotentialBlockSizeWithFlags
(int *minGridSize, int *blockSize, T func, size_t
dynamicSMemSize, int blockSizeLimit, unsigned int
flags)
```

Returns grid and block size that achieved maximum potential occupancy for a device function with the specified flags.

Parameters

minGridSize

- Returned minimum grid size needed to achieve the best potential occupancy

blockSize

- Returned block size

func

- Device function symbol

dynamicSMemSize

- Per-block dynamic shared memory usage intended, in bytes

blockSizeLimit

- The maximum block size `func` is designed to work with. 0 means no limit.

flags

- Requested behavior for the occupancy calculator

Returns

[cudaSuccess](#), [cudaErrorInvalidDevice](#), [cudaErrorInvalidDeviceFunction](#),
[cudaErrorInvalidValue](#), [cudaErrorUnknown](#),

Description

Returns in `*minGridSize` and `*blocksize` a suggested grid / block size pair that achieves the best potential occupancy (i.e. the maximum number of active warps with the smallest number of blocks).

The `flags` parameter controls how special cases are handled. Valid flags include:

- ▶ `cudaOccupancyDefault`: keeps the default behavior as `cudaOccupancyMaxPotentialBlockSize`
- ▶ `cudaOccupancyDisableCachingOverride`: This flag suppresses the default behavior on platforms where global caching affects occupancy. On such platforms, if caching is enabled, but per-block SM resource usage would result in zero occupancy, the occupancy calculator will calculate the occupancy as if caching is disabled. Setting this flag makes the occupancy calculator to return 0 in such cases. More information can be found about this feature in the "Unified L1/Texture Cache" section of the Maxwell tuning guide.

Use

See also:

[cudaOccupancyMaxPotentialBlockSizeVariableSMem](#) if the amount of per-block dynamic shared memory changes with different block sizes.

Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return [cudaErrorInitializationError](#), [cudaErrorInsufficientDriver](#) or [cudaErrorNoDevice](#) if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. [cudaErrorNotPermitted](#) may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaOccupancyMaxPotentialBlockSize](#)

[cudaOccupancyMaxActiveBlocksPerMultiprocessor](#)

[cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#)

[cudaOccupancyMaxPotentialBlockSizeVariableSMem](#)

[cudaOccupancyMaxPotentialBlockSizeVariableSMemWithFlags](#)

[cudaOccupancyAvailableDynamicSMemPerBlock](#)

```
template < class T > __host__ cudaError_t  
cudaOccupancyMaxPotentialClusterSize (int  
*clusterSize, T *func, const cudaLaunchConfig_t  
*config)
```

Given the kernel function (`func`) and launch configuration (`config`), return the maximum cluster size in `*clusterSize`.

Parameters

clusterSize

- Returned maximum cluster size that can be launched for the given kernel function and launch configuration

func

- Kernel function for which maximum cluster size is calculated

config

- Launch configuration for the given kernel function

Returns

`cudaSuccess`, `cudaErrorInvalidDeviceFunction`, `cudaErrorInvalidValue`, `cudaErrorUnknown`,

Description

The cluster dimensions in `config` are ignored. If `func` has a required cluster size set (see [cudaFuncGetAttributes](#)), `*clusterSize` will reflect the required cluster size.

By default this function will always return a value that's portable on future hardware. A higher value may be returned if the kernel function allows non-portable cluster sizes.

This function will respect the compile time launch bounds.



Note:

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by [cudaStreamAddCallback](#) no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaFuncGetAttributes](#)

```
template < class T > __host__ cudaError_t  
cudaStreamAttachMemAsync (cudaStream_t stream,  
T *devPtr, size_t length, unsigned int flags)
```

Attach memory to a stream asynchronously.

Parameters

stream

- Stream in which to enqueue the attach operation

devPtr

- Pointer to memory (must be a pointer to managed memory or to a valid host-accessible region of system-allocated memory)

length

- Length of memory (defaults to zero)

flags

- Must be one of [cudaMemAttachGlobal](#), [cudaMemAttachHost](#) or [cudaMemAttachSingle](#) (defaults to [cudaMemAttachSingle](#))

Returns

[cudaSuccess](#), [cudaErrorNotReady](#), [cudaErrorInvalidValue](#), [cudaErrorInvalidResourceHandle](#)

Description

Enqueues an operation in `stream` to specify stream association of `length` bytes of memory starting from `devPtr`. This function is a stream-ordered operation, meaning that it is dependent on, and will only take effect when, previous work in `stream` has completed. Any previous association is automatically replaced.

`devPtr` must point to an one of the following types of memories:

- ▶ managed memory declared using the `__managed__` keyword or allocated with [cudaMallocManaged](#).
- ▶ a valid host-accessible region of system-allocated pageable memory. This type of memory may only be specified if the device associated with the stream reports a non-zero value for the device attribute [cudaDevAttrPageableMemoryAccess](#).

For managed allocations, `length` must be either zero or the entire allocation's size. Both indicate that the entire allocation's stream association is being changed. Currently, it is not possible to change stream association for a portion of a managed allocation.

For pageable allocations, `length` must be non-zero.

The stream association is specified using `flags` which must be one of `cudaMemAttachGlobal`, `cudaMemAttachHost` or `cudaMemAttachSingle`. The default value for `flags` is `cudaMemAttachSingle`. If the `cudaMemAttachGlobal` flag is specified, the memory can be accessed by any stream on any device. If the `cudaMemAttachHost` flag is specified, the program makes a guarantee that it won't access the memory on the device from any stream on a device that has a zero value for the device attribute `cudaDevAttrConcurrentManagedAccess`. If the `cudaMemAttachSingle` flag is specified and `stream` is associated with a device that has a zero value for the device attribute `cudaDevAttrConcurrentManagedAccess`, the program makes a guarantee that it will only access the memory on the device from `stream`. It is illegal to attach singly to the NULL stream, because the NULL stream is a virtual global stream and not a specific stream. An error will be returned in this case.

When memory is associated with a single stream, the Unified Memory system will allow CPU access to this memory region so long as all operations in `stream` have completed, regardless of whether other streams are active. In effect, this constrains exclusive ownership of the managed memory region by an active GPU to per-stream activity instead of whole-GPU activity.

Accessing memory on the device from streams that are not associated with it will produce undefined results. No error checking is performed by the Unified Memory system to ensure that kernels launched into other streams do not access this region.

It is a program's responsibility to order calls to `cudaStreamAttachMemAsync` via events, synchronization or other means to ensure legal access to memory at all times. Data visibility and coherency will be changed appropriately for all kernels which follow a stream-association change.

If `stream` is destroyed while data is associated with it, the association is removed and the association reverts to the default visibility of the allocation as specified at `cudaMallocManaged`. For `_managed_` variables, the default association is always `cudaMemAttachGlobal`. Note that destroying a stream is an asynchronous operation, and as a result, the change to default association won't happen until all work in the stream has completed.

 **Note:**

- ▶ Note that this function may also return error codes from previous, asynchronous launches.
- ▶ Note that this function may also return `cudaErrorInitializationError`, `cudaErrorInsufficientDriver` or `cudaErrorNoDevice` if this call tries to initialize internal CUDA RT state.
- ▶ Note that as specified by `cudaStreamAddCallback` no CUDA function may be called from callback. `cudaErrorNotPermitted` may, but is not guaranteed to, be returned as a diagnostic in such case.

See also:

[cudaStreamCreate](#), [cudaStreamCreateWithFlags](#), [cudaStreamWaitEvent](#),
[cudaStreamSynchronize](#), [cudaStreamAddCallback](#), [cudaStreamDestroy](#), [cudaMallocManaged](#)

6.31. Interactions with the CUDA Driver API

This section describes the interactions between the CUDA Driver API and the CUDA Runtime API

Primary Contexts

There exists a one to one relationship between CUDA devices in the CUDA Runtime API and [CUcontext](#)s in the CUDA Driver API within a process. The specific context which the CUDA Runtime API uses for a device is called the device's primary context. From the perspective of the CUDA Runtime API, a device and its primary context are synonymous.

Initialization and Tear-Down

CUDA Runtime API calls operate on the CUDA Driver API [CUcontext](#) which is current to the calling host thread.

The function [cudaInitDevice\(\)](#) ensures that the primary context is initialized for the requested device but does not make it current to the calling thread.

The function [cudaSetDevice\(\)](#) initializes the primary context for the specified device and makes it current to the calling thread by calling [cuCtxsetCurrent\(\)](#).

The CUDA Runtime API will automatically initialize the primary context for a device at the first CUDA Runtime API call which requires an active context. If no [CUcontext](#) is current to the calling thread when a CUDA Runtime API call which requires an active context is made, then the primary context for a device will be selected, made current to the calling thread, and initialized.

The context which the CUDA Runtime API initializes will be initialized using the parameters specified by the CUDA Runtime API functions [cudaSetDeviceFlags\(\)](#), [cudaD3D9SetDirect3DDevice\(\)](#), [cudaD3D10SetDirect3DDevice\(\)](#), [cudaD3D11SetDirect3DDevice\(\)](#), [cudaGLSetGLDevice\(\)](#), and [cudaVDPAUSetVDPAUDevice\(\)](#). Note that these functions will fail with [cudaErrorSetOnActiveProcess](#) if they are called when the primary context for the specified device has already been initialized. (or if the current device has already been initialized, in the case of [cudaSetDeviceFlags\(\)](#)).

Primary contexts will remain active until they are explicitly deinitialized using [cudaDeviceReset\(\)](#). The function [cudaDeviceReset\(\)](#) will deinitialize the primary context for the calling thread's current device immediately. The context will remain current to all of the threads that it was current to. The next CUDA Runtime API call on any thread which requires an active context will trigger the reinitialization of that device's primary context.

Note that primary contexts are shared resources. It is recommended that the primary context not be reset except just before exit or to recover from an unspecified launch failure.

Context Interoperability

Note that the use of multiple [CUcontext](#)s per device within a single process will substantially degrade performance and is strongly discouraged. Instead, it is highly recommended that the implicit one-to-one device-to-context mapping for the process provided by the CUDA Runtime API be used.

If a non-primary [CUcontext](#) created by the CUDA Driver API is current to a thread then the CUDA Runtime API calls to that thread will operate on that [CUcontext](#), with some exceptions listed below. Interoperability between data types is discussed in the following sections.

The function [cudaPointerGetAttributes\(\)](#) will return the error [cudaErrorIncompatibleDriverContext](#) if the pointer being queried was allocated by a non-primary context. The function [cudaDeviceEnablePeerAccess\(\)](#) and the rest of the peer access API may not be called when a non-primary [CUcontext](#) is current. To use the pointer query and peer access APIs with a context created using the CUDA Driver API, it is necessary that the CUDA Driver API be used to access these features.

All CUDA Runtime API state (e.g. global variables' addresses and values) travels with its underlying [CUcontext](#). In particular, if a [CUcontext](#) is moved from one thread to another then all CUDA Runtime API state will move to that thread as well.

Please note that attaching to legacy contexts (those with a version of 3010 as returned by [cuCtxGetApiVersion\(\)](#)) is not possible. The CUDA Runtime will return [cudaErrorIncompatibleDriverContext](#) in such cases.

Interactions between CUstream and cudaStream_t

The types [CUstream](#) and [cudaStream_t](#) are identical and may be used interchangeably.

Interactions between CUevent and cudaEvent_t

The types [CUevent](#) and [cudaEvent_t](#) are identical and may be used interchangeably.

Interactions between CUarray and cudaArray_t

The types [CUarray](#) and struct [cudaArray *](#) represent the same data type and may be used interchangeably by casting the two types between each other.

In order to use a [CUarray](#) in a CUDA Runtime API function which takes a struct [cudaArray *](#), it is necessary to explicitly cast the [CUarray](#) to a struct [cudaArray *](#).

In order to use a struct [cudaArray *](#) in a CUDA Driver API function which takes a [CUarray](#), it is necessary to explicitly cast the struct [cudaArray *](#) to a [CUarray](#).

Interactions between CUgraphicsResource and cudaGraphicsResource_t

The types [CUgraphicsResource](#) and [cudaGraphicsResource_t](#) represent the same data type and may be used interchangeably by casting the two types between each other.

In order to use a [CUgraphicsResource](#) in a CUDA Runtime API function which takes a [cudaGraphicsResource_t](#), it is necessary to explicitly cast the [CUgraphicsResource](#) to a [cudaGraphicsResource_t](#).

In order to use a [cudaGraphicsResource_t](#) in a CUDA Driver API function which takes a [CUgraphicsResource](#), it is necessary to explicitly cast the [cudaGraphicsResource_t](#) to a [CUgraphicsResource](#).

Interactions between CUtexObject and cudaTextureObject_t

The types [CUtexObject](#) and [cudaTextureObject_t](#) represent the same data type and may be used interchangeably by casting the two types between each other.

In order to use a [CUtexObject](#) in a CUDA Runtime API function which takes a [cudaTextureObject_t](#), it is necessary to explicitly cast the [CUtexObject](#) to a [cudaTextureObject_t](#).

In order to use a [cudaTextureObject_t](#) in a CUDA Driver API function which takes a [CUtexObject](#), it is necessary to explicitly cast the [cudaTextureObject_t](#) to a [CUtexObject](#).

Interactions between CUsurfObject and cudaSurfaceObject_t

The types [CUsurfObject](#) and [cudaSurfaceObject_t](#) represent the same data type and may be used interchangeably by casting the two types between each other.

In order to use a [CUsurfObject](#) in a CUDA Runtime API function which takes a [cudaSurfaceObject_t](#), it is necessary to explicitly cast the [CUsurfObject](#) to a [cudaSurfaceObject_t](#).

In order to use a [cudaSurfaceObject_t](#) in a CUDA Driver API function which takes a [CUsurfObject](#), it is necessary to explicitly cast the [cudaSurfaceObject_t](#) to a [CUsurfObject](#).

Interactions between CUfunction and cudaFunction_t

The types [CUfunction](#) and [cudaFunction_t](#) represent the same data type and may be used interchangeably by casting the two types between each other.

In order to use a [cudaFunction_t](#) in a CUDA Driver API function which takes a [CUfunction](#), it is necessary to explicitly cast the [cudaFunction_t](#) to a [CUfunction](#).

**__host__ cudaError_t cudaGetFuncBySymbol
(cudaFunction_t *functionPtr, const void *symbolPtr)**

Get pointer to device entry function that matches entry function symbolPtr.

Parameters

functionPtr

- Returns the device entry function

symbolPtr

- Pointer to device entry function to search for

Returns

cudaSuccess

Description

Returns in `functionPtr` the device entry function corresponding to the symbol `symbolPtr`.

__host__ cudaError_t cudaGetKernel (cudaKernel_t *kernelPtr, const void *entryFuncAddr)

Get pointer to device kernel that matches entry function `entryFuncAddr`.

Parameters

kernelPtr

- Returns the device kernel

entryFuncAddr

- Address of device entry function to search kernel for

Returns

cudaSuccess

Description

Returns in `kernelPtr` the device kernel corresponding to the entry function `entryFuncAddr`.

See also:

[cudaGetKernel \(C++ API\)](#)

6.32. Profiler Control

This section describes the profiler control functions of the CUDA runtime application programming interface.

__host__ cudaError_t cudaProfilerStart (void)

Enable profiling.

Returns

cudaSuccess

Description

Enables profile collection by the active profiling tool for the current context. If profiling is already enabled, then [cudaProfilerStart\(\)](#) has no effect.

cudaProfilerStart and cudaProfilerStop APIs are used to programmatically control the profiling granularity by allowing profiling to be done only on selective pieces of code.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaProfilerStop](#), [cuProfilerStart](#)

`__host__ cudaError_t cudaProfilerStop (void)`

Disable profiling.

Returns

[cudaSuccess](#)

Description

Disables profile collection by the active profiling tool for the current context. If profiling is already disabled, then [cudaProfilerStop\(\)](#) has no effect.

cudaProfilerStart and cudaProfilerStop APIs are used to programmatically control the profiling granularity by allowing profiling to be done only on selective pieces of code.



Note:

Note that this function may also return error codes from previous, asynchronous launches.

See also:

[cudaProfilerStart](#), [cuProfilerStop](#)

6.33. Data types used by CUDA Runtime

struct cudaAccessPolicyWindow
struct cudaArrayMemoryRequirements
struct cudaArraySparseProperties
struct cudaChannelFormatDesc
struct cudaChildGraphNodeParams
struct cudaConditionalNodeParams
struct cudaDeviceProp
struct cudaEglFrame
struct cudaEglPlaneDesc
struct cudaEventRecordNodeParams
struct cudaEventWaitNodeParams
struct cudaExtent
struct cudaExternalMemoryBufferDesc
struct cudaExternalMemoryHandleDesc
struct cudaExternalMemoryMipmappedArrayDesc
struct cudaExternalSemaphoreHandleDesc
struct cudaExternalSemaphoreSignalNodeParams

struct cudaExternalSemaphoreSignalNodeParamsV2
struct cudaExternalSemaphoreSignalParams
struct cudaExternalSemaphoreSignalParams_v1
struct cudaExternalSemaphoreWaitNodeParams
struct cudaExternalSemaphoreWaitNodeParamsV2
struct cudaExternalSemaphoreWaitParams
struct cudaExternalSemaphoreWaitParams_v1
struct cudaFuncAttributes
struct cudaGraphEdgeData
struct cudaGraphExecUpdateResultInfo
struct cudaGraphInstantiateParams
struct cudaGraphNodeParams
struct cudaHostNodeParams
struct cudaHostNodeParamsV2
struct cudalpcEventHandle_t
struct cudalpcMemHandle_t
struct cudaKernelNodeParams

```
struct cudaKernelNodeParamsV2  
struct cudaLaunchAttribute  
union cudaLaunchAttributeValue  
struct cudaLaunchConfig_t  
struct cudaLaunchMemSyncDomainMap  
struct cudaLaunchParams  
struct cudaMemAccessDesc  
struct cudaMemAllocNodeParams  
struct cudaMemAllocNodeParamsV2  
struct cudaMemcpy3DParms  
struct cudaMemcpy3DPeerParms  
struct cudaMemcpyNodeParams  
struct cudaMemFreeNodeParams  
struct cudaMemLocation  
struct cudaMemPoolProps  
struct cudaMemPoolPtrExportData  
struct cudaMemsetParams
```

`struct cudaMemsetParamsV2`

`struct cudaPitchedPtr`

`struct cudaPointerAttributes`

`struct cudaPos`

`struct cudaResourceDesc`

`struct cudaResourceViewDesc`

`struct cudaTextureDesc`

`struct CUuid_st`

`enum cudaAccessProperty`

Specifies performance hint with [`cudaAccessPolicyWindow`](#) for hitProp and missProp members.

Values

`cudaAccessPropertyNormal = 0`

Normal cache persistence.

`cudaAccessPropertyStreaming = 1`

Streaming access is less likely to persist from cache.

`cudaAccessPropertyPersisting = 2`

Persisting access is more likely to persist in cache.

`enum cudaCGScope`

CUDA cooperative group scope

Values

`cudaCGScopeInvalid = 0`

Invalid cooperative group scope

`cudaCGScopeGrid = 1`

Scope represented by a grid_group

`cudaCGScopeMultiGrid = 2`

Scope represented by a multi_grid_group

enum cudaChannelFormatKind

Channel format kind

Values

cudaChannelFormatKindSigned = 0

Signed channel format

cudaChannelFormatKindUnsigned = 1

Unsigned channel format

cudaChannelFormatKindFloat = 2

Float channel format

cudaChannelFormatKindNone = 3

No channel format

cudaChannelFormatKindNV12 = 4

Unsigned 8-bit integers, planar 4:2:0 YUV format

cudaChannelFormatKindUnsignedNormalized8X1 = 5

1 channel unsigned 8-bit normalized integer

cudaChannelFormatKindUnsignedNormalized8X2 = 6

2 channel unsigned 8-bit normalized integer

cudaChannelFormatKindUnsignedNormalized8X4 = 7

4 channel unsigned 8-bit normalized integer

cudaChannelFormatKindUnsignedNormalized16X1 = 8

1 channel unsigned 16-bit normalized integer

cudaChannelFormatKindUnsignedNormalized16X2 = 9

2 channel unsigned 16-bit normalized integer

cudaChannelFormatKindUnsignedNormalized16X4 = 10

4 channel unsigned 16-bit normalized integer

cudaChannelFormatKindSignedNormalized8X1 = 11

1 channel signed 8-bit normalized integer

cudaChannelFormatKindSignedNormalized8X2 = 12

2 channel signed 8-bit normalized integer

cudaChannelFormatKindSignedNormalized8X4 = 13

4 channel signed 8-bit normalized integer

cudaChannelFormatKindSignedNormalized16X1 = 14

1 channel signed 16-bit normalized integer

cudaChannelFormatKindSignedNormalized16X2 = 15

2 channel signed 16-bit normalized integer

cudaChannelFormatKindSignedNormalized16X4 = 16

4 channel signed 16-bit normalized integer

cudaChannelFormatKindUnsignedBlockCompressed1 = 17

4 channel unsigned normalized block-compressed (BC1 compression) format

cudaChannelFormatKindUnsignedBlockCompressed1SRGB = 18

4 channel unsigned normalized block-compressed (BC1 compression) format with sRGB encoding

cudaChannelFormatKindUnsignedBlockCompressed2 = 19

4 channel unsigned normalized block-compressed (BC2 compression) format

cudaChannelFormatKindUnsignedBlockCompressed2SRGB = 20

4 channel unsigned normalized block-compressed (BC2 compression) format with sRGB encoding

cudaChannelFormatKindUnsignedBlockCompressed3 = 21

4 channel unsigned normalized block-compressed (BC3 compression) format

cudaChannelFormatKindUnsignedBlockCompressed3SRGB = 22

4 channel unsigned normalized block-compressed (BC3 compression) format with sRGB encoding

cudaChannelFormatKindUnsignedBlockCompressed4 = 23

1 channel unsigned normalized block-compressed (BC4 compression) format

cudaChannelFormatKindSignedBlockCompressed4 = 24

1 channel signed normalized block-compressed (BC4 compression) format

cudaChannelFormatKindUnsignedBlockCompressed5 = 25

2 channel unsigned normalized block-compressed (BC5 compression) format

cudaChannelFormatKindSignedBlockCompressed5 = 26

2 channel signed normalized block-compressed (BC5 compression) format

cudaChannelFormatKindUnsignedBlockCompressed6H = 27

3 channel unsigned half-float block-compressed (BC6H compression) format

cudaChannelFormatKindSignedBlockCompressed6H = 28

3 channel signed half-float block-compressed (BC6H compression) format

cudaChannelFormatKindUnsignedBlockCompressed7 = 29

4 channel unsigned normalized block-compressed (BC7 compression) format

cudaChannelFormatKindUnsignedBlockCompressed7SRGB = 30

4 channel unsigned normalized block-compressed (BC7 compression) format with sRGB encoding

enum cudaClusterSchedulingPolicy

Cluster scheduling policies. These may be passed to [cudaFuncSetAttribute](#)

Values

cudaClusterSchedulingPolicyDefault = 0

the default policy

cudaClusterSchedulingPolicySpread = 1

spread the blocks within a cluster to the SMs

cudaClusterSchedulingPolicyLoadBalancing = 2

allow the hardware to load-balance the blocks in a cluster to the SMs

enum cudaComputeMode

CUDA device compute modes

Values

cudaComputeModeDefault = 0

Default compute mode (Multiple threads can use [cudaSetDevice\(\)](#) with this device)

cudaComputeModeExclusive = 1

Compute-exclusive-thread mode (Only one thread in one process will be able to use [cudaSetDevice\(\)](#) with this device)

cudaComputeModeProhibited = 2

Compute-prohibited mode (No threads can use [cudaSetDevice\(\)](#) with this device)

cudaComputeModeExclusiveProcess = 3

Compute-exclusive-process mode (Many threads in one process will be able to use [cudaSetDevice\(\)](#) with this device)

enum cudaDeviceAttr

CUDA device attributes

Values

cudaDevAttrMaxThreadsPerBlock = 1

Maximum number of threads per block

cudaDevAttrMaxBlockDimX = 2

Maximum block dimension X

cudaDevAttrMaxBlockDimY = 3

Maximum block dimension Y

cudaDevAttrMaxBlockDimZ = 4

Maximum block dimension Z

cudaDevAttrMaxGridDimX = 5

Maximum grid dimension X

cudaDevAttrMaxGridDimY = 6

Maximum grid dimension Y

cudaDevAttrMaxGridDimZ = 7

Maximum grid dimension Z

cudaDevAttrMaxSharedMemoryPerBlock = 8

Maximum shared memory available per block in bytes

cudaDevAttrTotalConstantMemory = 9

Memory available on device for __constant__ variables in a CUDA C kernel in bytes

cudaDevAttrWarpSize = 10

Warp size in threads

cudaDevAttrMaxPitch = 11

Maximum pitch in bytes allowed by memory copies

cudaDevAttrMaxRegistersPerBlock = 12

Maximum number of 32-bit registers available per block

cudaDevAttrClockRate = 13

Peak clock frequency in kilohertz

cudaDevAttrTextureAlignment = 14

Alignment requirement for textures

cudaDevAttrGpuOverlap = 15

Device can possibly copy memory and execute a kernel concurrently

cudaDevAttrMultiProcessorCount = 16

Number of multiprocessors on device

cudaDevAttrKernelExecTimeout = 17

Specifies whether there is a run time limit on kernels

cudaDevAttrIntegrated = 18

Device is integrated with host memory

cudaDevAttrCanMapHostMemory = 19

Device can map host memory into CUDA address space

cudaDevAttrComputeMode = 20

Compute mode (See [cudaComputeMode](#) for details)

cudaDevAttrMaxTexture1DWidth = 21

Maximum 1D texture width

cudaDevAttrMaxTexture2DWidth = 22

Maximum 2D texture width

cudaDevAttrMaxTexture2DHeight = 23

Maximum 2D texture height

cudaDevAttrMaxTexture3DWidth = 24

Maximum 3D texture width

cudaDevAttrMaxTexture3DHeight = 25

Maximum 3D texture height

cudaDevAttrMaxTexture3DDepth = 26

Maximum 3D texture depth

cudaDevAttrMaxTexture2DLayeredWidth = 27

Maximum 2D layered texture width

cudaDevAttrMaxTexture2DLayeredHeight = 28

Maximum 2D layered texture height

cudaDevAttrMaxTexture2DLayeredLayers = 29

Maximum layers in a 2D layered texture

cudaDevAttrSurfaceAlignment = 30

Alignment requirement for surfaces

cudaDevAttrConcurrentKernels = 31

Device can possibly execute multiple kernels concurrently

cudaDevAttrEccEnabled = 32

Device has ECC support enabled

cudaDevAttrPciBusId = 33

PCI bus ID of the device

cudaDevAttrPciDeviceId = 34

PCI device ID of the device

cudaDevAttrTccDriver = 35

Device is using TCC driver model

cudaDevAttrMemoryClockRate = 36

Peak memory clock frequency in kilohertz

cudaDevAttrGlobalMemoryBusWidth = 37

Global memory bus width in bits

cudaDevAttrL2CacheSize = 38

Size of L2 cache in bytes

cudaDevAttrMaxThreadsPerMultiProcessor = 39

Maximum resident threads per multiprocessor

cudaDevAttrAsyncEngineCount = 40

Number of asynchronous engines

cudaDevAttrUnifiedAddressing = 41

Device shares a unified address space with the host

cudaDevAttrMaxTexture1DLayeredWidth = 42

Maximum 1D layered texture width

cudaDevAttrMaxTexture1DLayeredLayers = 43

Maximum layers in a 1D layered texture

cudaDevAttrMaxTexture2DGatherWidth = 45

Maximum 2D texture width if cudaArrayTextureGather is set

cudaDevAttrMaxTexture2DGatherHeight = 46

Maximum 2D texture height if cudaArrayTextureGather is set

cudaDevAttrMaxTexture3DWidthAlt = 47

Alternate maximum 3D texture width

cudaDevAttrMaxTexture3DHeightAlt = 48

Alternate maximum 3D texture height

cudaDevAttrMaxTexture3DDepthAlt = 49

Alternate maximum 3D texture depth

cudaDevAttrPciDomainId = 50

PCI domain ID of the device

cudaDevAttrTexturePitchAlignment = 51

Pitch alignment requirement for textures

cudaDevAttrMaxTextureCubemapWidth = 52

Maximum cubemap texture width/height

cudaDevAttrMaxTextureCubemapLayeredWidth = 53

Maximum cubemap layered texture width/height

cudaDevAttrMaxTextureCubemapLayeredLayers = 54

Maximum layers in a cubemap layered texture

cudaDevAttrMaxSurface1DWidth = 55

Maximum 1D surface width
cudaDevAttrMaxSurface2DWidth = 56
Maximum 2D surface width
cudaDevAttrMaxSurface2DHeight = 57
Maximum 2D surface height
cudaDevAttrMaxSurface3DWidth = 58
Maximum 3D surface width
cudaDevAttrMaxSurface3DHeight = 59
Maximum 3D surface height
cudaDevAttrMaxSurface3DDepth = 60
Maximum 3D surface depth
cudaDevAttrMaxSurface1DLayeredWidth = 61
Maximum 1D layered surface width
cudaDevAttrMaxSurface1DLayeredLayers = 62
Maximum layers in a 1D layered surface
cudaDevAttrMaxSurface2DLayeredWidth = 63
Maximum 2D layered surface width
cudaDevAttrMaxSurface2DLayeredHeight = 64
Maximum 2D layered surface height
cudaDevAttrMaxSurface2DLayeredLayers = 65
Maximum layers in a 2D layered surface
cudaDevAttrMaxSurfaceCubemapWidth = 66
Maximum cubemap surface width
cudaDevAttrMaxSurfaceCubemapLayeredWidth = 67
Maximum cubemap layered surface width
cudaDevAttrMaxSurfaceCubemapLayeredLayers = 68
Maximum layers in a cubemap layered surface
cudaDevAttrMaxTexture1DLinearWidth = 69
Maximum 1D linear texture width
cudaDevAttrMaxTexture2DLinearWidth = 70
Maximum 2D linear texture width
cudaDevAttrMaxTexture2DLinearHeight = 71
Maximum 2D linear texture height
cudaDevAttrMaxTexture2DLinearPitch = 72
Maximum 2D linear texture pitch in bytes
cudaDevAttrMaxTexture2DMipmappedWidth = 73
Maximum mipmapped 2D texture width
cudaDevAttrMaxTexture2DMipmappedHeight = 74
Maximum mipmapped 2D texture height
cudaDevAttrComputeCapabilityMajor = 75
Major compute capability version number
cudaDevAttrComputeCapabilityMinor = 76
Minor compute capability version number

cudaDevAttrMaxTexture1DMipmappedWidth = 77

Maximum mipmapped 1D texture width

cudaDevAttrStreamPrioritiesSupported = 78

Device supports stream priorities

cudaDevAttrGlobalL1CacheSupported = 79

Device supports caching globals in L1

cudaDevAttrLocalL1CacheSupported = 80

Device supports caching locals in L1

cudaDevAttrMaxSharedMemoryPerMultiprocessor = 81

Maximum shared memory available per multiprocessor in bytes

cudaDevAttrMaxRegistersPerMultiprocessor = 82

Maximum number of 32-bit registers available per multiprocessor

cudaDevAttrManagedMemory = 83

Device can allocate managed memory on this system

cudaDevAttrIsMultiGpuBoard = 84

Device is on a multi-GPU board

cudaDevAttrMultiGpuBoardGroupId = 85

Unique identifier for a group of devices on the same multi-GPU board

cudaDevAttrHostNativeAtomicSupported = 86

Link between the device and the host supports native atomic operations

cudaDevAttrSingleToDoublePrecisionPerfRatio = 87

Ratio of single precision performance (in floating-point operations per second) to double precision performance

cudaDevAttrPageableMemoryAccess = 88

Device supports coherently accessing pageable memory without calling cudaHostRegister on it

cudaDevAttrConcurrentManagedAccess = 89

Device can coherently access managed memory concurrently with the CPU

cudaDevAttrComputePreemptionSupported = 90

Device supports Compute Preemption

cudaDevAttrCanUseHostPointerForRegisteredMem = 91

Device can access host registered memory at the same virtual address as the CPU

cudaDevAttrReserved92 = 92**cudaDevAttrReserved93 = 93****cudaDevAttrReserved94 = 94****cudaDevAttrCooperativeLaunch = 95**

Device supports launching cooperative kernels via [cudaLaunchCooperativeKernel](#)

cudaDevAttrCooperativeMultiDeviceLaunch = 96

Deprecated, cudaLaunchCooperativeKernelMultiDevice is deprecated.

cudaDevAttrMaxSharedMemoryPerBlockOptin = 97

The maximum optin shared memory per block. This value may vary by chip. See

[cudaFuncSetAttribute](#)

cudaDevAttrCanFlushRemoteWrites = 98

Device supports flushing of outstanding remote writes.

cudaDevAttrHostRegisterSupported = 99

Device supports host memory registration via [cudaHostRegister](#).

cudaDevAttrPageableMemoryAccessUsesHostPageTables = 100

Device accesses pageable memory via the host's page tables.

cudaDevAttrDirectManagedMemAccessFromHost = 101

Host can directly access managed memory on the device without migration.

cudaDevAttrMaxBlocksPerMultiprocessor = 106

Maximum number of blocks per multiprocessor

cudaDevAttrMaxPersistingL2CacheSize = 108

Maximum L2 persisting lines capacity setting in bytes.

cudaDevAttrMaxAccessPolicyWindowSize = 109

Maximum value of [cudaAccessPolicyWindow::num_bytes](#).

cudaDevAttrReservedSharedMemoryPerBlock = 111

Shared memory reserved by CUDA driver per block in bytes

cudaDevAttrSparseCudaArraySupported = 112

Device supports sparse CUDA arrays and sparse CUDA mipmapped arrays

cudaDevAttrHostRegisterReadOnlySupported = 113

Device supports using the [cudaHostRegister](#) flag `cudaHostRegisterReadOnly` to register memory that must be mapped as read-only to the GPU

cudaDevAttrTimelineSemaphoreInteropSupported = 114

External timeline semaphore interop is supported on the device

cudaDevAttrMaxTimelineSemaphoreInteropSupported = 114

Deprecated, External timeline semaphore interop is supported on the device

cudaDevAttrMemoryPoolsSupported = 115

Device supports using the [cudaMallocAsync](#) and `cudaMemPool` family of APIs

cudaDevAttrGPUDirectRDMASupported = 116

Device supports GPUDirect RDMA APIs, like `nvidia_p2p_get_pages` (see <https://docs.nvidia.com/cuda/gpudirect-rdma> for more information)

cudaDevAttrGPUDirectRDMAFlushWritesOptions = 117

The returned attribute shall be interpreted as a bitmask, where the individual bits are listed in the [cudaFlushGPUDirectRDMAWritesOptions](#) enum

cudaDevAttrGPUDirectRDMAWritesOrdering = 118

GPUDirect RDMA writes to the device do not need to be flushed for consumers within the scope indicated by the returned attribute. See [cudaGPUDirectRDMAWritesOrdering](#) for the numerical values returned here.

cudaDevAttrMemoryPoolSupportedHandleTypes = 119

Handle types supported with mempool based IPC

cudaDevAttrClusterLaunch = 120

Indicates device supports cluster launch

cudaDevAttrDeferredMappingCudaArraySupported = 121

Device supports deferred mapping CUDA arrays and CUDA mipmapped arrays

cudaDevAttrReserved122 = 122

cudaDevAttrReserved123 = 123**cudaDevAttrReserved124 = 124****cudaDevAttrIpcEventSupport = 125**

Device supports IPC Events.

cudaDevAttrMemSyncDomainCount = 126

Number of memory synchronization domains the device supports.

cudaDevAttrReserved127 = 127**cudaDevAttrReserved128 = 128****cudaDevAttrReserved129 = 129****cudaDevAttrNumaConfig = 130**

NUMA configuration of a device: value is of type cudaDeviceNumaConfig enum

cudaDevAttrNumaid = 131

NUMA node ID of the GPU memory

cudaDevAttrReserved132 = 132**cudaDevAttrMpsEnabled = 133**

Contexts created on this device will be shared via MPS

cudaDevAttrHostNumaid = 134

NUMA ID of the host node closest to the device. Returns -1 when system does not support NUMA.

cudaDevAttrMax

enum cudaDeviceP2PAttr

CUDA device P2P attributes

Values

cudaDevP2PAttrPerformanceRank = 1

A relative value indicating the performance of the link between two devices

cudaDevP2PAttrAccessSupported = 2

Peer access is enabled

cudaDevP2PAttrNativeAtomicSupported = 3

Native atomic operation over the link supported

cudaDevP2PAttrCudaArrayAccessSupported = 4

Accessing CUDA arrays over the link supported

enum cudaDriverEntryPointQueryResult

Enum for status from obtaining driver entry points, used with cudaApiGetDriverEntryPoint

Values

cudaDriverEntryPointSuccess = 0

Search for symbol found a match

cudaDriverEntryPointSymbolNotFound = 1

Search for symbol was not found

cudaDriverEntryPointVersionNotSufficient = 2

Search for symbol was found but version wasn't great enough

enum cudaEglColorFormat

CUDA EGL Color Format - The different planar and multiplanar formats currently supported for CUDA_EGL interops.

Values

cudaEglColorFormatYUV420Planar = 0

Y, U, V in three surfaces, each in a separate surface, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYUV420SemiPlanar = 1

Y, UV in two surfaces (UV as one surface) with VU byte ordering, width, height ratio same as YUV420Planar.

cudaEglColorFormatYUV422Planar = 2

Y, U, V each in a separate surface, U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatYUV422SemiPlanar = 3

Y, UV in two surfaces with VU byte ordering, width, height ratio same as YUV422Planar.

cudaEglColorFormatARGB = 6

R/G/B/A four channels in one surface with BGRA byte ordering.

cudaEglColorFormatRGBA = 7

R/G/B/A four channels in one surface with ABGR byte ordering.

cudaEglColorFormatL = 8

single luminance channel in one surface.

cudaEglColorFormatR = 9

single color channel in one surface.

cudaEglColorFormatYUV444Planar = 10

Y, U, V in three surfaces, each in a separate surface, U/V width = Y width, U/V height = Y height.

cudaEglColorFormatYUV444SemiPlanar = 11

Y, UV in two surfaces (UV as one surface) with VU byte ordering, width, height ratio same as YUV444Planar.

cudaEglColorFormatUYVY422 = 12

Y, U, V in one surface, interleaved as UYVY in one channel.

cudaEglColorFormatUYVY422 = 13

Y, U, V in one surface, interleaved as YUYV in one channel.

cudaEglColorFormatABGR = 14

R/G/B/A four channels in one surface with RGBA byte ordering.

cudaEglColorFormatBGRA = 15

R/G/B/A four channels in one surface with ARGB byte ordering.

cudaEglColorFormatA = 16

Alpha color format - one channel in one surface.

cudaEglColorFormatRG = 17

R/G color format - two channels in one surface with GR byte ordering

cudaEglColorFormatAYUV = 18

Y, U, V, A four channels in one surface, interleaved as VUYA.

cudaEglColorFormatYVU444SemiPlanar = 19

Y, VU in two surfaces (VU as one surface) with UV byte ordering, U/V width = Y width, U/V height = Y height.

cudaEglColorFormatYVU422SemiPlanar = 20

Y, VU in two surfaces (VU as one surface) with UV byte ordering, U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatYVU420SemiPlanar = 21

Y, VU in two surfaces (VU as one surface) with UV byte ordering, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatY10V10U10_444SemiPlanar = 22

Y10, V10U10 in two surfaces (VU as one surface) with UV byte ordering, U/V width = Y width, U/V height = Y height.

cudaEglColorFormatY10V10U10_420SemiPlanar = 23

Y10, V10U10 in two surfaces (VU as one surface) with UV byte ordering, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatY12V12U12_444SemiPlanar = 24

Y12, V12U12 in two surfaces (VU as one surface) with UV byte ordering, U/V width = Y width, U/V height = Y height.

cudaEglColorFormatY12V12U12_420SemiPlanar = 25

Y12, V12U12 in two surfaces (VU as one surface) with UV byte ordering, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatVYUY_ER = 26

Extended Range Y, U, V in one surface, interleaved as VVYU in one channel.

cudaEglColorFormatUYVY_ER = 27

Extended Range Y, U, V in one surface, interleaved as YUYV in one channel.

cudaEglColorFormatYUYV_ER = 28

Extended Range Y, U, V in one surface, interleaved as UYVY in one channel.

cudaEglColorFormatVYUY_ER = 29

Extended Range Y, U, V in one surface, interleaved as VYUY in one channel.

cudaEglColorFormatYUVA_ER = 31

Extended Range Y, U, V, A four channels in one surface, interleaved as AVUY.

cudaEglColorFormatAYUV_ER = 32

Extended Range Y, U, V, A four channels in one surface, interleaved as VUYA.

cudaEglColorFormatYUV444Planar_ER = 33

Extended Range Y, U, V in three surfaces, U/V width = Y width, U/V height = Y height.

cudaEglColorFormatYUV422Planar_ER = 34

Extended Range Y, U, V in three surfaces, U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatYUV420Planar_ER = 35

Extended Range Y, U, V in three surfaces, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYUV444SemiPlanar_ER = 36

Extended Range Y, UV in two surfaces (UV as one surface) with VU byte ordering, U/V width = Y width, U/V height = Y height.

cudaEglColorFormatYUV422SemiPlanar_ER = 37

Extended Range Y, UV in two surfaces (UV as one surface) with VU byte ordering, U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatYUV420SemiPlanar_ER = 38

Extended Range Y, UV in two surfaces (UV as one surface) with VU byte ordering, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYVU444Planar_ER = 39

Extended Range Y, V, U in three surfaces, U/V width = Y width, U/V height = Y height.

cudaEglColorFormatYVU422Planar_ER = 40

Extended Range Y, V, U in three surfaces, U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatYVU420Planar_ER = 41

Extended Range Y, V, U in three surfaces, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYVU444SemiPlanar_ER = 42

Extended Range Y, VU in two surfaces (VU as one surface) with UV byte ordering, U/V width = Y width, U/V height = Y height.

cudaEglColorFormatYVU422SemiPlanar_ER = 43

Extended Range Y, VU in two surfaces (VU as one surface) with UV byte ordering, U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatYVU420SemiPlanar_ER = 44

Extended Range Y, VU in two surfaces (VU as one surface) with UV byte ordering, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatBayerRGGB = 45

Bayer format - one channel in one surface with interleaved RGGB ordering.

cudaEglColorFormatBayerBGGR = 46

Bayer format - one channel in one surface with interleaved BGGR ordering.

cudaEglColorFormatBayerGRBG = 47

Bayer format - one channel in one surface with interleaved GRBG ordering.

cudaEglColorFormatBayerGBRG = 48

Bayer format - one channel in one surface with interleaved GBRG ordering.

cudaEglColorFormatBayer10RGGB = 49

Bayer10 format - one channel in one surface with interleaved RGGB ordering. Out of 16 bits, 10 bits used 6 bits No-op.

cudaEglColorFormatBayer10BGGR = 50

Bayer10 format - one channel in one surface with interleaved BGGR ordering. Out of 16 bits, 10 bits used 6 bits No-op.

cudaEglColorFormatBayer10GRBG = 51

Bayer10 format - one channel in one surface with interleaved GRBG ordering. Out of 16 bits, 10 bits used 6 bits No-op.

cudaEglColorFormatBayer10GBRG = 52

Bayer10 format - one channel in one surface with interleaved GBRG ordering. Out of 16 bits, 10 bits used 6 bits No-op.

cudaEglColorFormatBayer12RGGB = 53

Bayer12 format - one channel in one surface with interleaved RGGB ordering. Out of 16 bits, 12 bits used 4 bits No-op.

cudaEglColorFormatBayer12BGGR = 54

Bayer12 format - one channel in one surface with interleaved BGGR ordering. Out of 16 bits, 12 bits used 4 bits No-op.

cudaEglColorFormatBayer12GRBG = 55

Bayer12 format - one channel in one surface with interleaved GRBG ordering. Out of 16 bits, 12 bits used 4 bits No-op.

cudaEglColorFormatBayer12GBRG = 56

Bayer12 format - one channel in one surface with interleaved GBRG ordering. Out of 16 bits, 12 bits used 4 bits No-op.

cudaEglColorFormatBayer14RGGB = 57

Bayer14 format - one channel in one surface with interleaved RGGB ordering. Out of 16 bits, 14 bits used 2 bits No-op.

cudaEglColorFormatBayer14BGGR = 58

Bayer14 format - one channel in one surface with interleaved BGGR ordering. Out of 16 bits, 14 bits used 2 bits No-op.

cudaEglColorFormatBayer14GRBG = 59

Bayer14 format - one channel in one surface with interleaved GRBG ordering. Out of 16 bits, 14 bits used 2 bits No-op.

cudaEglColorFormatBayer14GBRG = 60

Bayer14 format - one channel in one surface with interleaved GBRG ordering. Out of 16 bits, 14 bits used 2 bits No-op.

cudaEglColorFormatBayer20RGGB = 61

Bayer20 format - one channel in one surface with interleaved RGGB ordering. Out of 32 bits, 20 bits used 12 bits No-op.

cudaEglColorFormatBayer20BGGR = 62

Bayer20 format - one channel in one surface with interleaved BGGR ordering. Out of 32 bits, 20 bits used 12 bits No-op.

cudaEglColorFormatBayer20GRBG = 63

Bayer20 format - one channel in one surface with interleaved GRBG ordering. Out of 32 bits, 20 bits used 12 bits No-op.

cudaEglColorFormatBayer20GBRG = 64

Bayer20 format - one channel in one surface with interleaved GBRG ordering. Out of 32 bits, 20 bits used 12 bits No-op.

cudaEglColorFormatYVU444Planar = 65

Y, V, U in three surfaces, each in a separate surface, U/V width = Y width, U/V height = Y height.

cudaEglColorFormatYVU422Planar = 66

Y, V, U in three surfaces, each in a separate surface, U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatYVU420Planar = 67

Y, V, U in three surfaces, each in a separate surface, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatBayerIspRGGB = 68

Nvidia proprietary Bayer ISP format - one channel in one surface with interleaved RGGB ordering and mapped to opaque integer datatype.

cudaEglColorFormatBayerIspBGGR = 69

Nvidia proprietary Bayer ISP format - one channel in one surface with interleaved BGGR ordering and mapped to opaque integer datatype.

cudaEglColorFormatBayerIspGRBG = 70

Nvidia proprietary Bayer ISP format - one channel in one surface with interleaved GRBG ordering and mapped to opaque integer datatype.

cudaEglColorFormatBayerIspGBRG = 71

Nvidia proprietary Bayer ISP format - one channel in one surface with interleaved GBRG ordering and mapped to opaque integer datatype.

cudaEglColorFormatBayerBCCR = 72

Bayer format - one channel in one surface with interleaved BCCR ordering.

cudaEglColorFormatBayerRCCB = 73

Bayer format - one channel in one surface with interleaved RCCB ordering.

cudaEglColorFormatBayerCRBC = 74

Bayer format - one channel in one surface with interleaved CRBC ordering.

cudaEglColorFormatBayerCBRC = 75

Bayer format - one channel in one surface with interleaved CBRC ordering.

cudaEglColorFormatBayer10CCCC = 76

Bayer10 format - one channel in one surface with interleaved CCCC ordering. Out of 16 bits, 10 bits used 6 bits No-op.

cudaEglColorFormatBayer12BCCR = 77

Bayer12 format - one channel in one surface with interleaved BCCR ordering. Out of 16 bits, 12 bits used 4 bits No-op.

cudaEglColorFormatBayer12RCCB = 78

Bayer12 format - one channel in one surface with interleaved RCCB ordering. Out of 16 bits, 12 bits used 4 bits No-op.

cudaEglColorFormatBayer12CRBC = 79

Bayer12 format - one channel in one surface with interleaved CRBC ordering. Out of 16 bits, 12 bits used 4 bits No-op.

cudaEglColorFormatBayer12CBRC = 80

Bayer12 format - one channel in one surface with interleaved CBRC ordering. Out of 16 bits, 12 bits used 4 bits No-op.

cudaEglColorFormatBayer12CCCC = 81

Bayer12 format - one channel in one surface with interleaved CCCC ordering. Out of 16 bits, 12 bits used 4 bits No-op.

cudaEglColorFormatY = 82

Color format for single Y plane.

cudaEglColorFormatYUV420SemiPlanar_2020 = 83

Y, UV in two surfaces (UV as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYVU420SemiPlanar_2020 = 84

Y, VU in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYUV420Planar_2020 = 85

Y, U, V in three surfaces, each in a separate surface, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYVU420Planar_2020 = 86

Y, V, U in three surfaces, each in a separate surface, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYUV420SemiPlanar_709 = 87

Y, UV in two surfaces (UV as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYVU420SemiPlanar_709 = 88

Y, VU in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYUV420Planar_709 = 89

Y, U, V in three surfaces, each in a separate surface, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatYVU420Planar_709 = 90

Y, V, U in three surfaces, each in a separate surface, U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatY10V10U10_420SemiPlanar_709 = 91

Y10, V10U10 in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatY10V10U10_420SemiPlanar_2020 = 92

Y10, V10U10 in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatY10V10U10_422SemiPlanar_2020 = 93

Y10, V10U10 in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatY10V10U10_422SemiPlanar = 94

Y10, V10U10 in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatY10V10U10_422SemiPlanar_709 = 95

Y10, V10U10 in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = Y height.

cudaEglColorFormatY_ER = 96

Extended Range Color format for single Y plane.

cudaEglColorFormatY_709_ER = 97

Extended Range Color format for single Y plane.

cudaEglColorFormatY10_ER = 98

Extended Range Color format for single Y10 plane.

cudaEglColorFormatY10_709_ER = 99

Extended Range Color format for single Y10 plane.

cudaEglColorFormatY12_ER = 100

Extended Range Color format for single Y12 plane.

cudaEglColorFormatY12_709_ER = 101

Extended Range Color format for single Y12 plane.

cudaEglColorFormatYUVA = 102

Y, U, V, A four channels in one surface, interleaved as AVUY.

cudaEglColorFormatYVYU = 104

Y, U, V in one surface, interleaved as YVYU in one channel.

cudaEglColorFormatVYUY = 105

Y, U, V in one surface, interleaved as VYUY in one channel.

cudaEglColorFormatY10V10U10_420SemiPlanar_ER = 106

Extended Range Y10, V10U10 in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatY10V10U10_420SemiPlanar_709_ER = 107

Extended Range Y10, V10U10 in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatY10V10U10_444SemiPlanar_ER = 108

Extended Range Y10, V10U10 in two surfaces (VU as one surface) U/V width = Y width, U/V height = Y height.

cudaEglColorFormatY10V10U10_444SemiPlanar_709_ER = 109

Extended Range Y10, V10U10 in two surfaces (VU as one surface) U/V width = Y width, U/V height = Y height.

cudaEglColorFormatY12V12U12_420SemiPlanar_ER = 110

Extended Range Y12, V12U12 in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatY12V12U12_420SemiPlanar_709_ER = 111

Extended Range Y12, V12U12 in two surfaces (VU as one surface) U/V width = 1/2 Y width, U/V height = 1/2 Y height.

cudaEglColorFormatY12V12U12_444SemiPlanar_ER = 112

Extended Range Y12, V12U12 in two surfaces (VU as one surface) U/V width = Y width, U/V height = Y height.

cudaEglColorFormatY12V12U12_444SemiPlanar_709_ER = 113

Extended Range Y12, V12U12 in two surfaces (VU as one surface) U/V width = Y width, U/V height = Y height.

enum cudaEglFrameType

CUDA EglFrame type - array or pointer

Values

cudaEglFrameTypeArray = 0

Frame type CUDA array
cudaEglFrameTypePitch = 1
 Frame type CUDA pointer

enum cudaEglResourceLocationFlags

Resource location flags- sysmem or vidmem

For CUDA context on iGPU, since video and system memory are equivalent - these flags will not have an effect on the execution.

For CUDA context on dGPU, applications can use the flag [cudaEglResourceLocationFlags](#) to give a hint about the desired location.

[cudaEglResourceLocationSysmem](#) - the frame data is made resident on the system memory to be accessed by CUDA.

[cudaEglResourceLocationVidmem](#) - the frame data is made resident on the dedicated video memory to be accessed by CUDA.

There may be an additional latency due to new allocation and data migration, if the frame is produced on a different memory.

Values

cudaEglResourceLocationSysmem = 0x00

Resource location sysmem

cudaEglResourceLocationVidmem = 0x01

Resource location vidmem

enum cudaError

CUDA error types

Values

cudaSuccess = 0

The API call returned with no errors. In the case of query calls, this also means that the operation being queried is complete (see [cudaEventQuery\(\)](#) and [cudaStreamQuery\(\)](#)).

cudaErrorInvalidValue = 1

This indicates that one or more of the parameters passed to the API call is not within an acceptable range of values.

cudaErrorMemoryAllocation = 2

The API call failed because it was unable to allocate enough memory or other resources to perform the requested operation.

cudaErrorInitializationError = 3

The API call failed because the CUDA driver and runtime could not be initialized.

cudaErrorCudartUnloading = 4

This indicates that a CUDA Runtime API call cannot be executed because it is being called during process shut down, at a point in time after CUDA driver has been unloaded.

cudaErrorProfilerDisabled = 5

This indicates profiler is not initialized for this run. This can happen when the application is running with external profiling tools like visual profiler.

cudaErrorProfilerNotInitialized = 6

Deprecated This error return is deprecated as of CUDA 5.0. It is no longer an error to attempt to enable/disable the profiling via [cudaProfilerStart](#) or [cudaProfilerStop](#) without initialization.

cudaErrorProfilerAlreadyStarted = 7

Deprecated This error return is deprecated as of CUDA 5.0. It is no longer an error to call [cudaProfilerStart\(\)](#) when profiling is already enabled.

cudaErrorProfilerAlreadyStopped = 8

Deprecated This error return is deprecated as of CUDA 5.0. It is no longer an error to call [cudaProfilerStop\(\)](#) when profiling is already disabled.

cudaErrorInvalidConfiguration = 9

This indicates that a kernel launch is requesting resources that can never be satisfied by the current device. Requesting more shared memory per block than the device supports will trigger this error, as will requesting too many threads or blocks. See [cudaDeviceProp](#) for more device limitations.

cudaErrorInvalidPitchValue = 12

This indicates that one or more of the pitch-related parameters passed to the API call is not within the acceptable range for pitch.

cudaErrorInvalidSymbol = 13

This indicates that the symbol name/identifier passed to the API call is not a valid name or identifier.

cudaErrorInvalidHostPointer = 16

This indicates that at least one host pointer passed to the API call is not a valid host pointer.

Deprecated This error return is deprecated as of CUDA 10.1.

cudaErrorInvalidDevicePointer = 17

This indicates that at least one device pointer passed to the API call is not a valid device pointer. Deprecated This error return is deprecated as of CUDA 10.1.

cudaErrorInvalidTexture = 18

This indicates that the texture passed to the API call is not a valid texture.

cudaErrorInvalidTextureBinding = 19

This indicates that the texture binding is not valid. This occurs if you call [cudaGetTextureAlignmentOffset\(\)](#) with an unbound texture.

cudaErrorInvalidChannelDescriptor = 20

This indicates that the channel descriptor passed to the API call is not valid. This occurs if the format is not one of the formats specified by [cudaChannelFormatKind](#), or if one of the dimensions is invalid.

cudaErrorInvalidMemcpyDirection = 21

This indicates that the direction of the memcpy passed to the API call is not one of the types specified by [cudaMemcpyKind](#).

cudaErrorAddressOfConstant = 22

This indicated that the user has taken the address of a constant variable, which was forbidden up until the CUDA 3.1 release. [Deprecated](#) This error return is deprecated as of CUDA 3.1. Variables in constant memory may now have their address taken by the runtime via [cudaGetSymbolAddress\(\)](#).

cudaErrorTextureFetchFailed = 23

This indicated that a texture fetch was not able to be performed. This was previously used for device emulation of texture operations. [Deprecated](#) This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

cudaErrorTextureNotBound = 24

This indicated that a texture was not bound for access. This was previously used for device emulation of texture operations. [Deprecated](#) This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

cudaErrorSynchronizationError = 25

This indicated that a synchronization operation had failed. This was previously used for some device emulation functions. [Deprecated](#) This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

cudaErrorInvalidFilterSetting = 26

This indicates that a non-float texture was being accessed with linear filtering. This is not supported by CUDA.

cudaErrorInvalidNormSetting = 27

This indicates that an attempt was made to read a non-float texture as a normalized float. This is not supported by CUDA.

cudaErrorMixedDeviceExecution = 28

Mixing of device and device emulation code was not allowed. [Deprecated](#) This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

cudaErrorNotYetImplemented = 31

This indicates that the API call is not yet implemented. Production releases of CUDA will never return this error. [Deprecated](#) This error return is deprecated as of CUDA 4.1.

cudaErrorMemoryValueTooLarge = 32

This indicated that an emulated device pointer exceeded the 32-bit address range. [Deprecated](#) This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

cudaErrorStubLibrary = 34

This indicates that the CUDA driver that the application has loaded is a stub library. Applications that run with the stub rather than a real driver loaded will result in CUDA API returning this error.

cudaErrorInsufficientDriver = 35

This indicates that the installed NVIDIA CUDA driver is older than the CUDA runtime library. This is not a supported configuration. Users should install an updated NVIDIA display driver to allow the application to run.

cudaErrorCallRequiresNewerDriver = 36

This indicates that the API call requires a newer CUDA driver than the one currently installed. Users should install an updated NVIDIA CUDA driver to allow the API call to succeed.

cudaErrorInvalidSurface = 37

This indicates that the surface passed to the API call is not a valid surface.

cudaErrorDuplicateVariableName = 43

This indicates that multiple global or constant variables (across separate CUDA source files in the application) share the same string name.

cudaErrorDuplicateTextureName = 44

This indicates that multiple textures (across separate CUDA source files in the application) share the same string name.

cudaErrorDuplicateSurfaceName = 45

This indicates that multiple surfaces (across separate CUDA source files in the application) share the same string name.

cudaErrorDevicesUnavailable = 46

This indicates that all CUDA devices are busy or unavailable at the current time.

Devices are often busy/unavailable due to use of [cudaComputeModeProhibited](#), [cudaComputeModeExclusiveProcess](#), or when long running CUDA kernels have filled up the GPU and are blocking new work from starting. They can also be unavailable due to memory constraints on a device that already has active CUDA work being performed.

cudaErrorIncompatibleDriverContext = 49

This indicates that the current context is not compatible with this the CUDA Runtime. This can only occur if you are using CUDA Runtime/Driver interoperability and have created an existing Driver context using the driver API. The Driver context may be incompatible either because the Driver context was created using an older version of the API, because the Runtime API call expects a primary driver context and the Driver context is not primary, or because the Driver context has been destroyed. Please see [Interactions](#) with the CUDA Driver API" for more information.

cudaErrorMissingConfiguration = 52

The device function being invoked (usually via [cudaLaunchKernel\(\)](#)) was not previously configured via the [cudaConfigureCall\(\)](#) function.

cudaErrorPriorLaunchFailure = 53

This indicated that a previous kernel launch failed. This was previously used for device emulation of kernel launches. [Deprecated](#) This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

cudaErrorLaunchMaxDepthExceeded = 65

This error indicates that a device runtime grid launch did not occur because the depth of the child grid would exceed the maximum supported number of nested grid launches.

cudaErrorLaunchFileScopedTex = 66

This error indicates that a grid launch did not occur because the kernel uses file-scoped textures which are unsupported by the device runtime. Kernels launched via the device runtime only support textures created with the Texture Object API's.

cudaErrorLaunchFileScopedSurf = 67

This error indicates that a grid launch did not occur because the kernel uses file-scoped surfaces which are unsupported by the device runtime. Kernels launched via the device runtime only support surfaces created with the Surface Object API's.

cudaErrorSyncDepthExceeded = 68

This error indicates that a call to [cudaDeviceSynchronize](#) made from the device runtime failed because the call was made at grid depth greater than than either the default (2 levels of grids) or user specified device limit [cudaLimitDevRuntimeSyncDepth](#). To be able to synchronize on launched grids at a greater depth successfully, the maximum nested depth at which [cudaDeviceSynchronize](#) will be called must be specified with the [cudaLimitDevRuntimeSyncDepth](#) limit to the [cudaDeviceSetLimit](#) api before the host-side launch of a kernel using the device runtime. Keep in mind that additional levels of sync depth require the runtime to reserve large amounts of device memory that cannot be used for user allocations. Note that [cudaDeviceSynchronize](#) made from device runtime is only supported on devices of compute capability < 9.0.

cudaErrorLaunchPendingCountExceeded = 69

This error indicates that a device runtime grid launch failed because the launch would exceed the limit [cudaLimitDevRuntimePendingLaunchCount](#). For this launch to proceed successfully, [cudaDeviceSetLimit](#) must be called to set the [cudaLimitDevRuntimePendingLaunchCount](#) to be higher than the upper bound of outstanding launches that can be issued to the device runtime. Keep in mind that raising the limit of pending device runtime launches will require the runtime to reserve device memory that cannot be used for user allocations.

cudaErrorInvalidDeviceFunction = 98

The requested device function does not exist or is not compiled for the proper device architecture.

cudaErrorNoDevice = 100

This indicates that no CUDA-capable devices were detected by the installed CUDA driver.

cudaErrorInvalidDevice = 101

This indicates that the device ordinal supplied by the user does not correspond to a valid CUDA device or that the action requested is invalid for the specified device.

cudaErrorDeviceNotLicensed = 102

This indicates that the device doesn't have a valid Grid License.

cudaErrorSoftwareValidityNotEstablished = 103

By default, the CUDA runtime may perform a minimal set of self-tests, as well as CUDA driver tests, to establish the validity of both. Introduced in CUDA 11.2, this error return indicates that at least one of these tests has failed and the validity of either the runtime or the driver could not be established.

cudaErrorStartupFailure = 127

This indicates an internal startup failure in the CUDA runtime.

cudaErrorInvalidKernelImage = 200

This indicates that the device kernel image is invalid.

cudaErrorDeviceUninitialized = 201

This most frequently indicates that there is no context bound to the current thread. This can also be returned if the context passed to an API call is not a valid handle (such as a context that has had [cuCtxDestroy\(\)](#) invoked on it). This can also be returned if a user mixes different API versions (i.e. 3010 context with 3020 API calls). See [cuCtxGetApiVersion\(\)](#) for more details.

cudaErrorMapBufferObjectFailed = 205

This indicates that the buffer object could not be mapped.

cudaErrorUnmapBufferObjectFailed = 206

This indicates that the buffer object could not be unmapped.

cudaErrorArrayIsMapped = 207

This indicates that the specified array is currently mapped and thus cannot be destroyed.

cudaErrorAlreadyMapped = 208

This indicates that the resource is already mapped.

cudaErrorNoKernelImageForDevice = 209

This indicates that there is no kernel image available that is suitable for the device. This can occur when a user specifies code generation options for a particular CUDA source file that do not include the corresponding device configuration.

cudaErrorAlreadyAcquired = 210

This indicates that a resource has already been acquired.

cudaErrorNotMapped = 211

This indicates that a resource is not mapped.

cudaErrorNotMappedAsArray = 212

This indicates that a mapped resource is not available for access as an array.

cudaErrorNotMappedAsPointer = 213

This indicates that a mapped resource is not available for access as a pointer.

cudaErrorECCUncorrectable = 214

This indicates that an uncorrectable ECC error was detected during execution.

cudaErrorUnsupportedLimit = 215

This indicates that the [cudaLimit](#) passed to the API call is not supported by the active device.

cudaErrorDeviceAlreadyInUse = 216

This indicates that a call tried to access an exclusive-thread device that is already in use by a different thread.

cudaErrorPeerAccessUnsupported = 217

This error indicates that P2P access is not supported across the given devices.

cudaErrorInvalidPtx = 218

A PTX compilation failed. The runtime may fall back to compiling PTX if an application does not contain a suitable binary for the current device.

cudaErrorInvalidGraphicsContext = 219

This indicates an error with the OpenGL or DirectX context.

cudaErrorNvlinkUncorrectable = 220

This indicates that an uncorrectable NVLink error was detected during the execution.

cudaErrorJitCompilerNotFound = 221

This indicates that the PTX JIT compiler library was not found. The JIT Compiler library is used for PTX compilation. The runtime may fall back to compiling PTX if an application does not contain a suitable binary for the current device.

cudaErrorUnsupportedPtxVersion = 222

This indicates that the provided PTX was compiled with an unsupported toolchain. The most common reason for this, is the PTX was generated by a compiler newer than what is supported by the CUDA driver and PTX JIT compiler.

cudaErrorJitCompilationDisabled = 223

This indicates that the JIT compilation was disabled. The JIT compilation compiles PTX. The runtime may fall back to compiling PTX if an application does not contain a suitable binary for the current device.

cudaErrorUnsupportedExecAffinity = 224

This indicates that the provided execution affinity is not supported by the device.

cudaErrorUnsupportedDevSideSync = 225

This indicates that the code to be compiled by the PTX JIT contains unsupported call to `cudaDeviceSynchronize`.

cudaErrorInvalidSource = 300

This indicates that the device kernel source is invalid.

cudaErrorFileNotFound = 301

This indicates that the file specified was not found.

cudaErrorSharedObjectSymbolNotFound = 302

This indicates that a link to a shared object failed to resolve.

cudaErrorSharedObjectInitFailed = 303

This indicates that initialization of a shared object failed.

cudaErrorOperatingSystem = 304

This error indicates that an OS call failed.

cudaErrorInvalidResourceHandle = 400

This indicates that a resource handle passed to the API call was not valid. Resource handles are opaque types like `cudaStream_t` and `cudaEvent_t`.

cudaErrorIllegalState = 401

This indicates that a resource required by the API call is not in a valid state to perform the requested operation.

cudaErrorLossyQuery = 402

This indicates an attempt was made to introspect an object in a way that would discard semantically important information. This is either due to the object using functionality newer than the API version used to introspect it or omission of optional return arguments.

cudaErrorSymbolNotFound = 500

This indicates that a named symbol was not found. Examples of symbols are global/constant variable names, driver function names, texture names, and surface names.

cudaErrorNotReady = 600

This indicates that asynchronous operations issued previously have not completed yet. This result is not actually an error, but must be indicated differently than [cudaSuccess](#) (which indicates completion). Calls that may return this value include [cudaEventQuery\(\)](#) and [cudaStreamQuery\(\)](#).

cudaErrorIllegalAddress = 700

The device encountered a load or store instruction on an invalid memory address. This leaves the process in an inconsistent state and any further CUDA work will return the same error. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorLaunchOutOfResources = 701

This indicates that a launch did not occur because it did not have appropriate resources. Although this error is similar to [cudaErrorInvalidConfiguration](#), this error usually indicates that the user has attempted to pass too many arguments to the device kernel, or the kernel launch specifies too many threads for the kernel's register count.

cudaErrorLaunchTimeout = 702

This indicates that the device kernel took too long to execute. This can only occur if timeouts are enabled - see the device property [kernelExecTimeoutEnabled](#) for more information. This leaves the process in an inconsistent state and any further CUDA work will return the same error. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorLaunchIncompatibleTexturing = 703

This error indicates a kernel launch that uses an incompatible texturing mode.

cudaErrorPeerAccessAlreadyEnabled = 704

This error indicates that a call to [cudaDeviceEnablePeerAccess\(\)](#) is trying to re-enable peer addressing on from a context which has already had peer addressing enabled.

cudaErrorPeerAccessNotEnabled = 705

This error indicates that [cudaDeviceDisablePeerAccess\(\)](#) is trying to disable peer addressing which has not been enabled yet via [cudaDeviceEnablePeerAccess\(\)](#).

cudaErrorSetOnActiveProcess = 708

This indicates that the user has called [cudaSetValidDevices\(\)](#), [cudaSetDeviceFlags\(\)](#), [cudaD3D9SetDirect3DDevice\(\)](#), [cudaD3D10SetDirect3DDevice](#), [cudaD3D11SetDirect3DDevice\(\)](#), or [cudaVDPAUSetVDPAUDevice\(\)](#) after initializing the CUDA runtime by calling non-device management operations (allocating memory and launching kernels are examples of non-device management operations). This error can also be returned if using runtime/driver interoperability and there is an existing [CUcontext](#) active on the host thread.

cudaErrorContextIsDestroyed = 709

This error indicates that the context current to the calling thread has been destroyed using [cuCtxDestroy](#), or is a primary context which has not yet been initialized.

cudaErrorAssert = 710

An assert triggered in device code during kernel execution. The device cannot be used again. All existing allocations are invalid. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorTooManyPeers = 711

This error indicates that the hardware resources required to enable peer access have been exhausted for one or more of the devices passed to `cudaEnablePeerAccess()`.

cudaErrorHostMemoryAlreadyRegistered = 712

This error indicates that the memory range passed to `cudaHostRegister()` has already been registered.

cudaErrorHostMemoryNotRegistered = 713

This error indicates that the pointer passed to `cudaHostUnregister()` does not correspond to any currently registered memory region.

cudaErrorHardwareStackError = 714

Device encountered an error in the call stack during kernel execution, possibly due to stack corruption or exceeding the stack size limit. This leaves the process in an inconsistent state and any further CUDA work will return the same error. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorIllegalInstruction = 715

The device encountered an illegal instruction during kernel execution. This leaves the process in an inconsistent state and any further CUDA work will return the same error. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorMisalignedAddress = 716

The device encountered a load or store instruction on a memory address which is not aligned. This leaves the process in an inconsistent state and any further CUDA work will return the same error. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorInvalidAddressSpace = 717

While executing a kernel, the device encountered an instruction which can only operate on memory locations in certain address spaces (global, shared, or local), but was supplied a memory address not belonging to an allowed address space. This leaves the process in an inconsistent state and any further CUDA work will return the same error. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorInvalidPc = 718

The device encountered an invalid program counter. This leaves the process in an inconsistent state and any further CUDA work will return the same error. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorLaunchFailure = 719

An exception occurred on the device while executing a kernel. Common causes include dereferencing an invalid device pointer and accessing out of bounds shared memory. Less common cases can be system specific - more information about these cases can be found in the system specific user guide. This leaves the process in an inconsistent state and any further CUDA work will return the same error. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorCooperativeLaunchTooLarge = 720

This error indicates that the number of blocks launched per grid for a kernel that was launched via either `cudaLaunchCooperativeKernel` or `cudaLaunchCooperativeKernelMultiDevice` exceeds the maximum number of

blocks as allowed by [cudaOccupancyMaxActiveBlocksPerMultiprocessor](#) or [cudaOccupancyMaxActiveBlocksPerMultiprocessorWithFlags](#) times the number of multiprocessors as specified by the device attribute [cudaDevAttrMultiProcessorCount](#).

cudaErrorNotPermitted = 800

This error indicates the attempted operation is not permitted.

cudaErrorNotSupported = 801

This error indicates the attempted operation is not supported on the current system or device.

cudaErrorSystemNotReady = 802

This error indicates that the system is not yet ready to start any CUDA work. To continue using CUDA, verify the system configuration is in a valid state and all required driver daemons are actively running. More information about this error can be found in the system specific user guide.

cudaErrorSystemDriverMismatch = 803

This error indicates that there is a mismatch between the versions of the display driver and the CUDA driver. Refer to the compatibility documentation for supported versions.

cudaErrorCompatNotSupportedOnDevice = 804

This error indicates that the system was upgraded to run with forward compatibility but the visible hardware detected by CUDA does not support this configuration. Refer to the compatibility documentation for the supported hardware matrix or ensure that only supported hardware is visible during initialization via the CUDA_VISIBLE_DEVICES environment variable.

cudaErrorMpsConnectionFailed = 805

This error indicates that the MPS client failed to connect to the MPS control daemon or the MPS server.

cudaErrorMpsRpcFailure = 806

This error indicates that the remote procedural call between the MPS server and the MPS client failed.

cudaErrorMpsServerNotReady = 807

This error indicates that the MPS server is not ready to accept new MPS client requests.

This error can be returned when the MPS server is in the process of recovering from a fatal failure.

cudaErrorMpsMaxClientsReached = 808

This error indicates that the hardware resources required to create MPS client have been exhausted.

cudaErrorMpsMaxConnectionsReached = 809

This error indicates the the hardware resources required to device connections have been exhausted.

cudaErrorMpsClientTerminated = 810

This error indicates that the MPS client has been terminated by the server. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorCdpNotSupported = 811

This error indicates, that the program is using CUDA Dynamic Parallelism, but the current configuration, like MPS, does not support it.

cudaErrorCdpVersionMismatch = 812

This error indicates, that the program contains an unsupported interaction between different versions of CUDA Dynamic Parallelism.

cudaErrorStreamCaptureUnsupported = 900

The operation is not permitted when the stream is capturing.

cudaErrorStreamCaptureInvalidated = 901

The current capture sequence on the stream has been invalidated due to a previous error.

cudaErrorStreamCaptureMerge = 902

The operation would have resulted in a merge of two independent capture sequences.

cudaErrorStreamCaptureUnmatched = 903

The capture was not initiated in this stream.

cudaErrorStreamCaptureUnjoined = 904

The capture sequence contains a fork that was not joined to the primary stream.

cudaErrorStreamCaptureIsolation = 905

A dependency would have been created which crosses the capture sequence boundary.

Only implicit in-stream ordering dependencies are allowed to cross the boundary.

cudaErrorStreamCaptureImplicit = 906

The operation would have resulted in a disallowed implicit dependency on a current capture sequence from cudaStreamLegacy.

cudaErrorCapturedEvent = 907

The operation is not permitted on an event which was last recorded in a capturing stream.

cudaErrorStreamCaptureWrongThread = 908

A stream capture sequence not initiated with the cudaStreamCaptureModeRelaxed argument to [cudaStreamBeginCapture](#) was passed to [cudaStreamEndCapture](#) in a different thread.

cudaErrorTimeout = 909

This indicates that the wait operation has timed out.

cudaErrorGraphExecUpdateFailure = 910

This error indicates that the graph update was not performed because it included changes which violated constraints specific to instantiated graph update.

cudaErrorExternalDevice = 911

This indicates that an async error has occurred in a device outside of CUDA. If CUDA was waiting for an external device's signal before consuming shared data, the external device signaled an error indicating that the data is not valid for consumption. This leaves the process in an inconsistent state and any further CUDA work will return the same error. To continue using CUDA, the process must be terminated and relaunched.

cudaErrorInvalidClusterSize = 912

This indicates that a kernel launch error has occurred due to cluster misconfiguration.

cudaErrorUnknown = 999

This indicates that an unknown internal error has occurred.

cudaErrorApiFailureBase = 10000

enum cudaExternalMemoryHandleType

External memory handle types

Values

cudaExternalMemoryHandleTypeOpaqueFd = 1

Handle is an opaque file descriptor

cudaExternalMemoryHandleTypeOpaqueWin32 = 2

Handle is an opaque shared NT handle

cudaExternalMemoryHandleTypeOpaqueWin32Kmt = 3

Handle is an opaque, globally shared handle

cudaExternalMemoryHandleTypeD3D12Heap = 4

Handle is a D3D12 heap object

cudaExternalMemoryHandleTypeD3D12Resource = 5

Handle is a D3D12 committed resource

cudaExternalMemoryHandleTypeD3D11Resource = 6

Handle is a shared NT handle to a D3D11 resource

cudaExternalMemoryHandleTypeD3D11ResourceKmt = 7

Handle is a globally shared handle to a D3D11 resource

cudaExternalMemoryHandleTypeNvSciBuf = 8

Handle is an NvSciBuf object

enum cudaExternalSemaphoreHandleType

External semaphore handle types

Values

cudaExternalSemaphoreHandleTypeOpaqueFd = 1

Handle is an opaque file descriptor

cudaExternalSemaphoreHandleTypeOpaqueWin32 = 2

Handle is an opaque shared NT handle

cudaExternalSemaphoreHandleTypeOpaqueWin32Kmt = 3

Handle is an opaque, globally shared handle

cudaExternalSemaphoreHandleTypeD3D12Fence = 4

Handle is a shared NT handle referencing a D3D12 fence object

cudaExternalSemaphoreHandleTypeD3D11Fence = 5

Handle is a shared NT handle referencing a D3D11 fence object

cudaExternalSemaphoreHandleTypeNvSciSync = 6

Opaque handle to NvSciSync Object

cudaExternalSemaphoreHandleTypeKeyedMutex = 7

Handle is a shared NT handle referencing a D3D11 keyed mutex object

cudaExternalSemaphoreHandleTypeKeyedMutexKmt = 8

Handle is a shared KMT handle referencing a D3D11 keyed mutex object

cudaExternalSemaphoreHandleTypeTimelineSemaphoreFd = 9

Handle is an opaque handle file descriptor referencing a timeline semaphore

cudaExternalSemaphoreHandleTypeTimelineSemaphoreWin32 = 10

Handle is an opaque handle file descriptor referencing a timeline semaphore

enum cudaFlushGPUDirectRDMAWritesOptions

CUDA GPUDirect RDMA flush writes APIs supported on the device

Values

cudaFlushGPUDirectRDMAWritesOptionHost = 1<<0

[cudaDeviceFlushGPUDirectRDMAWrites\(\)](#) and its CUDA Driver API counterpart are supported on the device.

cudaFlushGPUDirectRDMAWritesOptionMemOps = 1<<1

The [CU_STREAM_WAIT_VALUE_FLUSH](#) flag and the [CU_STREAM_MEM_OP_FLUSH_REMOTE_WRITES](#) MemOp are supported on the CUDA device.

enum cudaFlushGPUDirectRDMAWritesScope

CUDA GPUDirect RDMA flush writes scopes

Values

cudaFlushGPUDirectRDMAWritesToOwner = 100

Blocks until remote writes are visible to the CUDA device context owning the data.

cudaFlushGPUDirectRDMAWritesToAllDevices = 200

Blocks until remote writes are visible to all CUDA device contexts.

enum cudaFlushGPUDirectRDMAWritesTarget

CUDA GPUDirect RDMA flush writes targets

Values

cudaFlushGPUDirectRDMAWritesTargetCurrentDevice

Sets the target for [cudaDeviceFlushGPUDirectRDMAWrites\(\)](#) to the currently active CUDA device context.

enum cudaFuncAttribute

CUDA function attributes that can be set using [cudaFuncSetAttribute](#)

Values

cudaFuncAttributeMaxDynamicSharedMemorySize = 8

Maximum dynamic shared memory size

cudaFuncAttributePreferredSharedMemoryCarveout = 9

Preferred shared memory-L1 cache split

cudaFuncAttributeClusterDimMustBeSet = 10

Indicator to enforce valid cluster dimension specification on kernel launch

cudaFuncAttributeRequiredClusterWidth = 11

Required cluster width

cudaFuncAttributeRequiredClusterHeight = 12

Required cluster height

cudaFuncAttributeRequiredClusterDepth = 13

Required cluster depth

cudaFuncAttributeNonPortableClusterSizeAllowed = 14

Whether non-portable cluster scheduling policy is supported

cudaFuncAttributeClusterSchedulingPolicyPreference = 15

Required cluster scheduling policy preference

cudaFuncAttributeMax

enum cudaFuncCache

CUDA function cache configurations

Values

cudaFuncCachePreferNone = 0

Default function cache configuration, no preference

cudaFuncCachePreferShared = 1

Prefer larger shared memory and smaller L1 cache

cudaFuncCachePreferL1 = 2

Prefer larger L1 cache and smaller shared memory

cudaFuncCachePreferEqual = 3

Prefer equal size L1 cache and shared memory

enum cudaGetDriverEntryPointFlags

Flags to specify search options to be used with [cudaGetDriverEntryPoint](#) For more details see [cuGetProcAddress](#)

Values

cudaEnableDefault = 0x0

Default search mode for driver symbols.

cudaEnableLegacyStream = 0x1

Search for legacy versions of driver symbols.

cudaEnablePerThreadDefaultStream = 0x2

Search for per-thread versions of driver symbols.

enum cudaGPUDirectRDMAWritesOrdering

CUDA GPUDirect RDMA flush writes ordering features of the device

Values

cudaGPUDirectRDMAWritesOrderingNone = 0

The device does not natively support ordering of GPUDirect RDMA writes.

`cudaFlushGPUDirectRDMAWrites()` can be leveraged if supported.

cudaGPUDirectRDMAWritesOrderingOwner = 100

Natively, the device can consistently consume GPUDirect RDMA writes, although other CUDA devices may not.

cudaGPUDirectRDMAWritesOrderingAllDevices = 200

Any CUDA device in the system can consistently consume GPUDirect RDMA writes to this device.

enum cudaGraphConditionalNodeType

CUDA conditional node types

Values

cudaGraphCondTypeIf = 0

Conditional 'if' Node. Body executed once if condition value is non-zero.

cudaGraphCondTypeWhile = 1

Conditional 'while' Node. Body executed repeatedly while condition value is non-zero.

enum cudaGraphDebugDotFlags

CUDA Graph debug write options

Values

cudaGraphDebugDotFlagsVerbose = 1<<0

Output all debug data as if every debug flag is enabled

cudaGraphDebugDotFlagsKernelNodeParams = 1<<2

Adds `cudaKernelNodeParams` to output

cudaGraphDebugDotFlagsMemcpyNodeParams = 1<<3

Adds `cudaMemcpy3DParms` to output

cudaGraphDebugDotFlagsMemsetNodeParams = 1<<4

Adds `cudaMemsetParams` to output

cudaGraphDebugDotFlagsHostNodeParams = 1<<5

Adds [cudaHostNodeParams](#) to output

cudaGraphDebugDotFlagsEventNodeParams = 1<<6
Adds cudaEvent_t handle from record and wait nodes to output

cudaGraphDebugDotFlagsExtSemasSignalNodeParams = 1<<7
Adds [cudaExternalSemaphoreSignalNodeParams](#) values to output

cudaGraphDebugDotFlagsExtSemasWaitNodeParams = 1<<8
Adds [cudaExternalSemaphoreWaitNodeParams](#) to output

cudaGraphDebugDotFlagsKernelNodeAttributes = 1<<9
Adds cudaKernelNodeAttrID values to output

cudaGraphDebugDotFlagsHandles = 1<<10
Adds node handles and every kernel function handle to output

cudaGraphDebugDotFlagsConditionalNodeParams = 1<<15
Adds [cudaConditionalNodeParams](#) to output

enum cudaGraphDependencyType

Type annotations that can be applied to graph edges as part of [cudaGraphEdgeData](#).

Values

cudaGraphDependencyTypeDefault = 0

This is an ordinary dependency.

cudaGraphDependencyTypeProgrammatic = 1

This dependency type allows the downstream node to use

[cudaGridDependencySynchronize\(\)](#). It may only be used between kernel nodes, and must be used with either the [cudaGraphKernelNodePortProgrammatic](#) or [cudaGraphKernelNodePortLaunchCompletion](#) outgoing port.

enum cudaGraphExecUpdateResult

CUDA Graph Update error types

Values

cudaGraphExecUpdateSuccess = 0x0

The update succeeded

cudaGraphExecUpdateError = 0x1

The update failed for an unexpected reason which is described in the return value of the function

cudaGraphExecUpdateErrorTopologyChanged = 0x2

The update failed because the topology changed

cudaGraphExecUpdateErrorNodeTypeChanged = 0x3

The update failed because a node type changed

cudaGraphExecUpdateErrorFunctionChanged = 0x4

The update failed because the function of a kernel node changed (CUDA driver < 11.2)

cudaGraphExecUpdateErrorParametersChanged = 0x5

The update failed because the parameters changed in a way that is not supported

cudaGraphExecUpdateErrorNotSupported = 0x6

The update failed because something about the node is not supported

cudaGraphExecUpdateErrorUnsupportedFunctionChange = 0x7

The update failed because the function of a kernel node changed in an unsupported way

cudaGraphExecUpdateErrorAttributesChanged = 0x8

The update failed because the node attributes changed in a way that is not supported

enum cudaGraphicsCubeFace

CUDA graphics interop array indices for cube maps

Values

cudaGraphicsCubeFacePositiveX = 0x00

Positive X face of cubemap

cudaGraphicsCubeFaceNegativeX = 0x01

Negative X face of cubemap

cudaGraphicsCubeFacePositiveY = 0x02

Positive Y face of cubemap

cudaGraphicsCubeFaceNegativeY = 0x03

Negative Y face of cubemap

cudaGraphicsCubeFacePositiveZ = 0x04

Positive Z face of cubemap

cudaGraphicsCubeFaceNegativeZ = 0x05

Negative Z face of cubemap

enum cudaGraphicsMapFlags

CUDA graphics interop map flags

Values

cudaGraphicsMapFlagsNone = 0

Default; Assume resource can be read/written

cudaGraphicsMapFlagsReadOnly = 1

CUDA will not write to this resource

cudaGraphicsMapFlagsWriteDiscard = 2

CUDA will only write to and will not read from this resource

enum cudaGraphicsRegisterFlags

CUDA graphics interop register flags

Values

cudaGraphicsRegisterFlagsNone = 0

Default

cudaGraphicsRegisterFlagsReadOnly = 1

CUDA will not write to this resource

cudaGraphicsRegisterFlagsWriteDiscard = 2

CUDA will only write to and will not read from this resource

cudaGraphicsRegisterFlagsSurfaceLoadStore = 4

CUDA will bind this resource to a surface reference

cudaGraphicsRegisterFlagsTextureGather = 8

CUDA will perform texture gather operations on this resource

enum cudaGraphInstantiateFlags

Flags for instantiating a graph

Values

cudaGraphInstantiateFlagAutoFreeOnLaunch = 1

Automatically free memory allocated in a graph before relaunching.

cudaGraphInstantiateFlagUpload = 2

Automatically upload the graph after instantiation. Only supported by

cudaGraphInstantiateWithParams. The upload will be performed using the stream provided in instantiateParams.

cudaGraphInstantiateFlagDeviceLaunch = 4

Instantiate the graph to be launchable from the device. This flag can only be used on platforms which support unified addressing. This flag cannot be used in conjunction with cudaGraphInstantiateFlagAutoFreeOnLaunch.

cudaGraphInstantiateFlagUseNodePriority = 8

Run the graph using the per-node priority attributes rather than the priority of the stream it is launched into.

enum cudaGraphInstantiateResult

Graph instantiation results

Values

cudaGraphInstantiateSuccess = 0

Instantiation succeeded

cudaGraphInstantiateError = 1

Instantiation failed for an unexpected reason which is described in the return value of the function

cudaGraphInstantiateInvalidStructure = 2

Instantiation failed due to invalid structure, such as cycles

cudaGraphInstantiateNodeOperationNotSupported = 3

Instantiation for device launch failed because the graph contained an unsupported operation

cudaGraphInstantiateMultipleDevicesNotSupported = 4

Instantiation for device launch failed due to the nodes belonging to different contexts

enum cudaGraphMemAttributeType

Graph memory attributes

Values

cudaGraphMemAttrUsedMemCurrent = 0x0

(value type = cuuint64_t) Amount of memory, in bytes, currently associated with graphs.

cudaGraphMemAttrUsedMemHigh = 0x1

(value type = cuuint64_t) High watermark of memory, in bytes, associated with graphs since the last time it was reset. High watermark can only be reset to zero.

cudaGraphMemAttrReservedMemCurrent = 0x2

(value type = cuuint64_t) Amount of memory, in bytes, currently allocated for use by the CUDA graphs asynchronous allocator.

cudaGraphMemAttrReservedMemHigh = 0x3

(value type = cuuint64_t) High watermark of memory, in bytes, currently allocated for use by the CUDA graphs asynchronous allocator.

enum cudaGraphNodeType

CUDA Graph node types

Values

cudaGraphNodeTypeKernel = 0x00

GPU kernel node

cudaGraphNodeTypeMemcpy = 0x01

Memcpy node

cudaGraphNodeTypeMemset = 0x02

Memset node

cudaGraphNodeTypeHost = 0x03

Host (executable) node

cudaGraphNodeTypeGraph = 0x04

Node which executes an embedded graph

cudaGraphNodeTypeEmpty = 0x05

Empty (no-op) node

cudaGraphNodeTypeWaitEvent = 0x06

External event wait node

cudaGraphNodeTypeEventRecord = 0x07

External event record node

cudaGraphNodeTypeExtSemaphoreSignal = 0x08

External semaphore signal node

cudaGraphNodeTypeExtSemaphoreWait = 0x09

External semaphore wait node

cudaGraphNodeTypeMemAlloc = 0x0a

Memory allocation node

cudaGraphNodeTypeMemFree = 0x0b

Memory free node

cudaGraphNodeTypeConditional = 0x0d

Conditional nodeMay be used to implement a conditional execution path or loop inside of a graph. The graph(s) contained within the body of the conditional node can be selectively executed or iterated upon based on the value of a conditional variable.Handles must be created in advance of creating the node using [cudaGraphConditionalHandleCreate](#).The following restrictions apply to graphs which contain conditional nodes: The graph cannot be used in a child node. Only one instantiation of the graph may exist at any point in time. The graph cannot be cloned.To set the control value, supply a default value when creating the handle and/or call [cudaGraphSetConditional](#) from device code.

cudaGraphNodeTypeCount

enum cudaLaunchAttributeID

Launch attributes enum; used as id field of [cudaLaunchAttribute](#)

Values

cudaLaunchAttributeIgnore = 0

Ignored entry, for convenient composition

cudaLaunchAttributeAccessPolicyWindow = 1

Valid for streams, graph nodes, launches. See

[cudaLaunchAttributeValue::accessPolicyWindow](#).

cudaLaunchAttributeCooperative = 2

Valid for graph nodes, launches. See [cudaLaunchAttributeValue::cooperative](#).

cudaLaunchAttributeSynchronizationPolicy = 3

Valid for streams. See [cudaLaunchAttributeValue::syncPolicy](#).

cudaLaunchAttributeClusterDimension = 4

Valid for graph nodes, launches. See [cudaLaunchAttributeValue::clusterDim](#).

cudaLaunchAttributeClusterSchedulingPolicyPreference = 5

Valid for graph nodes, launches. See

[cudaLaunchAttributeValue::clusterSchedulingPolicyPreference](#).

cudaLaunchAttributeProgrammaticStreamSerialization = 6

Valid for launches. Setting

[cudaLaunchAttributeValue::programmaticStreamSerializationAllowed](#) to non-0 signals

that the kernel will use programmatic means to resolve its stream dependency, so that the CUDA runtime should opportunistically allow the grid's execution to overlap with the previous kernel in the stream, if that kernel requests the overlap. The dependent launches can choose to wait on the dependency using the programmatic sync ([cudaGridDependencySynchronize\(\)](#) or equivalent PTX instructions).

cudaLaunchAttributeProgrammaticEvent = 7

Valid for launches. Set [cudaLaunchAttributeValue::programmaticEvent](#) to record the event. Event recorded through this launch attribute is guaranteed to only trigger after all block in the associated kernel trigger the event. A block can trigger the event programmatically in a future CUDA release. A trigger can also be inserted at the beginning of each block's execution if triggerAtBlockStart is set to non-0. The dependent launches can choose to wait on the dependency using the programmatic sync ([cudaGridDependencySynchronize\(\)](#) or equivalent PTX instructions). Note that dependents (including the CPU thread calling [cudaEventSynchronize\(\)](#)) are not guaranteed to observe the release precisely when it is released. For example, [cudaEventSynchronize\(\)](#) may only observe the event trigger long after the associated kernel has completed. This recording type is primarily meant for establishing programmatic dependency between device tasks. Note also this type of dependency allows, but does not guarantee, concurrent execution of tasks. The event supplied must not be an interprocess or interop event. The event must disable timing (i.e. must be created with the [cudaEventDisableTiming](#) flag set).

cudaLaunchAttributePriority = 8

Valid for streams, graph nodes, launches. See [cudaLaunchAttributeValue::priority](#).

cudaLaunchAttributeMemSyncDomainMap = 9

Valid for streams, graph nodes, launches. See
[cudaLaunchAttributeValue::memSyncDomainMap](#).

cudaLaunchAttributeMemSyncDomain = 10

Valid for streams, graph nodes, launches. See
[cudaLaunchAttributeValue::memSyncDomain](#).

cudaLaunchAttributeLaunchCompletionEvent = 12

Valid for launches. Set [cudaLaunchAttributeValue::launchCompletionEvent](#) to record the event. Nominally, the event is triggered once all blocks of the kernel have begun execution. Currently this is a best effort. If a kernel B has a launch completion dependency on a kernel A, B may wait until A is complete. Alternatively, blocks of B may begin before all blocks of A have begun, for example if B can claim execution resources unavailable to A (e.g. they run on different GPUs) or if B is a higher priority than A. Exercise caution if such an ordering inversion could lead to deadlock. A launch completion event is nominally similar to a programmatic event with triggerAtBlockStart set except that it is not visible to [cudaGridDependencySynchronize\(\)](#) and can be used with compute capability less than 9.0. The event supplied must not be an interprocess or interop event. The event must disable timing (i.e. must be created with the [cudaEventDisableTiming](#) flag set).

enum cudaLaunchMemSyncDomain

Memory Synchronization Domain

A kernel can be launched in a specified memory synchronization domain that affects all memory operations issued by that kernel. A memory barrier issued in one domain will only order memory operations in that domain, thus eliminating latency increase from memory barriers ordering unrelated traffic.

By default, kernels are launched in domain 0. Kernel launched with [cudaLaunchMemSyncDomainRemote](#) will have a different domain ID. User may also alter the domain ID with [cudaLaunchMemSyncDomainMap](#) for a specific stream / graph node / kernel launch. See [cudaLaunchAttributeMemSyncDomain](#), [cudaStreamSetAttribute](#), [cudaLaunchKernelEx](#), [cudaGraphKernelNodeSetAttribute](#).

Memory operations done in kernels launched in different domains are considered system-scope distanced. In other words, a GPU scoped memory synchronization is not sufficient for memory order to be observed by kernels in another memory synchronization domain even if they are on the same GPU.

Values

cudaLaunchMemSyncDomainDefault = 0

Launch kernels in the default domain

cudaLaunchMemSyncDomainRemote = 1

Launch kernels in the remote domain

enum cudaLimit

CUDA Limits

Values

cudaLimitStackSize = 0x00

GPU thread stack size

cudaLimitPrintfFifoSize = 0x01

GPU printf FIFO size

cudaLimitMallocHeapSize = 0x02

GPU malloc heap size

cudaLimitDevRuntimeSyncDepth = 0x03

GPU device runtime synchronize depth

cudaLimitDevRuntimePendingLaunchCount = 0x04

GPU device runtime pending launch count

cudaLimitMaxL2FetchGranularity = 0x05

A value between 0 and 128 that indicates the maximum fetch granularity of L2 (in Bytes).

This is a hint

cudaLimitPersistingL2CacheSize = 0x06

A size in bytes for L2 persisting lines cache size

enum cudaMemAccessFlags

Specifies the memory protection flags for mapping.

Values

cudaMemAccessFlagsProtNone = 0

Default, make the address range not accessible

cudaMemAccessFlagsProtRead = 1

Make the address range read accessible

cudaMemAccessFlagsProtReadWrite = 3

Make the address range read-write accessible

enum cudaMemAllocationHandleType

Flags for specifying particular handle types

Values

cudaMemHandleTypeNone = 0x0

Does not allow any export mechanism. >

cudaMemHandleTypePosixFileDescriptor = 0x1

Allows a file descriptor to be used for exporting. Permitted only on POSIX systems. (int)

cudaMemHandleTypeWin32 = 0x2

Allows a Win32 NT handle to be used for exporting. (HANDLE)

cudaMemHandleTypeWin32Kmt = 0x4

Allows a Win32 KMT handle to be used for exporting. (D3DKMT_HANDLE)

enum cudaMemAllocationType

Defines the allocation types available

Values

cudaMemAllocationTypeInvalid = 0x0

cudaMemAllocationTypePinned = 0x1

This allocation type is 'pinned', i.e. cannot migrate from its current location while the application is actively using it

cudaMemAllocationTypeMax = 0x7FFFFFFF

enum cudaMemcpyKind

CUDA memory copy types

Values

cudaMemcpyHostToHost = 0

Host -> Host

cudaMemcpyHostToDevice = 1

Host -> Device

cudaMemcpyDeviceToHost = 2

Device -> Host

cudaMemcpyDeviceToDevice = 3

Device -> Device

cudaMemcpyDefault = 4

Direction of the transfer is inferred from the pointer values. Requires unified virtual addressing

enum cudaMemLocationType

Specifies the type of location

Values

cudaMemLocationTypeInvalid = 0

cudaMemLocationTypeDevice = 1

Location is a device location, thus id is a device ordinal

cudaMemLocationTypeHost = 2

Location is host, id is ignored

cudaMemLocationTypeHostNuma = 3

Location is a host NUMA node, thus id is a host NUMA node id

cudaMemLocationTypeHostNumaCurrent = 4

Location is the host NUMA node closest to the current thread's CPU, id is ignored

enum cudaMemoryAdvise

CUDA Memory Advise values

Values

cudaMemAdviseSetReadMostly = 1

Data will mostly be read and only occasionally be written to

cudaMemAdviseUnsetReadMostly = 2

Undo the effect of [cudaMemAdviseSetReadMostly](#)

cudaMemAdviseSetPreferredLocation = 3

Set the preferred location for the data as the specified device

cudaMemAdviseUnsetPreferredLocation = 4

Clear the preferred location for the data

cudaMemAdviseSetAccessedBy = 5

Data will be accessed by the specified device, so prevent page faults as much as possible
cudaMemAdviseUnsetAccessedBy = 6

Let the Unified Memory subsystem decide on the page faulting policy for the specified device

enum cudaMemoryType

CUDA memory types

Values

cudaMemoryTypeUnregistered = 0

Unregistered memory

cudaMemoryTypeHost = 1

Host memory

cudaMemoryTypeDevice = 2

Device memory

cudaMemoryTypeManaged = 3

Managed memory

enum cudaMemPoolAttr

CUDA memory pool attributes

Values

cudaMemPoolReuseFollowEventDependencies = 0x1

(value type = int) Allow cuMemAllocAsync to use memory asynchronously freed in another streams as long as a stream ordering dependency of the allocating stream on the free action exists. Cuda events and null stream interactions can create the required stream ordered dependencies. (default enabled)

cudaMemPoolReuseAllowOpportunistic = 0x2

(value type = int) Allow reuse of already completed frees when there is no dependency between the free and allocation. (default enabled)

cudaMemPoolReuseAllowInternalDependencies = 0x3

(value type = int) Allow cuMemAllocAsync to insert new stream dependencies in order to establish the stream ordering required to reuse a piece of memory released by cuFreeAsync (default enabled).

cudaMemPoolAttrReleaseThreshold = 0x4

(value type = cuuint64_t) Amount of reserved memory in bytes to hold onto before trying to release memory back to the OS. When more than the release threshold bytes of memory are held by the memory pool, the allocator will try to release memory back to the OS on the next call to stream, event or context synchronize. (default 0)

cudaMemPoolAttrReservedMemCurrent = 0x5

(value type = cuuint64_t) Amount of backing memory currently allocated for the mempool.

cudaMemPoolAttrReservedMemHigh = 0x6

(value type = cuuint64_t) High watermark of backing memory allocated for the mempool since the last time it was reset. High watermark can only be reset to zero.

cudaMemPoolAttrUsedMemCurrent = 0x7

(value type = cuuint64_t) Amount of memory from the pool that is currently in use by the application.

cudaMemPoolAttrUsedMemHigh = 0x8

(value type = cuuint64_t) High watermark of the amount of memory from the pool that was in use by the application since the last time it was reset. High watermark can only be reset to zero.

enum cudaMemRangeAttribute

CUDA range attributes

Values

cudaMemRangeAttributeReadMostly = 1

Whether the range will mostly be read and only occasionally be written to

cudaMemRangeAttributePreferredLocation = 2

The preferred location of the range

cudaMemRangeAttributeAccessedBy = 3

Memory range has [cudaMemAdviseSetAccessedBy](#) set for specified device

cudaMemRangeAttributeLastPrefetchLocation = 4

The last location to which the range was prefetched

cudaMemRangeAttributePreferredLocationType = 5

The preferred location type of the range

cudaMemRangeAttributePreferredLocationId = 6

The preferred location id of the range

cudaMemRangeAttributeLastPrefetchLocationType = 7

The last location type to which the range was prefetched

cudaMemRangeAttributeLastPrefetchLocationId = 8

The last location id to which the range was prefetched

enum cudaResourceType

CUDA resource types

Values

cudaResourceTypeArray = 0x00

Array resource

cudaResourceTypeMipmappedArray = 0x01

Mipmapped array resource

cudaResourceTypeLinear = 0x02

Linear resource
cudaResourceTypePitch2D = 0x03
Pitch 2D resource

enum cudaResourceViewFormat

CUDA texture resource view formats

Values

cudaResViewFormatNone = 0x00

No resource view format (use underlying resource format)

cudaResViewFormatUnsignedChar1 = 0x01

1 channel unsigned 8-bit integers

cudaResViewFormatUnsignedChar2 = 0x02

2 channel unsigned 8-bit integers

cudaResViewFormatUnsignedChar4 = 0x03

4 channel unsigned 8-bit integers

cudaResViewFormatSignedChar1 = 0x04

1 channel signed 8-bit integers

cudaResViewFormatSignedChar2 = 0x05

2 channel signed 8-bit integers

cudaResViewFormatSignedChar4 = 0x06

4 channel signed 8-bit integers

cudaResViewFormatUnsignedShort1 = 0x07

1 channel unsigned 16-bit integers

cudaResViewFormatUnsignedShort2 = 0x08

2 channel unsigned 16-bit integers

cudaResViewFormatUnsignedShort4 = 0x09

4 channel unsigned 16-bit integers

cudaResViewFormatSignedShort1 = 0x0a

1 channel signed 16-bit integers

cudaResViewFormatSignedShort2 = 0x0b

2 channel signed 16-bit integers

cudaResViewFormatSignedShort4 = 0x0c

4 channel signed 16-bit integers

cudaResViewFormatUnsignedInt1 = 0x0d

1 channel unsigned 32-bit integers

cudaResViewFormatUnsignedInt2 = 0x0e

2 channel unsigned 32-bit integers

cudaResViewFormatUnsignedInt4 = 0x0f

4 channel unsigned 32-bit integers

cudaResViewFormatSignedInt1 = 0x10

1 channel signed 32-bit integers

cudaResViewFormatSignedInt2 = 0x11
 2 channel signed 32-bit integers

cudaResViewFormatSignedInt4 = 0x12
 4 channel signed 32-bit integers

cudaResViewFormatHalf1 = 0x13
 1 channel 16-bit floating point

cudaResViewFormatHalf2 = 0x14
 2 channel 16-bit floating point

cudaResViewFormatHalf4 = 0x15
 4 channel 16-bit floating point

cudaResViewFormatFloat1 = 0x16
 1 channel 32-bit floating point

cudaResViewFormatFloat2 = 0x17
 2 channel 32-bit floating point

cudaResViewFormatFloat4 = 0x18
 4 channel 32-bit floating point

cudaResViewFormatUnsignedBlockCompressed1 = 0x19
 Block compressed 1

cudaResViewFormatUnsignedBlockCompressed2 = 0x1a
 Block compressed 2

cudaResViewFormatUnsignedBlockCompressed3 = 0x1b
 Block compressed 3

cudaResViewFormatUnsignedBlockCompressed4 = 0x1c
 Block compressed 4 unsigned

cudaResViewFormatSignedBlockCompressed4 = 0x1d
 Block compressed 4 signed

cudaResViewFormatUnsignedBlockCompressed5 = 0x1e
 Block compressed 5 unsigned

cudaResViewFormatSignedBlockCompressed5 = 0x1f
 Block compressed 5 signed

cudaResViewFormatUnsignedBlockCompressed6H = 0x20
 Block compressed 6 unsigned half-float

cudaResViewFormatSignedBlockCompressed6H = 0x21
 Block compressed 6 signed half-float

cudaResViewFormatUnsignedBlockCompressed7 = 0x22
 Block compressed 7

enum cudaSharedCarveout

Shared memory carveout configurations. These may be passed to cudaFuncSetAttribute

Values

cudaSharedmemCarveoutDefault = -1

No preference for shared memory or L1 (default)

cudaSharedmemCarveoutMaxShared = 100

Prefer maximum available shared memory, minimum L1 cache

cudaSharedmemCarveoutMaxL1 = 0

Prefer maximum available L1 cache, minimum shared memory

enum cudaSharedMemConfig

CUDA shared memory configuration

Values

cudaSharedMemBankSizeDefault = 0**cudaSharedMemBankSizeFourByte = 1****cudaSharedMemBankSizeEightByte = 2**

enum cudaStreamCaptureMode

Possible modes for stream capture thread interactions. For more details see [cudaStreamBeginCapture](#) and [cudaThreadExchangeStreamCaptureMode](#)

Values

cudaStreamCaptureModeGlobal = 0**cudaStreamCaptureModeThreadLocal = 1****cudaStreamCaptureModeRelaxed = 2**

enum cudaStreamCaptureStatus

Possible stream capture statuses returned by [cudaStreamIsCapturing](#)

Values

cudaStreamCaptureStatusNone = 0

Stream is not capturing

cudaStreamCaptureStatusActive = 1

Stream is actively capturing

cudaStreamCaptureStatusInvalidated = 2

Stream is part of a capture sequence that has been invalidated, but not terminated

enum cudaStreamUpdateCaptureDependenciesFlags

Flags for [cudaStreamUpdateCaptureDependencies](#)

Values

cudaStreamAddCaptureDependencies = 0x0

Add new nodes to the dependency set

cudaStreamSetCaptureDependencies = 0x1

Replace the dependency set with the new nodes

enum cudaSurfaceBoundaryMode

CUDA Surface boundary modes

Values

cudaBoundaryModeZero = 0

Zero boundary mode

cudaBoundaryModeClamp = 1

Clamp boundary mode

cudaBoundaryModeTrap = 2

Trap boundary mode

enum cudaSurfaceFormatMode

CUDA Surface format modes

Values

cudaFormatModeForced = 0

Forced format mode

cudaFormatModeAuto = 1

Auto format mode

enum cudaTextureAddressMode

CUDA texture address modes

Values

cudaAddressModeWrap = 0

Wrapping address mode

cudaAddressModeClamp = 1

Clamp to edge address mode

cudaAddressModeMirror = 2

Mirror address mode

cudaAddressModeBorder = 3

Border address mode

enum cudaTextureFilterMode

CUDA texture filter modes

Values

cudaFilterModePoint = 0

Point filter mode

cudaFilterModeLinear = 1

Linear filter mode

enum cudaTextureReadMode

CUDA texture read modes

Values

cudaReadModeElementType = 0

Read texture as specified element type

cudaReadModeNormalizedFloat = 1

Read texture as normalized float

enum cudaUserObjectFlags

Flags for user objects for graphs

Values

cudaUserObjectNoDestructorSync = 0x1

Indicates the destructor execution is not synchronized by any CUDA handle.

enum cudaUserObjectRetainFlags

Flags for retaining user object references for graphs

Values

cudaGraphUserObjectMove = 0x1

Transfer references from the caller rather than creating new references.

typedef cudaArray *cudaArray_const_t

CUDA array (as source copy argument)

typedef cudaArray *cudaArray_t

CUDA array

typedef struct CUeglStreamConnection_st
***cudaEglStreamConnection**

CUDA EGLStream Connection

typedef cudaError_t

CUDA Error types

typedef struct CUevent_st *cudaEvent_t

CUDA event types

typedef struct CUexternalMemory_st
***cudaExternalMemory_t**

CUDA external memory

typedef struct CUexternalSemaphore_st
***cudaExternalSemaphore_t**

CUDA external semaphore

typedef struct CUfunc_st *cudaFunction_t

CUDA function

typedef struct CUgraph_st *cudaGraph_t

CUDA graph

typedef unsigned long long
cudaGraphConditionalHandle

CUDA handle for conditional graph nodes

typedef struct CUgraphExec_st *cudaGraphExec_t

CUDA executable (launchable) graph

typedef cudaGraphicsResource *cudaGraphicsResource_t

CUDA graphics resource types

typedef struct CUgraphNode_st *cudaGraphNode_t

CUDA graph node.

typedef void (CUDART_CB *cudaHostFn_t) (void* userData)

CUDA host function

typedef struct CUkern_st *cudaKernel_t

CUDA kernel

typedef struct CUMemPoolHandle_st *cudaMemPool_t

CUDA memory pool

typedef cudaMipmappedArray *cudaMipmappedArray_const_t

CUDA mipmapped array (as source argument)

typedef cudaMipmappedArray *cudaMipmappedArray_t

CUDA mipmapped array

typedef struct CUstream_st *cudaStream_t

CUDA stream

typedef unsigned long long cudaSurfaceObject_t

An opaque value that represents a CUDA Surface object

typedef unsigned long long cudaTextureObject_t

An opaque value that represents a CUDA texture object

typedef struct CUUserObject_st *cudaUserObject_t

CUDA user object for graphs

#define CUDA_EGL_MAX_PLANES 3

Maximum number of planes per frame

#define CUDA_IPC_HANDLE_SIZE 64

CUDA IPC Handle Size

#define cudaArrayColorAttachment 0x20

Must be set in cudaExternalMemoryGetMappedMipmappedArray if the mipmapped array is used as a color target in a graphics API

#define cudaArrayCubemap 0x04

Must be set in cudaMalloc3DArray to create a cubemap CUDA array

#define cudaArrayDefault 0x00

Default CUDA array allocation flag

#define cudaArrayDeferredMapping 0x80

Must be set in cudaMallocArray, cudaMalloc3DArray or cudaMallocMipmappedArray in order to create a deferred mapping CUDA array or CUDA mipmapped array

#define cudaArrayLayered 0x01

Must be set in cudaMalloc3DArray to create a layered CUDA array

#define cudaArraySparse 0x40

Must be set in cudaMallocArray, cudaMalloc3DArray or cudaMallocMipmappedArray in order to create a sparse CUDA array or CUDA mipmapped array

#define cudaArraySparsePropertiesSingleMipTail 0x1

Indicates that the layered sparse CUDA array or CUDA mipmapped array has a single mip tail region for all layers

#define cudaArraySurfaceLoadStore 0x02

Must be set in `cudaMallocArray` or `cudaMalloc3DArray` in order to bind surfaces to the CUDA array

#define cudaArrayTextureGather 0x08

Must be set in `cudaMallocArray` or `cudaMalloc3DArray` in order to perform texture gather operations on the CUDA array

#define cudaCooperativeLaunchMultiDeviceNoPostSync 0x02

If set, any subsequent work pushed in a stream that participated in a call to `cudaLaunchCooperativeKernelMultiDevice` will only wait for the kernel launched on the GPU corresponding to that stream to complete before it begins execution.

#define cudaCooperativeLaunchMultiDeviceNoPreSync 0x01

If set, each kernel launched as part of `cudaLaunchCooperativeKernelMultiDevice` only waits for prior work in the stream corresponding to that GPU to complete before the kernel begins execution.

#define cudaCpuDeviceId ((int)-1)

Device id that represents the CPU

#define cudaDeviceBlockingSync 0x04

Deprecated This flag was deprecated as of CUDA 4.0 and replaced with `cudaDeviceScheduleBlockingSync`.

Device flag - Use blocking synchronization

#define cudaDeviceLmemResizeToMax 0x10

Device flag - Keep local memory allocation after launch

#define cudaDeviceMapHost 0x08

Device flag - Support mapped pinned allocations

#define cudaDeviceMask 0xff

Device flags mask

#define cudaDeviceScheduleAuto 0x00

Device flag - Automatic scheduling

#define cudaDeviceScheduleBlockingSync 0x04

Device flag - Use blocking synchronization

#define cudaDeviceScheduleMask 0x07

Device schedule flags mask

#define cudaDeviceScheduleSpin 0x01

Device flag - Spin default scheduling

#define cudaDeviceScheduleYield 0x02

Device flag - Yield default scheduling

#define cudaDeviceSyncMemops 0x80

Device flag - Ensure synchronous memory operations on this context will synchronize

#define cudaEventBlockingSync 0x01

Event uses blocking synchronization

#define cudaEventDefault 0x00

Default event flag

#define cudaEventDisableTiming 0x02

Event will not record timing data

#define cudaEventInterprocess 0x04

Event is suitable for interprocess use. cudaEventDisableTiming must be set

#define cudaEventRecordDefault 0x00

Default event record flag

#define cudaEventRecordExternal 0x01

Event is captured in the graph as an external event node when performing stream capture

#define cudaEventWaitDefault 0x00

Default event wait flag

#define cudaEventWaitExternal 0x01

Event is captured in the graph as an external event node when performing stream capture

#define cudaExternalMemoryDedicated 0x1

Indicates that the external memory object is a dedicated resource

#define cudaExternalSemaphoreSignalSkipNvSciBufMemSync 0x01

When the /p flags parameter of [cudaExternalSemaphoreSignalParams](#) contains this flag, it indicates that signaling an external semaphore object should skip performing appropriate memory synchronization operations over all the external memory objects that are imported as [cudaExternalMemoryHandleTypeNvSciBuf](#), which otherwise are performed by default to ensure data coherency with other importers of the same NvSciBuf memory objects.

#define cudaExternalSemaphoreWaitSkipNvSciBufMemSync 0x02

When the /p flags parameter of [cudaExternalSemaphoreWaitParams](#) contains this flag, it indicates that waiting an external semaphore object should skip performing appropriate memory synchronization operations over all the external memory objects that are imported

as [cudaExternalMemoryHandleTypeNvSciBuf](#), which otherwise are performed by default to ensure data coherency with other importers of the same NvSciBuf memory objects.

#define cudaGraphKernelNodePortDefault 0

This port activates when the kernel has finished executing.

#define cudaGraphKernelNodePortLaunchCompletion 2

This port activates when all blocks of the kernel have begun execution. See also [cudaLaunchAttributeLaunchCompletionEvent](#).

#define cudaGraphKernelNodePortProgrammatic 1

This port activates when all blocks of the kernel have performed [cudaTriggerProgrammaticLaunchCompletion\(\)](#) or have terminated. It must be used with edge type [cudaGraphDependencyTypeProgrammatic](#). See also [cudaLaunchAttributeProgrammaticEvent](#).

#define cudaHostAllocDefault 0x00

Default page-locked allocation flag

#define cudaHostAllocMapped 0x02

Map allocation into device space

#define cudaHostAllocPortable 0x01

Pinned memory accessible by all CUDA contexts

#define cudaHostAllocWriteCombined 0x04

Write-combined memory

#define cudaHostRegisterDefault 0x00

Default host memory registration flag

#define cudaHostRegisterIoMemory 0x04

Memory-mapped I/O space

#define cudaHostRegisterMapped 0x02

Map registered memory into device space

#define cudaHostRegisterPortable 0x01

Pinned memory accessible by all CUDA contexts

#define cudaHostRegisterReadOnly 0x08

Memory-mapped read-only

#define cudalnitDeviceFlagsAreValid 0x01

Tell the CUDA runtime that DeviceFlags is being set in cudalnitDevice call

#define cudalnvalidDeviceld ((int)-2)

Device id that represents an invalid device

#define cudalpcMemLazyEnablePeerAccess 0x01

Automatically enable peer access between remote devices as needed

#define cudaMemAttachGlobal 0x01

Memory can be accessed by any stream on any device

#define cudaMemAttachHost 0x02

Memory cannot be accessed by any stream on any device

#define cudaMemAttachSingle 0x04

Memory can only be accessed by a single stream on the associated device

#define cudaNvSciSyncAttrSignal 0x1

When /p flags of [cudaDeviceGetNvSciSyncAttributes](#) is set to this, it indicates that application need signaler specific NvSciSyncAttr to be filled by [cudaDeviceGetNvSciSyncAttributes](#).

#define cudaNvSciSyncAttrWait 0x2

When /p flags of [cudaDeviceGetNvSciSyncAttributes](#) is set to this, it indicates that application need waiter specific NvSciSyncAttr to be filled by [cudaDeviceGetNvSciSyncAttributes](#).

#define cudaOccupancyDefault 0x00

Default behavior

#define cudaOccupancyDisableCachingOverride 0x01

Assume global caching is enabled and cannot be automatically turned off

#define cudaPeerAccessDefault 0x00

Default peer addressing enable flag

#define cudaStreamDefault 0x00

Default stream flag

#define cudaStreamLegacy ((cudaStream_t)0x1)

Legacy stream handle

Stream handle that can be passed as a cudaStream_t to use an implicit stream with legacy synchronization behavior.

See details of the [synchronization behavior](#).

#define cudaStreamNonBlocking 0x01

Stream does not synchronize with stream 0 (the NULL stream)

#define cudaStreamPerThread ((cudaStream_t)0x2)

Per-thread stream handle

Stream handle that can be passed as a cudaStream_t to use an implicit stream with per-thread synchronization behavior.

See details of the [synchronization behavior](#).

Chapter 7. Data Structures

Here are the data structures with brief descriptions:

[cudaOccupancyB2DHelper](#)
[cudaAccessPolicyWindow](#)
[cudaArrayMemoryRequirements](#)
[cudaArraySparseProperties](#)
[cudaChannelFormatDesc](#)
[cudaChildGraphNodeParams](#)
[cudaConditionalNodeParams](#)
[cudaDeviceProp](#)
[cudaEglFrame](#)
[cudaEglPlaneDesc](#)
[cudaEventRecordNodeParams](#)
[cudaEventWaitNodeParams](#)
[cudaExtent](#)
[cudaExternalMemoryBufferDesc](#)
[cudaExternalMemoryHandleDesc](#)
[cudaExternalMemoryMipmappedArrayDesc](#)
[cudaExternalSemaphoreHandleDesc](#)
[cudaExternalSemaphoreSignalNodeParams](#)
[cudaExternalSemaphoreSignalNodeParamsV2](#)
[cudaExternalSemaphoreSignalParams](#)
[cudaExternalSemaphoreSignalParams_v1](#)
[cudaExternalSemaphoreWaitNodeParams](#)
[cudaExternalSemaphoreWaitNodeParamsV2](#)
[cudaExternalSemaphoreWaitParams](#)
[cudaExternalSemaphoreWaitParams_v1](#)
[cudaFuncAttributes](#)
[cudaGraphEdgeData](#)
[cudaGraphExecUpdateResultInfo](#)
[cudaGraphInstantiateParams](#)
[cudaGraphNodeParams](#)
[cudaHostNodeParams](#)
[cudaHostNodeParamsV2](#)

[cudaLpcEventHandle_t](#)
[cudaLpcMemHandle_t](#)
[cudaKernelNodeParams](#)
[cudaKernelNodeParamsV2](#)
[cudaLaunchAttribute](#)
[cudaLaunchAttributeValue](#)
[cudaLaunchConfig_t](#)
[cudaLaunchMemSyncDomainMap](#)
[cudaLaunchParams](#)
[cudaMemAccessDesc](#)
[cudaMemAllocNodeParams](#)
[cudaMemAllocNodeParamsV2](#)
[cudaMemcpy3DParms](#)
[cudaMemcpy3DPeerParms](#)
[cudaMemcpyNodeParams](#)
[cudaMemFreeNodeParams](#)
[cudaMemLocation](#)
[cudaMemPoolProps](#)
[cudaMemPoolPtrExportData](#)
[cudaMemsetParams](#)
[cudaMemsetParamsV2](#)
[cudaPitchedPtr](#)
[cudaPointerAttributes](#)
[cudaPos](#)
[cudaResourceDesc](#)
[cudaResourceViewDesc](#)
[cudaTextureDesc](#)
[cudaUUID_t](#)

7.1. __cudaOccupancyB2DHelper

C++ API Routines `cppClassifierVisibility: visibility=public cppClassifierTemplateModel: =`
 Helper functor for `cudaOccupancyMaxPotentialBlockSize`

7.2. cudaAccessPolicyWindow Struct Reference

Specifies an access policy for a window, a contiguous extent of memory beginning at `base_ptr` and ending at `base_ptr + num_bytes`. Partition into many segments and assign segments such that. sum of "hit segments" / window == approx. ratio. sum of "miss segments" / window

== approx 1-ratio. Segments and ratio specifications are fitted to the capabilities of the architecture. Accesses in a hit segment apply the hitProp access policy. Accesses in a miss segment apply the missProp access policy.

`void *cudaAccessPolicyWindow::base_ptr`

Starting address of the access policy window. CUDA driver may align it.

`enumcudaAccessProperty cudaAccessPolicyWindow::hitProp`

CUaccessProperty set for hit.

`float cudaAccessPolicyWindow::hitRatio`

hitRatio specifies percentage of lines assigned hitProp, rest are assigned missProp.

`enumcudaAccessProperty cudaAccessPolicyWindow::missProp`

CUaccessProperty set for miss. Must be either NORMAL or STREAMING.

`size_t cudaAccessPolicyWindow::num_bytes`

Size in bytes of the window policy. CUDA driver may restrict the maximum size and alignment.

7.3. `cudaArrayMemoryRequirements` Struct Reference

CUDA array and CUDA mipmapped array memory requirements

`size_t cudaArrayMemoryRequirements::alignment`

Alignment necessary for mapping the array.

`size_t cudaArrayMemoryRequirements::size`

Total size of the array.

7.4. cudaArraySparseProperties Struct Reference

Sparse CUDA array and CUDA mipmapped array properties

`unsigned int cudaArraySparseProperties::depth`

Tile depth in elements

`unsigned int cudaArraySparseProperties::flags`

Flags will either be zero or [`cudaArraySparsePropertiesSingleMipTail`](#)

`unsigned int cudaArraySparseProperties::height`

Tile height in elements

`unsigned int`

`cudaArraySparseProperties::miptailFirstLevel`

First mip level at which the mip tail begins

`unsigned long long`

`cudaArraySparseProperties::miptailSize`

Total size of the mip tail.

`unsigned int cudaArraySparseProperties::width`

Tile width in elements

7.5. cudaChannelFormatDesc Struct Reference

CUDA Channel format descriptor

enumcudaChannelFormatKind
cudaChannelFormatDesc::f

Channel format kind

int cudaChannelFormatDesc::w

w

int cudaChannelFormatDesc::x

x

int cudaChannelFormatDesc::y

y

int cudaChannelFormatDesc::z

z

7.6. cudaChildGraphNodeParams Struct Reference

Child graph node parameters

cudaGraph_t cudaChildGraphNodeParams::graph

The child graph to clone into the node for node creation, or a handle to the graph owned by the node for node query

7.7. cudaConditionalNodeParams Struct Reference

CUDA conditional node parameters

cudaGraphConditionalHandle cudaConditionalNodeParams::handle

Conditional node handle. Handles must be created in advance of creating the node using [cudaGraphConditionalHandleCreate](#).

cudaGraph_t *cudaConditionalNodeParams::phGraph_out

CUDA-owned array populated with conditional node child graphs during creation of the node. Valid for the lifetime of the conditional node. The contents of the graph(s) are subject to the following constraints:

- ▶ Allowed node types are kernel nodes, empty nodes, child graphs, memsets, memcopies, and conditionals. This applies recursively to child graphs and conditional bodies.
- ▶ All kernels, including kernels in nested conditionals or child graphs at any level, must belong to the same CUDA context.

These graphs may be populated using graph node creation APIs or [cudaStreamBeginCaptureToGraph](#).

unsigned int cudaConditionalNodeParams::size

Size of graph output array. Must be 1 for WHILE nodes, 1 or 2 for IF nodes, and >0 for SWITCH nodes.

enumcudaGraphConditionalNodeType cudaConditionalNodeParams::type

Type of conditional node.

7.8. cudaDeviceProp Struct Reference

CUDA device properties

int cudaDeviceProp::accessPolicyMaxWindowSize

The maximum value of [cudaAccessPolicyWindow::num_bytes](#).

int cudaDeviceProp::asyncEngineCount

Number of asynchronous engines

int cudaDeviceProp::canMapHostMemory

Device can map host memory with `cudaHostAlloc`/`cudaHostGetDevicePointer`

int

cudaDeviceProp::canUseHostPointerForRegisteredMem

Device can access host registered memory at the same virtual address as the CPU

int cudaDeviceProp::clockRate

Deprecated, Clock frequency in kilohertz

int cudaDeviceProp::clusterLaunch

Indicates device supports cluster launch

int cudaDeviceProp::computeMode

Deprecated, Compute mode [See [cudaComputeMode](#)]

int cudaDeviceProp::computePreemptionSupported

Device supports Compute Preemption

int cudaDeviceProp::concurrentKernels

Device can possibly execute multiple kernels concurrently

int cudaDeviceProp::concurrentManagedAccess

Device can coherently access managed memory concurrently with the CPU

int cudaDeviceProp::cooperativeLaunch

Device supports launching cooperative kernels via [cudaLaunchCooperativeKernel](#)

`int cudaDeviceProp::cooperativeMultiDeviceLaunch`

Deprecated, `cudaLaunchCooperativeKernelMultiDevice` is deprecated.

`int`

`cudaDeviceProp::deferredMappingCudaArraySupported`

1 if the device supports deferred mapping CUDA arrays and CUDA mipmapped arrays

`int cudaDeviceProp::deviceOverlap`

Device can concurrently copy memory and execute a kernel. Deprecated. Use instead `asyncEngineCount`.

`int`

`cudaDeviceProp::directManagedMemAccessFromHost`

Host can directly access managed memory on the device without migration.

`int cudaDeviceProp::ECCEnabled`

Device has ECC support enabled

`int cudaDeviceProp::globalL1CacheSupported`

Device supports caching globals in L1

`unsigned int`

`cudaDeviceProp::gpuDirectRDMAFlushWritesOptions`

Bitmask to be interpreted according to the [`cudaFlushGPUDirectRDMAWritesOptions`](#) enum

`int cudaDeviceProp::gpuDirectRDMASupported`

1 if the device supports GPUDirect RDMA APIs, 0 otherwise

`int cudaDeviceProp::gpuDirectRDMAWritesOrdering`

See the [`cudaGPUDirectRDMAWritesOrdering`](#) enum for numerical values

int cudaDeviceProp::hostNativeAtomicSupported

Link between the device and the host supports native atomic operations

int cudaDeviceProp::hostRegisterReadOnlySupported

Device supports using the [cudaHostRegister](#) flag `cudaHostRegisterReadOnly` to register memory that must be mapped as read-only to the GPU

int cudaDeviceProp::hostRegisterSupported

Device supports host memory registration via [cudaHostRegister](#).

int cudaDeviceProp::integrated

Device is integrated as opposed to discrete

int cudaDeviceProp::ipcEventSupported

Device supports IPC Events.

int cudaDeviceProp::isMultiGpuBoard

Device is on a multi-GPU board

int cudaDeviceProp::kernelExecTimeoutEnabled

Deprecated, Specified whether there is a run time limit on kernels

int cudaDeviceProp::l2CacheSize

Size of L2 cache in bytes

int cudaDeviceProp::localL1CacheSupported

Device supports caching locals in L1

char cudaDeviceProp::luid

8-byte locally unique identifier. Value is undefined on TCC and non-Windows platforms

unsigned int cudaDeviceProp::luidDeviceNodeMask

LUID device node mask. Value is undefined on TCC and non-Windows platforms

int cudaDeviceProp::major

Major compute capability

int cudaDeviceProp::managedMemory

Device supports allocating managed memory on this system

int cudaDeviceProp::maxBlocksPerMultiProcessor

Maximum number of resident blocks per multiprocessor

int cudaDeviceProp::maxGridSize

Maximum size of each dimension of a grid

int cudaDeviceProp::maxSurface1D

Maximum 1D surface size

int cudaDeviceProp::maxSurface1DLayered

Maximum 1D layered surface dimensions

int cudaDeviceProp::maxSurface2D

Maximum 2D surface dimensions

int cudaDeviceProp::maxSurface2DLayered

Maximum 2D layered surface dimensions

int cudaDeviceProp::maxSurface3D

Maximum 3D surface dimensions

int cudaDeviceProp::maxSurfaceCubemap

Maximum Cubemap surface dimensions

int cudaDeviceProp::maxSurfaceCubemapLayered

Maximum Cubemap layered surface dimensions

int cudaDeviceProp::maxTexture1D

Maximum 1D texture size

int cudaDeviceProp::maxTexture1DLayered

Maximum 1D layered texture dimensions

int cudaDeviceProp::maxTexture1DLinear

Deprecated, do not use. Use [cudaDeviceGetTexture1DLinearMaxWidth\(\)](#) or [cuDeviceGetTexture1DLinearMaxWidth\(\)](#) instead.

int cudaDeviceProp::maxTexture1DMipmap

Maximum 1D mipmapped texture size

int cudaDeviceProp::maxTexture2D

Maximum 2D texture dimensions

int cudaDeviceProp::maxTexture2DGather

Maximum 2D texture dimensions if texture gather operations have to be performed

int cudaDeviceProp::maxTexture2DLayered

Maximum 2D layered texture dimensions

int cudaDeviceProp::maxTexture2DLinear

Maximum dimensions [width, height, pitch] for 2D textures bound to pitched memory

int cudaDeviceProp::maxTexture2DMipmap

Maximum 2D mipmapped texture dimensions

int cudaDeviceProp::maxTexture3D

Maximum 3D texture dimensions

int cudaDeviceProp::maxTexture3DAlt

Maximum alternate 3D texture dimensions

int cudaDeviceProp::maxTextureCubemap

Maximum Cubemap texture dimensions

int cudaDeviceProp::maxTextureCubemapLayered

Maximum Cubemap layered texture dimensions

int cudaDeviceProp::maxThreadsDim

Maximum size of each dimension of a block

int cudaDeviceProp::maxThreadsPerBlock

Maximum number of threads per block

int cudaDeviceProp::maxThreadsPerMultiProcessor

Maximum resident threads per multiprocessor

int cudaDeviceProp::memoryBusWidth

Global memory bus width in bits

int cudaDeviceProp::memoryClockRate

Deprecated, Peak memory clock frequency in kilohertz

int cudaDeviceProp::memoryPoolsSupported

1 if the device supports using the `cudaMallocAsync` and `cudaMemPool` family of APIs, 0 otherwise

**unsigned int
cudaDeviceProp::memoryPoolSupportedHandleTypes**

Bitmask of handle types supported with mempool-based IPC

size_t cudaDeviceProp::memPitch

Maximum pitch in bytes allowed by memory copies

int cudaDeviceProp::minor

Minor compute capability

int cudaDeviceProp::multiGpuBoardGroupID

Unique identifier for a group of devices on the same multi-GPU board

int cudaDeviceProp::multiProcessorCount

Number of multiprocessors on device

char cudaDeviceProp::name

ASCII string identifying device

int cudaDeviceProp::pageableMemoryAccess

Device supports coherently accessing pageable memory without calling `cudaHostRegister` on it

int

cudaDeviceProp::pageableMemoryAccessUsesHostPageTables

Device accesses pageable memory via the host's page tables

int cudaDeviceProp::pciBusID

PCI bus ID of the device

int cudaDeviceProp::pciDeviceID

PCI device ID of the device

int cudaDeviceProp::pciDomainID

PCI domain ID of the device

int cudaDeviceProp::persistingL2CacheMaxSize

Device's maximum l2 persisting lines capacity setting in bytes

int cudaDeviceProp::regsPerBlock

32-bit registers available per block

int cudaDeviceProp::regsPerMultiprocessor

32-bit registers available per multiprocessor

int cudaDeviceProp::reserved

Reserved for future use

int cudaDeviceProp::reserved1

Reserved for future use

size_t cudaDeviceProp::reservedSharedMemPerBlock

Shared memory reserved by CUDA driver per block in bytes

size_t cudaDeviceProp::sharedMemPerBlock

Shared memory available per block in bytes

size_t cudaDeviceProp::sharedMemPerBlockOptin

Per device maximum shared memory per block usable by special opt in

size_t**cudaDeviceProp::sharedMemPerMultiprocessor**

Shared memory available per multiprocessor in bytes

**int
cudaDeviceProp::singleToDoublePrecisionPerfRatio**

Deprecated, Ratio of single precision performance (in floating-point operations per second) to double precision performance

int cudaDeviceProp::sparseCudaArraySupported

1 if the device supports sparse CUDA arrays and sparse CUDA mipmapped arrays, 0 otherwise

int cudaDeviceProp::streamPrioritiesSupported

Device supports stream priorities

size_t cudaDeviceProp::surfaceAlignment

Alignment requirements for surfaces

int cudaDeviceProp::tccDriver

1 if device is a Tesla device using TCC driver, 0 otherwise

size_t cudaDeviceProp::textureAlignment

Alignment requirement for textures

size_t cudaDeviceProp::texturePitchAlignment

Pitch alignment requirement for texture references bound to pitched memory

**int
cudaDeviceProp::timelineSemaphoreInteropSupported**

External timeline semaphore interop is supported on the device

size_t cudaDeviceProp::totalConstMem

Constant memory available on device in bytes

size_t cudaDeviceProp::totalGlobalMem

Global memory available on device in bytes

int cudaDeviceProp::unifiedAddressing

Device shares a unified address space with the host

int cudaDeviceProp::unifiedFunctionPointers

Indicates device supports unified pointers

cudaUUID_t cudaDeviceProp::uuid

16-byte unique identifier

int cudaDeviceProp::warpSize

Warp size in threads

7.9. cudaEglFrame Struct Reference

CUDA EGLFrame Descriptor - structure defining one frame of EGL.

Each frame may contain one or more planes depending on whether the surface is Multiplanar or not. Each plane of EGLFrame is represented by [cudaEglPlaneDesc](#) which is defined as:

```
' typedef struct cudaEglPlaneDesc_st {
    unsigned int width;
    unsigned int height;
    unsigned int depth;
    unsigned int pitch;
    unsigned int numChannels;
    struct cudaChannelFormatDesc channelDesc;
    unsigned int reserved[4];
} cudaEglPlaneDesc;
```

cudaEglColorFormat cudaEglFrame::eglColorFormat

CUDA EGL Color Format

cudaEglFrameType cudaEglFrame::frameType

Array or Pitch

cudaArray_t cudaEglFrame::pArray

Array of CUDA arrays corresponding to each plane

unsigned int cudaEglFrame::planeCount

Number of planes

struct cudaEglPlaneDesc cudaEglFrame::planeDesc

CUDA EGL Plane Descriptor [cudaEglPlaneDesc](#)

struct cudaPitchedPtr cudaEglFrame::pPitch

Array of Pointers corresponding to each plane

7.10. cudaEglPlaneDesc Struct Reference

CUDA EGL Plane Descriptor - structure defining each plane of a CUDA EGLFrame

struct cudaChannelFormatDesc

cudaEglPlaneDesc::channelDesc

Channel Format Descriptor

unsigned int cudaEglPlaneDesc::depth

Depth of plane

unsigned int cudaEglPlaneDesc::height

Height of plane

unsigned int cudaEglPlaneDesc::numChannels

Number of channels for the plane

unsigned int cudaEglPlaneDesc::pitch

Pitch of plane

unsigned int cudaEglPlaneDesc::reserved

Reserved for future use

unsigned int cudaEglPlaneDesc::width

Width of plane

7.11. cudaEventRecordNodeParams Struct Reference

Event record node parameters

cudaEvent_t cudaEventRecordNodeParams::event

The event to record when the node executes

7.12. cudaEventWaitNodeParams Struct Reference

Event wait node parameters

cudaEvent_t cudaEventWaitNodeParams::event

The event to wait on from the node

7.13. cudaExtent Struct Reference

CUDA extent

See also:

[make_cudaExtent](#)

size_t cudaExtent::depth

Depth in elements

size_t cudaExtent::height

Height in elements

`size_t cudaExtent::width`

Width in elements when referring to array memory, in bytes when referring to linear memory

7.14. `cudaExternalMemoryBufferDesc` Struct Reference

External memory buffer descriptor

`unsigned int cudaExternalMemoryBufferDesc::flags`

Flags reserved for future use. Must be zero.

`unsigned long long cudaExternalMemoryBufferDesc::offset`

Offset into the memory object where the buffer's base is

`unsigned long long cudaExternalMemoryBufferDesc::size`

Size of the buffer

7.15. `cudaExternalMemoryHandleDesc` Struct Reference

External memory handle descriptor

`int cudaExternalMemoryHandleDesc::fd`

File descriptor referencing the memory object. Valid when type is
[cudaExternalMemoryHandleTypeOpaqueFd](#)

`unsigned int cudaExternalMemoryHandleDesc::flags`

Flags must either be zero or [cudaExternalMemoryDedicated](#)

void *cudaExternalMemoryHandleDesc::handle

Valid NT handle. Must be NULL if 'name' is non-NULL

const void *cudaExternalMemoryHandleDesc::name

Name of a valid memory object. Must be NULL if 'handle' is non-NULL.

const void

***cudaExternalMemoryHandleDesc::nvSciBufObject**

A handle representing NvSciBuf Object. Valid when type is

[cudaExternalMemoryHandleTypeNvSciBuf](#)

unsigned long long

cudaExternalMemoryHandleDesc::size

Size of the memory allocation

enum cudaExternalMemoryHandleType

cudaExternalMemoryHandleDesc::type

Type of the handle

cudaExternalMemoryHandleDesc::@7::@8

cudaExternalMemoryHandleDesc::win32

Win32 handle referencing the semaphore object. Valid when type is one of the following:

- ▶ [cudaExternalMemoryHandleTypeOpaqueWin32](#)
- ▶ [cudaExternalMemoryHandleTypeOpaqueWin32Kmt](#)
- ▶ [cudaExternalMemoryHandleTypeD3D12Heap](#)
- ▶ [cudaExternalMemoryHandleTypeD3D12Resource](#)
- ▶ [cudaExternalMemoryHandleTypeD3D11Resource](#)
- ▶ [cudaExternalMemoryHandleTypeD3D11ResourceKmt](#) Exactly one of 'handle' and 'name' must be non-NULL. If type is one of the following: [cudaExternalMemoryHandleTypeOpaqueWin32Kmt](#) [cudaExternalMemoryHandleTypeD3D11ResourceKmt](#) then 'name' must be NULL.

7.16. `cudaExternalMemoryMipmappedArrayDesc` Struct Reference

External memory mipmap descriptor

`struct cudaExtent`
`cudaExternalMemoryMipmappedArrayDesc::extent`

Dimensions of base level of the mipmap chain

`unsigned int`
`cudaExternalMemoryMipmappedArrayDesc::flags`

Flags associated with CUDA mipmapped arrays. See [cudaMallocMipmappedArray](#)

`struct cudaChannelFormatDesc`
`cudaExternalMemoryMipmappedArrayDesc::formatDesc`

Format of base level of the mipmap chain

`unsigned int`
`cudaExternalMemoryMipmappedArrayDesc::numLevels`

Total number of levels in the mipmap chain

`unsigned long long`
`cudaExternalMemoryMipmappedArrayDesc::offset`

Offset into the memory object where the base level of the mipmap chain is.

7.17. `cudaExternalSemaphoreHandleDesc` Struct Reference

External semaphore handle descriptor

`int cudaExternalSemaphoreHandleDesc::fd`

File descriptor referencing the semaphore object. Valid when type is one of the following:

- ▶ [cudaExternalSemaphoreHandleTypeOpaqueFd](#)
- ▶ [cudaExternalSemaphoreHandleTypeTimelineSemaphoreFd](#)

`unsigned int`

`cudaExternalSemaphoreHandleDesc::flags`

Flags reserved for the future. Must be zero.

`void *cudaExternalSemaphoreHandleDesc::handle`

Valid NT handle. Must be NULL if 'name' is non-NULL

`const void`

`*cudaExternalSemaphoreHandleDesc::name`

Name of a valid synchronization primitive. Must be NULL if 'handle' is non-NULL.

`const void`

`*cudaExternalSemaphoreHandleDesc::nvSciSyncObj`

Valid NvSciSyncObj. Must be non NULL

`enum cudaExternalSemaphoreHandleType`

`cudaExternalSemaphoreHandleDesc::type`

Type of the handle

`cudaExternalSemaphoreHandleDesc::@9::@10`

`cudaExternalSemaphoreHandleDesc::win32`

Win32 handle referencing the semaphore object. Valid when type is one of the following:

- ▶ [cudaExternalSemaphoreHandleTypeOpaqueWin32](#)
- ▶ [cudaExternalSemaphoreHandleTypeOpaqueWin32Kmt](#)
- ▶ [cudaExternalSemaphoreHandleTypeD3D12Fence](#)

- ▶ [cudaExternalSemaphoreHandleTypeD3D11Fence](#)
- ▶ [cudaExternalSemaphoreHandleTypeKeyedMutex](#)
- ▶ [cudaExternalSemaphoreHandleTypeTimelineSemaphoreWin32](#) Exactly one of 'handle' and 'name' must be non-NULL. If type is one of the following: [cudaExternalSemaphoreHandleTypeOpaqueWin32Kmt](#) [cudaExternalSemaphoreHandleTypeKeyedMutexKmt](#) then 'name' must be NULL.

7.18. `cudaExternalSemaphoreSignalNodeParams` Struct Reference

External semaphore signal node parameters

`cudaExternalSemaphore_t`

`*cudaExternalSemaphoreSignalNodeParams::extSemArray`

Array of external semaphore handles.

`unsigned int`

`cudaExternalSemaphoreSignalNodeParams::numExtSems`

Number of handles and parameters supplied in extSemArray and paramsArray.

`cudaExternalSemaphoreSignalParams`

`*cudaExternalSemaphoreSignalNodeParams::paramsArray`

Array of external semaphore signal parameters.

7.19. `cudaExternalSemaphoreSignalNodeParamsV2` Struct Reference

External semaphore signal node parameters

`cudaExternalSemaphore_t`

`*cudaExternalSemaphoreSignalNodeParamsV2::extSemArray`

Array of external semaphore handles.

**unsigned int
cudaExternalSemaphoreSignalNodeParamsV2::numExtSems**

Number of handles and parameters supplied in extSemArray and paramsArray.

cudaExternalSemaphoreSignalParams

***cudaExternalSemaphoreSignalNodeParamsV2::paramsArray**

Array of external semaphore signal parameters.

7.20. cudaExternalSemaphoreSignalParams Struct Reference

External semaphore signal parameters, compatible with driver type

void *cudaExternalSemaphoreSignalParams::fence

Pointer to NvSciSyncFence. Valid if cudaExternalSemaphoreHandleType is of type cudaExternalSemaphoreHandleTypeNvSciSync.

**cudaExternalSemaphoreSignalParams::@19:@20
cudaExternalSemaphoreSignalParams::fence**

Parameters for fence objects

**unsigned int
cudaExternalSemaphoreSignalParams::flags**

Only when cudaExternalSemaphoreSignalParams is used to signal a cudaExternalSemaphore_t of type cudaExternalSemaphoreHandleTypeNvSciSync, the valid flag is cudaExternalSemaphoreSignalSkipNvSciBufMemSync: which indicates that while signaling the cudaExternalSemaphore_t, no memory synchronization operations should be performed for any external memory object imported as cudaExternalMemoryHandleTypeNvSciBuf. For all other types of cudaExternalSemaphore_t, flags must be zero.

cudaExternalSemaphoreSignalParams::@19::@22 cudaExternalSemaphoreSignalParams::keyedMutex

Parameters for keyed mutex objects

unsigned long long cudaExternalSemaphoreSignalParams::value

Value of fence to be signaled

7.21. cudaExternalSemaphoreSignalParams_v1 Struct Reference

External semaphore signal parameters(deprecated)

void *cudaExternalSemaphoreSignalParams_v1::fence

Pointer to NvSciSyncFence. Valid if [cudaExternalSemaphoreHandleType](#) is of type [cudaExternalSemaphoreHandleTypeNvSciSync](#).

cudaExternalSemaphoreSignalParams_v1::@11::@12 cudaExternalSemaphoreSignalParams_v1::fence

Parameters for fence objects

unsigned int cudaExternalSemaphoreSignalParams_v1::flags

Only when [cudaExternalSemaphoreSignalParams](#) is used to signal a [cudaExternalSemaphore_t](#) of type [cudaExternalSemaphoreHandleTypeNvSciSync](#), the valid flag is [cudaExternalSemaphoreSignalSkipNvSciBufMemSync](#): which indicates that while signaling the [cudaExternalSemaphore_t](#), no memory synchronization operations should be performed for any external memory object imported as [cudaExternalMemoryHandleTypeNvSciBuf](#). For all other types of [cudaExternalSemaphore_t](#), flags must be zero.

`cudaExternalSemaphoreSignalParams_v1::@11::@14`
`cudaExternalSemaphoreSignalParams_v1::keyedMutex`

Parameters for keyed mutex objects

`unsigned long long`
`cudaExternalSemaphoreSignalParams_v1::value`

Value of fence to be signaled

7.22. `cudaExternalSemaphoreWaitNodeParams` Struct Reference

External semaphore wait node parameters

`cudaExternalSemaphore_t`
`*cudaExternalSemaphoreWaitNodeParams::extSemArray`

Array of external semaphore handles.

`unsigned int`
`cudaExternalSemaphoreWaitNodeParams::numExtSems`

Number of handles and parameters supplied in extSemArray and paramsArray.

`cudaExternalSemaphoreWaitParams`
`*cudaExternalSemaphoreWaitNodeParams::paramsArray`

Array of external semaphore wait parameters.

7.23. `cudaExternalSemaphoreWaitNodeParamsV2` Struct Reference

External semaphore wait node parameters

`cudaExternalSemaphore_t`

`*cudaExternalSemaphoreWaitNodeParamsV2::extSemArray`

Array of external semaphore handles.

`unsigned int`

`cudaExternalSemaphoreWaitNodeParamsV2::numExtSems`

Number of handles and parameters supplied in extSemArray and paramsArray.

`cudaExternalSemaphoreWaitParams`

`*cudaExternalSemaphoreWaitNodeParamsV2::paramsArray`

Array of external semaphore wait parameters.

7.24. `cudaExternalSemaphoreWaitParams` Struct Reference

External semaphore wait parameters, compatible with driver type

`void *cudaExternalSemaphoreWaitParams::fence`

Pointer to NvSciSyncFence. Valid if `cudaExternalSemaphoreHandleType` is of type `cudaExternalSemaphoreHandleTypeNvSciSync`.

`cudaExternalSemaphoreWaitParams::@23:@24`

`cudaExternalSemaphoreWaitParams::fence`

Parameters for fence objects

`unsigned int`

`cudaExternalSemaphoreWaitParams::flags`

Only when `cudaExternalSemaphoreSignalParams` is used to signal a `cudaExternalSemaphore_t` of type `cudaExternalSemaphoreHandleTypeNvSciSync`, the valid flag is `cudaExternalSemaphoreSignalSkipNvSciBufMemSync`: which indicates that while waiting for the `cudaExternalSemaphore_t`, no memory synchronization operations should be performed for any external memory object imported as

`cudaExternalMemoryHandleTypeNvSciBuf`. For all other types of `cudaExternalSemaphore_t`, flags must be zero.

`unsigned long long` `cudaExternalSemaphoreWaitParams::key`

Value of key to acquire the mutex with

`cudaExternalSemaphoreWaitParams::@23:@26` `cudaExternalSemaphoreWaitParams::keyedMutex`

Parameters for keyed mutex objects

`unsigned int` `cudaExternalSemaphoreWaitParams::timeoutMs`

Timeout in milliseconds to wait to acquire the mutex

`unsigned long long` `cudaExternalSemaphoreWaitParams::value`

Value of fence to be waited on

7.25. `cudaExternalSemaphoreWaitParams_v1` Struct Reference

External semaphore wait parameters(deprecated)

`void *cudaExternalSemaphoreWaitParams_v1::fence`

Pointer to NvSciSyncFence. Valid if `cudaExternalSemaphoreHandleType` is of type `cudaExternalSemaphoreHandleTypeNvSciSync`.

`cudaExternalSemaphoreWaitParams_v1::@15:@16` `cudaExternalSemaphoreWaitParams_v1::fence`

Parameters for fence objects

unsigned int cudaExternalSemaphoreWaitParams_v1::flags

Only when `cudaExternalSemaphoreSignalParams` is used to signal a `cudaExternalSemaphore_t` of type `cudaExternalSemaphoreHandleTypeNvSciSync`, the valid flag is `cudaExternalSemaphoreSignalSkipNvSciBufMemSync`: which indicates that while waiting for the `cudaExternalSemaphore_t`, no memory synchronization operations should be performed for any external memory object imported as `cudaExternalMemoryHandleTypeNvSciBuf`. For all other types of `cudaExternalSemaphore_t`, flags must be zero.

unsigned long long cudaExternalSemaphoreWaitParams_v1::key

Value of key to acquire the mutex with

cudaExternalSemaphoreWaitParams_v1::@15:@18 cudaExternalSemaphoreWaitParams_v1::keyedMutex

Parameters for keyed mutex objects

unsigned int cudaExternalSemaphoreWaitParams_v1::timeoutMs

Timeout in milliseconds to wait to acquire the mutex

unsigned long long cudaExternalSemaphoreWaitParams_v1::value

Value of fence to be waited on

7.26. cudaFuncAttributes Struct Reference

CUDA function attributes

int cudaFuncAttributes::binaryVersion

The binary architecture version for which the function was compiled. This value is the major binary version * 10 + the minor binary version, so a binary version 1.3 function would return the value 13.

int cudaFuncAttributes::cacheModeCA

The attribute to indicate whether the function has been compiled with user specified option "-Xptxas --dlcm=ca" set.

int cudaFuncAttributes::clusterDimMustBeSet

If this attribute is set, the kernel must launch with a valid cluster dimension specified.

int

cudaFuncAttributes::clusterSchedulingPolicyPreference

The block scheduling policy of a function. See [cudaFuncSetAttribute](#)

size_t cudaFuncAttributes::constSizeBytes

The size in bytes of user-allocated constant memory required by this function.

size_t cudaFuncAttributes::localSizeBytes

The size in bytes of local memory used by each thread of this function.

int cudaFuncAttributes::maxDynamicSharedSizeBytes

The maximum size in bytes of dynamic shared memory per block for this function. Any launch must have a dynamic shared memory size smaller than this value.

int cudaFuncAttributes::maxThreadsPerBlock

The maximum number of threads per block, beyond which a launch of the function would fail. This number depends on both the function and the device on which the function is currently loaded.

int

cudaFuncAttributes::nonPortableClusterSizeAllowed

Whether the function can be launched with non-portable cluster size. 1 is allowed, 0 is disallowed. A non-portable cluster size may only function on the specific SKUs the program is tested on. The launch might fail if the program is run on a different hardware platform.

CUDA API provides [cudaOccupancyMaxActiveClusters](#) to assist with checking whether the desired size can be launched on the current device.

Portable Cluster Size

A portable cluster size is guaranteed to be functional on all compute capabilities higher than the target compute capability. The portable cluster size for sm_90 is 8 blocks per cluster. This value may increase for future compute capabilities.

The specific hardware unit may support higher cluster sizes that's not guaranteed to be portable. See [cudaFuncSetAttribute](#)

int cudaFuncAttributes::numRegs

The number of registers used by each thread of this function.

int cudaFuncAttributes::preferredShmemCarveout

On devices where the L1 cache and shared memory use the same hardware resources, this sets the shared memory carveout preference, in percent of the maximum shared memory. Refer to [cudaDevAttrMaxSharedMemoryPerMultiprocessor](#). This is only a hint, and the driver can choose a different ratio if required to execute the function. See [cudaFuncSetAttribute](#)

int cudaFuncAttributes::ptxVersion

The PTX virtual architecture version for which the function was compiled. This value is the major PTX version * 10 + the minor PTX version, so a PTX version 1.3 function would return the value 13.

int cudaFuncAttributes::requiredClusterWidth

The required cluster width/height/depth in blocks. The values must either all be 0 or all be positive. The validity of the cluster dimensions is otherwise checked at launch time.

If the value is set during compile time, it cannot be set at runtime. Setting it at runtime should return `cudaErrorNotPermitted`. See [cudaFuncSetAttribute](#)

int cudaFuncAttributes::reserved

Reserved for future use.

size_t cudaFuncAttributes::sharedSizeBytes

The size in bytes of statically-allocated shared memory per block required by this function. This does not include dynamically-allocated shared memory requested by the user at runtime.

7.27. cudaGraphEdgeData Struct Reference

Optional annotation for edges in a CUDA graph. Note, all edges implicitly have annotations and default to a zero-initialized value if not specified. A zero-initialized struct indicates a standard full serialization of two nodes with memory visibility.

unsigned char cudaGraphEdgeData::from_port

This indicates when the dependency is triggered from the upstream node on the edge. The meaning is specific to the node type. A value of 0 in all cases means full completion of the upstream node, with memory visibility to the downstream node or portion thereof (indicated by `to_port`). Only kernel nodes define non-zero ports. A kernel node can use the following output port types: [cudaGraphKernelNodePortDefault](#), [cudaGraphKernelNodePortProgrammatic](#), or [cudaGraphKernelNodePortLaunchCompletion](#).

unsigned char cudaGraphEdgeData::reserved

These bytes are unused and must be zeroed. This ensures compatibility if additional fields are added in the future.

unsigned char cudaGraphEdgeData::to_port

This indicates what portion of the downstream node is dependent on the upstream node or portion thereof (indicated by `from_port`). The meaning is specific to the node type. A value of 0 in all cases means the entirety of the downstream node is dependent on the upstream work. Currently no node types define non-zero ports. Accordingly, this field must be set to zero.

unsigned char cudaGraphEdgeData::type

This should be populated with a value from [cudaGraphDependencyType](#). (It is typed as char due to compiler-specific layout of bitfields.) See [cudaGraphDependencyType](#).

7.28. `cudaGraphExecUpdateResultInfo` Struct Reference

Result information returned by `cudaGraphExecUpdate`

`cudaGraphNode_t`

`cudaGraphExecUpdateResultInfo::errorFromNode`

The from node of error edge when the topologies do not match. Otherwise NULL.

`cudaGraphNode_t`

`cudaGraphExecUpdateResultInfo::errorNode`

The "to node" of the error edge when the topologies do not match. The error node when the error is associated with a specific node. NULL when the error is generic.

`enumcudaGraphExecUpdateResult`

`cudaGraphExecUpdateResultInfo::result`

Gives more specific detail when a cuda graph update fails.

7.29. `cudaGraphInstantiateParams` Struct Reference

Graph instantiation parameters

`cudaGraphNode_t`

`cudaGraphInstantiateParams::errNode_out`

The node which caused instantiation to fail, if any

`unsigned long long`

`cudaGraphInstantiateParams::flags`

Instantiation flags

`cudaGraphInstantiateResult`
`cudaGraphInstantiateParams::result_out`

Whether instantiation was successful. If it failed, the reason why

`cudaStream_t`
`cudaGraphInstantiateParams::uploadStream`

Upload stream

7.30. `cudaGraphNodeParams` Struct Reference

Graph node parameters. See [cudaGraphAddNode](#).

`struct cudaMemAllocNodeParamsV2`
`cudaGraphNodeParams::alloc`

Memory allocation node parameters.

`struct cudaConditionalNodeParams`
`cudaGraphNodeParams::conditional`

Conditional node parameters.

`struct cudaEventRecordNodeParams`
`cudaGraphNodeParams::eventRecord`

Event record node parameters.

`struct cudaEventWaitNodeParams`
`cudaGraphNodeParams::eventWait`

Event wait node parameters.

```
struct cudaExternalSemaphoreSignalNodeParamsV2  
cudaGraphNodeParams::extSemSignal
```

External semaphore signal node parameters.

```
struct cudaExternalSemaphoreWaitNodeParamsV2  
cudaGraphNodeParams::extSemWait
```

External semaphore wait node parameters.

```
struct cudaMemFreeNodeParams  
cudaGraphNodeParams::free
```

Memory free node parameters.

```
struct cudaChildGraphNodeParams  
cudaGraphNodeParams::graph
```

Child graph node parameters.

```
struct cudaHostNodeParamsV2  
cudaGraphNodeParams::host
```

Host node parameters.

```
struct cudaKernelNodeParamsV2  
cudaGraphNodeParams::kernel
```

Kernel node parameters.

```
struct cudaMemcpyNodeParams  
cudaGraphNodeParams::memcpy
```

Memcpy node parameters.

```
struct cudaMemcpyNodeParams  
cudaGraphNodeParams::memset
```

Memset node parameters.

int cudaGraphNodeParams::reserved0

Reserved. Must be zero.

long long cudaGraphNodeParams::reserved1

Padding. Unused bytes must be zero.

long long cudaGraphNodeParams::reserved2

Reserved bytes. Must be zero.

**enumcudaGraphNodeType
cudaGraphNodeParams::type**

Type of the node

7.31. cudaHostNodeParams Struct Reference

CUDA host node parameters

cudaHostFn_t cudaHostNodeParams::fn

The function to call when the node executes

void *cudaHostNodeParams::userData

Argument to pass to the function

7.32. cudaHostNodeParamsV2 Struct Reference

CUDA host node parameters

cudaHostFn_t cudaHostNodeParamsV2::fn

The function to call when the node executes

void *cudaHostNodeParamsV2::userData

Argument to pass to the function

7.33. **cudaipcEventHandle_t Struct Reference**

CUDA IPC event handle

7.34. **cudaipcMemHandle_t Struct Reference**

CUDA IPC memory handle

7.35. **cudaKernelNodeParams Struct Reference**

CUDA GPU kernel node parameters

dim3 cudaKernelNodeParams::blockDim

Block dimensions

****cudaKernelNodeParams::extra**

Pointer to kernel arguments in the "extra" format

void *cudaKernelNodeParams::func

Kernel to launch

dim3 cudaKernelNodeParams::gridDim

Grid dimensions

****cudaKernelNodeParams::kernelParams**

Array of pointers to individual kernel arguments

unsigned int cudaKernelNodeParams::sharedMemBytes

Dynamic shared-memory size per thread block in bytes

7.36. cudaKernelNodeParamsV2 Struct Reference

CUDA GPU kernel node parameters

uint3 cudaKernelNodeParamsV2::blockDim

Block dimensions

****cudaKernelNodeParamsV2::extra**

Pointer to kernel arguments in the "extra" format

void *cudaKernelNodeParamsV2::func

Kernel to launch

uint3 cudaKernelNodeParamsV2::gridDim

Grid dimensions

****cudaKernelNodeParamsV2::kernelParams**

Array of pointers to individual kernel arguments

unsigned int cudaKernelNodeParamsV2::sharedMemBytes

Dynamic shared-memory size per thread block in bytes

7.37. cudaLaunchAttribute Struct Reference

Launch attribute

cudaLaunchAttributeID `cudaLaunchAttribute::id`

Attribute to set

cudaLaunchAttribute::val

Value of the attribute

7.38. cudaLaunchAttributeValue Union Reference

Launch attributes union; used as value field of [cudaLaunchAttribute](#)

struct cudaAccessPolicyWindow
cudaLaunchAttributeValue::accessPolicyWindow

Value of launch attribute [cudaLaunchAttributeAccessPolicyWindow](#).

cudaLaunchAttributeValue::@29
cudaLaunchAttributeValue::clusterDim

Value of launch attribute [cudaLaunchAttributeClusterDimension](#) that represents the desired cluster dimensions for the kernel. Opaque type with the following fields:

- ▶ x - The X dimension of the cluster, in blocks. Must be a divisor of the grid X dimension.
- ▶ y - The Y dimension of the cluster, in blocks. Must be a divisor of the grid Y dimension.
- ▶ z - The Z dimension of the cluster, in blocks. Must be a divisor of the grid Z dimension.

enumcudaClusterSchedulingPolicy

cudaLaunchAttributeValue::clusterSchedulingPolicyPreference

Value of launch attribute [cudaLaunchAttributeClusterSchedulingPolicyPreference](#). Cluster scheduling policy preference for the kernel.

int cudaLaunchAttributeValue::cooperative

Value of launch attribute [cudaLaunchAttributeCooperative](#). Nonzero indicates a cooperative kernel (see [cudaLaunchCooperativeKernel](#)).

cudaEvent_t cudaLaunchAttributeValue::event

Event to fire when all blocks trigger it

Event to fire when the last block launches

int cudaLaunchAttributeValue::flags

Event record flags, see [cudaEventRecordWithFlags](#). Does not accept [cudaEventRecordExternal](#).

Event record flags, see [cudaEventRecordWithFlags](#). Does not accept [cudaEventRecordExternal](#).

cudaLaunchAttributeValue::@31

cudaLaunchAttributeValue::launchCompletionEvent

Value of launch attribute [cudaLaunchAttributeLaunchCompletionEvent](#).

cudaLaunchMemSyncDomain

cudaLaunchAttributeValue::memSyncDomain

Value of launch attribute [cudaLaunchAttributeMemSyncDomain](#). See [cudaLaunchMemSyncDomain](#).

struct cudaLaunchMemSyncDomainMap

cudaLaunchAttributeValue::memSyncDomainMap

Value of launch attribute [cudaLaunchAttributeMemSyncDomainMap](#). See [cudaLaunchMemSyncDomainMap](#).

int cudaLaunchAttributeValue::priority

Value of launch attribute [cudaLaunchAttributePriority](#). Execution priority of the kernel.

cudaLaunchAttributeValue::@30

cudaLaunchAttributeValue::programmaticEvent

Value of launch attribute [cudaLaunchAttributeProgrammaticEvent](#).

int

cudaLaunchAttributeValue::programmaticStreamSerializationA

Value of launch attribute [cudaLaunchAttributeProgrammaticStreamSerialization](#).

enum cudaSynchronizationPolicy

cudaLaunchAttributeValue::syncPolicy

Value of launch attribute [cudaLaunchAttributeSynchronizationPolicy](#).

cudaSynchronizationPolicy for work queued up in this stream.

int cudaLaunchAttributeValue::triggerAtBlockStart

If this is set to non-0, each block launch will automatically trigger the event

7.39. cudaLaunchConfig_t Struct Reference

CUDA extensible launch configuration

cudaLaunchAttribute *cudaLaunchConfig_t::attrs

List of attributes; nullable if [cudaLaunchConfig_t::numAttrs == 0](#)

dim3 cudaLaunchConfig_t::blockDim

Block dimensions

size_t cudaLaunchConfig_t::dynamicSmemBytes

Dynamic shared-memory size per thread block in bytes

`dim3 cudaLaunchConfig_t::gridDim`

Grid dimensions

`unsigned int cudaLaunchConfig_t::numAttrs`

Number of attributes populated in [`cudaLaunchConfig_t::attrs`](#)

`cudaStream_t cudaLaunchConfig_t::stream`

Stream identifier

7.40. `cudaLaunchMemSyncDomainMap` Struct Reference

Memory Synchronization Domain map

See [`cudaLaunchMemSyncDomain`](#).

By default, kernels are launched in domain 0. Kernel launched with `cudaLaunchMemSyncDomainRemote` will have a different domain ID. User may also alter the domain ID with `cudaLaunchMemSyncDomainMap` for a specific stream / graph node / kernel launch. See [`cudaLaunchAttributeMemSyncDomainMap`](#).

Domain ID range is available through [`cudaDevAttrMemSyncDomainCount`](#).

`unsigned char cudaLaunchMemSyncDomainMap::default_`

The default domain ID to use for designated kernels

`unsigned char cudaLaunchMemSyncDomainMap::remote`

The remote domain ID to use for designated kernels

7.41. `cudaLaunchParams` Struct Reference

CUDA launch parameters

**cudaLaunchParams::args

Arguments

dim3 cudaLaunchParams::blockDim

Block dimentions

void *cudaLaunchParams::func

Device function symbol

dim3 cudaLaunchParams::gridDim

Grid dimentions

size_t cudaLaunchParams::sharedMem

Shared memory

cudaStream_t cudaLaunchParams::stream

Stream identifier

7.42. cudaMemAccessDesc Struct Reference

Memory access descriptor

enumcudaMemAccessFlags cudaMemAccessDesc::flags

CUmemProt accessibility flags to set on the request

struct cudaMemLocation cudaMemAccessDesc::location

Location on which the request is to change it's accessibility

7.43. cudaMemAllocNodeParams Struct Reference

Memory allocation node parameters

size_t cudaMemAllocNodeParams::accessDescCount

in: Number of `accessDescs`'s

cudaMemAccessDesc

***cudaMemAllocNodeParams::accessDescs**

in: number of memory access descriptors. Must not exceed the number of GPUs.

size_t cudaMemAllocNodeParams::bytesize

in: size in bytes of the requested allocation

void *cudaMemAllocNodeParams::dptr

out: address of the allocation returned by CUDA

struct cudaMemPoolProps

cudaMemAllocNodeParams::poolProps

in: location where the allocation should reside (specified in location). handleTypes must be [cudaMemHandleTypeNone](#). IPC is not supported. in: array of memory access descriptors.

Used to describe peer GPU access

7.44. cudaMemAllocNodeParamsV2 Struct Reference

Memory allocation node parameters

size_t

cudaMemAllocNodeParamsV2::accessDescCount

in: Number of `accessDescs`'s

cudaMemAccessDesc

***cudaMemAllocNodeParamsV2::accessDescs**

in: number of memory access descriptors. Must not exceed the number of GPUs.

size_t cudaMemAllocNodeParamsV2::bytesize

in: size in bytes of the requested allocation

void *cudaMemAllocNodeParamsV2::dptr

out: address of the allocation returned by CUDA

struct cudaMemPoolProps

cudaMemAllocNodeParamsV2::poolProps

in: location where the allocation should reside (specified in location). handleTypes must be

cudaMemHandleTypeNone. IPC is not supported. in: array of memory access descriptors.

Used to describe peer GPU access

7.45. **cudaMemcpy3DParms Struct Reference**

CUDA 3D memory copying parameters

cudaArray_t cudaMemcpy3DParms::dstArray

Destination memory address

struct cudaMemcpy3DParms::dstPos

Destination position offset

struct cudaPitchedPtr cudaMemcpy3DParms::dstPtr

Pitched destination memory address

struct cudaExtent cudaMemcpy3DParms::extent

Requested memory copy size

enumcudaMemcpyKind cudaMemcpy3DParms::kind

Type of transfer

cudaArray_t cudaMemcpy3DParms::srcArray

Source memory address

struct cudaPos cudaMemcpy3DParms::srcPos

Source position offset

struct cudaPitchedPtr cudaMemcpy3DParms::srcPtr

Pitched source memory address

7.46. cudaMemcpy3DPeerParms Struct Reference

CUDA 3D cross-device memory copying parameters

cudaArray_t cudaMemcpy3DPeerParms::dstArray

Destination memory address

int cudaMemcpy3DPeerParms::dstDevice

Destination device

struct cudaPos cudaMemcpy3DPeerParms::dstPos

Destination position offset

struct cudaPitchedPtr

cudaMemcpy3DPeerParms::dstPtr

Pitched destination memory address

struct cudaExtent cudaMemcpy3DPeerParms::extent

Requested memory copy size

cudaArray_t cudaMemcpy3DPeerParms::srcArray

Source memory address

int cudaMemcpy3DPeerParms::srcDevice

Source device

struct cudaPos cudaMemcpy3DPeerParms::srcPos

Source position offset

struct cudaPitchedPtr

cudaMemcpy3DPeerParms::srcPtr

Pitched source memory address

7.47. cudaMemcpyNodeParams Struct Reference

Memcpy node parameters

struct cudaMemcpy3DParms

cudaMemcpyNodeParams::copyParams

Parameters for the memory copy

int cudaMemcpyNodeParams::flags

Must be zero

int cudaMemcpyNodeParams::reserved

Must be zero

7.48. cudaMemFreeNodeParams Struct Reference

Memory free node parameters

void *cudaMemFreeNodeParams::dptr

in: the pointer to free

7.49. cudaMemLocation Struct Reference

Specifies a memory location.

To specify a gpu, set type = [cudaMemLocationTypeDevice](#) and set id = the gpu's device ordinal.

To specify a cpu NUMA node, set type = [cudaMemLocationTypeHostNuma](#) and set id = host NUMA node id.

int cudaMemLocation::id

identifier for a given this location's [CUMemLocationType](#).

enumcudaMemLocationType cudaMemLocation::type

Specifies the location type, which modifies the meaning of id.

7.50. cudaMemPoolProps Struct Reference

Specifies the properties of allocations made from the pool.

enumcudaMemAllocationType

cudaMemPoolProps::allocType

Allocation type. Currently must be specified as cudaMemAllocationTypePinned

enumcudaMemAllocationHandleType cudaMemPoolProps::handleTypes

Handle types that will be supported by allocations from the pool.

struct cudaMemLocation cudaMemPoolProps::location

Location allocations should reside.

size_t cudaMemPoolProps::maxSize

Maximum pool size. When set to 0, defaults to a system dependent value.

unsigned char cudaMemPoolProps::reserved

reserved for future use, must be 0

void *cudaMemPoolProps::win32SecurityAttributes

Windows-specific LPSECURITYATTRIBUTES required when [cudaMemHandleTypeWin32](#) is specified. This security attribute defines the scope of which exported allocations may be transferred to other processes. In all other cases, this field is required to be zero.

7.51. cudaMemPoolPtrExportData Struct Reference

Opaque data for exporting a pool allocation

7.52. cudaMemsetParams Struct Reference

CUDA Memset node parameters

void *cudaMemsetParams::dst

Destination device pointer

unsigned int cudaMemsetParams::elementSize

Size of each element in bytes. Must be 1, 2, or 4.

size_t cudaMemsetParams::height

Number of rows

size_t cudaMemsetParams::pitch

Pitch of destination device pointer. Unused if height is 1

unsigned int cudaMemsetParams::value

Value to be set

size_t cudaMemsetParams::width

Width of the row in elements

7.53. cudaMemsetParamsV2 Struct Reference

CUDA Memset node parameters

void *cudaMemsetParamsV2::dst

Destination device pointer

unsigned int cudaMemsetParamsV2::elementSize

Size of each element in bytes. Must be 1, 2, or 4.

size_t cudaMemsetParamsV2::height

Number of rows

size_t cudaMemsetParamsV2::pitch

Pitch of destination device pointer. Unused if height is 1

unsigned int cudaMemsetParamsV2::value

Value to be set

size_t cudaMemsetParamsV2::width

Width of the row in elements

7.54. cudaPitchedPtr Struct Reference

CUDA Pitched memory pointer

See also:

[make_cudaPitchedPtr](#)

size_t cudaPitchedPtr::pitch

Pitch of allocated memory in bytes

void *cudaPitchedPtr::ptr

Pointer to allocated memory

size_t cudaPitchedPtr::xsize

Logical width of allocation in elements

size_t cudaPitchedPtr::ysize

Logical height of allocation in elements

7.55. cudaPointerAttributes Struct Reference

CUDA pointer attributes

int cudaPointerAttributes::device

The device against which the memory was allocated or registered. If the memory type is [cudaMemoryTypeDevice](#) then this identifies the device on which the memory referred

physically resides. If the memory type is [cudaMemoryTypeHost](#) or [cudaMemoryTypeManaged](#) then this identifies the device which was current when the memory was allocated or registered (and if that device is deinitialized then this allocation will vanish with that device's state).

void *cudaPointerAttributes::devicePointer

The address which may be dereferenced on the current device to access the memory or NULL if no such address exists.

void *cudaPointerAttributes::hostPointer

The address which may be dereferenced on the host to access the memory or NULL if no such address exists.



Note:

CUDA doesn't check if unregistered memory is allocated so this field may contain invalid pointer if an invalid pointer has been passed to CUDA.

enumcudaMemoryType cudaPointerAttributes::type

The type of memory - [cudaMemoryTypeUnregistered](#), [cudaMemoryTypeHost](#), [cudaMemoryTypeDevice](#) or [cudaMemoryTypeManaged](#).

7.56. cudaPos Struct Reference

CUDA 3D position

See also:

[make_cudaPos](#)

size_t cudaPos::x

x

size_t cudaPos::y

y

size_t cudaPos::z

z

7.57. cudaResourceDesc Struct Reference

CUDA resource descriptor

cudaArray_t `cudaResourceDesc::array`

CUDA array

struct `cudaChannelFormatDesc`
`cudaResourceDesc::desc`

Channel descriptor

void *`cudaResourceDesc::devPtr`

Device pointer

size_t `cudaResourceDesc::height`

Height of the array in elements

cudaMipmappedArray_t `cudaResourceDesc::mipmap`

CUDA mipmapped array

size_t `cudaResourceDesc::pitchInBytes`

Pitch between two rows in bytes

enum`cudaResourceType` `cudaResourceDesc::resType`

Resource type

size_t `cudaResourceDesc::sizeInBytes`

Size in bytes

size_t `cudaResourceDesc::width`

Width of the array in elements

7.58. cudaResourceViewDesc Struct Reference

CUDA resource view descriptor

size_t cudaResourceViewDesc::depth

Depth of the resource view

unsigned int cudaResourceViewDesc::firstLayer

First layer index

**unsigned int
cudaResourceViewDesc::firstMipmapLevel**

First defined mipmap level

**enumcudaResourceViewFormat
cudaResourceViewDesc::format**

Resource view format

size_t cudaResourceViewDesc::height

Height of the resource view

unsigned int cudaResourceViewDesc::lastLayer

Last layer index

**unsigned int
cudaResourceViewDesc::lastMipmapLevel**

Last defined mipmap level

size_t cudaResourceViewDesc::width

Width of the resource view

7.59. cudaTextureDesc Struct Reference

CUDA texture descriptor

enumcudaTextureAddressMode
cudaTextureDesc::addressMode

Texture address mode for up to 3 dimensions

float cudaTextureDesc::borderColor

Texture Border Color

int cudaTextureDesc::disableTrilinearOptimization

Disable any trilinear filtering optimizations.

enumcudaTextureFilterMode
cudaTextureDesc::filterMode

Texture filter mode

unsigned int cudaTextureDesc::maxAnisotropy

Limit to the anisotropy ratio

float cudaTextureDesc::maxMipmapLevelClamp

Upper end of the mipmap level range to clamp access to

float cudaTextureDesc::minMipmapLevelClamp

Lower end of the mipmap level range to clamp access to

enumcudaTextureFilterMode
cudaTextureDesc::mipmapFilterMode

Mipmap filter mode

float cudaTextureDesc::mipmapLevelBias

Offset applied to the supplied mipmap level

int cudaTextureDesc::normalizedCoords

Indicates whether texture reads are normalized or not

enumcudaTextureReadMode

cudaTextureDesc::readMode

Texture read mode

int cudaTextureDesc::seamlessCubemap

Enable seamless cube map filtering.

int cudaTextureDesc::sRGB

Perform sRGB->linear conversion during texture read

7.60. CUuid_st Struct Reference

CUDA UUID types

char CUuid_st::bytes

< CUDA definition of UUID

Chapter 8. Data Fields

Here is a list of all documented struct and union fields with links to the struct/union documentation for each field:

A

accessDescCount

[cudaMemAllocNodeParams](#)
[cudaMemAllocNodeParamsV2](#)

accessDescs

[cudaMemAllocNodeParamsV2](#)
[cudaMemAllocNodeParams](#)

accessPolicyMaxWindowSize

[cudaDeviceProp](#)

accessPolicyWindow

[cudaLaunchAttributeValue](#)

addressMode

[cudaTextureDesc](#)

alignment

[cudaArrayMemoryRequirements](#)

alloc

[cudaGraphNodeParams](#)

allocType

[cudaMemPoolProps](#)

args

[cudaLaunchParams](#)

array

[cudaResourceDesc](#)

asyncEngineCount

[cudaDeviceProp](#)

attrs

[cudaLaunchConfig_t](#)

B

base_ptr
[cudaAccessPolicyWindow](#)
binaryVersion
[cudaFuncAttributes](#)
blockDim
[cudaKernelNodeParams](#)
[cudaKernelNodeParamsV2](#)
[cudaLaunchParams](#)
[cudaLaunchConfig_t](#)
borderColor
[cudaTextureDesc](#)
bytes
[cudaUUID_t](#)
bytesize
[cudaMemAllocNodeParams](#)
[cudaMemAllocNodeParamsV2](#)

C

cacheModeCA
[cudaFuncAttributes](#)
canMapHostMemory
[cudaDeviceProp](#)
canUseHostPointerForRegisteredMem
[cudaDeviceProp](#)
channelDesc
[cudaEglPlaneDesc](#)
clockRate
[cudaDeviceProp](#)
clusterDim
[cudaLaunchAttributeValue](#)
clusterDimMustBeSet
[cudaFuncAttributes](#)
clusterLaunch
[cudaDeviceProp](#)
clusterSchedulingPolicyPreference
[cudaFuncAttributes](#)
[cudaLaunchAttributeValue](#)
computeMode
[cudaDeviceProp](#)
computePreemptionSupported
[cudaDeviceProp](#)

concurrentKernels
[cudaDeviceProp](#)
concurrentManagedAccess
[cudaDeviceProp](#)
conditional
[cudaGraphNodeParams](#)
constSizeBytes
[cudaFuncAttributes](#)
cooperative
[cudaLaunchAttributeValue](#)
cooperativeLaunch
[cudaDeviceProp](#)
cooperativeMultiDeviceLaunch
[cudaDeviceProp](#)
copyParams
[cudaMemcpyNodeParams](#)

D

default_
[cudaLaunchMemSyncDomainMap](#)
deferredMappingCudaArraySupported
[cudaDeviceProp](#)
depth
[cudaArraySparseProperties](#)
[cudaExtent](#)
[cudaEglPlaneDesc](#)
[cudaResourceViewDesc](#)
desc
[cudaResourceDesc](#)
device
[cudaPointerAttributes](#)
deviceOverlap
[cudaDeviceProp](#)
devicePointer
[cudaPointerAttributes](#)
devPtr
[cudaResourceDesc](#)
directManagedMemAccessFromHost
[cudaDeviceProp](#)
disableTrilinearOptimization
[cudaTextureDesc](#)
dptr
[cudaMemFreeNodeParams](#)

[cudaMemAllocNodeParamsV2](#)
[cudaMemAllocNodeParams](#)
dst
[cudaMemsetParams](#)
[cudaMemsetParamsV2](#)
dstArray
[cudaMemcpy3DParms](#)
[cudaMemcpy3DPeerParms](#)
dstDevice
[cudaMemcpy3DPeerParms](#)
dstPos
[cudaMemcpy3DParms](#)
[cudaMemcpy3DPeerParms](#)
dstPtr
[cudaMemcpy3DPeerParms](#)
[cudaMemcpy3DParms](#)
dynamicSmemBytes
[cudaLaunchConfig_t](#)

E

ECCEnabled
[cudaDeviceProp](#)
eglColorFormat
[cudaEglFrame](#)
elementSize
[cudaMemsetParamsV2](#)
[cudaMemsetParams](#)
errNode_out
[cudaGraphInstantiateParams](#)
errorFromNode
[cudaGraphExecUpdateResultInfo](#)
errorNode
[cudaGraphExecUpdateResultInfo](#)
event
[cudaEventRecordNodeParams](#)
[cudaEventWaitNodeParams](#)
[cudaLaunchAttributeValue](#)
eventRecord
[cudaGraphNodeParams](#)
eventWait
[cudaGraphNodeParams](#)
extent
[cudaExternalMemoryMipmappedArrayDesc](#)

[cudaMemcpy3DParms](#)
[cudaMemcpy3DPeerParms](#)

extra
[cudaKernelNodeParamsV2](#)
[cudaKernelNodeParams](#)

extSemArray
[cudaExternalSemaphoreSignalNodeParams](#)
[cudaExternalSemaphoreWaitNodeParamsV2](#)
[cudaExternalSemaphoreSignalNodeParamsV2](#)
[cudaExternalSemaphoreWaitNodeParams](#)

extSemSignal
[cudaGraphNodeParams](#)

extSemWait
[cudaGraphNodeParams](#)

F

f
[cudaChannelFormatDesc](#)

fd
[cudaExternalMemoryHandleDesc](#)
[cudaExternalSemaphoreHandleDesc](#)

fence
[cudaExternalSemaphoreSignalParams_v1](#)
[cudaExternalSemaphoreSignalParams](#)
[cudaExternalSemaphoreSignalParams_v1](#)
[cudaExternalSemaphoreWaitParams](#)
[cudaExternalSemaphoreWaitParams_v1](#)

filterMode
[cudaTextureDesc](#)

firstLayer
[cudaResourceViewDesc](#)

firstMipmapLevel
[cudaResourceViewDesc](#)

flags
[cudaMemcpyNodeParams](#)
[cudaExternalSemaphoreWaitParams_v1](#)
[cudaMemAccessDesc](#)
[cudaExternalMemoryHandleDesc](#)
[cudaExternalMemoryBufferDesc](#)
[cudaExternalMemoryMipmappedArrayDesc](#)
[cudaExternalSemaphoreHandleDesc](#)
[cudaExternalSemaphoreSignalParams_v1](#)
[cudaExternalSemaphoreWaitParams](#)

[cudaLaunchAttributeValue](#)
[cudaExternalSemaphoreSignalParams](#)
[cudaGraphInstantiateParams](#)
[cudaArraySparseProperties](#)

fn
[cudaHostNodeParamsV2](#)
[cudaHostNodeParams](#)

format
[cudaResourceViewDesc](#)

formatDesc
[cudaExternalMemoryMipmappedArrayDesc](#)

frameType
[cudaEglFrame](#)

free
[cudaGraphNodeParams](#)

from_port
[cudaGraphEdgeData](#)

func
[cudaKernelNodeParamsV2](#)
[cudaKernelNodeParams](#)
[cudaLaunchParams](#)

G

globalL1CacheSupported
[cudaDeviceProp](#)

gpuDirectRDMAFlushWritesOptions
[cudaDeviceProp](#)

gpuDirectRDMASupported
[cudaDeviceProp](#)

gpuDirectRDMAWritesOrdering
[cudaDeviceProp](#)

graph
[cudaChildGraphNodeParams](#)
[cudaGraphNodeParams](#)

gridDim
[cudaKernelNodeParams](#)
[cudaLaunchConfig_t](#)
[cudaKernelNodeParamsV2](#)
[cudaLaunchParams](#)

H

handle
[cudaExternalMemoryHandleDesc](#)

[cudaExternalSemaphoreHandleDesc](#)
[cudaConditionalNodeParams](#)

handleTypes

[cudaMemPoolProps](#)

height

[cudaMemsetParams](#)
[cudaMemsetParamsV2](#)
[cudaEglPlaneDesc](#)
[cudaResourceDesc](#)
[cudaResourceViewDesc](#)
[cudaArraySparseProperties](#)
[cudaExtent](#)

hitProp

[cudaAccessPolicyWindow](#)

hitRatio

[cudaAccessPolicyWindow](#)

host

[cudaGraphNodeParams](#)

hostNativeAtomicSupported

[cudaDeviceProp](#)

hostPointer

[cudaPointerAttributes](#)

hostRegisterReadOnlySupported

[cudaDeviceProp](#)

hostRegisterSupported

[cudaDeviceProp](#)

|

id

[cudaMemLocation](#)
[cudaLaunchAttribute](#)

integrated

[cudaDeviceProp](#)

ipcEventSupported

[cudaDeviceProp](#)

isMultiGpuBoard

[cudaDeviceProp](#)

K

kernel

[cudaGraphNodeParams](#)

kernelExecTimeoutEnabled

[cudaDeviceProp](#)

kernelParams

[cudaKernelNodeParamsV2](#)
[cudaKernelNodeParams](#)

key

[cudaExternalSemaphoreWaitParams_v1](#)
[cudaExternalSemaphoreWaitParams](#)

keyedMutex

[cudaExternalSemaphoreSignalParams](#)
[cudaExternalSemaphoreWaitParams](#)
[cudaExternalSemaphoreWaitParams_v1](#)
[cudaExternalSemaphoreSignalParams_v1](#)

kind

[cudaMemcpy3DParms](#)

L**l2CacheSize**

[cudaDeviceProp](#)

lastLayer

[cudaResourceViewDesc](#)

lastMipmapLevel

[cudaResourceViewDesc](#)

launchCompletionEvent

[cudaLaunchAttributeValue](#)

localL1CacheSupported

[cudaDeviceProp](#)

localSizeBytes

[cudaFuncAttributes](#)

location

[cudaMemAccessDesc](#)
[cudaMemPoolProps](#)

luid

[cudaDeviceProp](#)

luidDeviceNodeMask

[cudaDeviceProp](#)

M**major**

[cudaDeviceProp](#)

managedMemory

[cudaDeviceProp](#)

maxAnisotropy

[cudaTextureDesc](#)

maxBlocksPerMultiProcessor
[cudaDeviceProp](#)

maxDynamicSharedSizeBytes
[cudaFuncAttributes](#)

maxGridSize
[cudaDeviceProp](#)

maxMipmapLevelClamp
[cudaTextureDesc](#)

maxSize
[cudaMemPoolProps](#)

maxSurface1D
[cudaDeviceProp](#)

maxSurface1DLayered
[cudaDeviceProp](#)

maxSurface2D
[cudaDeviceProp](#)

maxSurface2DLayered
[cudaDeviceProp](#)

maxSurface3D
[cudaDeviceProp](#)

maxSurfaceCubemap
[cudaDeviceProp](#)

maxSurfaceCubemapLayered
[cudaDeviceProp](#)

maxTexture1D
[cudaDeviceProp](#)

maxTexture1DLayered
[cudaDeviceProp](#)

maxTexture1DLinear
[cudaDeviceProp](#)

maxTexture1DMipmap
[cudaDeviceProp](#)

maxTexture2D
[cudaDeviceProp](#)

maxTexture2DGather
[cudaDeviceProp](#)

maxTexture2DLayered
[cudaDeviceProp](#)

maxTexture2DLinear
[cudaDeviceProp](#)

maxTexture2DMipmap
[cudaDeviceProp](#)

maxTexture3D
[cudaDeviceProp](#)

maxTexture3DAlt
[cudaDeviceProp](#)

maxTextureCubemap
[cudaDeviceProp](#)

maxTextureCubemapLayered
[cudaDeviceProp](#)

maxThreadsDim
[cudaDeviceProp](#)

maxThreadsPerBlock
[cudaDeviceProp](#)
[cudaFuncAttributes](#)

maxThreadsPerMultiProcessor
[cudaDeviceProp](#)

memcpy
[cudaGraphNodeParams](#)

memoryBusWidth
[cudaDeviceProp](#)

memoryClockRate
[cudaDeviceProp](#)

memoryPoolsSupported
[cudaDeviceProp](#)

memoryPoolSupportedHandleTypes
[cudaDeviceProp](#)

memPitch
[cudaDeviceProp](#)

memset
[cudaGraphNodeParams](#)

memSyncDomain
[cudaLaunchAttributeValue](#)

memSyncDomainMap
[cudaLaunchAttributeValue](#)

minMipmapLevelClamp
[cudaTextureDesc](#)

minor
[cudaDeviceProp](#)

mipmap
[cudaResourceDesc](#)

mipmapFilterMode
[cudaTextureDesc](#)

mipmapLevelBias
[cudaTextureDesc](#)

mipTailFirstLevel
[cudaArraySparseProperties](#)
mipTailSize
[cudaArraySparseProperties](#)
missProp
[cudaAccessPolicyWindow](#)
multiGpuBoardGroupID
[cudaDeviceProp](#)
multiProcessorCount
[cudaDeviceProp](#)

N

name
[cudaDeviceProp](#)
[cudaExternalMemoryHandleDesc](#)
[cudaExternalSemaphoreHandleDesc](#)
nonPortableClusterSizeAllowed
[cudaFuncAttributes](#)
normalizedCoords
[cudaTextureDesc](#)
num_bytes
[cudaAccessPolicyWindow](#)
numAttrs
[cudaLaunchConfig_t](#)
numChannels
[cudaEglPlaneDesc](#)
numExtSems
[cudaExternalSemaphoreSignalNodeParams](#)
[cudaExternalSemaphoreSignalNodeParamsV2](#)
[cudaExternalSemaphoreWaitNodeParams](#)
[cudaExternalSemaphoreWaitNodeParamsV2](#)
numLevels
[cudaExternalMemoryMipmappedArrayDesc](#)
numRegs
[cudaFuncAttributes](#)
nvSciBufObject
[cudaExternalMemoryHandleDesc](#)
nvSciSyncObj
[cudaExternalSemaphoreHandleDesc](#)

O

offset
[cudaExternalMemoryBufferDesc](#)

[cudaExternalMemoryMipmappedArrayDesc](#)

P

pageableMemoryAccess

[cudaDeviceProp](#)

pageableMemoryAccessUsesHostPageTables

[cudaDeviceProp](#)

paramsArray

[cudaExternalSemaphoreSignalNodeParamsV2](#)

[cudaExternalSemaphoreWaitNodeParams](#)

[cudaExternalSemaphoreSignalNodeParams](#)

[cudaExternalSemaphoreWaitNodeParamsV2](#)

pArray

[cudaEglFrame](#)

pciBusID

[cudaDeviceProp](#)

pciDeviceID

[cudaDeviceProp](#)

pciDomainID

[cudaDeviceProp](#)

persistingL2CacheMaxSize

[cudaDeviceProp](#)

phGraph_out

[cudaConditionalNodeParams](#)

pitch

[cudaMemsetParamsV2](#)

[cudaEglPlaneDesc](#)

[cudaPitchedPtr](#)

[cudaMemsetParams](#)

pitchInBytes

[cudaResourceDesc](#)

planeCount

[cudaEglFrame](#)

planeDesc

[cudaEglFrame](#)

poolProps

[cudaMemAllocNodeParamsV2](#)

[cudaMemAllocNodeParams](#)

pPitch

[cudaEglFrame](#)

preferredShmemCarveout

[cudaFuncAttributes](#)

priority
[cudaLaunchAttributeValue](#)

programmaticEvent
[cudaLaunchAttributeValue](#)

programmaticStreamSerializationAllowed
[cudaLaunchAttributeValue](#)

ptr
[cudaPitchedPtr](#)

ptxVersion
[cudaFuncAttributes](#)

R

readMode
[cudaTextureDesc](#)

regsPerBlock
[cudaDeviceProp](#)

regsPerMultiprocessor
[cudaDeviceProp](#)

remote
[cudaLaunchMemSyncDomainMap](#)

requiredClusterWidth
[cudaFuncAttributes](#)

reserved
[cudaFuncAttributes](#)
[cudaMemPoolProps](#)
[cudaDeviceProp](#)
[cudaGraphEdgeData](#)
[cudaEglPlaneDesc](#)
[cudaMemcpyNodeParams](#)

reserved0
[cudaGraphNodeParams](#)

reserved1
[cudaDeviceProp](#)
[cudaGraphNodeParams](#)

reserved2
[cudaGraphNodeParams](#)

reservedSharedMemPerBlock
[cudaDeviceProp](#)

resType
[cudaResourceDesc](#)

result
[cudaGraphExecUpdateResultInfo](#)

result_out
[cudaGraphInstantiateParams](#)

S

seamlessCubemap
[cudaTextureDesc](#)

sharedMem
[cudaLaunchParams](#)

sharedMemBytes
[cudaKernelNodeParamsV2](#)
[cudaKernelNodeParams](#)

sharedMemPerBlock
[cudaDeviceProp](#)

sharedMemPerBlockOptin
[cudaDeviceProp](#)

sharedMemPerMultiprocessor
[cudaDeviceProp](#)

sharedSizeBytes
[cudaFuncAttributes](#)

singleToDoublePrecisionPerfRatio
[cudaDeviceProp](#)

size
[cudaArrayMemoryRequirements](#)
[cudaExternalMemoryHandleDesc](#)
[cudaExternalMemoryBufferDesc](#)
[cudaConditionalNodeParams](#)

sizeInBytes
[cudaResourceDesc](#)

sparseCudaArraySupported
[cudaDeviceProp](#)

srcArray
[cudaMemcpy3DParms](#)
[cudaMemcpy3DPeerParms](#)

srcDevice
[cudaMemcpy3DPeerParms](#)

srcPos
[cudaMemcpy3DParms](#)
[cudaMemcpy3DPeerParms](#)

srcPtr
[cudaMemcpy3DParms](#)
[cudaMemcpy3DPeerParms](#)

sRGB
[cudaTextureDesc](#)

stream
[cudaLaunchParams](#)
[cudaLaunchConfig_t](#)
streamPrioritiesSupported
[cudaDeviceProp](#)
surfaceAlignment
[cudaDeviceProp](#)
syncPolicy
[cudaLaunchAttributeValue](#)

T

tccDriver
[cudaDeviceProp](#)
textureAlignment
[cudaDeviceProp](#)
texturePitchAlignment
[cudaDeviceProp](#)
timelineSemaphoreInteropSupported
[cudaDeviceProp](#)
timeoutMs
[cudaExternalSemaphoreWaitParams_v1](#)
[cudaExternalSemaphoreWaitParams](#)
to_port
[cudaGraphEdgeData](#)
totalConstMem
[cudaDeviceProp](#)
totalGlobalMem
[cudaDeviceProp](#)
triggerAtBlockStart
[cudaLaunchAttributeValue](#)
type
[cudaGraphEdgeData](#)
[cudaExternalMemoryHandleDesc](#)
[cudaGraphNodeParams](#)
[cudaConditionalNodeParams](#)
[cudaPointerAttributes](#)
[cudaMemLocation](#)
[cudaExternalSemaphoreHandleDesc](#)

U

unifiedAddressing
[cudaDeviceProp](#)

unifiedFunctionPointers[cudaDeviceProp](#)**uploadStream**[cudaGraphInstantiateParams](#)**userData**[cudaHostNodeParams](#)[cudaHostNodeParamsV2](#)**uuid**[cudaDeviceProp](#)**V****val**[cudaLaunchAttribute](#)**value**[cudaExternalSemaphoreWaitParams](#)[cudaExternalSemaphoreSignalParams](#)[cudaExternalSemaphoreWaitParams_v1](#)[cudaExternalSemaphoreSignalParams_v1](#)[cudaMemsetParamsV2](#)[cudaMemsetParams](#)**W****w**[cudaChannelFormatDesc](#)**warpSize**[cudaDeviceProp](#)**width**[cudaArraySparseProperties](#)[cudaResourceDesc](#)[cudaResourceViewDesc](#)[cudaExtent](#)[cudaMemsetParamsV2](#)[cudaMemsetParams](#)[cudaEglPlaneDesc](#)**win32**[cudaExternalMemoryHandleDesc](#)[cudaExternalSemaphoreHandleDesc](#)**win32SecurityAttributes**[cudaMemPoolProps](#)**X****x**[cudaChannelFormatDesc](#)

cudaPos

xsize

cudaPitchedPtr

Y

y

cudaChannelFormatDesc

cudaPos

ysize

cudaPitchedPtr

Z

z

cudaChannelFormatDesc

cudaPos

Chapter 9. Deprecated List

Global `cudaThreadExit`

Global `cudaThreadGetCacheConfig`

Global `cudaThreadGetLimit`

Global `cudaThreadSetCacheConfig`

Global `cudaThreadSetLimit`

Global `cudaThreadSynchronize`

Global `cudaLaunchCooperativeKernelMultiDevice`

This function is deprecated as of CUDA 11.3.

Global `cudaSetDoubleForDevice`

This function is deprecated as of CUDA 7.5

Global `cudaSetDoubleForHost`

This function is deprecated as of CUDA 7.5

Global cudaMemcpyToArray**Global cudaMemcpyFromArray****Global cudaMemcpyFromArrayAsync****Global cudaMemcpyToArray****Global cudaMemcpyToArrayAsync****Global cudaGLMapBufferObject**

This function is deprecated as of CUDA 3.0.

Global cudaGLMapBufferObjectAsync

This function is deprecated as of CUDA 3.0.

Global cudaGLRegisterBufferObject

This function is deprecated as of CUDA 3.0.

Global cudaGLSetBufferObjectMapFlags

This function is deprecated as of CUDA 3.0.

Global cudaGLSetGLDevice

This function is deprecated as of CUDA 5.0.

Global cudaGLUnmapBufferObject

This function is deprecated as of CUDA 3.0.

Global cudaGLUnmapBufferObjectAsync

This function is deprecated as of CUDA 3.0.

Global cudaGLUnregisterBufferObject

This function is deprecated as of CUDA 3.0.

Global cudaD3D9MapResources

This function is deprecated as of CUDA 3.0.

Global cudaD3D9RegisterResource

This function is deprecated as of CUDA 3.0.

Global cudaD3D9ResourceGetMappedArray

This function is deprecated as of CUDA 3.0.

Global cudaD3D9ResourceGetMappedPitch

This function is deprecated as of CUDA 3.0.

Global cudaD3D9ResourceGetMappedPointer

This function is deprecated as of CUDA 3.0.

Global cudaD3D9ResourceGetMappedSize

This function is deprecated as of CUDA 3.0.

Global cudaD3D9ResourceGetSurfaceDimensions

This function is deprecated as of CUDA 3.0.

Global cudaD3D9ResourceSetMapFlags

This function is deprecated as of CUDA 3.0.

Global cudaD3D9UnmapResources

This function is deprecated as of CUDA 3.0.

Global cudaD3D9UnregisterResource

This function is deprecated as of CUDA 3.0.

Global cudaD3D10GetDirect3DDevice

This function is deprecated as of CUDA 5.0.

Global cudaD3D10MapResources

This function is deprecated as of CUDA 3.0.

Global cudaD3D10RegisterResource

This function is deprecated as of CUDA 3.0.

Global cudaD3D10ResourceGetMappedArray

This function is deprecated as of CUDA 3.0.

Global cudaD3D10ResourceGetMappedPitch

This function is deprecated as of CUDA 3.0.

Global cudaD3D10ResourceGetMappedPointer

This function is deprecated as of CUDA 3.0.

Global cudaD3D10ResourceGetMappedSize

This function is deprecated as of CUDA 3.0.

Global cudaD3D10ResourceGetSurfaceDimensions

This function is deprecated as of CUDA 3.0.

Global cudaD3D10ResourceSetMapFlags

This function is deprecated as of CUDA 3.0.

Global cudaD3D10SetDirect3DDevice

This function is deprecated as of CUDA 5.0.

Global cudaD3D10UnmapResources

This function is deprecated as of CUDA 3.0.

Global cudaD3D10UnregisterResource

This function is deprecated as of CUDA 3.0.

Global cudaD3D11GetDirect3DDevice

This function is deprecated as of CUDA 5.0.

Global cudaD3D11SetDirect3DDevice

This function is deprecated as of CUDA 5.0.

Global cudaErrorProfilerNotInitialized

This error return is deprecated as of CUDA 5.0. It is no longer an error to attempt to enable/disable the profiling via cudaProfilerStart or cudaProfilerStop without initialization.

Global cudaErrorProfilerAlreadyStarted

This error return is deprecated as of CUDA 5.0. It is no longer an error to call cudaProfilerStart() when profiling is already enabled.

Global cudaErrorProfilerAlreadyStopped

This error return is deprecated as of CUDA 5.0. It is no longer an error to call cudaProfilerStop() when profiling is already disabled.

Global cudaErrorInvalidHostPointer

This error return is deprecated as of CUDA 10.1.

Global cudaErrorInvalidDevicePointer

This error return is deprecated as of CUDA 10.1.

Global cudaErrorAddressOfConstant

This error return is deprecated as of CUDA 3.1. Variables in constant memory may now have their address taken by the runtime via `cudaGetSymbolAddress()`.

Global cudaErrorTextureFetchFailed

This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

Global cudaErrorTextureNotBound

This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

Global cudaErrorSynchronizationError

This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

Global cudaErrorMixedDeviceExecution

This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

Global cudaErrorNotYetImplemented

This error return is deprecated as of CUDA 4.1.

Global cudaErrorMemoryValueTooLarge

This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

Global cudaErrorPriorLaunchFailure

This error return is deprecated as of CUDA 3.1. Device emulation mode was removed with the CUDA 3.1 release.

Global cudaDeviceBlockingSync

This flag was deprecated as of CUDA 4.0 and replaced with `cudaDeviceScheduleBlockingSync`.

Notice

This document is provided for information purposes only and shall not be regarded as a warranty of a certain functionality, condition, or quality of a product. NVIDIA Corporation ("NVIDIA") makes no representations or warranties, expressed or implied, as to the accuracy or completeness of the information contained in this document and assumes no responsibility for any errors contained herein. NVIDIA shall have no liability for the consequences or use of such information or for any infringement of patents or other rights of third parties that may result from its use. This document is not a commitment to develop, release, or deliver any Material (defined below), code, or functionality.

NVIDIA reserves the right to make corrections, modifications, enhancements, improvements, and any other changes to this document, at any time without notice.

Customer should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

NVIDIA products are sold subject to the NVIDIA standard terms and conditions of sale supplied at the time of order acknowledgement, unless otherwise agreed in an individual sales agreement signed by authorized representatives of NVIDIA and customer ("Terms of Sale"). NVIDIA hereby expressly objects to applying any customer general terms and conditions with regards to the purchase of the NVIDIA product referenced in this document. No contractual obligations are formed either directly or indirectly by this document.

OpenCL

OpenCL is a trademark of Apple Inc. used under license to the Khronos Group Inc.

Trademarks

NVIDIA and the NVIDIA logo are trademarks or registered trademarks of NVIDIA Corporation in the U.S. and other countries. Other company and product names may be trademarks of the respective companies with which they are associated.

Copyright

© 2007-2023 NVIDIA Corporation & affiliates. All rights reserved.