

NVIDIA DOCA FlexIO SDK

Programming Guide

Table of Contents

Chapter 1. Introduction 1
Chapter 2. Prerequisites
Chapter 3. Architecture
Chapter 4. Dependencies
Chapter 5. API5
Chapter 6. Resource Management
Chapter 7. DPA Memory Management.77.1. Buffers/Rings For DPA Queues.77.2. Memory Allocation Best Practices.7
Chapter 8. DPA Window
Chapter 9. DPA Side Memory and I/O Barriers10
Chapter 10. DPA Event Handler.1110.1. Default Window/Outbox.1110.2. HART Management.11
Chapter 11. Application Debugging.1211.1. Using Device Prints API.1211.1.1. Printf Support.12
Chapter 12. Samples

Chapter 1. Introduction

The datapath accelerator (DPA) processor is an auxiliary processor designed to accelerate packet processing and other datapath operations. The FlexIO SDK exposes an API for managing the device and executing native code over it.

The DPA processor is supported on NVIDIA[®] BlueField[®]-3 DPUs and later generations.

Chapter 2. Prerequisites

DOCA FlexIO applications can run either on the host machine or on the target DPU.


Developing programs over FlexIO SDK requires knowledge of DPU networking queue usage and management.

Chapter 3. Architecture

FlexIO SDK library exposes a few layers of functionality:

- ▶ libflexio library for DPU-side operations. Mainly used for resource management.
- libflexio_dev library for DPA-side operations. Mainly used for data path implementation.
- libflexio os library for DPA OS-level access
- ▶ libflexio libc custom LibC for DPA

A typical application is composed of two parts: One running on the host machine or the DPU target and another running directly over the DPA.

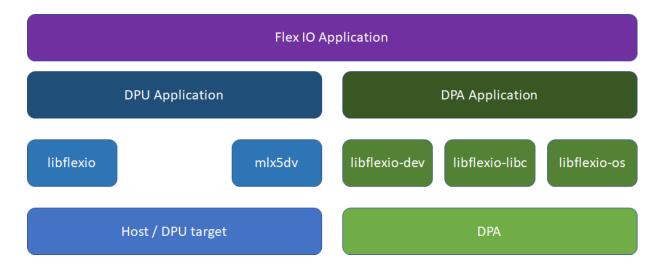

Chapter 4. Dependencies

N/A

Chapter 5. API

For the driver API reference, refer to the NVIDIA DOCA Driver APIs Reference Manual.

Chapter 6. Resource Management

DPA programs cannot create resources. The responsibility of creating resources, such as FlexIO process, thread, outbox and window, as well as queues for packet processing (completion, receive and send), lies on the DPU program. The relevant information should be communicated (copied) to the DPA side and the address of the copied information should be passed as an argument to the running thread.

6.1. Example

DPU side:

- Declare a variable to hold the DPA buffer address. flexio_uintptr_t app_data_dpa_daddr;
- 3. Copy application data to the DPA buffer. flexio_host2dev_memcpy(flexio_process, (uintptr_t)app_data, sizeof(struct my_app_data), app_data_dpa_daddr);

struct my_app_data should be common between the DPU and DPA applications so the DPA application can access the struct fields.

The event handler should get the address to the DPA buffer with the copied data: flexio event handler create(flexio process, net entry point, app data dpa daddr,

NULL, flexio_outbox, &app_ctx.net_event_handler)

DPA side:

__dpa_rpc__ uint64_t event_handler_init(uint64_t thread_arg)

```
struct my_app_data *app_data;
app_data = (my_app_data *)thread_arg;
...
```

Chapter 7. DPA Memory Management

As mentioned previously, the DPU program is responsible for allocating buffers on the DPA side (same as resources). The DPU program should allocate device memory in advance for the DPA program needs (e.g., queues data buffer and rings, buffers for the program functionality, etc).

The DPU program is also responsible for releasing the allocated memory. For this purpose, the FlexIO SDK API exposes the following memory management functions:

```
flexio_status flexio_buf_dev_alloc(struct flexio_process *process, size_t
buff_bsize, flexio_uintptr_t *dest_daddr_p);
flexio_status flexio_buf_dev_free(flexio_uintptr_t daddr_p);
flexio_status flexio_host2dev_memcpy(struct flexio_process *process, void
 *src_haddr, size_t buff_bsize, flexio_uintptr_t dest_daddr);
flexio_status flexio_buf_dev_memset(struct flexio_process *process, int value,
 size_t buff_bsize, flexio_uintptr_t dest_daddr);
```

7.1. Buffers/Rings For DPA Queues

The FlexIO SDK exposes an API for allocating work queues and completion queues for the DPA. This means that the DPA may have direct access and control over these queues, allowing it to create doorbells and access their memory.

When creating a FlexIO SDK queue, the user must pre-allocate and provide memory buffers for the queue's element buffer/ring. This buffer may be allocated on the DPU or the DPA memory.

To this end, the FlexIO SDK exposes the flexio_qmem struct, which allows the user to provide the buffer address and type (DPA or DPU). For addresses on the DPU memory, the user must also provide the relevant DUMEM ID. But for addresses on the DPA memory, this is not needed as the relevant process DUMEM ID is used.

7.2. Memory Allocation Best Practices

To optimize process DUMEM memory allocation, it is recommended to use the following allocation sizes (or closest to it):

- ▶ Up to 1 page (4KB)
- ▶ 2⁶ pages (256KB)
- ▶ 2¹¹ pages (8MB)

▶ 2¹⁶ pages (256MB)

Using these sizes minimizes memory fragmentation over the process DUMEM heap. If other buffer sizes are required, it is recommended to round the allocation up to one of the listed sizes and use it for multiple buffers.

Chapter 8. DPA Window

To use the window functionality, DPU memory must be registered for the device using the <code>ibv_reg_mr()</code> call. Two of this call parameters are the host address and size to be registered.

Chapter 9. DPA Side Memory and I/O Barriers

To ensure correctness, certain operations require a barrier. These barriers are exposed in the libflexio os mb.h header file:

```
flexio_os_dma_to_dev_wr_barrier();
flexio_os_dma_to_dev_wr_order_barrier();
flexio_os_dma_from_dev_rd_barrier();
flexio_os_window_write_barrier();
flexio_os_window_read_barrier();
flexio_os_window_rw_barrier();
flexio_os_all_barrier();
```

Some cases that require a barrier are handled by the SDK such as outbox and window configuration and DPU memory access through the window.

Chapter 10. DPA Event Handler

10.1. Default Window/Outbox

The DPA event handler expects a DPA window and DPA outbox structs on creation. These are used as the default for the event handler thread. The user may choose to set one or both to NULL, in which case there will be no valid default value for one/both of them.

Upon thread invocation on the DPA side, the thread context is set for the provided default IDs. If at any point the outbox/window IDs are changed, then the thread context on the next invocation is restored to the default IDs. This means that the DPA Window MKey must be configured each time the thread is invoked, as it has no default value.

10.2. HART Management

DPA HARTs are the equivalent of a logical core. A DPA program must be assigned a HART in order to execute.

It is possible to set HART affinity for an event handler upon creation. This causes the event handler to execute its DPA program over specific HARTs (or a group of HARTs).

DPA supports three types of affinity:

- ▶ None select a HART from all available HARTs
- Strict select only the specified HART (by ID)
- Group select a HART from all the HARTs in the specified group (by ID, must be created in advance)

The affinity type and ID, if applicable, are passed to the event handler upon creation using the affinity field of the flexio_event_handler_attr struct.

Chapter 11. Application Debugging

Since application execution is divided between the DPU side and the DPA processor services, debugging may be somewhat challenging, especially considering the fact that the DPA side does not have a terminal allowing the use of the C stdio library printf services.

11.1. Using Device Prints API

Another logging option is to use FlexIO SDK infrastructure to write strings from the DPA side to the DPU side console or file. The DPU side's flexio.h file provides the flexio_print_init API call for initializing the required infrastructures to support this. Once initialized, the DPA side must have the thread context, which can be obtained by calling flexio_dev_get_thread_ctx. flexio_dev_print can then be called to write a string to the DPA side where it is directed to the console or a file, according to user configuration in the init stage.

It is important to call flexio_print_destroy() when exiting the DPU application to ensure proper clean-up of the print mechanism resources.

- **Note:** Device prints use an internal QP for the communication between the DPA and the DPU. When running over an InfiniBand fabric, the user must ensure that the subnet is well-configured and that the relevant device's port is in active state.
- **Note:** IMPORTANT! flexio_print_init should only be called once per process. Calling it multiple times recreates print resources which may cause a resource leak and other malfunctions.

11.1.1. Printf Support

Only limited functionality is implemented for printf. Not all libc printf is supported.

Please consult the following list for supported modifiers:

- Formats %c, %s, %d, %ld, %u, %lu, %i, %li, %x, %hx, %hxx, %lx, %X, %lX, %o, %lo, %p, %%
- Flags ., *, –, +, #
- ▶ General supported modifiers:
 - ▶ "0" padding

- Min/max characters in string
- General unsupported modifiers:
 - ▶ Floating point modifiers %e, %E, %f, %lf, %LF
 - Precision modifiers

Chapter 12. Samples

Please refer to <u>NVIDIA DOCA FlexIO Sample Guide</u> for more information about the API of this DOCA library.

Notice

This document is provided for information purposes only and shall not be regarded as a warranty of a certain functionality, condition, or quality of a product. NVIDIA Corporation nor any of its direct or indirect subsidiaries and affiliates (collectively: "NVIDIA") make no representations or warranties, expressed or implied, as to the accuracy or completeness of the information contained in this document and assume no responsibility for any errors contained herein. NVIDIA shall have no liability for the consequences or use of such information or for any infringement of patents or other rights of third parties that may result from its use. This document is not a commitment to develop, release, or deliver any Material (defined below), code, or functionality.

NVIDIA reserves the right to make corrections, modifications, enhancements, improvements, and any other changes to this document, at any time without notice.

Customer should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

NVIDIA products are sold subject to the NVIDIA standard terms and conditions of sale supplied at the time of order acknowledgement, unless otherwise agreed in an individual sales agreement signed by authorized representatives of NVIDIA and customer ("Terms of Sale"). NVIDIA hereby expressly objects to applying any customer general terms and conditions with regards to the purchase of the NVIDIA product referenced in this document. No contractual obligations are formed either directly or indirectly by this document.

NVIDIA products are not designed, authorized, or warranted to be suitable for use in medical, military, aircraft, space, or life support equipment, nor in applications where failure or malfunction of the NVIDIA product can reasonably be expected to result in personal injury, death, or property or environmental damage. NVIDIA accepts no liability for inclusion and/or use is at customer's own risk.

NVIDIA makes no representation or warranty that products based on this document will be suitable for any specified use. Testing of all parameters of each product is not necessarily performed by NVIDIA. It is customer's sole responsibility to evaluate and determine the applicability of any information contained in this document, ensure the product is suitable and fit for the application planned by customer, and perform the necessary testing for the application in order to avoid a default of the application or the product. Weaknesses in customer's product designs may affect the quality and reliability of the NVIDIA product and may result in additional or different conditions and/or requirements beyond those contained in this document. NVIDIA accepts no liability related to any default, damage, costs, or problem which may be based on or attributable to: (i) the use of the NVIDIA product in any manner that is contrary to this document or (ii) customer product designs.

No license, either expressed or implied, is granted under any NVIDIA patent right, copyright, or other NVIDIA intellectual property right under this document. Information published by NVIDIA regarding third-party products or services does not constitute a license from NVIDIA to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property rights of the third party, or a license from NVIDIA under the patents or other intellectual property rights of NVIDIA.

Reproduction of information in this document is permissible only if approved in advance by NVIDIA in writing, reproduced without alteration and in full compliance with all applicable export laws and regulations, and accompanied by all associated conditions, limitations, and notices.

THIS DOCUMENT AND ALL NVIDIA DESIGN SPECIFICATIONS, REFERENCE BOARDS, FILES, DRAWINGS, DIAGNOSTICS, LISTS, AND OTHER DOCUMENTS (TOGETHER AND SEPARATELY, "MATERIALS") ARE BEING PROVIDED "AS IS." NVIDIA MAKES NO WARRANTIES, EXPRESSED, IMPLIED, STATUTORY, OR OTHERWISE WITH RESPECT TO THE MATERIALS, AND EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF NONINFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL NVIDIA BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF NVIDIA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Notwithstanding any damages that customer might incur for any reason whatsoever, NVIDIA's aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms of Sale for the product.

Trademarks

NVIDIA, the NVIDIA logo, and Mellanox are trademarks and/or registered trademarks of Mellanox Technologies Ltd. and/or NVIDIA Corporation in the U.S. and in other countries. The registered trademark Linux[®] is used pursuant to a sublicense from the Linux Foundation, the exclusive licensee of Linus Torvalds, owner of the mark on a world-wide basis. Other company and product names may be trademarks of the respective companies with which they are associated.

Copyright

© 2022 NVIDIA Corporation & affiliates. All rights reserved.

